

Chassis and Engine Codes

Vehicle Identification Number (Canadian Model)

JHMAF533*ES800001

Model Name _____
 AG: 1300 2D H/B
 AH: 1500 2D H/B
 AK: 1500 4D
 AN: Wagon

Transmission Type _____
 5: 5-speed
 4: 4-speed
 3: Hondamatic

Number of Doors _____
 3: 2D H/B
 4: 4D
 5: 4D H/B

Grade _____
 1: Basic
 2: DX
 3: S, GL

Check Digit _____

Model Year _____
 E: 1984

Plant _____
 C: Sayama Plant
 S: Suzuka Plant

Serial Number _____

Engine Serial Number

EW₂ - 1000001

Engine Type _____
 ZA₁: 1200 cc
 ZA₂: 1200 cc
 EV₂: 1300 cc
 EW₂: 1500 cc
 EW₃: 1500 cc (PGM-FI)

Serial Number _____

Transmission Number (Manual)

GW - 1000001

Transmission Type _____
 GV: 4-speed
 GW: 5-speed

Serial Number _____

Transmission Number (Hondamatic)

AV - 1000001

Transmission Type _____

Serial Number _____

Abbreviations:

2D H/B 2 Door Hatchback
 4D 4 Door Sedan
 4D H/B Wagon (Canadian model)
 Shuttle (Except Canadian model)

Vehicle Identification Number (Except Canadian Model)

JHMAAH5330S000001

Model Name _____
 AF: Coupe CR-X
 AL: 1200 2D H/B
 AG: 1300 2D H/B
 AH: 1500 2D H/B
 AM: 1200 4D
 AJ: 1300 4D
 AK: 1500 4D
 AN: Shuttle 4D H/B

Transmission Type _____
 5: 5-speed
 4: 4-speed
 3: Hondamatic



Number of Doors _____
 3: 2 Door
 4: 4 Door
 5: 5 Door
 The tailgate is counted as a door.

Grade _____
 1: Basic model (Most simple version)
 2: Standard model
 3: High priced orders-higher than standard version
 (3, 4, 5, 6, 7, 8, 9, 0)


Plant _____
 C: Sayama Plant
 S: Suzuka Plant

Serial Number _____

Identification Number Locations

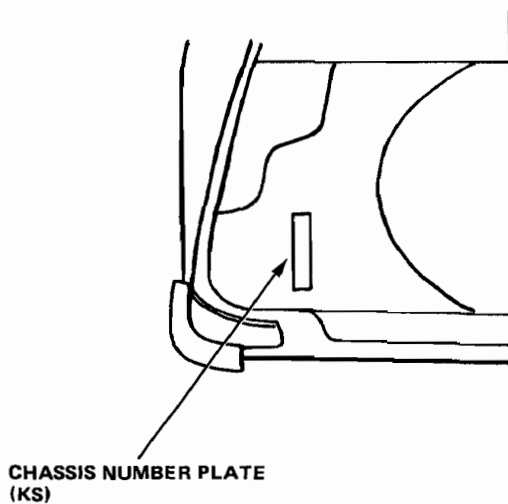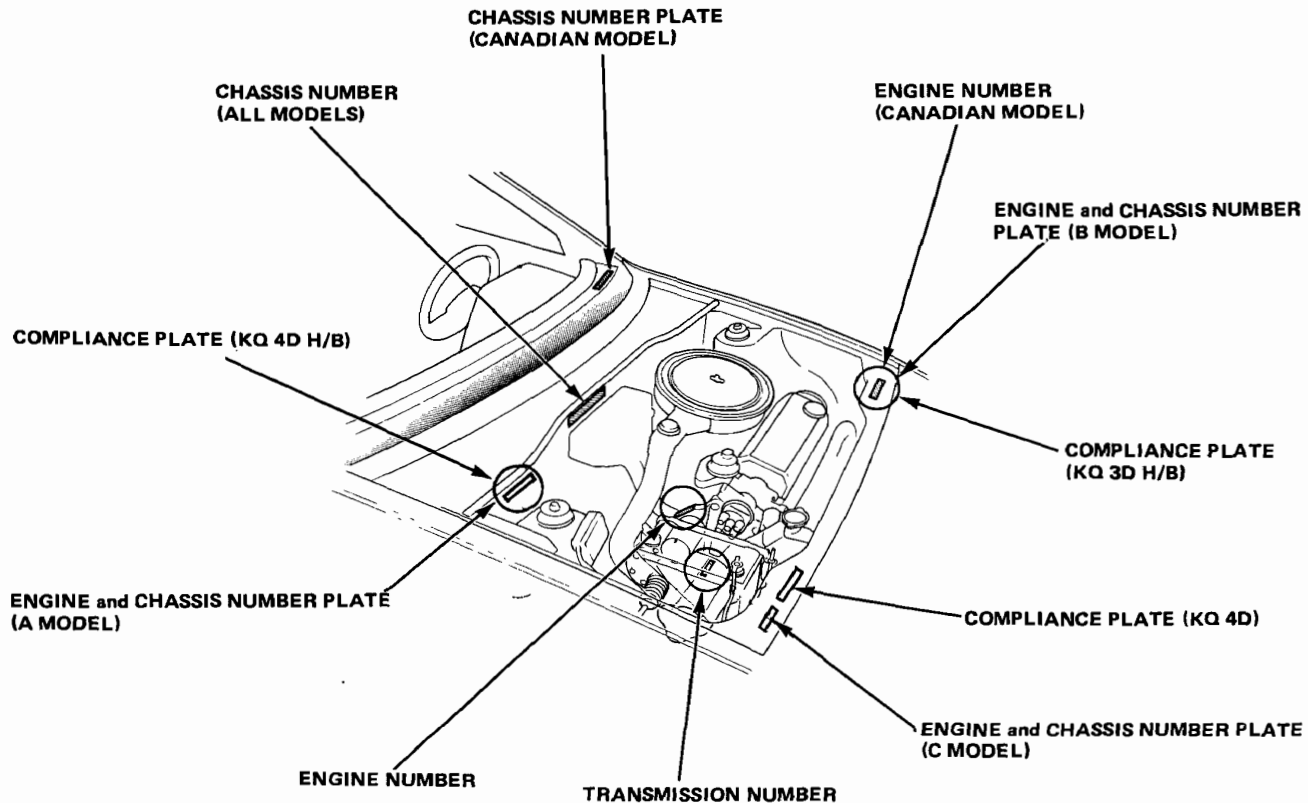

Label Locations

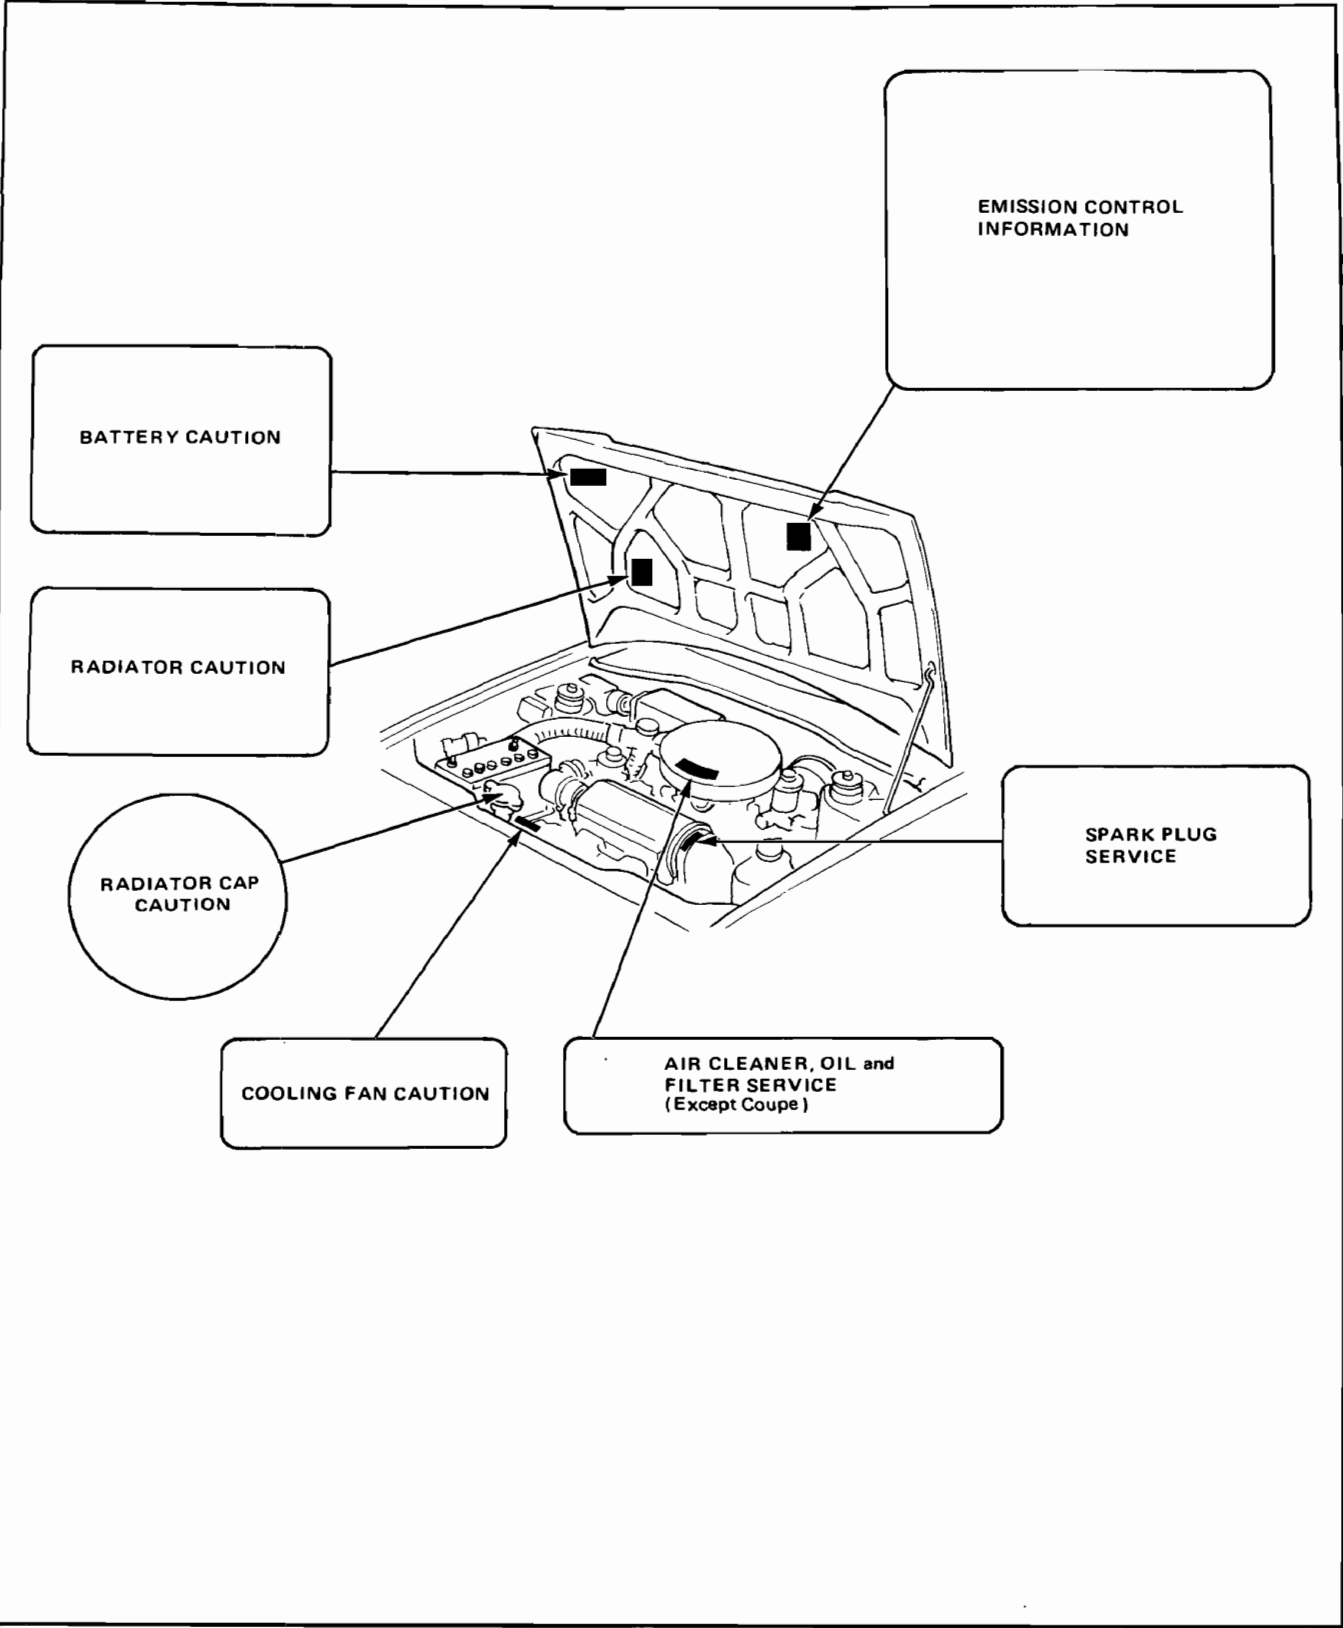


Lift and Support Points

Hoist

1. Place the lift blocks as shown.
2. Raise the hoist a few inches and rock the car to be sure it is firmly supported.
3. Raise the hoist to full height and inspect lift points for solid support.

WARNING When heavy rear components such as suspension, fuel tank, spare tire and trunk lid/hatch are to be removed, place additional weight in the trunk before hoisting. When substantial weight is removed from the rear of the car, the center of gravity may change and can cause the car to tip forward on the hoist.

NOTE: Since each tire/wheel assembly weights approximately 30 lbs, placing the front wheels in the trunk can assist with the weight transfer.

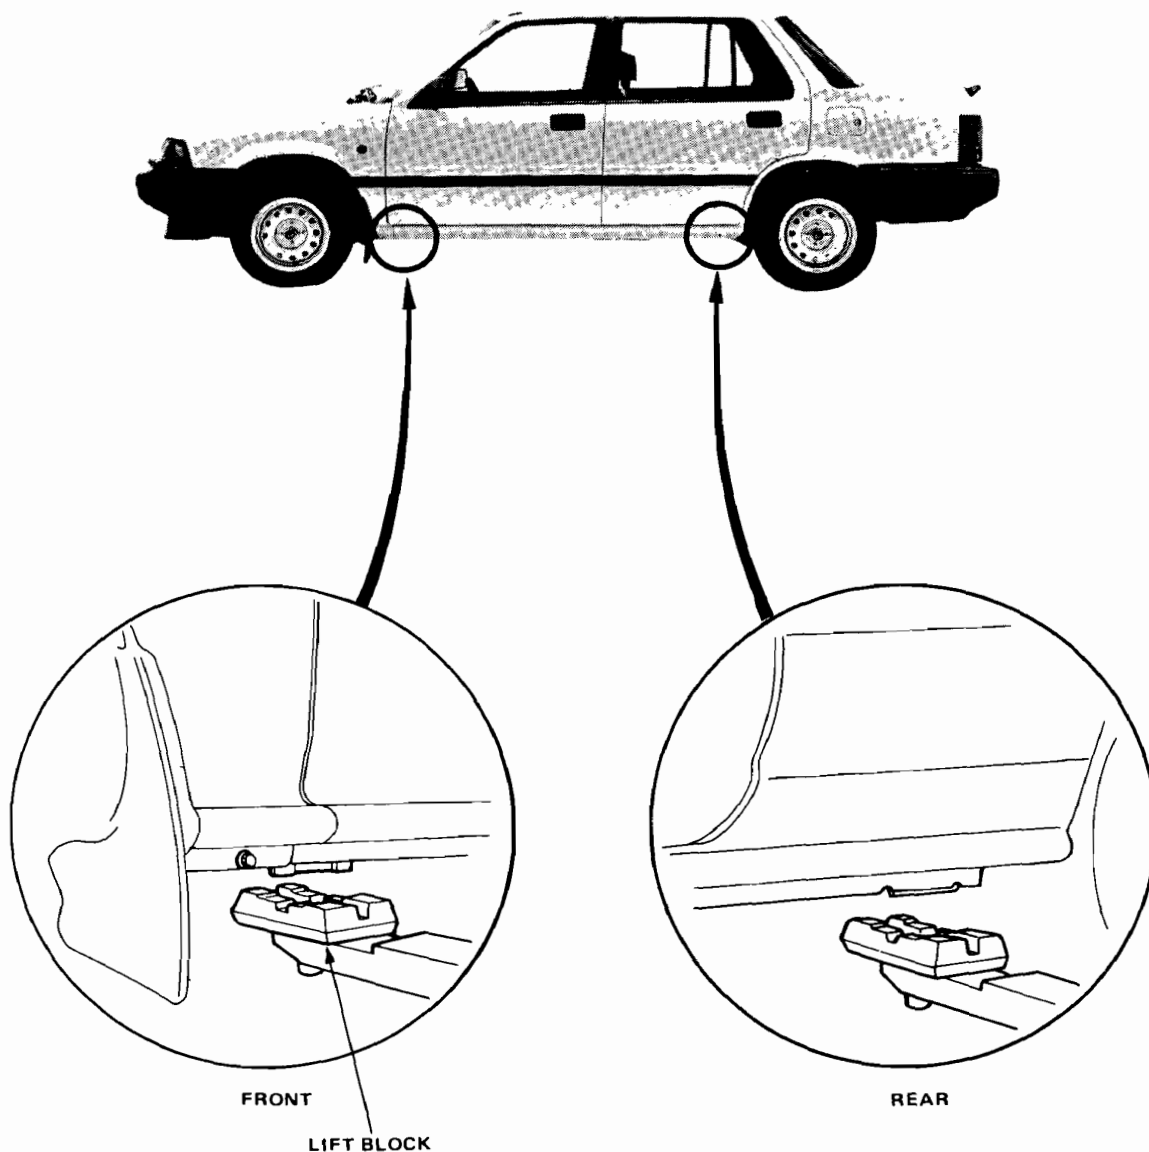

(cont'd)

Lift and Support Points(cont'd)


Floor Jack

1. Set the parking brake and block the wheels that are not being lifted.
2. When lifting the rear of car, put the gear shift lever in reverse (Hondamatic in PARK).
3. Raise the car high enough to insert the safety stands.
4. Adjust and place the safety stands as shown on page 1-7 so the car will be approximately level, then lower car onto them.

WARNING

- Always use safety stands when working on or under any vehicle that is supported by only a jack.
- Never attempt to use a bumper jack for lifting or supporting the car.

Front

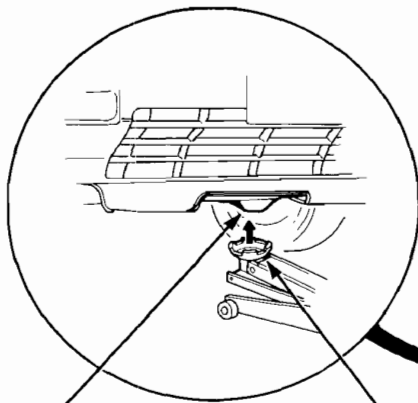


Center the jacking bracket in the middle of jack lift platform.

LIFT PLATFORM





Rear

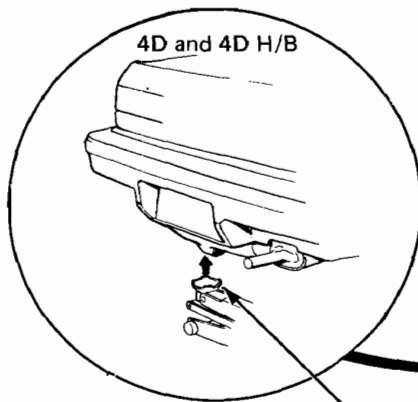


Center the jacking bracket in the middle of jack lift platform.

LIFT PLATFORM

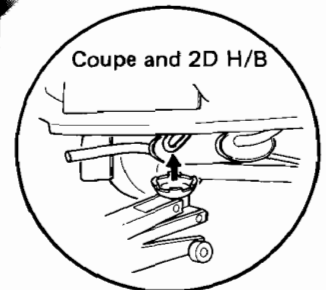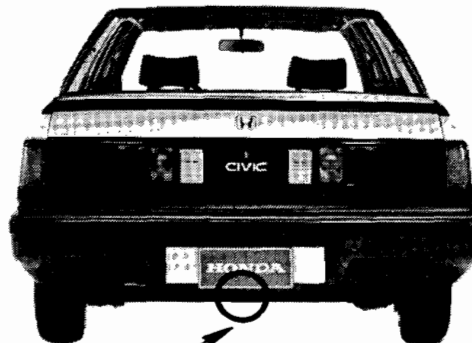



Safety Stands

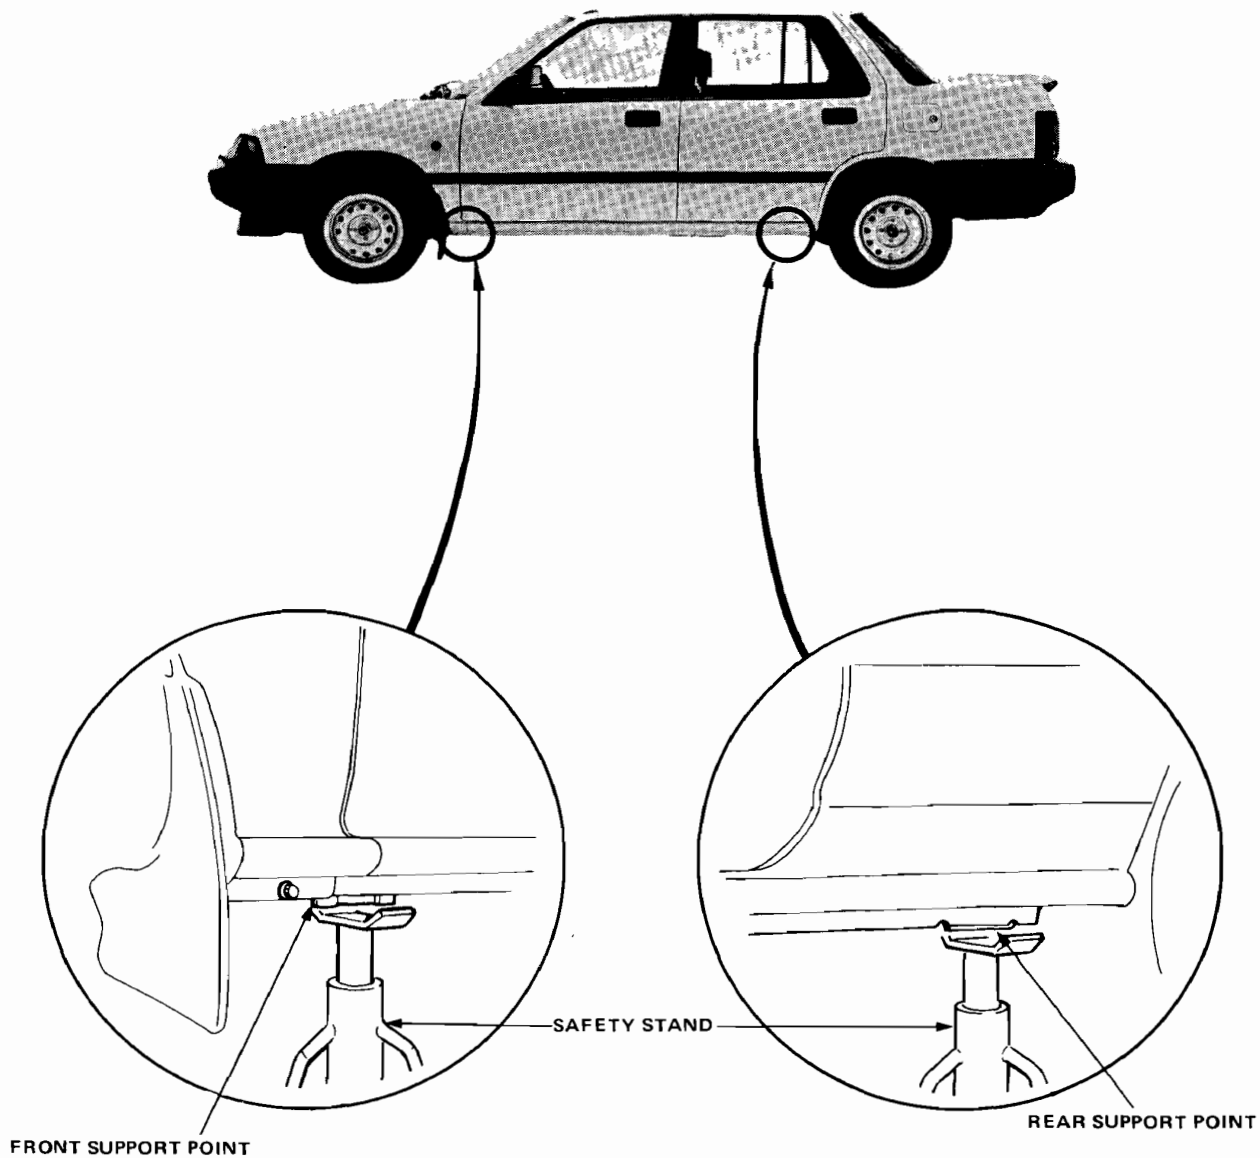


Towing

Towing

If possible, always tow the car with the front wheels off the ground. Do not use the bumpers to lift the car or to support the car's weight while towing. Check local regulations for towing with a rope or frame-mounted tow bar. A rope may be attached to the hook shown in the illustration. Do not attach a tow bar to either bumper.

If the car is to be towed with four wheels on the ground, observe the following precautions:

1. Wheels and axle must not be touching body or frame.
2. Turn the ignition key to the "I" position and make sure the steering wheel turns freely.
3. Place the transmission in NEUTRAL.
4. Release the parking brake.
5. DO NOT exceed 55 KPH (35 MPH) for distances of more than 80 km (50 miles).

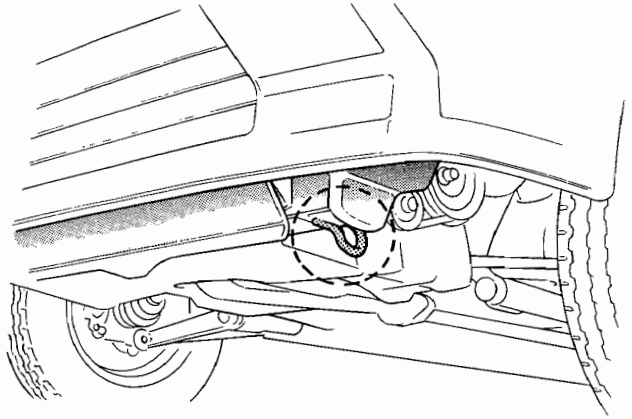

Preparation of Work




Special Caution Items For This Car

1. Apply liquid gasket to the transmission, oil pump cover, right side cover and water outlet. Use HONDA PARTS NO 08740-99986 as a liquid gasket.
 - Check that the mating surfaces are clean and dry before applying liquid gasket. Degrease the mating surfaces if necessary.
 - Apply liquid gasket evenly, being careful to cover all the mating surface.
 - To prevent leakage of oil, apply liquid gasket to the inner threads of the bolt holes.
 - Do not allow liquid gasket to stand for more than 20 minutes before assembly.
 - Fill the case with clean engine oil or coolant 30 minutes after assembly.

2. Fuel Line Servicing (Coupe: PGM-FI)


- Relieve fuel pressure by loosening the service bolt provided on the top of the fuel filter before disconnecting a fuel hose or a fuel pipe.

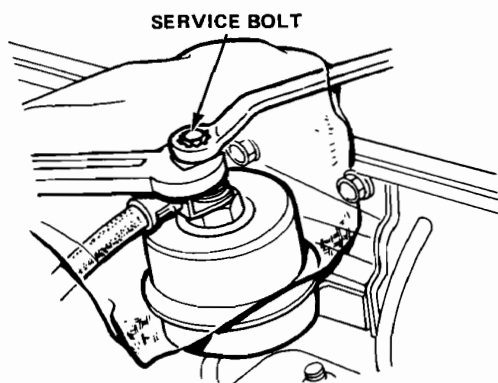

- Be sure to replace washers, O-rings, and seal rubbers with new ones when servicing fuel line parts.



- When assembling the flare joint of the high-pressure fuel line, clean the joint and coat with new engine oil.
- When installing an injector, check the angle of the coupler. The center line of the coupler should align with the setting mark on the injector holder.

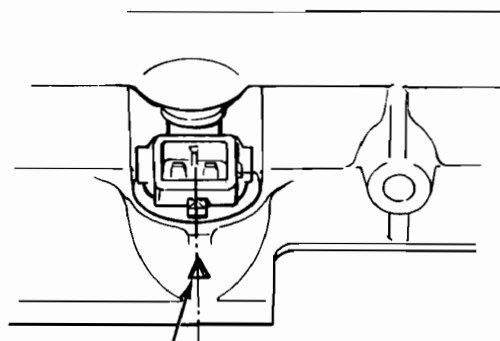

SETTING MARK

3. Inspection for fuel leakage (Coupe: PGM-FI)

- After assembling fuel line parts, turn ON the ignition switch (do not operate the starter) so that the fuel pump is operated for approximately two seconds and the fuel is pressurized. Repeat this operation two or three times and check whether any fuel leakage has occurred in any of the various points in the fuel line.

4. Installation of an amateur radio for cars equipped with PGM-FI


Care has been taken for the PGM-FI control unit (computer) and its wiring to prevent erroneous operation from external interference, but erroneous operation of the computer may be caused by entry of extremely strong radio waves. Attention must be paid to the following items to prevent erroneous operation of the computer.

- The antenna and the body of the radio must be at least 200 mm (7.9 in.) away from the computer. (The computer installation position is under the right side seat.)
- Do not lead the antenna feeder and the coaxial cable over a long distance parallel to the wiring, and when crossing with the wiring is required, execute crossing at a right angle.
- Do not install a radio with a large output (max. 10 W).


Preparation of Work

CAUTION: Observe all safety precautions and notes while working.

1. Protect all painted surfaces and seats against dirt and scratches with a clean cloth or vinyl cover.

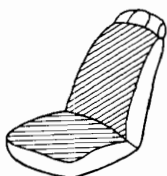


2. Work safely and give your work your undivided attention. When either the front or rear wheels are to be raised, block the remaining wheels securely. Exchange signals as frequently as possible when a work involves two or more workers. Do not run the engine unless the shop or working area is well ventilated.

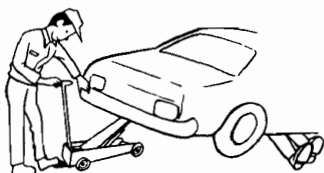


3. Prior to removing or disassembling parts, they must be inspected carefully to isolate the cause for which the service is called for. Observe all safety notes and precautions and follow the proper procedures as described in this manual.



Mark or place all removed parts in order in a parts rack so they can be placed back to their original places or parts from which they were removed or with which they were mated.




4. Use special tool when use of such a tool is specified.

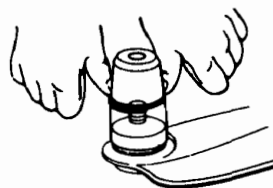


5. Parts must be assembled with the proper looseness or tightness according to the maintenance standards established.


6. When tightening bolts or nuts, begin on center or larger diameter bolts and tighten them in criss-cross pattern in two or more steps if necessary.

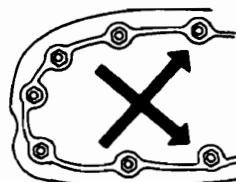


7. Use new packings, gaskets, O-rings and cotter pins whenever reassembling.

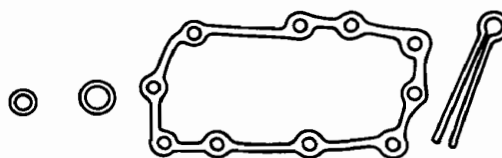

8. Use genuine HONDA parts and lubricants or those equivalent. When parts are to be reused, they must be inspected carefully to make sure they are not damaged or deteriorated and in good usable condition.

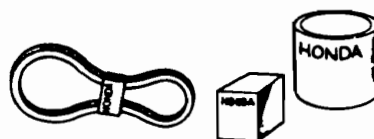

9. Coat or fill parts with specified grease where specified grease where specified (Page 4-2). Clean all removed parts in or with solvent upon disassembly.

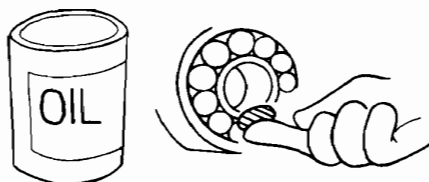

10. Brake fluid and hydraulic components


- When replenishing the system, use extreme care not to allow dust and dirt from entering the inside.
- Do not mix different brands of fluid as they may not be compatible.
- Do not reuse drained brake fluid.
- Brake fluid can cause damage to the painted surfaces. Wipe up spilled fluid at once.
- After disconnecting brake hoses or pipes from the joint, be sure plug the opening to prevent loss of brake fluid.
- Clean all disassembled parts only in clean BRAKE FLUID. Blow open all holes and passages with compressed air.



- Keep disassembled parts from air-borne dust and abrasives.
- Check that parts are clean before assembly.


11. Avoid oil or grease getting on rubber parts and tubes.

12. Upon assembling, check every possible part for proper installation and movement or operation.

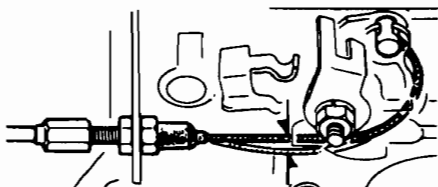


Electrical


- Before making any repairs on electric wires or parts, disconnect the battery cables from the battery starting with the negative (-) terminal.

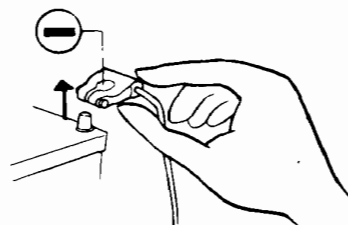


- After making repairs, check each wire or part for proper routing and installation. Also check to see that they are connected properly.
- Always connect the battery positive (+) cable first, then connect the negative (-) cable.

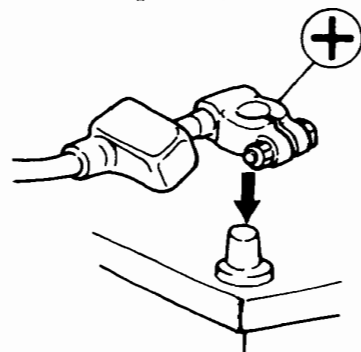

- Coat the terminals with clean grease after connecting the battery cables.
- Don't forget to install the terminal cover over the positive battery terminal after connecting.
- Before installing a new fuse, isolate the cause and take corrective measures, particularly when frequent fuse failure occurs.

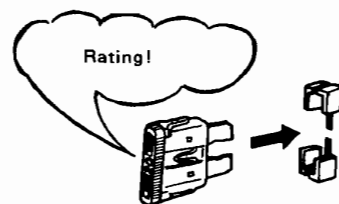

- Be sure to install the terminal cover over the connections after a wire or wire harness has been connected.

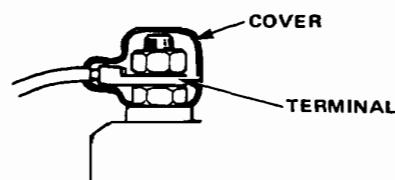


(cont'd)


Preparation of Work

Electrical (cont'd)


- All plastic plugs have locking tabs that must be released before disconnecting, and must be aligned when re-connecting.

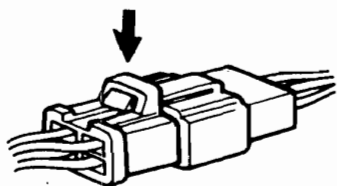


- When disconnecting a coupler, pull it off from the mating coupler by holding on both couplers.
- Never try to disconnect couplers by pulling on their wires.

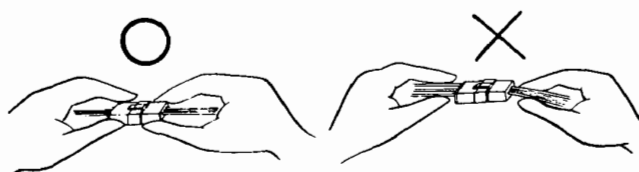


- Before connecting couplers, check to see that the terminals are in place and are not bent or distorted.

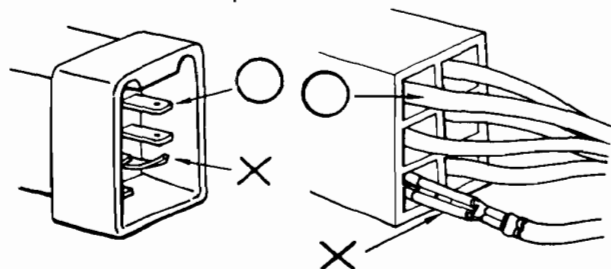


- Insert couplers fully until they will no longer go.
- Some couplers have locking tabs that must be aligned and engaged securely.
- Don't use wire harnesses with a loose wire or coupler.

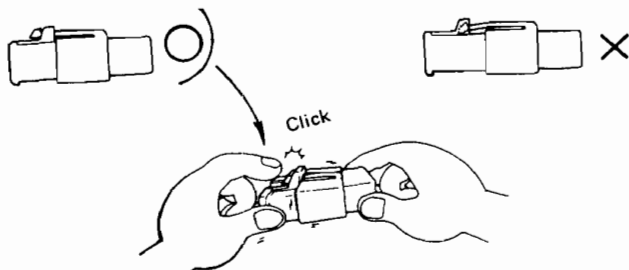


- Place the plastic cover over the mating coupler after reconnecting. Also check that the end is not inverted.

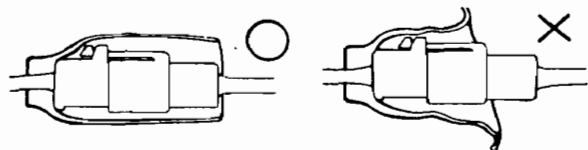


- Before connecting, check each connector cover for breakage. Also make sure that the female connector is tight and not pried open from the previous use.

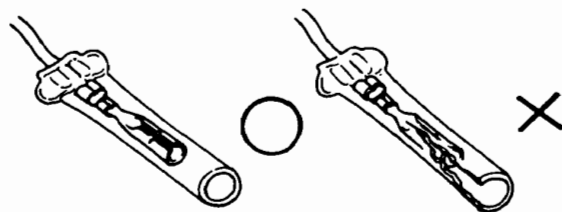


- Insert male connectors into the female connectors fully until they will no longer go.
- Be sure that plastic cover is placed over the connection.
- Don't place the opening of each plastic cover facing up.

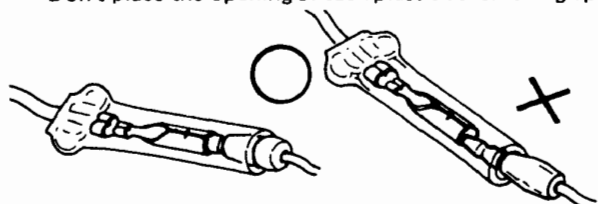

- Secure wires and wire harnesses to the frame with their respective wire bands at the designated locations. Tighten the bands so that only the insulated surfaces contact the wires or wire harnesses.

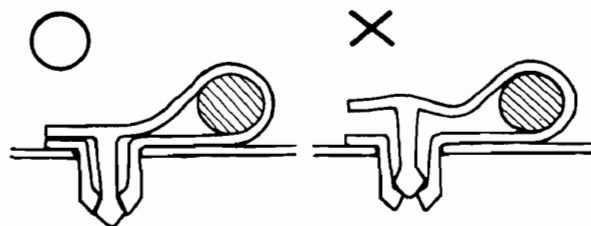


- A loose wire harness or cable can be a hazard to safety. After clamping, check each wire for security in its clamp.

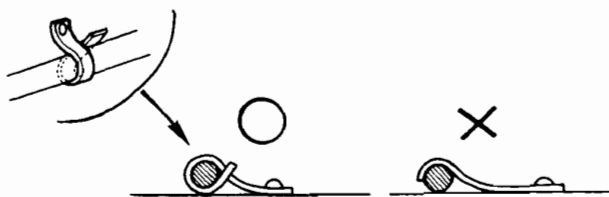


- Do not squeeze wires against the weld or nugget of its clamp when a weld-on clamp is used.




- After clamping, check each harness to be certain that it is not interfering with any moving or sliding parts of the vehicle.
- Keep wire harnesses away from the exhaust pipes and other hot parts.

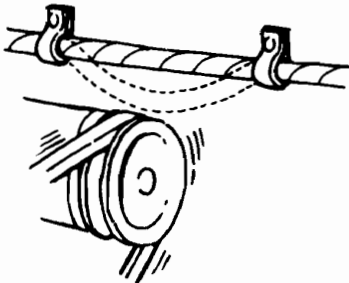


- Always keep a safe distance between wire harnesses and any heated parts.

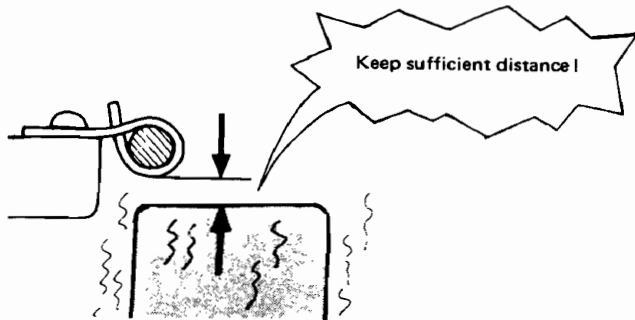


- Do not bring wire harnesses in direct contact with sharp edges or corners.
- Also avoid contact with the projected ends of bolts, screws and other fasteners.

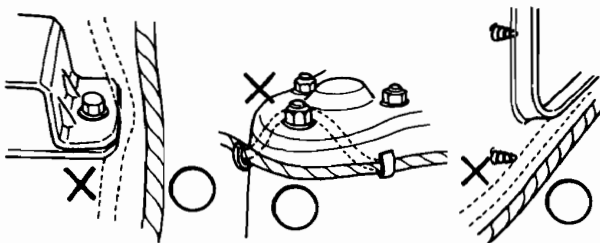


- Route harnesses so they are not pulled taut or slackened excessively.

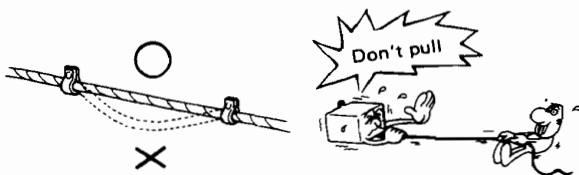


- Protect wires and harnesses with a tape or tube if they are in contact with a sharp edge or corner.

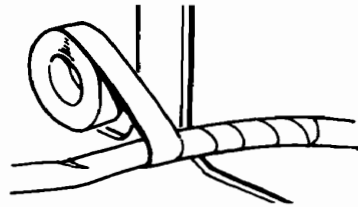


- Clean the attaching surface thoroughly if a plaster is used. Use a spirit wipe if necessary.

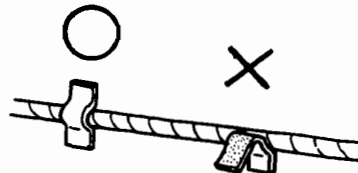


- Seat grommets in their grooves properly.

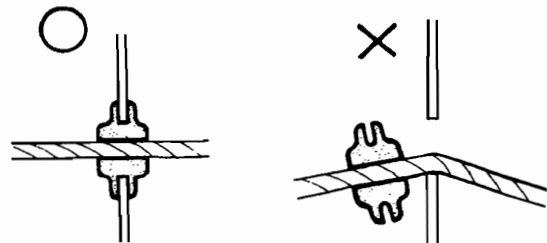

- Do not damage the insulator when connecting a wire.
- Do not use wires or harnesses with a broken insulator. Repair by wrapping with a protective tape or replace with new ones if necessary.

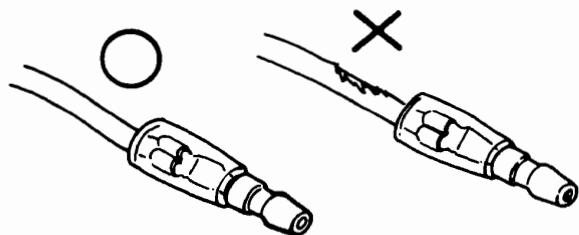

- After installing parts, make sure that wire harnesses are not pinched.

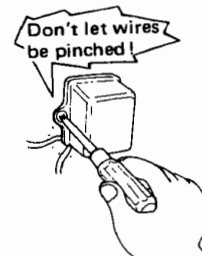


(cont'd)


Preparation of Work

Electrical (cont'd)


- After routing, check that the wire harnesses are not twisted or kinked.

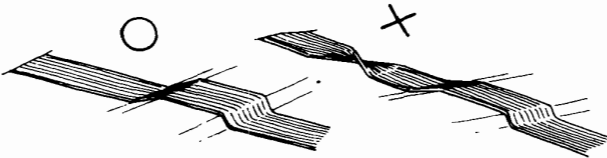

- Wire harnesses should be routed so that they are not pulled taut, slackened excessively, pinched, or interfered with adjacent or surrounding parts in all steering positions.

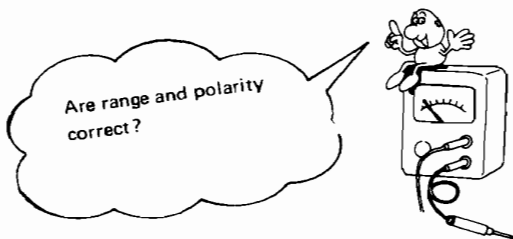

- When using the Service Tester, follow the manufacturer's instructions and those described in the Shop Manual.

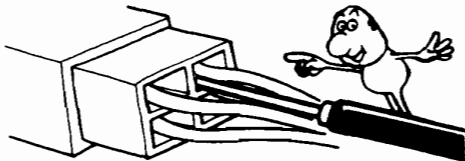

- Do not throw or let parts fall.



- Rust is the enemy of all finished surfaces. Before connecting connectors and couplers, check the terminals and remove, if any, rust using a fine sand paper or emery cloth.



Symbol Marks

The following symbols stand for:



: Apply engine oil.



: Apply brake fluid.



: Apply grease.




: Apply Automatic Transmission Fluid.

Special Tools

Newly Provided Tools

Ref. No.	Tool Number	Description	Q'ty	Remarks	Section
①	07743-0020000	Valve Guide Driver	1	Use Changed to 07973-6570002 Attachment	6
②	07973-PE00000	Piston Pin Replacement Kit	1		7
②- 1	07973-PE00100	Piston Pilot	(1)		7
②- 2	07973-PE00200	Piston Pin Pilot Collar	(1)		7
②- 3	07973-PE00300	Piston Pin Insert Attachment A	(1)		7
②- 4	07973-PE00400	Piston Pin Insert Attachment B	(1)		7
③	07999-PE70000	System Checker Harness	1	PGM-FI	11
④	07411-0020000	Digital Circuit Tester	1		11
⑤	07406-0040000	Fuel Pressure Gauge Set	1		11
⑥	07920-SB20000	Fuel Sender Wrench	1		11
⑦	07924-PE60000	Ring Gear Holder	1		13
⑧	07974-PE60000	Clutch Disc Alignment Tool	1	(4D Only)	13
⑨	07933-PE60000	Housing Puller	1		14
⑩	07998-SB20000	Accelerator Pedal Weight Set	1		16
⑩- 1	07998-SA50100	Main Accelerator Pedal Weight	(1)		16
⑩- 2	07998-SB20200	Sub Accelerator Pedal Weight	(1)		16
⑪	07965-SA70100	Front Hub Dis/Assembly Tool Pin A	1		20
⑫	07965-SA70200	Front Hub Dis/Assembly Tool B	1		20
⑬	07965-SB40000	Lower Bushing Driver	1		20
⑭	07946-SB20000	Bearing Driver Attachment	1		20
⑮	07965-SB20000	Lower Control Arm Dis/Assembly Tool Kit	1		20
⑮- 1	07965-SB20100	Lower Control Arm Assembly Shaft	(1)		20
⑮- 2	07965-SB20200	Lower Control Arm Disassembly Tool	(1)		20
⑮- 3	07965-SB20300	Tool Base	(1)		20
⑮- 4	07965-SB20400	Lower Control Arm Assembly Tool	(1)		20
⑯	07934-SB20000	Shaft Seal Driver	1		24

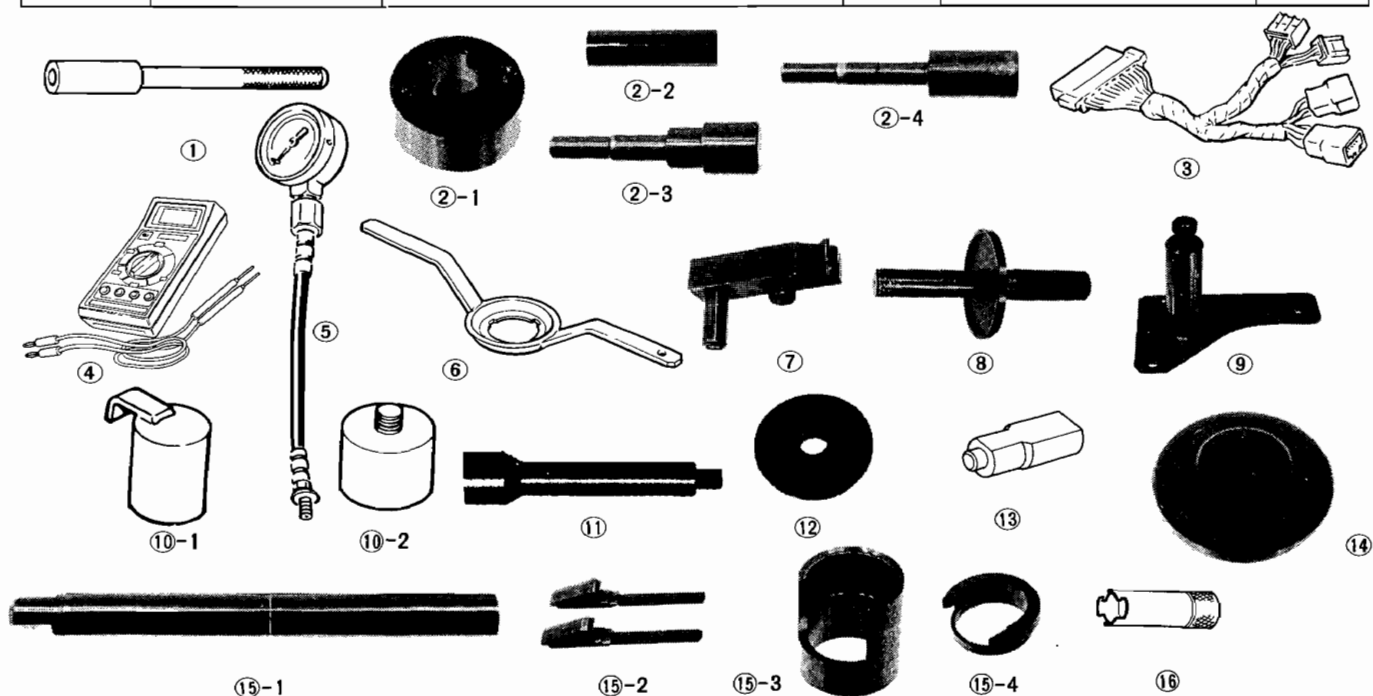




Special Tools (Common with Other Models)

5. Engine Removal/Installation


Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07944-6110200	8 mm Pin Punch	1	
②	07941-6920001	Ball Joint Remover	1	
③	07966-6340011	Engine Block Hanger	1	



①

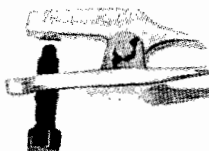


②



③

6. Cylinder Head/Valve Train


Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07757-0010000	Valve Spring Compressor	1	07957-3290001 may also be used.
②	07942-6570100	Valve Guide Driver/Remover	1	
③	07743-0020000	Valve Guide Driver	1	
④	07984-6110000	Valve Guide Reamer	1	
⑤	07947-SB00100	Oil Seal Driver	1	Camshaft

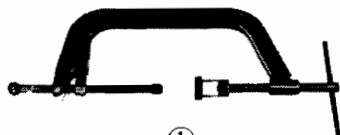

①



②



③





④




⑤

7. Engine Block

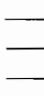Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07973-6570002	Piston Pin Insert Base Set	1	 Not included in base set. Use each with the base set.
②	07973-PE00100	Piston Pilot	1	
③	07973-PE00200	Piston Pin Insert Attachment A	1	
④	07973-PE00300	Piston Pin Pilot Collar	1	
⑤	07973-PE00400	Piston Pin Insert Attachment B	1	Crankshaft Oil Seal (Clutch side) 07949-6110000 may also be used.
⑥	07948-SB00100	Driver Attachment	1	
⑦	07749-0010000	Driver	1	

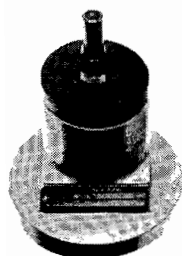

①

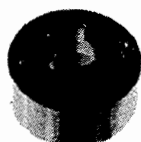

②



③




④



⑤



⑦

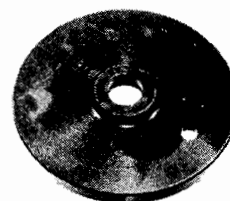

⑥


(cont'd)

Special Tools

Special Tools (Common with Other Models)

8. Engine Lubrication

Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07912-6340001	Oil Filter Socket Wrench	1	
②	07406-0030000	Oil Pressure Gauge Adaptor	1	
③	07947-6340000	Oil Seal Driver Attachment	1	

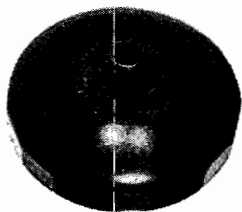

①




②




③

11. Fuel and Carburetor

Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07999-PE70000	System Checker Harness	1	(PGM-FI)
②	07406-0040000	Fuel Pressure Gauge Set	1	(PGM-FI)
②- 1	07406-0040100	Pressure Gauge	(1)	Component Tool
②- 2	07406-0040200	Hose	(1)	Component Tool
③	07746-0010100	Driver Attachment 32 x 35 mm	1	(PGM-FI)
④	07746-0040200	Pilot 12 mm	1	(PGM-FI)
⑤	07749-0010000	Driver	1	07949-6110000 may also be used.
⑥	07920-SB20000	Fuel Sender Wrench	1	
⑦	07744-0010300	3.5 mm Pin Punch	1	(PGM-FI)
⑧	07614-0050100	Fuel Line Clip	1	
⑨	07411-0020000	Digital Circuit Tester	1	(PGM-FI)
⑩	07401-0010000	Float Level Gauge	1	

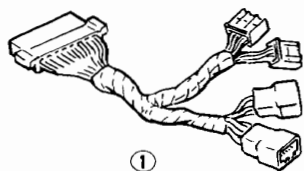

①

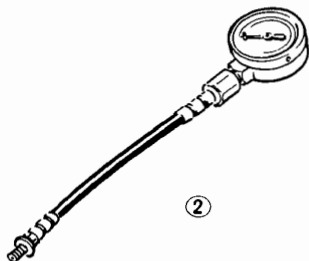

②




③



④



⑤

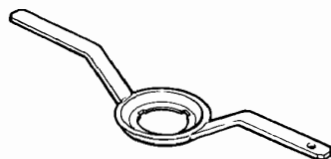

⑥



⑦



⑧



⑨



⑩



13. Clutch

Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07924-PE60000	Ring Gear Holder	1	
②	07974-PE60000	Clutch Disc Alignment Tool	1	



14. and 15. Manual Transmission


Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07924-6340300	Mainshaft Holder	1	
②	07944-6110100	5 mm Pin Punch	1	
③	07933-PE60000	Transmission Housing Puller	1	
④	07749-0010000	Driver	1	07949-6110000 may also be used.
⑤	07947-6340500	Driver Attachment E	1	
⑥	07936-6340000	Bearing Remover Set	1	
⑦	07746-0010300	Driver Attachment 42 x 47	1	
⑧	07746-0010100	Driver Attachment 32 x 35	1	
⑨	07947-6110500	Driver Attachment E	1	Differential Oil Seal
⑩	07746-0010400	Driver Attachment 52X55	1	




①



②

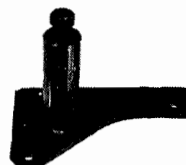

③



④



⑤



⑥



⑦



⑧



⑨




⑩

(cont'd)

Special Tools

Special Tools (Common with Other Models)

16. Hondamatic Transmission				
Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07974-6890300	Throttle Cable Adjustment Gauge	1	07907-6890100 may also be used. Use corrected to 07936-6890200 is possible. For the correction method, refer to page 16-14.
②	07923-6890202	Mainshaft Holder	1	
③	07907-PD10000	Socket Wrench 30 mm	1	
④	07933-6890201	Transmission Housing Puller	1	
⑤	07960-6890000	Clutch Spring Compressor	1	Use changed to 07960-6120000 attachment 07949-6110000 may also be used.
⑤-1	07960-6890100	Clutch Spring Compressor Attachment	1	
⑥	07749-0010000	Driver	1	
⑦	07947-6340500	Driver Attachment E	1	
⑧	07947-6110500	Oil Seal Driver Attachment	1	Component Tool
⑨	07746-0010400	Driver Attachment 52 x 55 mm	1	
⑩	07936-6340000	Bearing Remover Set	1	
⑪	07406-0020003	Oil Pressure Gauge Set	1	
⑪-1	07406-0020201	Oil Pressure Gauge Hose	(3)	Component Tool
⑫	07998-SB20000	Accelerator Pedal Weight Set	1	
⑫-1	07998-SA50100	Main Accelerator Pedal Weight	(1)	
⑫-2	07998-SB20200	Sub Accelerator Pedal Weight (0.3 kg)	(1)	Component Tool

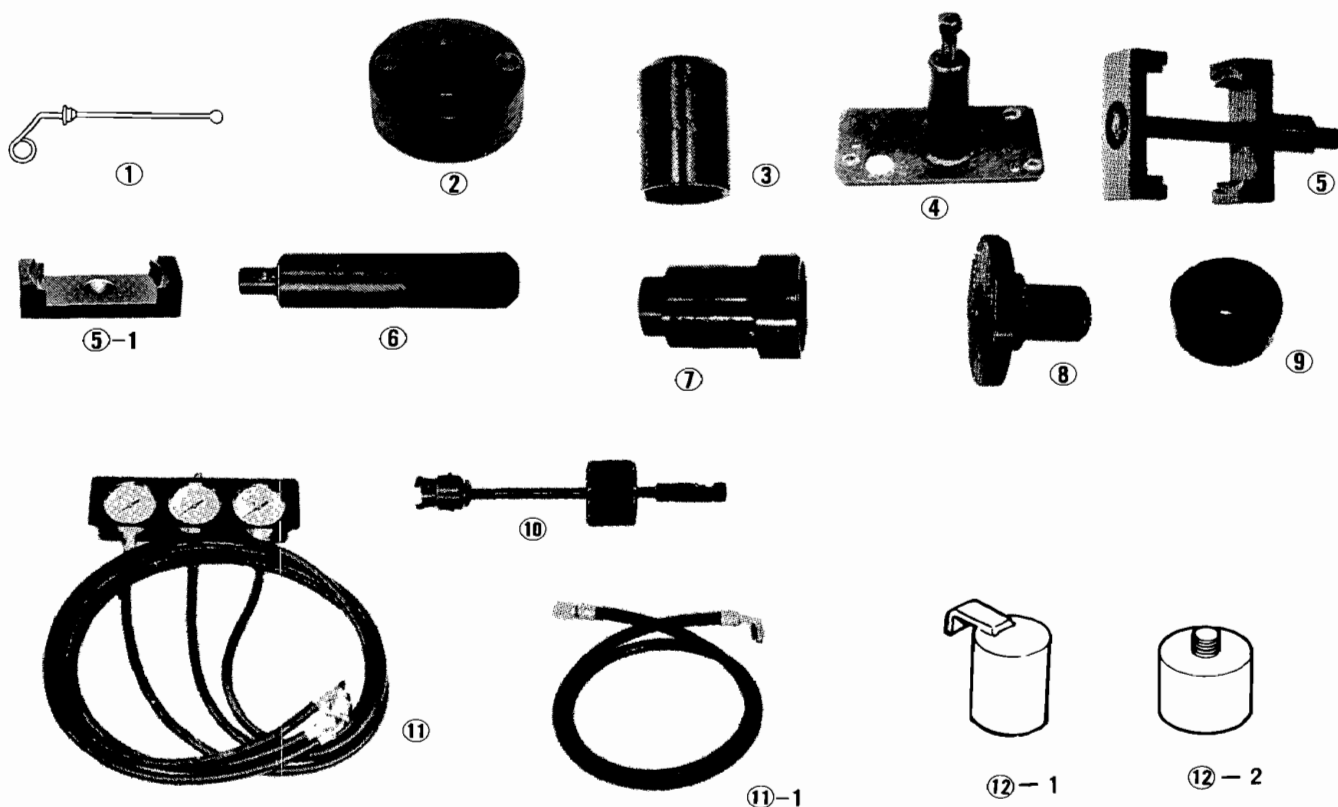



17. Differential

Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07746-0030100	Driver C	1	07949-6110000 may also be used.
②	07944-SA00000	4 mm Pin Punch	1	
③	07947-6110500	Oil Seal Driver	1	
④	07749-0010000	Driver	1	
⑤	07947-6340500	Driver Attachment E	1	
⑥	07746-0030400	Attachment 35 mm	1	



①



②



③



④




⑤



⑥

18. Drive Shaft

Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07941-6920001	Ball Joint Remover	1	

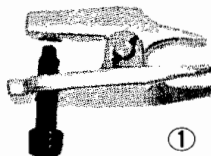


①

19. Steering

Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07916-6920000	Steering Gearbox Lock Nut Wrench	1	07916-SA50001 may also be used. Clip type
②	07941-6920001	Ball Joint Remover	1	
③	07974-SA50800	Clip Guide (B)	1	



①

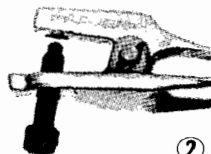

②




③

(cont'd)

Special Tools

Special Tools (Common with Other Models)


20. Suspension				
Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07410-0010200	Front Wheel Alignment Attachement B	1	07947-6340000 may also be used. 07949-6110000 may also be used.
②	07941-6920001	Ball Joint Remover	1	
③	07965-SA70100	Front Hub Dis/Assembly Tool Pin A	1	
④	07965-6340301	Front Hub Dis/Assembly Tool Base A	2	
⑤	07965-SA70200	Front Hub Dis/Assembly Tool B	1	
⑥	07749-0010000	Driver	1	
⑦	07746-0010600	Driver Attachment 72 x 75	1	
⑧	07946-SB20000	Bearing Driver Attachment	1	
⑨	07974-SA50700	Clape Guide (A)	1	
⑩	07965-SB40000	Lower Bushing Driver	1	
⑪	07965-SB20000	Lower Control Arm Dis/Assembly Tool Kit	1	
⑪- 1	07965-SB20100	Lower Control Arm Assembly shaft	(1)	4D Only
⑪- 2	07965-SB20200	Lower Control Arm Disassembly Tool	(1)	
⑪- 3	07965-SB20300	Tool Base	(1)	
⑪- 4	07965-SB20400	Lower Control Arm Assembly Tool	(1)	

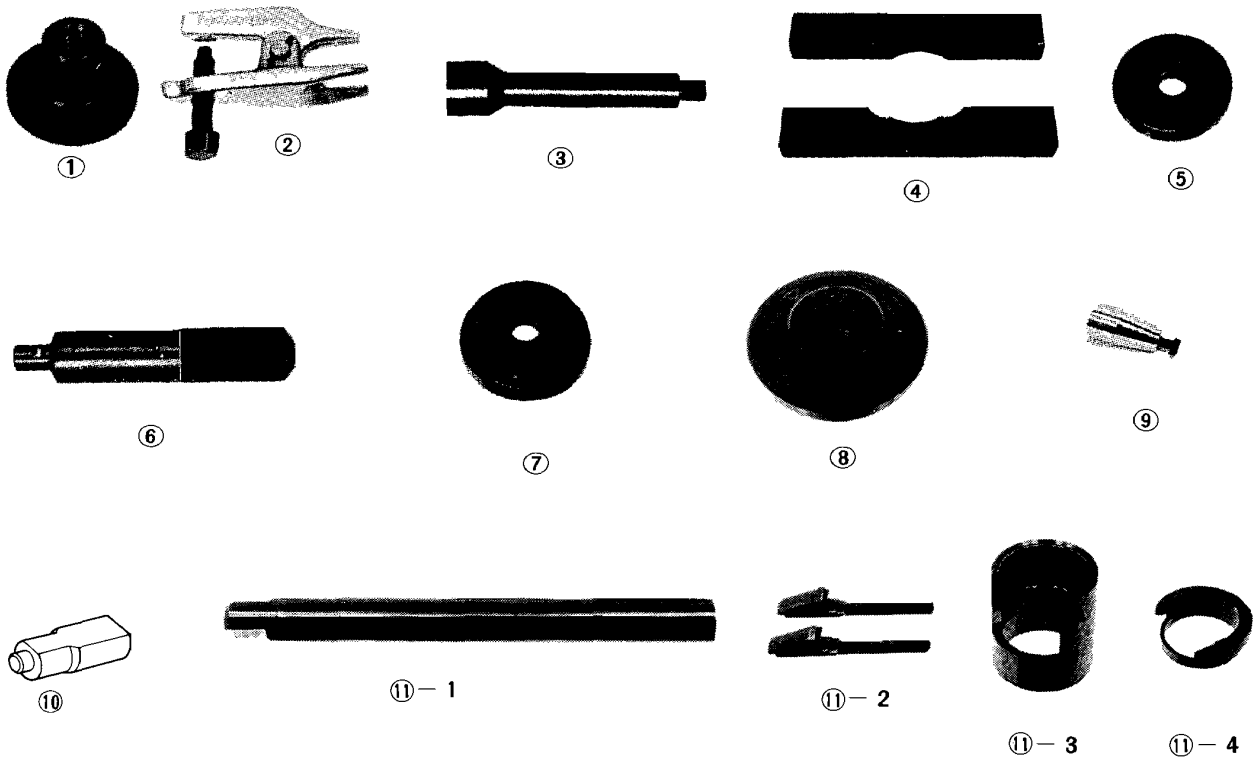




21. Brake

Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07914-SA50000	Snap Ring Pliers	1	07914-323001 may also be used. } Short parts of the brake power kit 07504-6340100 07949-6110000 may also be used.
②	07921-0010100	Flare Nut Wrench	1	
③	07965-5790400	Master Cylinder Cup Guide	1	
④	07404-5790300	Vacuum Gauge	1	
⑤	07410-5790500	Tube Joint Attachment I	1	
⑥	07510-6340300	Vacuum Joint Tube A	1	
⑦	07406-5790200	Oil Pressure Gauge	2	
⑧	07410-5790100	Pressure Gauge Attachment C	1	
⑨	07510-6340100	Pressure Gauge Attachment	2	
⑩	07947-6890300	Driver Attachment C	1	
⑪	07749-0010000	Driver	1	
⑫	07975-SA50002	Brake Booster Adjusting Gauge	1	

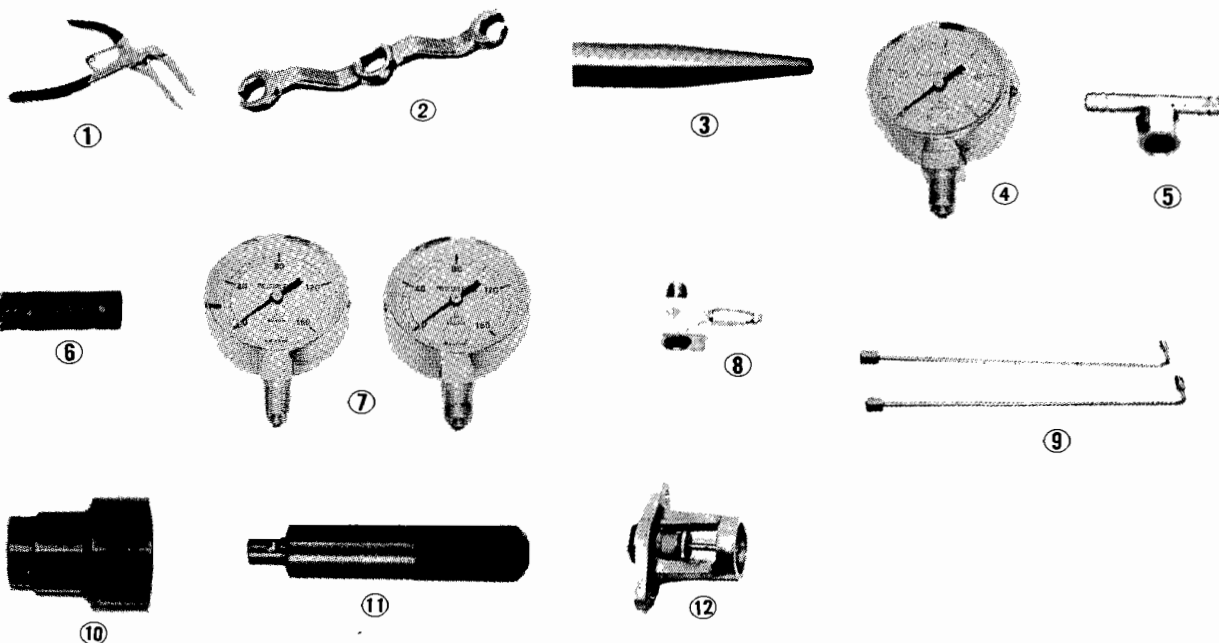

22. Body

Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07703-0010300	Torx Driver Grip	1	
②	07703-0010600	Torx Driver Bit (T30HD)	1	

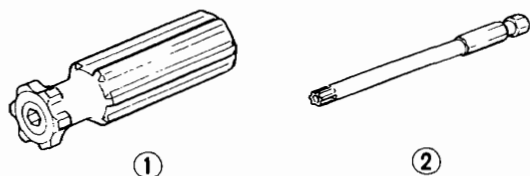

(cont'd)

Special Tools

Special Tools (Common with Other Models)

24. Air Conditioner				
Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07923-PB80001	Pulley Holder	1	
②	07934-PB80001	Clutch Remover	1	
③	07703-0010300	Torx Driver Bit (T30H)	1	
④	07934-SB20000	Shaft Seal Driver	1	




26. Ignition				
Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07744-0010300	3.5 mm Pin Punch	1	Distributor



Optional Tools

Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07780-0012300	Valve Seat Cutter 32°	1	
②	07780-0012900	Valve Seat Cutter 32°	1	
③	07780-0014000	Valve Seat Cutter 60°	1	
④	07780-0014100	Valve Seat Cutter 60°	1	
⑤	07780-0010400	Valve Seat Cutter 45°	1	
⑥	07780-0010800	Valve Seat Cutter 45°	1	
⑦	07781-0010201	Valve Seat Cutter Holder	1	
⑧	07781-0010301	Valve Seat Cutter Holder	1	

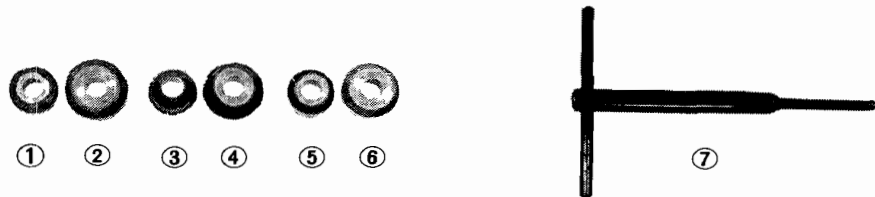

Standards and Service Limits

*1300 and 1200

Unit: mm (in.)

Cylinder Head/Valve Train — Section 6

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Compression	350 min ⁻¹ (rpm) and wide-open throttle	Nominal PGM-FI 1,274 kPa (13.0 kg/cm ² , 185 psi) Carburetor 1,225 kPa (12.5 kg/cm ² , 176 psi) Minimum PGM-FI 1,078 kPa (11.0 kg/cm ² , 156 psi) Carburetor 1,029 kPa (10.5 kg/cm ² , 149 psi) Maximum variation 196 kPa (2 kg/cm ² , 28 psi)	
Cylinder head	Warpage Height	— 90 (3.54)	0.05 (0.002) 89.8 (3.53)
Camshaft	End play Oil clearance Runout Cam lobe height	0.05–0.15 (0.002–0.006) 0.050–0.098 (0.002–0.004) 0.03 (0.001) max. PGM-FI IN 40.865 (1.6089) EX 40.884 (1.6096) 1500 IN 40.370 (1.5894) EX 40.391 (1.5902) 1300 IN 40.056 (1.5770) EX 40.078 (1.5779) 1200 IN 39.095 (1.5392) EX 39.120 (1.5402)	0.5 (0.02) 0.15 (0.006) 0.06 (0.002) — — — — — — —
Valve	Valve clearance Valve stem O.D. Stem-to-guide clearance Stem installed height	IN 0.17–0.22 (0.007–0.009) EX 0.22–0.27 (0.009–0.011) IN 6.58–6.59 (0.2591–0.2594) EX 6.55–6.56 (0.2579–0.2583) IN 0.02–0.05 (0.001–0.002) EX 0.05–0.08 (0.002–0.003) IN 48.16 (1.896) EX 48.16 (1.896)	— — 6.55 (0.258) 6.52 (0.257) 0.08 (0.003) 0.11 (0.004) 48.95 (1.927) 48.95 (1.927)
Valve seat	Width	IN and EX 1.25–1.55 (0.049–0.061)	2.0 (0.08)
Valve spring	Free length Squareness Inner and Outer	IN and EX 47.6 (1.87) —	46.6 (1.83) 1.75 (0.068)
Valve guide	I.D.	IN 6.61–6.63 (0.260–0.261) EX 6.61–6.63 (0.260–0.261)	6.65 (0.262) 6.65 (0.262)
Rocker arm	Arm-to-shaft clearance	0.018–0.054 (0.0007–0.0021)	0.08 (0.003)

Engine Block — Section 7

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Cylinder block	Warpage of deck surface Bore diameter Bore taper Reboring limit	0.07 (0.003) max. 74.00–74.02 (2.9133–2.9142) 0.07–0.012 (0.0003–0.0005) —	0.10 (0.004) 74.10 (2.9173) 0.05 (0.002) 0.5 (0.02)
Piston	Skirt O.D. At 16 mm (0.63 in) from bottom of skirt Clearance in cylinder Piston-to-ring clearance (Top) (Second)	73.97–73.99 (2.9122–2.9133) 0.01–0.05 (0.0004–0.0020) 0.03–0.06 (0.0012–0.0024) 0.030–0.055 (0.0012–0.0022)	73.96 (2.912) 0.07 (0.003) 0.13 (0.005) 0.13 (0.005)
Piston ring	Ring end gap (Top and second) Ring end gap (Oil)	0.15–0.35 (0.006–0.014) 0.30–0.90 (0.012–0.035)	0.6 (0.024) 1.1 (0.043)
Connecting rod	Pin-to-rod interference Large end bore diameter End play installed on crankshaft	0.02–0.04 (0.0008–0.0016) Nominal 45 (1.77) *43 (1.69) 0.15–0.30 (0.006–0.012)	0.02 (0.0008) — 0.40 (0.016)
Crankshaft	Main journal diameter Taper/out-of-round, main journal Rod journal diameter Taper/out-of-round, rod journal End play Runout	49.976–50.000 (1.9676–1.9685) 0.005 (0.0002) max. 41.976–42.000 (1.6526–1.6535) *39.976–40.000 (1.5739–1.5748) 0.005 (0.0002) max. 0.10–0.35 (0.004–0.014) 0.03 (0.0012) max.	— 0.010 (0.0004) — — 0.010 (0.0004) 0.45 (0.018) 0.06 (0.0024)
Bearings	Main bearing-to-journal oil clearance Rod bearing-to-journal oil clearance	0.024–0.042 (0.0009–0.0017) 0.020–0.038 (0.0008–0.0015)	0.07 (0.003) 0.07 (0.003)

Engine Lubrication — Section 8

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Engine oil	Capacity ℓ (US. qt., Imp. qt.)	4.0 (4.2, 3.4) After engine disassembly 3.5 (3.7, 3.1) After oil change, including oil filter 3.0 (3.2, 2.6) After oil change, without oil filter	
Oil pump	Displacement Inner-to-outer rotor radial clearance Pump body-to-rotor radial clearance Pump body-to-rotor side clearance	35ℓ (9.2 US gal., 7.7 Imp gal.) 3,000 min ⁻¹ (rpm) 0.14 (0.006) max. 0.10–0.175 (0.004–0.007) 0.03–0.08 (0.001–0.003)	0.2 (0.008) 0.2 (0.008) 0.15 (0.006)
Relief valve	Pressure setting	333–340 kPa (3.4–4.2 kg/cm ² , 48–60 psi)	

Cooling — Section 10

	MEASUREMENT	STANDARD (NEW)
Radiator	Capacity (incl. heater) ℓ (US. Gal., Imp. Gal.) Includes reservoir tank 0.4 (0.11, 0.09)	Coupe (PGM-FI) 5.1 (1.3, 1.1) 1200 4MT 4.4 (1.4, 1.2) KG only 4MT 5.2 (1.4, 1.1) HM 4.9 (1.3, 1.1) 1300 4MT 4.9 (1.3, 1.1) KC only 4MT 5.2 (1.4, 1.1) Other models 5MT 4.9 (1.3, 1.1) KT only 5MT 4.4 (1.2, 1.0) Other models HM 4.9 (1.4, 1.1) KC and EC models HM 5.2 (1.3, 1.1) Other models 1500 5.2 (1.4, 1.1) KC and EC models 5.5 (1.5, 1.2) Other models Subtract 1ℓ (0.26 US Gal., 0.22 Imp. Gal.) from capacities at replacement
	Pressure cap opening pressure	74–103 kPa (0.75–1.05 kg/cm ² , 11–15 psi)
Thermostat	Starts to open Full open Valve lift at full open	76–78°C (169–173°F) 91°C (196°F) 8 (0.31) max.
Cooling fan	Fan-to-core clearance Thermoswitch "ON" temperature Thermoswitch "OFF" temperature	ND 22 mm (0.87 in.) TOYO 17.5 mm (0.69 in.) 88.5–91.5°C (191–197°F) 85.5–86.5°C (186–188°F)

Carburetor — Section 11

	MEASUREMENT	STANDARD (NEW)
Carburetor	Choke fast idle	1,500–2,500 min ⁻¹ (rpm)
	Idle speed with headlights and cooling fan off (On Swedish model: on)	Manual 700–800 min ⁻¹ (rpm) Hondamatic 650–750 min ⁻¹ (rpm)
	Idle CO	KS and KQ below 2.0% KX 0.5–2.0% Other models below 3.0%
	Float level	35.4–37.4 (13.9–14.7 in.)
PGM-FI	Choke fast idle	1,200–2,000 min ⁻¹ (rpm)
	Idle speed with headlights and cooling fan off (on Swedish model: on)	700–800 min ⁻¹ (rpm)
	Idle CO	KS below 1.5% KX 0.5–2%

(cont'd)

Standards and Service Limits(cont'd)

Fuel — Section 12

	MEASUREMENT		STANDARD (NEW)
Fuel pump	Delivery pressure Displacement		17.7–26.5 kPa (0.18–0.27 kg/cm ² , 27–38 psi) 170 cc/min at camshaft rpm 300 min ⁻¹ (rpm)
Fuel pump (PGM-FI)	Delivery pressure Displacement		230–270 kPa (2.35–2.75 kg/cm ² , 33–39 psi) 230 cc/min in 10 seconds
Fuel tank	Capacity	Coupe 2D H/B 4D, 4D H/B	41 ℓ (10.8 US. Gal., 9.0 Imp. Gal.) 45 ℓ (11.9 US. Gal., 9.9 Imp. Gal.) 46 ℓ (12.1 US. Gal., 10.1 Imp. Gal.)

Clutch — Section 13

	MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Clutch pedal	Pedal height	Coupe	175 (6.89) to floor	—
		Except Coupe	179 (7.05) to floor	—
	Stroke		135–140 (5.3–5.5)	—
	Pedal play	Coupe	10–30 (0.39–1.18)	—
		Except Coup	16–21 (0.63–0.83)	—
Disengagement height		Coupe	61 (2.4) min. to floor 31 (1.2) min. to carpet	
		2D H/B, 4D	83 (3.3) min. to floor 53 (2.1) min. to carpet	
		4D H/B	78 (3.1) min. to floor 48 (1.9) min. to carpet	
Clutch arm	Release arm adjustment		4.0–5.0 (0.16–0.20)	—
Flywheel	Clutch surface runout		0.05 (0.002) max.	0.15 (0.006)
Clutch plate	Rivet head depth		1.3 (0.05) min.	0.2 (0.008)
	Surface runout		0.8 (0.03) max.	1.0 (0.04)
	Radial play in splines		0.036–0.112 (0.0014–0.0044)	0.5 (0.02)
	Thickness		8.1–8.8 (0.32–0.35)	5.7 (0.22)
Clutch release bearing holder	I.D.		29.000–29.059 (1.142–1.144)	29.20 (1.150)
	Holder-to-guide sleeve clearance		0.040–0.132 (0.0016–0.0052)	0.2 (0.008)
Clutch cover	Unevenness of diaphragm spring		0.8 (0.03) max.	1.0 (0.04)

Manual Transmission — Section 14 and 15



	MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Transmission oil	Capacity & (US. qt., Imp. qt)		2.5 (2.6, 2.2) at assembly 2.3 (2.4, 2.0) at oil change	
Mainshaft	End play Diameter of needle bearing contact area Diameter of fifth gear contact area Diameter of 62/22 ball bearing contact area Diameter of 6304 ball bearing contact area Runout		0.11–0.25 (0.004–0.010) 27.997–28.010 (1.1022–1.1028) 24.987–25.000 (0.9837–0.9843) 21.987–22.000 (0.8656–0.8661) 19.983–19.996 (0.7867–0.7872) 0.02 (0.0008) max.	— 27.94 (1.100) 24.93 (0.981) 21.93 (0.863) 19.93 (0.7846) 0.05 (0.0019)
Mainshaft fifth gear	I.D. End play		30.007–30.020 (1.1814–1.1819) 0.05–0.35 (0.0020–0.0138)	30.07 (1.184) —
Countershaft	End play Diameter of needle bearing contact area Diameter of ball bearing contact area Diameter of low gear contact area Runout		0.35 (0.0138) 30.004–30.017 (1.1813–1.1818) 24.9935–25.0065 (0.9840–0.9845) 31.984–32.000 (1.2592–1.2598) 0.04 (0.0016)	0.65 (0.026) 29.94 (1.179) 24.94 (0.982) 31.93 (1.257) 0.10 (0.004)
Countershaft low gear	I.D. End play		37.009–37.025 (1.4570–1.4577) 0.03–0.08 (0.0012–0.0031)	37.08 (1.460) 0.18 (0.007)
Countershaft second,, third/fourth gear	I.D. End play		37.009–37.025 (1.4570–1.4577) 0.05–0.12 (0.0020–0.0047)	37.08 (1.460) 0.18 (0.007)
Spacer collar	Second, Third	I.D.	25.980–25.991 (1.0228–1.0233)	26.04 (1.025)
		O.D. Length	31.989–32.000 (1.2594–1.2598) 28.01–28.13 (1.1028–1.1074)	31.93 (1.257) —
Fourth		I.D.	25.007–25.037 (0.9845–0.9857)	25.08 (0.987)
		O.D. Length	31.989–32.000 (1.2594–1.2598) 28.01–28.13 (1.1028–1.1074)	31.93 (1.257)
Reverse idler gear	I.D. Gear-to-reverse gear shaft clearance		15.016–15.043 (0.5912–0.5922) 0.032–0.077 (0.0013–0.0030)	15.08 (0.594) 0.14 (0.006)
Synchronizer ring	Ring-to-gear clearance (ring pushed against gear)		0.85–1.10 (0.033–0.043)	0.4 (0.016)
Shift fork	Synchronizer sleeve gear		6.95–7.05 (0.2736–0.2776)	—
	Fork-to-synchronizer sleeve clearance		0.45–0.65 (0.018–0.026)	1.0 (0.039)
Reverse shift fork	End gap		6.9–7.0 (0.27–0.28)	—
	Fork-to-reverse idler gear clearance		0.1–0.3 (0.004–0.012)	0.7 (0.028)
	Groove width		7.05–7.25 (0.278–0.285)	—
	Fork-to-fifth/reverse shift shaft clearance		0.05–0.35 (0.002–0.014)	0.5 (0.020)
Shift arm B	I.D.		14.016–14.043 (0.5518–0.5529)	—
	Shift arm-to-shift guide clearance		0.022–0.067 (0.0009–0.0026)	0.15 (0.006)

(cont'd)

Standards and Service Limits(cont'd)

Unit: mm (in.)

Hondamatic Transmission — Section 16

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Transmission oil	Capacity & (US. qt., Imp. qt)	2.8 (3.0, 2.5) at oil change 5.4 (5.7, 4.8) at assembly	
Hydraulic pressure	Line pressure at 2,000 min ⁻¹ (rpm) 1500 1200, 1300	735–784 kPa (7.5–8.0 kg/cm ² , 107–114 psi) 637–686 kPa (6.5–7.0 kg/cm ² , 92–100 psi)	686 kPa (7.0 kg/cm ² , 100 psi) 588 kPa (6.0 kg/cm ² , 85 psi)
	OD clutch pressure at 2,000 min ⁻¹ (rpm) 1500 1200, 1300	686–784 kPa (7.0–8.0 kg/cm ² , 100–114 psi) 588–686 kPa (6.0–7.0 kg/cm ² , 85–100 psi)	637 kPa (6.5 kg/cm ² , 92 psi) 539 kPa (5.5 kg/cm ² , 78 psi)
	☆clutch pressure at 2,000 min ⁻¹ (rpm) 1500 1200, 1300	686–784 kPa (7.0–8.0 kg/cm ² , 100–114 psi) 588–686 kPa (6.0–7.0 kg/cm ² , 85–100 psi)	637 kPa (6.5 kg/cm ² , 92 psi) 539 kPa (5.5 kg/cm ² , 78 psi)
	1st clutch pressure at 2,000 min ⁻¹ (rpm) 1500 1200, 1300	686–784 kPa (7.0–8.0 kg/cm ² , 100–114 psi) 588–686 kPa (6.0–7.0 kg/cm ² , 85–100 psi)	637 kPa (6.5 kg/cm ² , 92 psi) 539 kPa (5.5 kg/cm ² , 78 psi)
	Governor pressure at 60 km/h	221–230 kPa (2.25–2.35 kg/cm ² , 32–33 psi)	216 kPa (2.2 kg/cm ² , 31 psi)
	Throttle pressure 1500 1200, 1300	735–784 kPa (7.5–8.0 kg/cm ² , 107–114 psi) 637–686 kPa (6.5–7.0 kg/cm ² , 92–100 psi)	686 kPa (7.0 kg/cm ² , 100 psi) 588 kPa (6.0 kg/cm ² , 85 psi)
Stall speed	Check with car on level ground	2,700 min ⁻¹ (rpm)	2,300–2,900 min ⁻¹ (rpm)
Clutch	Clutch initial clearance 1st	0.4–0.7 (0.016–0.028)	—
	2nd	0.65–0.80 (0.026–0.031)	—
	3rd	0.4–0.6 (0.016–0.024)	—
	Clutch return spring free length	30.5 (1.20)	28.5 (1.12)
	Clutch disc thickness	1.88–2.0 (0.074–0.079)	Until grooves worn out
	Clutch plate thickness	1.95–2.05 (0.077–0.079)	Discoloration
	Clutch end plate thickness Mark 1	2.3–2.4 (0.091–0.094)	
	Mark 2	2.4–2.5 (0.094–0.098)	
	Mark 3	2.5–2.6 (0.098–0.102)	
	Mark 4	2.6–2.7 (0.102–0.106)	
	Mark 5	2.7–2.8 (0.106–0.110)	
	Mark 6	2.8–2.9 (0.110–0.114)	
	Mark 7	2.9–3.0 (0.114–0.118)	
	Mark 8	3.0–3.1 (0.118–0.122)	
	Mark 9	3.1–3.2 (0.122–0.126)	
	Mark 10	3.2–3.3 (0.126–0.130)	Discoloration
Transmission	Diameter of needle bearing contact area on main and stator shaft	19.980–19.993 (0.7866–0.7871)	
	Diameter of needle bearing contact area on main 2nd gear collar	31.975–31.991 (1.2588–1.2594)	
	Diameter of needle bearing contact area on mainshaft 1st gear collar	30.975–30.991 (1.2195–1.2201)	
	Diameter of needle bearing contact area on countershaft (L side)	32.984–33.000 (1.2986–1.2993)	
	Diameter of needle bearing contact area on countershaft 3rd gear	31.975–31.991 (1.2589–1.2595)	
	Diameter of needle bearing contact area on countershaft 2nd gear	27.980–27.993 (1.1016–1.1021)	
	Diameter of needle bearing contact area on countershaft reverse gear collar	29.980–29.993 (1.1803–1.1808)	
	Diameter of needle bearing contact area on reverse idle gear	13.994–14.000 (0.5509–0.5512)	
	Reverse idler shaft holder diameter	14.016–14.034 (0.5518–0.5525)	
	Mainshaft 2nd gear I.D.	38.000–38.016 (1.4961–1.4967)	
	Mainshaft 1st gear I.D.	36.000–36.016 (1.4173–1.4179)	
	Countershaft 3rd gear I.D.	38.000–38.016 (1.4966–1.4966)	
	Countershaft 2nd gear I.D.	33.000–33.016 (1.4173–1.4179)	
	Countershaft 1st gear I.D.	35.000–35.016 (1.3779–1.3785)	
	Countershaft reverse gear I.D.	36.000–36.016 (1.4173–1.4179)	
	Reverse idler gear I.D.	18.007–18.020 (0.7086–0.7094)	

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Transmission (cont'd)	Mainshaft 2nd gear end play	0.07–0.15 (0.003–0.006)	—
	Mainshaft 1st gear end play	0.08–0.20 (0.003–0.008)	—
	Countershaft 3rd gear end play	0.07–0.15 (0.003–0.006)	—
	Countershaft 2nd gear end play	0.07–0.15 (0.003–0.006)	—
	Reverse idle gear end play	0.05–0.18 (0.0020–0.0071)	—
	Countershaft reverse gear end play	0.10–0.20 (0.004–0.008)	—
	Reverse gear hub O.D.	51.87–51.90 (2.0421–2.0433)	Wear or damage
	Thrust washer thickness		
	Mainshaft 2nd gear, Countershaft 3rd gear	A 2.97–3.00 (0.1169–0.1181)	—
		B 3.02–3.05 (0.1189–0.1201)	—
		C 3.07–3.10 (0.1209–0.1220)	—
		D 3.12–3.15 (0.1228–0.1240)	—
		E 3.17–3.20 (0.1248–0.1260)	—
		F 3.22–3.25 (0.1268–0.1280)	—
		G 3.27–3.30 (0.1287–0.1299)	—
		H 3.32–3.35 (0.1307–0.1319)	—
		I 3.37–3.40 (0.1327–0.1339)	—
	Mainshaft R side bearing	3.95–4.05 (0.1555–0.1594)	Wear or damage
	Mainshaft 1st gear	2.43–2.50 (0.0957–0.0984)	Wear or damage
	Countershaft 2nd gear thickness	A 2.27–2.30 (0.0894–0.0906)	—
		B 2.32–2.35 (0.0913–0.0925)	—
		C 2.37–2.40 (0.0933–0.0945)	—
		D 2.42–2.45 (0.0953–0.0965)	—
		E 2.47–2.50 (0.0972–0.0984)	—
		F 2.50–2.55 (0.0972–0.1004)	—
		G 2.52–2.60 (0.0992–0.1024)	—
Regulator valve body	Mainshaft 1st gear collar length	22.50–22.55 (0.8858–0.8878)	—
	Mainshaft 1st gear collar flange thickness	2.5–2.6 (0.098–0.102)	Wear or damage
	Countershaft reverse gear collar length	14.0–14.1 (0.551–0.555)	—
	Countershaft reverse gear collar flange thickness	2.45–2.50 (0.096–0.098)	Wear or damage
	Mainshaft and countershaft feed pipe O.D. (at 20 mm from end)	7.97–7.98 (0.3138–0.3142)	7.95 (0.31)
	Mainshaft sealing ring 32 mm thickness	1.980–1.995 (0.0780–0.0785)	—
	Mainshaft bushing I.D.	8.000–8.015 (0.3150–0.3156)	8.03 (0.316)
	Countershaft bushing I.D.	8.000–8.015 (0.3150–0.3156)	8.03 (0.316)
	Mainshaft sealing ring groove width	2.025–2.060 (0.0797–0.0811)	2.08 (0.082)
	Sealing ring contact area diameter	32.000–32.025 (1.2598–1.2608)	32.05 (1.26)
Shifting device and parking brake control	Reverse shift fork thickness	5.9–6.0 (0.232–0.236)	5.4 (0.21)
	Parking brake ratchet pawl	—	Wear or other defect
	Throttle cam stopper	18.5–18.6 (0.7283–0.7323)	—
Servo body	Shift fork shaft bore I.D.	A 14.000–14.005 (0.5512–0.5514)	—
		B 14.006–14.010 (0.5514–0.5516)	—
		C 14.011–14.015 (0.5516–0.5518)	—
Valve body	Shift fork shaft valve bore I.D.	37.000–37.039 (1.4567–1.4582)	37.045 (1.4583)
	Oil pump gear side clearance	0.03–0.05 (0.0012–0.0020)	0.07 (0.003)
	Oil pump gear-to-body clearance	Drive: 0.21–0.27 (0.0083–0.0106)	—
		Driven: 0.05–0.09 (0.0020–0.0035)	—
	Stator camshaft needle bearing bore I.D.	24.000–24.021 (0.9449–0.9457)	Wear or damage
	Stator camshaft needle bearing contact and O.D.	26.000–26.013 (1.0236–1.0241)	Wear or damage
	Oil pump driven gear I.D.	14.016–14.034 (0.5518–0.5525)	Wear or damage
Oil pump shaft O.D.		13.980–13.990 (0.5503–0.5507)	Wear or damage

(cont'd)

Standards and Service Limits(cont'd)

Unit: mm (in.)

Differential – Section 17

Differential – Section 17				
	MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Ring gear	Backlash		0.073–0.132 (0.0029–0.0052)	0.25 (0.010)
Differential carrier	Pinion shaft bore diameter	Manual. Hondamatic	18.000–18.018 (0.7087–0.7094)	18.1 (0.71)
	Carrier-to-pinion shaft clearance		0.016–0.052 (0.0006–0.0020)	0.1 (0.004)
	Driveshaft bore diameter		26.005–26.025 (1.0238–1.0246)	—
			28.000–28.021 (1.1024–1.1032)	—
	Carrier-to-driveshaft clearance		0.025–0.066 (0.0010–0.0026)	0.12 (0.005)
	Side clearance		0.10–0.20 (0.004–0.008)	0.15 (0.006)
Differential pinion gear	Backlash		0.05–0.15 (0.002–0.006)	
	Pinion gear bore diameter		18.041–18.061 (0.7103–0.7111)	—
	Pinion gear-to-pinion shaft clearance		0.057–0.095 (0.0022–0.0037)	0.15 (0.006)

Driveshaft – Section 18

	MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Driveshaft	Right boot	As installed	471–476 (18.5–18.7)	—
	Left boot	As installed	771–776 (30.4–30.6)	—

Steering – Section 19

	MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Steering wheel	Play		10.0 (0.39) Max.	—
	Pinion-starting torque N-m (kg-m, lb-ft)		0.5–1.3 (0.05–0.13, 0.36–0.94)	—

Suspension – Section 20

	MEASUREMENT			STANDARD (NEW)	SERVICE LIMIT
Wheel alignment	Front camber	Coupe		0°00'±1°	
		2D H/B		0°00'±1° KY: 0°20'±1°	
		4D		0°00'±1° KY: 0°30'±1°	
	Rear camber	4D H/B		0°30'±1° KC: 0°20'±1°	
				EC: 0°26'±1°	
				–0°45'±15'	
	Caster	Coupe		2°25'±1°	
		2D H/B		2°20'±1° KY: 2°10'±1°	
		4D		2°20'±1° KY: 2°15'±1°	
	Front toe	4D H/B		2°00'±1° KC: 2°05'±1°	
				EC: 1°47'±1°	
				0±3 mm (0±0.118 in.)	
	Rear toe			IN 2±2 mm (0.079±0.079 in.)	
	Kingpin inclination	Coupe		12°55'±30'	
		2D H/B		12°50'±30' KY: 12°30'±30'	
		4D		12°50'±30' KY: 12°15'±30'	
Wheel	Rim runout	Steel	Axial	0–1.0 (0–0.039)	—
			Radial	0–1.0 (0–0.039)	—
		Aluminum	Axial	0–0.7 (0–0.028)	—
			Radial	0–0.7 (0–0.028)	—

Brake — Section 21

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Parking brake lever	Play in stroke 200N (20 kg, 44 lbs)	To be locked when pulled 4–8 notches	
Foot brake pedal	Pedal height Free play	174 (6.8) 4D H/B:168 (6.6) to floor 1–5 (0.04–0.20)	— 5 (0.20)
Master cylinder	Piston-to-push rod clearance	0–0.4 (0–0.016)	—
Brake drum	I.D. 4D H/B	180 (7.09) 200 (7.87)	181 (7.13) 201 (7.91)
Lining	Thickness	4.5 (0.18)	2.0 (0.08)
Disc brake	Disc thickness Disc runout Disc parallelism Pad thickness	Ventilated Solid — 0.007 (0.0003) 10.0 (0.39) 9.5 (0.37)	15.0 (0.59) 10.0 (0.39) 0.10 (0.004) 0.015 (0.0006) 3.0 (0.12) 3.0 (0.12)
		4D H/B EC and KX Other models	

Brake Booster	Characteristic	Vacuum (mmHg)	Pedal Pressure kg (lbs)	Line Pressure kg/cm ² (psi)
		0 300 500	20 (44) 20 (44) 20 (44)	16 (227) min 46 (654) min 66 (939) min

(cont'd)

Standards and Service Limits(cont'd)

Engine Electrical — Section 25, 26 and 27

Unit: mm (in.)

		MEASUREMENT		STANDARD (NEW)					
Ignition coil	Rated voltage		12 Volts						
	Insulation resistance		10,000 ohms min.						
	Performance: Make sure strong sparks jump across electrodes (3-point tester)								
	Voltage	Camshaft	Secondary Voltage	3-point gap	Condition				
	12V	3,000 min ⁻¹ (rpm)	17 ± 4 kV	13–19 (0.51–0.75)	At 80°C (176°F)				
Ignition wire	Resistance		25,000 ohms max.						
Spark plug	Type	Standard	KC, EC						
			Other models						
	Gap		1.0–1.1 (0.039–0.043)						
Ignition timing	At idling		1200	17±2° BTDC					
			1300	12±2° BTDC					
		1500	Canadian model MT	10±2° BTDC					
			Canadian model HM	14±2° BTDC					
			European model	16±2° BTDC					
			PGM-F1 model	16±2° BTDC					
Battery	Lighting capacity (20-hour ratio)		47 Ampere Hours						
	Starting capacity (5-second ratio)		8.4V minimum at 300 Ampere draw						
Alternator	Output at no-load	ND		MITSUBISHI					
		STANDARD (NEW)		SERVICE LIMIT	STANDARD (NEW)	SERVICE LIMIT			
		14V at 1,090 min ⁻¹ (rpm)		14V at 1,400 min ⁻¹ (rpm)	14V at 1,100 min ⁻¹ (rpm)	14V at 1,400 min ⁻¹ (rpm)			
	Output	14V/55A at 6,000 min ⁻¹ (rpm)		60A at 5,000 min ⁻¹ (rpm)	14V/55A at 6,000 min ⁻¹ (rpm)	50A at 5,000 min ⁻¹ (rpm)			
	Coil resistance (rotor)	2.9 ohm		2.8–3.0 ohms	3 ohm				
	Slip ring O.D.	14.4 (0.57)		13.5 (0.53)	23.0 (0.91)	22.5 (0.89)			
	Brush length	13.5 (0.53)		5.0 (0.20)	18.0 (0.71)	8.0 (0.31)			
Brush spring tension	330g (11.6 oz)		200g (7.05 oz)	370g (13.05 oz)	210g (7.41 oz)				
	Deflection midway between pulleys/load		7–10 (0.28–0.39)/98 (10 kg, 22 lb) for used belt 4–6.5 (0.16–0.26)/98 (10 kg, 22 lb) after replacement of belt						
Starting motor	MEASUREMENT	ND 0.8kW		HITACHI 0.8kW		ND 1.0kW, 1.4kW		MITSUBA 1.0kW, 1.4kW	
		STANDARD (NEW)	SERVICE LIMIT	STANDARD (NEW)	SERVICE LIMIT	STANDARD (NEW)	SERVICE LIMIT	STANDARD (NEW)	SERVICE LIMIT
	Mica depth	0.5–0.8 (0.020–0.031)	0.2 (0.008)	0.5–0.8 (0.020–0.031)	0.2 (0.008)	0.5–0.8 (0.020–0.031)	0.2 (0.008)	0.4–0.5 (0.016–0.020)	0.15 (0.006)
	Commutator runout	0–0.5 (0.020)	0.3 (0.012)	0–0.1 (0.004)	0.4 (0.016)	0–0.02 (0.0008)	0.05 (0.020)	0–0.02 (0.008)	0.05 (0.020)
	Commutator O.D.	28.0 (1.10)	27.0 (1.06)		39.0 (1.54)	30.0 (1.18)	29.0 (1.14)	28.0 (1.10)	27.5 (1.08)
	Brush length	15.5–16.5 (0.61–0.65)	10.0 (0.39)	14.5–15.5 (0.61–0.65)	12.0 (0.47)	12.5–13.5 (0.49–0.53)	8.5 (0.33)	14.3–14.7 (0.56–0.58)	9.3 (0.37)
	Spring pressure (new)	1.2 kg (2.6 lb)	—	1.6 kg (3.5 lb)	—	1.75 kg (3.8 lb)	—	2.1 kg (4.6 lb)	—

Design Specifications

Coupe

	ITEMS	METRIC	ENGLISH	NOTES
DIMENSIONS	Overall Length	3,675 mm	144.7 in.	
	Overall Width	1,625 mm	63.9 in.	
	Overall Height	1,290 mm	50.8 in.	
	Wheelbase	2,200 mm	86.6 in.	
	Tread Front/Rear	1,400/1,415 mm	55.1/55.7 in.	
	Ground Clearance	165 mm	6.5 in.	
	Seating Capacity		4 2 (KS,KW)	
	Overhang Front/Rear	770/705 mm	30.3/27.8 in.	Includes bumper
WEIGHTS	Engine Weight	107 kg	236 lb.	Excludes transmission
	Curb Weight	820 kg (KE) 825 kg (KF,KG,KB,KW,KX) 830 kg (KS, Finland)	1,808 lb. 1,819 lb. 1,830 lb.	
	Weight Distribution (F/R)	500/320 kg (KE) 505/320 kg (KF,KG,KB,KW,KX)	1,102/705 lb. 1,113/705 lb.	
	Max. Permissible Weight (EC)	510/320 kg (KS, Finland) 1,220 kg (KF,KG,KB,KE,KX,KW) 1,150 kg (KS)	1,124/705 lb. 2,690 lb. 2,535 lb.	Curb weight + A/C—21.3 kg (47 lb.) + Cargo—45 kg (100 lb.) + Passengers—68 kg x 2 (150 lb. x 2) + Tolerance = G.V.W.R.
	Gross Vehicle Weight Rating (MVSS)	1,075 kg	2,370 lb.	
	Carrying (loading) Weight	45 kg	100 lb.	
GAPACITIES	Engine Oil: drain and refill (with filter) initial fill	3.5 ℓ 4.0 ℓ	3.7 US qt, 3.1 Imp qt 4.2 US qt, 3.4 Imp qt	
	Transmission Oil: drain and refill initial fill	2.3 ℓ 2.5 ℓ	2.4 US qt, 2.0 Imp qt 2.6 US qt, 2.2 Imp qt	
	Fuel Tank	41 ℓ	10.8 US gal, 9.0 Imp gal	
	Cooling System/Drain and Refill Radiator	5.1/4.1 ℓ	5.4/4.3 US qt, 4.5/3.6 Imp qt	
ENGINE	Type	Water cooled, 4-cycle O.H.C.		
	Cylinder Arrangement	4-cylinder in-line, transverse		
	Bore and Stroke	74 x 86.5 mm	2.91 x 34.1 in.	
	Compression Ratio	8.7 : 1		
	Displacement	1,488 cm ³	91 cu in.	
	Valve Train	Timing belt driven, single overhead camshaft		
	Lubrication System	Trochoid pump		
	Fuel Required	Super or premium grade gasoline with 97 Research Octane Number or higher.		
	Valve Timing	OPEN	10° ATDC	OPEN measurement begins CLOSE measurement ends at point where valve reaches 1 mm lift. Measurement begins/ends at point where valve reaches 0.6 mm lift.
	Intake	CLOSE	40° ABDC	
		OPEN	40° BBDC	
	Exhaust	CLOSE	10° BTDC	
TRANS MISSION	Clutch	Single plate dry, diaphragm spring		
	Transmission	Synchronized 5 forward 1 reverse		
	Primary Reduction	Direct 1 : 1		
	Gear Ratio 1st	2.916		
	2nd	1.764		
	3rd	1.181		
	4th	0.846		
	5th	0.714		
	Reverse	2.916		
	Final Reduction	Single helical gear, 4.266		
	Clutch Lining Area	147 cm ²	22.9 sq. in.	
STEERING	Gear Type	Rack and Pinion		
	Overall Ratio	19.5 : 1		
	Turns, lock-to-lock	4.1		
	Steering Wheel Diameter	370 x 360 mm	14.6 x 14.2 in.	
SUSPENSION	Front	Independent, Strut, Torsion bar spring		
	Rear	Rigid axle, Trailing arm, Coil spring		

(cont'd)

Design Specifications (cont'd)

Coupe

	ITEMS	METRIC	ENGLISH	NOTES
WHEEL ALIGNMENT	Camber Front and Rear		0°/-0°45'	
	Caster		2°25'	
	Toe Front	0 mm	0 in.	
	Rear	IN 2 mm	IN 0.08 in.	
	Steering Axis Inclination		12°55'	
BRAKES	Type, Front	Power assisted ventilated disc		
	Type, Rear	Power assisted drum		
	Lining Surface Area Front/Rear	36/50.2 cm ²	5.6/7.8 sq. in.	
	Effective Disc Diameter	190 mm	7.5 in.	
	Brake Drum I.D.	180 mm	7.1 in.	
	Parking Brake Type	Mechanical expanding, rear two wheel brakes		
TIRES	Size	175/70 HR13		
ELECTRICAL	Battery	12 V - 45 AH		KE and KF
	Starter	12 V - 47 AH		
	Alternator	12 V - 1.0 kW		
	Fuses	12 V - 55 amps		
	Main Fuse	20 A x 3, 15 A x 5, 10 A x 9		
	Headlights	55 A x 1, 45 A x 2 30A x 1 (Sunroof)		
	Speedometer/Gauge Illumination Lights	12 V - 60/55 W		
	Front Turn Signal Lights	12 V - 3.4 W		
	Position Lights	12 V - 21 W		
	Front Side Marker Lights	12 V - 5 W		
	Warning Indicator Lights	12 V - 5 W		
	Interior Light	12 V - 1.4 W		
	Rear Turn Signal Lights	12 V - 5 W (Sunroof 12V-8W)		
	Stop/Taillights	12 V - 21 W		
	Turn Signal Indicator Lights	12 V - 21/5 W		
	Tail Gate Light	12 V - 1.4 W		
	Back-up Lights	12 V - 3.4 W		
	License Lights	12 V - 21 W		
	Rear Fog Lights	12 V - 5 W		
	Heater Panel Light	12 V - 21 W (EC)		
		12 V - 1.4 W, 12 V - 1.2 W		

2D H/B

	ITEMS		METRIC	ENGLISH	NOTES
DIMENSIONS	Overall Length		3,810 mm	150 in.	
	Overall Width		1,635 mm	64.4 in.	
			1,625 mm (KC)	63.9 in.	
	Overall Height		1,340 mm	52.8 in.	
			1,335 mm (KC)	52.6 in.	
	Wheelbase		2,380 mm	93.7 in.	
	Tread Front/Rear		1,400/1,415 mm	55.1/55.7 in.	
	Ground Clearance		165 mm	6.5 in.	
	Seating Capacity		175 mm (KY)	6.9 in.	
	Overhang	Front/Rear	735/695 mm	28.9/27.4 mm	Includes bumper
WEIGHTS	Engine Weight	1500	107 kg	236 lb.	Excludes transmission
		1300	98.6 kg	217.4 lb.	
	Curb Weight				
		1500	5-speed	825 kg (KF,KG,KB,KX,KQ)	1,819 lb.
				830 kg (KW,KS,KE)	1,830 lb.
				866 kg (KC)	1,909 lb.
			Hondamatic	840 kg (KQ)	1,852 lb.
		1300	5-speed	795 kg (KF,KG,KB,KW,KS)	1,753 lb.
				805 kg (KE,KX)	1,775 lb.
				811 kg (KC)	1,788 lb.
			4-speed	814 kg (KC)	1,795 lb.
			Hondamatic	810 kg (KF,KG,KB,KW,KS)	1,786 lb.
				820 kg (KE,KX)	1,808 lb.
				828 kg (KC)	1,825 lb.
		1200	4-speed	775 kg (KP,KT,KU)	1,709 lb.
				785 kg (KG)	1,731 lb.
			Hondamatic	790 kg (KP,KT,KU)	1,742 lb.
	Weight Distribution (F/R)	1500	5-speed	495/330 kg (KF,KG,KB,KX)	1,091/728 lb.
				500/330 kg (KW,KS,KE)	1,102/728 lb.
				520/346 kg (KC)	1,146/763 lb.
				500/325 kg (KQ)	1,102/716 lb.
		1300	5-speed	475/320 kg (KF,KG,KB,KW,KS)	1,047/705 lb.
				475/330 kg (KE,KX)	1,047/728 lb.
				486/325 kg (KC)	1,071/716 lb.
			4-speed	488/326 kg (KC)	1,076/719 lb.
			Hondamatic	490/320 kg (KF,KG,KB,KW,KS)	1,080/705 lb.
				490/330 kg (KE,KX)	1,080/728 lb.
				505/323 kg (KC)	1,113/712 lb.
		1200	4-speed	465/310 kg (KP,KT,KU)	1,025/683 lb.
				470/315 kg (KG)	1,036/694 lb.
			Hondamatic	480/310 kg (KP,KT,KU)	1,058/683 lb.
	Max. Permissible Weight (EC)		1,270 kg	2,800 lb.	Curb weight + A/C—22 kg (49 lb.) + Cargo—45 kg (100 lb.) + Passengers—68 kg x 5 (150 lb. x 5) + Tolerance = G.V.W.R.
			1,200 kg (KS)	2,646 lb.	
	Gross Vehicle Weight Rating (MVSS)		1,290 kg (1500 engine)	2,850 lb.	
			1,240 kg (1300 engine)	2,740 lb.	
	Carring (loading) Weight Capacity		25 kg (KC)	55 lb. (KC)	
CAPACITIES	Engine Oil: drain and refill (with filter)		3.5 l	3.7 US qt, 3.1 Imp qt	
	initial fill		4.0 l	4.2 US qt, 3.4 Imp qt	
	Transmission Oil: drain and refill		2.3 l	2.4 US qt, 2.0 Imp qt	
	initial fill		2.5 l	2.6 US qt, 2.2 Imp qt	
	Hondamatic Fluid: transmission system		2.8 l	3.0 US qt, 2.5 Imp qt	
			5.4 l	5.7 US qt, 4.8 Imp qt	

(cont'd)

Design Specifications (cont'd)

2D H/B

	ITEMS		METRIC		ENGLISH			NOTES
CAPACITIES	Fuel Tank		45 ℓ		11.9 US gal, 9.9 Imp gal			
	Cooling System/ Drain and Refill Radiator	1500	5.2/4.2 ℓ (KC,KF,KG,KB,KW,KS,KE,KX) 5.5/4.5 ℓ (KQ,KY,KP,KD,KT,KU)		5.5/4.4 US qt, 4.6/3.7 Imp qt 5.8/4.8 US qt, 4.8/4.0 Imp qt			
		1300						
		5-speed	4.4/3.4 ℓ (KC,KF,KG,KB,KW,KS,KE,KX) 4.9/3.9 ℓ (KC)		4.7/3.6 US qt, 3.9/3.0 Imp qt			
		4-speed	5.2/4.2 ℓ (KP,KD,KT,KU) 4.9/3.9 ℓ (KC,KF,KG,KB,KW,KS,KE,KX) 5.2/4.2 ℓ (KP,KD,KT,KU)		5.2/4.1 US qt, 4.3/3.4 Imp qt 5.5/4.4 US qt, 4.6/3.7 Imp qt 5.2/4.1 US qt, 4.3/3.4 Imp qt			
		Hondamatic			5.5/4.4 US qt, 4.6/3.7 Imp qt			
		1200						
	4-speed	4.4/3.4 ℓ (KG) 5.2/4.2 ℓ (KP,KT,KU) 4.9/3.9 ℓ (KP,KT,KU)		4.7/3.6 US qt, 3.9/3.0 Imp qt 5.5/4.4 US qt, 4.6/3.7 Imp qt 5.2/4.1 US qt, 4.3/3.4 Imp qt				
		Hondamatic						
ENGINE	Type		Water cooled, 4-cycle O.H.C.					OPEN measurement begins CLOSE measurement ends at point where valve reaches 1 mm lift.
	Cylinder Arrangement		4-cylinder in-line, transverse					
	Bore and Stroke	1500	74 x 86.5 mm		2.91 x 3.41 in.			
		1300	74 x 78 mm		2.91 x 3.07 in.			
		1200	74 x 69 mm		2.91 x 2.72 in.			
	Compression Ratio	1500			8.7 : 1			
		1300			8.7 : 1			
		1200			8.2 : 1			
	Displacement	1500	1,488 cm ³		91 cu in.			
		1300	1,342 cm ³		82 cu in.			
		1200	1,187 cm ³		72 cu in.			
	Valve Train		Timing belt driven, single overhead camshaft					
	Lubrication System		Trochoid pump					
	Fuel Required		Low-lead or regular grade gasoline with 91 Research Octane number or higher.					
	Valve Timing		1500	1300	1200			
Intake	OPEN	10° ATDC * ¹	10° ATDC	15° ATDC * ¹	10° ATDC	15° ATDC		
	CLOSE	20° ABDC	20° ABDC	15° ABDC	15° ABDC	15° ABDC		
Exhaust	OPEN	25° BBDC	25° BBDC	20° BBDC	20° BBDC	15° BBDC		
	CLOSE	10° BTDC	5° BTDC	15° BTDC	10° BTDC	15° BTDC		
TRANS- MISSION	Clutch	4/5-speed	Single plate dry, diaphragm spring					
		Hondamatic	Torque converter					
	Transmission	5-speed	Synchronized 5 forward 1 reverse					
		4-speed	Synchronized 4 forward 1 reverse					
		Hondamatic	3 forward speeds 1 reverse with torque converter					
	Primary Reduction		Direct 1 : 1					
	Gear Ratio	1500	5-speed		Hondamatic			
		1st	2.916		1.782			
		2nd	1.764		1.133			
		3rd	1.181		0.777			
		4th	0.846		—			
		5th	0.714		—			
		Reverse	2.916		1.954			
		Final Reduction	4.266		3.588			
		1300	5-speed		4-speed Hondamatic			
			KS, KX, KC	Others				
		1st	2.916	3.272	2.916 1.782			
		2nd	1.764	1.666	1.764 1.206			
		3rd	1.181	1.041	1.181 0.828			
		4th	0.846	0.777	0.846 —			
		5th	0.714	0.655	— —			
		Reverse	2.916	2.916	2.916 1.954			
		Final Reduction	4.266	4.066	4.266 3.588			
		1200	4-speed		Hondamatic			
		1st	2.916		1.782			
	2nd	1.764		1.206				
	3rd	1.181		0.828				
	4th	0.846		—				
	5th	—		—				
	Reverse	2.916		1.954				
	Final Reduction	4.428		3.588				
	Clutch Lining Area	147 cm ²		22.9 sq. in.				

*¹ : KS, KX model with Hondamatic

	ITEMS	METRIC	ENGLISH	NOTES
STEERING	Gear Type	Rack and Pinion		1500 Civic S Others
	Overall Ratio	19.5 : 1		
	Turns, lock-to-lock	4.1		
	Steering Wheel Diameter	370 x 360 mm 377 mm	14.6 x 14.2 in. 14.8 in.	
SUSPENSION	Type, Front Type, Rear	Independent, Strut, Torsion bar spring Rigid axle, Trailing arm, Coil spring		
WHEEL ALIGNMENT	Camber Front and Rear	0°/-0°45'		
	Caster	0°20'/-0°45' (KY) 2°20' 2°10' (KY)		
	Toe Front	0 mm	0 in.	
	Toe Rear	IN 2 mm	IN 0.08 in.	
	Steering Axis Inclination	12°50' 12°30'		
BRAKES	Type, Front	Self-adjusting power-disc brake		
	Type, Rear	Power assisted ventilated disc (1500, KC, KX) Power assisted drum		
	Lining Surface Area Front/Rear	36/50.2 cm ²	5.6/7.9 sq. in.	
	Effective Disc Diameter	190 mm	7.5 in.	
	Brake Drum I.D.	180 mm	7.1 in.	
	Parking Brake Type	Mechanical expanding, rear two wheel brakes		
TIRES	Size	155-13/6.15-13, P165/70R13, 165/70SR13 (KC) 155SR13 (EC-DX, STD) 165/70SR13 (EC-S, EXCEPT KW, KS) 165SR13 (KY) 165/70SR13 (KQ) 155SR13, 6.15-13-4PR (KP, KD, KT, KU)		
ELECTRICAL	Battery	12 V - 47 AH 12 V - 45 AH (KF, KE) 12 V - 40 AH (KQ, KT, KU, KP, KD, KY) 12 V - 1.0 kW, 12 V - 0.8 kW 12 V - 55 amps		
	Starter	20 A x 2, 15 A x 4, 10 A x 9 55 A x 1, 45 A x 2		
	Alternator	12 V - 60/55 W 12 V - 65/55 W (KC) 12 V - 45/40 W (KT, KU, KP, KD, KY)		
	Fuses	12 V - 3.4 W, 14 V - 1.4 W 12 V - 21 W 12 V - 32 CP (KC) 12 V - 5 W 12 V - 5 W 12 V - 2 CP (KC) 12 V - 1.4 W 12 V - 5 W 12 V - 21 W 12 V - 32 CP (KC) 12 V - 21/5 W 12 V - 32/3 CP (KC)		
	Main Fuse	12 V - 1.4 W 12 V - 3.4 W 12 V - 21 W 12 V - 32 CP (KC) 12 V - 5 W 12 V - 4 CP (KC) 12 V - 21 W (EC) 12 V - 1.4 W		
	Headlights			
	Speedometer/Gauge Illumination Lights			
	Front Turn Signal Lights			
	Position Lights			
	Front Side Marker Lights			
	Rear Side Marker Lights			
	Warning Indicator Lights			
	Interior Light			
	Rear Turn Signal Lights			
	Stop/Taillights			
	Turn Signal Indicator Lights			
	Tail Gate Light			
	Back-up Lights			
	License Lights			
	Rear Fog Lights			
	Heater Panel Light			

(cont'd)

Design Specifications (cont'd)

4 D

	ITEMS		METRIC	ENGLISH	NOTES
DIMENSIONS	Overall Length	1500	4,145 mm	163.2 in.	
	Overall Width	1200/1300	1,630 mm	64.2 in.	
			1,625 mm (KC)	63.9 in.	
			1,625 mm	64.0 in.	
	Overall Height		1,385 mm	54.5 in.	
	Wheelbase		2,450 mm	96.5 in.	
	Tread F/R		1,400/1,415 mm	55.1/55.7 in.	
	Ground Clearance		165 mm	6.3 in.	
	Seating Capacity				5
	Overhang F/R		795/900 mm	31.3/35.4 in.	Includes bumper
WEIGHTS	Engine Weight	1500	107 kg	236 lb.	Excludes transmission
	(Wet)	1300	98.6 kg	217.4 lb.	
	Curb Weight	1500			
		5-speed	845 kg (KX)	1,863 lb.	
			850 kg (KW,KS)	1,874 lb.	
			865 kg (KQ)	1,907 lb.	
			874 kg (KC)	1,927 lb.	
		Hondamatic	860 kg (KX)	1,896 lb.	
			865 kg (KW,KS)	1,907 lb.	
			880 kg (KQ)	1,940 lb.	
			889 kg (KC)	1,960 lb.	
		1300			
		5-speed	815 kg (KX)	1,797 lb.	
			820 kg (KW,KS)	1,808 lb.	
		Hondamatic	830 kg (KX)	1,830 lb.	
			835 kg (KW,KS)	1,841 lb.	
		1200			
		4-speed	810 kg (KP,KT,KU)	1,786 lb.	
		Hondamatic	825 kg (KP,KT,KU)	1,819 lb.	
	Weight Distribution (F/R)	1500			
		5-speed	500/345 kg (KX)	1,102/761 lb.	
			505/345 kg (KW,KS)	1,113/761 lb.	
			517/357 kg (KC)	1,140/787 lb.	
		Hondamatic	515/345 kg (KX)	1,135/761 lb.	
			520/345 kg (KW,KS)	1,146/761 lb.	
			534/355 kg (KC)	1,177/783 lb.	
		1300			
		5-speed	480/335 kg (KX)	1,058/739 lb.	
			485/335 kg (KW,KS)	1,069/739 lb.	
		Hondamatic	495/335 kg (KX)	1,091/739 lb.	
			500/335 kg (KW,KS)	1,102/739 lb.	
		1200			
		4-speed	480/330 kg (KP,KT,KU)	1,058/728 lb.	
		Hondamatic	495/330 kg (KP,KT,KU)	1,091/728 lb.	
	Max. permissible weight (EC)		1,300 kg	2,866 lb.	
			1,240 kg (KS)	2,734 lb.	
	Gross Vehicle Weight Rating (MVSS)		1,320 kg	2,910 lb.	
	Carrying (loading) Weight Capacity		25 kg	55 lb.	
CAPACITIES	Engine Oil:				
	drain and refill (with filter)		3.5 ℓ	3.7 US qt, 3.1 Imp qt	
	initial fill		4.0 ℓ	4.2 US qt, 3.4 Imp qt	
	Transmission Oil:				
	drain and refill		2.3 ℓ	2.4 US qt, 2.0 Imp qt	
	initial fill		2.5 ℓ	2.6 US qt, 2.2 Imp qt	
	Hondamatic Fluid:				
	transmission		2.8 ℓ	3.0 US qt, 2.5 Imp qt	
	system		5.4 ℓ	5.7 US qt, 4.8 Imp qt	
	Fuel Tank		46 ℓ	12.1 US gal, 10.1 Imp gal	
	Cooling System/	1500	5.2/4.2 ℓ (KC,KW,KS,KX)	5.5/4.4 US qt, 4.6/3.7 Imp qt	
	Drain and Refill		5.5/4.5 ℓ	5.8/4.8 US qt, 4.8/4.0 Imp qt	
	Radiator		(KO,KY,KP,KD,KT,KU)		
		1300			
	5-speed		4.4/3.4 ℓ (KF,KW,KS,KE,KX)	4.7/3.6 US qt, 3.9/3.0 Imp qt	
			4.9/3.9 ℓ (KT,KU)	5.2/4.1 US qt, 4.3/3.4 Imp qt	
	4-speed		5.2/4.2 ℓ (KP,KD,KT,KU)	5.5/4.4 US qt, 4.6/3.7 Imp qt	
	Hondamatic		4.9/3.9 ℓ (KF,KW,KS,KE,KX)	5.2/4.1 US qt, 4.3/3.4 Imp qt	
			5.2/4.2 ℓ (KP,KD,KT,KU)	5.5/4.4 US qt, 4.6/3.7 Imp qt	
		1200			
	4-speed		5.2/4.2 ℓ (KP,KT,KU)	5.5/4.4 US qt, 4.6/3.7 Imp qt	
	Hondamatic		4.9/3.9 ℓ (KP,KT,KU)	5.2/4.1 US qt, 4.3/3.4 Imp qt	

Curb weight
+ A/C—22 kg (49 lb.)
+ Cargo—25 kg (55 lb.)
+ Passengers—70 kg x 5
(154 lb. x 5)
+ Tolerance
= G.V.W.R.

	ITEMS		METRIC		ENGLISH		NOTES
ENGINE	Type		Water cooled, 4-cycle O.H.C.				OPEN measurement begins CLOSE measurement ends at point where valve reaches 1 mm lift.
	Cylinder Arrangement		4-cylinder in-line, transverse				
	Bore and Stroke	1500	74 x 86.5 mm		2.91 x 3.41 in.		
		1300	74 x 78 mm		2.91 x 3.07 in.		
		1200	74 x 69 mm		2.91 x 2.72 in.		
	Compression Ratio	1500	8.7 : 1		9.2 : 1 (KC)		
		1300	8.7 : 1				
		1200	8.2 : 1				
	Displacement	1500	1,488 cm ³		91 cu in.		
		1300	1,342 cm ³		82 cu in.		
	1200	1,187 cm ³		72 cu in.			
Valve Train		Timing belt driven, single overhead camshaft					
Lubrication System		Trochoid pump					
Fuel Required		Low-lead or regular grade gasoline with 91 Research Octane number or higher.					
Valve Timing		1500	1300		1200		
Intake	OPEN	10° ATDC *1	10° ATDC	15° ATDC *1	10° ATDC	15° ATDC	
	CLOSE	20° ABDC	20° ABDC	15° ABDC	15° ABDC	15° ABDC	
Exhaust	OPEN	25° BBDC	25° BBDC	20° BBDC	20° BBDC	15° BBDC	
	CLOSE	10° BTDC	5° BTDC	15° BTDC	10° BTDC	15° BTDC	
TRANS-MISSION	Clutch	4/5-speed Hondamatic	Single plate dry, diaphragm spring Torque converter				
	Transmission	5-speed 4-speed Hondamatic	Synchronized 5 forward 1 reverse Synchronized 4 forward 1 reverse 3 forward speeds 1 reverse with torque converter Direct 1 : 1				
	Primary Reduction						
	Gear Ratio	1500	5-speed		Hondamatic		
		1st	2.916		1.782		
		2nd	1.764		1.133		
		3rd	1.181		0.777		
		4th	0.846		—		
		5th	0.714		—		
		Reverse	2.916		1.954		
		Final Reduction	4.266		3.588		
		1300	5-speed		4-speed Hondamatic		
		1st	2.916		2.916 1.782		
		2nd	1.764		1.764 1.206		
		3rd	1.181		1.181 0.828		
		4th	0.846		0.846 —		
		5th	0.714		—		
		Reverse	2.916		2.916 1.954		
		Final Reduction	4.428		4.428 3.588		
		1200	4-speed		Hondamatic		
	1st	2.916		1.782			
	2nd	1.764		1.206			
	3rd	1.181		0.828			
	4th	0.846		—			
	5th	0.714		—			
	Reverse	2.916		1.954			
	Final Reduction	4.642		3.588			
	Clutch Lining Area	147 cm ²		22.9 sq. in.			
STEERING	Gear Type	Rack and Pinion					
	Overall Ratio	19.5 : 1					
	Turns, lock-to-lock	4.1					
	Steering Wheel Diameter	377 mm	14.8 in.				
SUSPENSION	Type, Front	Independent, Strut, Torsion bar spring					
	Type, Rear	Rigid axle, Trailing arm, Coil spring					
WHEEL ALIGNMENT	Camber	Front and Rear	0° / -0°45'				
			0°30' / -0°45' (KY)				
	Caster		2°20'				
			2°15' (KY)				
	Toe		0 mm		0 in.		
			IN 2 mm		IN 0.08 in.		
	Steering Axis Inclination		12°50'				
			12°15' (KY)				
	BRAKES	Type, Front	Self-adjusting power-disc brake				
		Type, Rear	Power assisted ventilated disc (1500 KC, KX)				
Lining Surface Area Front/Rear		Power assisted drum					
Effective Disc Diameter		36/50.2 cm ²	5.6/7.9 sq. in.				
Brake Drum I.D.		190 mm	7.5 in.				
		180 mm	7.1 in.				
Parking Brake Type		Mechanical expanding, rear two wheel brakes					

*1 : KS, KX model with Hondamatic

(cont'd)

Design Specifications (cont'd)

4 D

	ITEMS	METRIC	ENGLISH	NOTES
TIRES	Size	165/70SR13 (KC, 1500 KX) 155SR13 (KF, KS, KW, KX, KE) 165SR13 (KY) 165/70SR13 (KQ) 155SR13, 6.15-13-4PR (KP, KD, KT, KU)		
ELECTRICAL	Battery Starter Alternator Fuses Main Fuse Headlights Speedometer/Gauge Illumination Lights Front Turn Signal Lights Position Lights Front Side Marker Lights Rear Side Marker Lights Warning Indicator Lights Interior Light Rear Turn Signal Lights Stop/Taillights Turn Signal Indicator Lights Tail Gate Light Back-up Lights License Lights Rear Fog Lights Heater Panel Light	12 V - 47 AH 12 V - 45 AH (KE) 12 V - 40 AH (KQ, KT, KU, KP, KD, KY) 12 V - 1.4 kW, 12 V - 1.0 kW, 12 V - 0.8 kW 12 V - 55 amps 20 A x 2, 15 A x 4, 10 A x 9 55 A x 1, 45 A x 2 12 V - 60/55 W 12 V - 65/55 W (KC) 12 V - 45/40 W (KT, KU, KP, KD, KY) 12 V - 3.4 W, 14 V - 1.4 W 12 V - 21 W 12 V - 32 CP (KC) 12 V - 5 W 12 V - 5 W 12 V - 2 CP (KC) 12 V - 1.4 W 12 V - 5 W 12 V - 21 W 12 V - 32 CP (KC) 12 V - 21/5 W 12 V - 32/3 CP (KC) 12 V - 1.4 W 12 V - 3.4 W 12 V - 21 W 12 V - 32 CP (KC) 12 V - 5 W 12 V - 4 CP (KC) 12 V - 21 W (EC) 12 V - 1.4 W		

4D H/B

	ITEMS	METRIC	ENGLISH	NOTES
DIMENSIONS	Overall Length	3,990 mm	157.1 in.	
	Overall Width	1,650 mm	65.0 in.	
		1,625 mm (KQ)	63.9 in.	
		1,624 mm (KC)	63.9 in.	
	Overall Height	1,490 mm	58.7 in.	
		1,480 mm (KC)	58.3 in.	
	Wheelbase	2,450 mm	96.5 in.	
	Tread F/R	1,400/1,415 mm	55.1/55.7 in.	
	Ground Clearance	165 mm	6.5 in.	
		175 mm (KY)	6.9 in.	
WEIGHTS	Seating Capacity			
	Overhang F/R	745/795 mm	29.3/31.3 in.	Includes bumper
	Engine Weight (Wet)	107 kg	236 lb.	
	Curb Weight	875 kg (KP,KD,KT,KU)	1,929 lb.	Excludes trans- mission
		885 kg (KF,KG,KB,KX)	1,951 lb.	
		890 kg (KW,KS,KE)	1,962 lb.	
		900 kg (KY)	1,984 lb.	
		905 kg (KQ)	1,995 lb.	
		911 kg (KC)	2,008 lb.	
		890 kg (KP,KD,KT,KU)	1,962 lb.	
CAPACITIES		900 kg (KF,KG,KB,KX)	1,984 lb.	
		905 kg (KW,KS,KE)	1,995 lb.	
		915 kg (KY)	2,017 lb.	
		920 kg (KQ)	2,028 lb.	
		927 kg (KC)	2,044 lb.	
	Weight Distribution	505/370 kg (KP,KD,KT,KU)	1,113/816 lb.	
	(F/R)	505/380 kg (KF,KG,KB,KX)	1,113/838 lb.	
		510/380 kg (KW,KS)	1,124/838 lb.	
		505/385 kg (KE)		
		515/385 kg (KY)	1,135/849 lb.	
ENGINE		520/385 kg (KQ)	1,146/849 lb.	
		530/381 kg (KC)	1,168/840 lb.	
		520/370 kg (KP,KD,KT,KU)	1,146/816 lb.	
		520/380 kg (KF,KG,KB,KX)	1,146/838 lb.	
		525/380 kg (KW,KS)	1,157/838 lb.	
		520/385 kg (KE)		
		530/385 kg (KY)	1,168/849 lb.	
		535/385 kg (KQ)	1,179/849 lb.	
		548/379 kg (KC)	1,208/836 lb.	
	Max. permissible weight (EC)	1,365 kg	3,009 lb.	
WEIGHTS	Gross Vehicle Weight Rating (MVSS)	1,300 kg (KS)	2,866 lb.	
	Carrying (loading) Weight Capacity	1,365 kg	3,010 lb.	
		45 kg	100 lb.	
	Engine Oil:			
	drain and refill (with filter)	3.5 ℓ	3.7 US qt, 3.1 Imp qt	
	initial fill	4.0 ℓ	4.2 US qt, 3.4 Imp qt	
	Transmission Oil:			
	drain and refill	2.3 ℓ	2.4 US qt, 2.0 Imp qt	
	initial fill	2.5 ℓ	2.6 US qt, 2.2 Imp qt	
	Hondamatic Fluid:			
WEIGHTS	transmission	2.8 ℓ	3.0 US qt, 2.5 Imp qt	
	system	5.4 ℓ	5.7 US qt, 4.8 Imp qt	
	Fuel Tank	46 ℓ	12.1 US gal, 10.1 Imp gal	
	Cooling System/Drain and Refill Radiator	5.1/4.1 ℓ (KC,KF,KG,KB,KW,KS,KE,KX)	5.5/4.4 US qt, 4.6/3.7 Imp qt	
		5.5/4.5 ℓ (KQ,KY,KP,KD,KT,KU)	5.8/4.8 US qt, 4.8/4.0 Imp qt	
	Type	Water cooled, 4-cycle O.H.C.		
	Cylinder Arrangement	4-cylinder in-line, transverse		
	Bore and Stroke	74 x 86.5 mm	2.91 x 3.4 in.	
	Compression Ratio	8.7 : 1 9.2 : 1 (KC)		
	Displacement	1,488 cm ³	91 cu in.	
WEIGHTS	Valve Train	Timing belt driven, single overhead camshaft		
	Lubrication System	Trochoid pump		
	Fuel Required	Low-lead or regular grade gasoline with 91 Research Octane number or higher.		
	Valve Timing			
	Intake	10° ATDC	*1 10° ATDC	
		20° ABDC	20° ABDC	
	Exhaust	25° BBDC	25° BBDC	
		10° BTDC	5° BTDC	
	OPEN			OPEN measure- ment beings
	CLOSE			CLOSE measure- ment ends at point where valve reaches 1 mm lift.

*1: KS, KX model with Hondamatic

(cont'd)





Design Specifications (cont'd)

4D H/B

	ITEMS	METRIC	ENGLISH	NOTES
TRANSMISSION	Clutch	5-speed Hondamatic	Single plate dry, diaphragm spring Torque converter	
	Transmission	5-speed Hondamatic	Synchronized 5 forward 1 reverse	
	Primary Reduction		3 forward speeds 1 reverse with torque converter	
	Gear Ratio		Direct 1 : 1	
		5-speed	Hondamatic	
	1st	3.181	1.782	
	2nd	1.823	1.133	
	3rd	1.181	0.777	
	4th	0.846	—	
	5th	0.714	—	
	Reverse	2.916	1.954	
	Final Reduction	4.266	3.588	
	Clutch Lining Area	147 cm ²	22.9 sq in.	
STEERING	Gear Type	Rack and Pinion		
	Overall Ratio	19.6		
	Turns, lock-to-lock	19.0 : 1 (KC)		
	Steering Wheel Diameter	377 mm	14.8 in.	
SUSPENSION	Type, Front	Independent, Strut, Torsion bar spring		
	Type, Rear	Rigid axle, Trailing arm, Coil spring		
WHEEL ALIGNMENT		European model	Canadian model	Others
	Camber	0°26'/-0°45'	0°20'/-0°45'	0°30'/-0°45'
	Caster	1°49'	2°05'	2°00'
	Toe	0 mm (0 in.)		
	Steering Axis Inclination	11°54'	12°00'	11°45'
BRAKES	Type, Front	Self-adjusting power-disc brake		
	Type, Rear	Power assisted ventilated disc (KC,KX,KY)		
	Lining Surface Area Front/Rear	Power assisted drum		
	Effective Disc Diameter	35.3/57.6 cm ²	5.5/8.9 sq in.	
	Brake Drum I.D.	36.0/57.6 cm ² (KX)	5.6/8.9 sq in.	
	Parking Brake Type	190 mm	7.5 in.	
		200 mm	7.9 in.	
		Mechanical expanding, rear two wheel brakes		
TIRES	Size	P175/70R13 (KC)		
		155SR13 (KF,KG,KB,KX,KS,KW,KE)		
		165SR13 (KY)		
		175/70SR13 (KQ)		
		6.15-13-4PR (KP,KD,KT,KU)		
ELECTRICAL	Battery	12 V-47 AH		
		12 V-45 AH (KF,KE)		
		12 V-40 AH (KQ,KT,KU,KP,KD,KY)		
	Starter	12 V-1.4 KW, 12 V-1.0 KW, 12 V-0.8 KW		
	Alternator	12 V-55 amps		
	Fuses	20 A x 2, 15 A x 5, 10 A x 10, 10 A x 8 (KC)		
	Main Fuse	55 A x 1, 45 A x 2		
	Headlights	12 V-60/55 W		
		12 V-65/55 W (KC)		
		12 V-45/40 W (KT,KU,KP,KD,KY)		
	Speedometer/Gauge Illumination Lights	14 V-3.4 W, 14 V-1.4 W (Nippon Seiki)		
		13 V-3.4 W, 13 V-1.4 W (Nippon Denso)		
	Front Turn Signal Lights	12 V-21 W		
		12 V-32 CP (KC)		
	Position Lights	12 V-5 W		
	Front Side Marker Lights	12 V-5 W (KC)		
	Rear Side Marker Lights	12 V-2 CP (KC)		
	Warning Indicator Lights	14 V-1.4 W, 13 V-1.4 W		
	Interior Light	12 V-5 W		
	Rear Turn Signal Lights	12 V-21 W		
		12 V-32 CP (KC)		
	Stop/Tailights	12 V-21/5 W		
		12 V-32/3 CP (KC)		
	Turn Signal Indicator Lights	14 V-1.4 W, 13 V-1.4 W		
	Trunk Light	12 V-3.4 W		
		12 V-5 W (KC)		
	Back-up Lights	12 V-21 W		
		12 V-32 CP (KC)		
	License Lights	12 V-5 W		
		12 V-4 CP (KC)		
	Rear Fog Lights	12 V-21 W (EC)		
	Heater Panel Light	12 V-1.4 W		

Body Specifications

Coupe

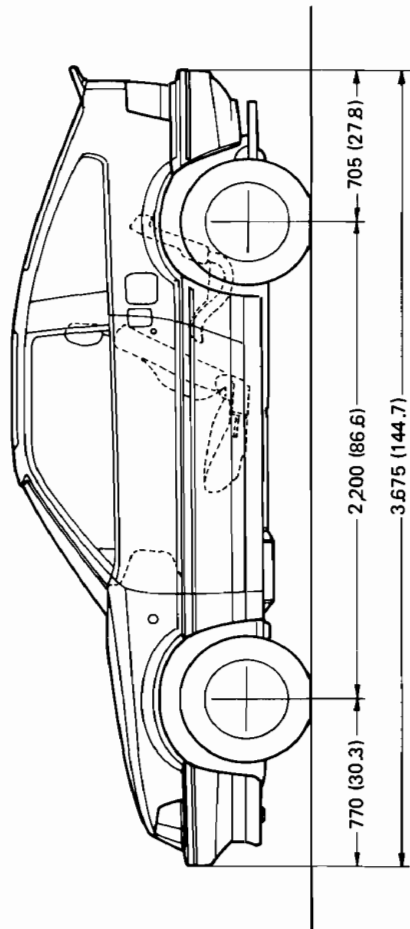
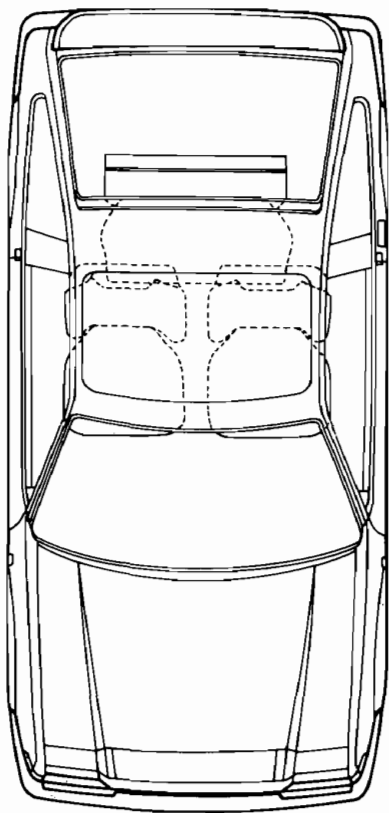
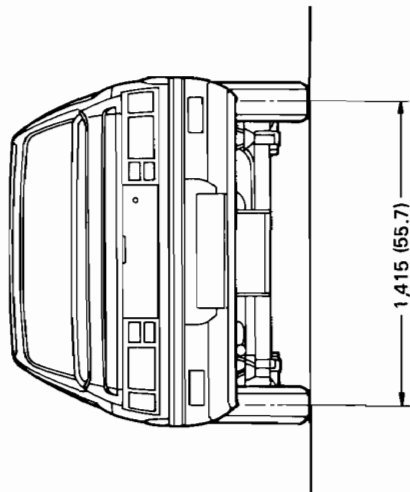
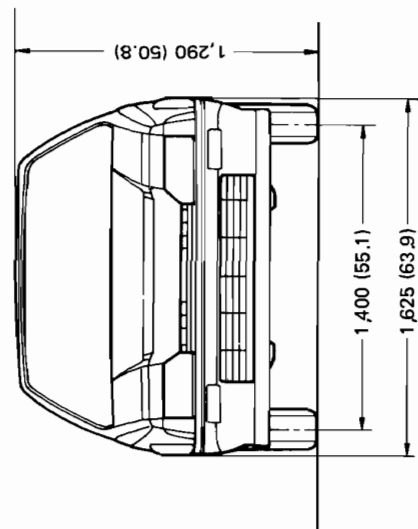


Unit: mm (in.)

(cont'd)





Body Specifications (cont'd)

2D H/B

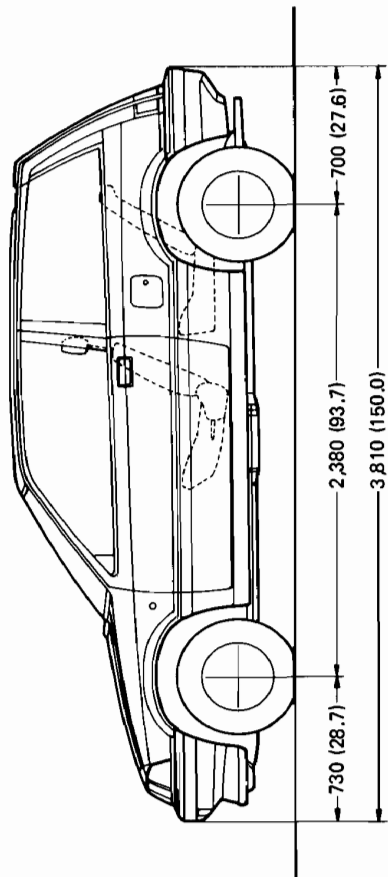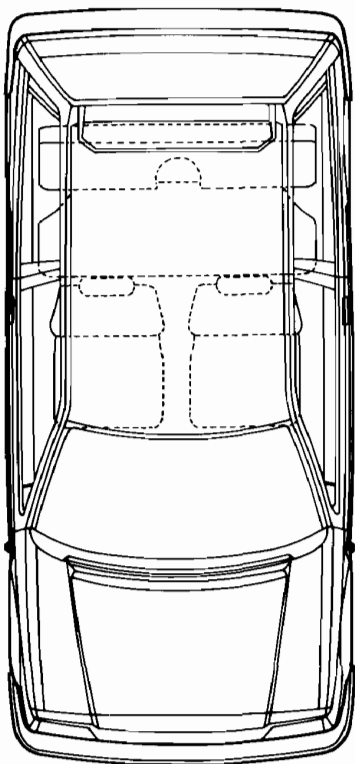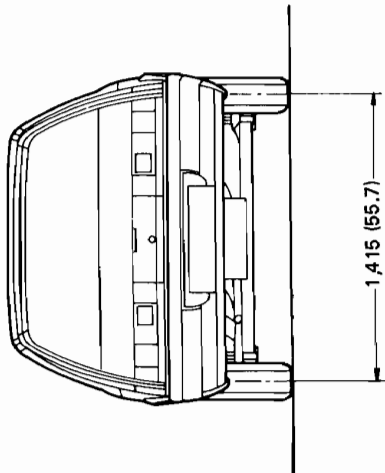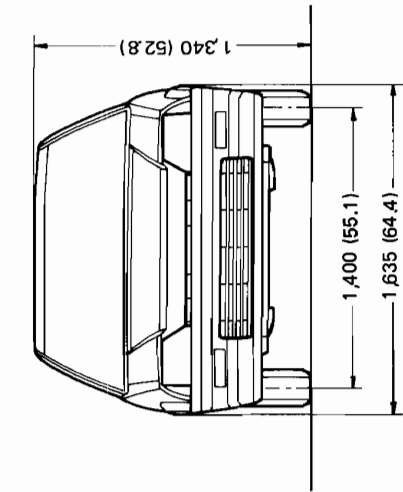

Unit: mm (in.)

4D

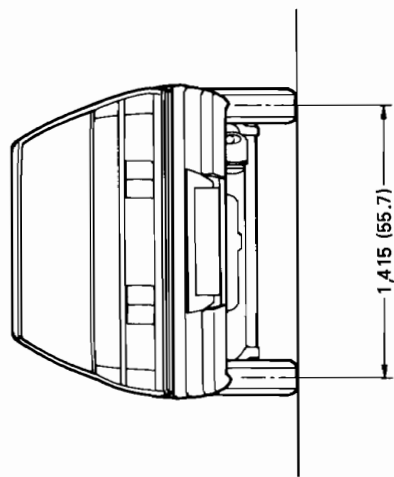
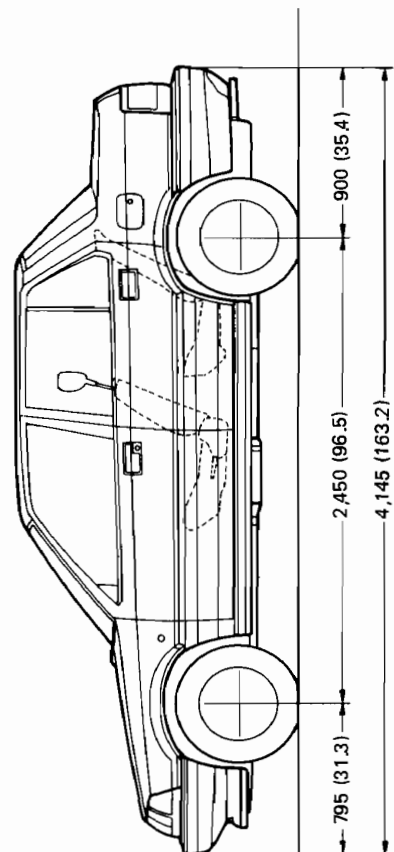
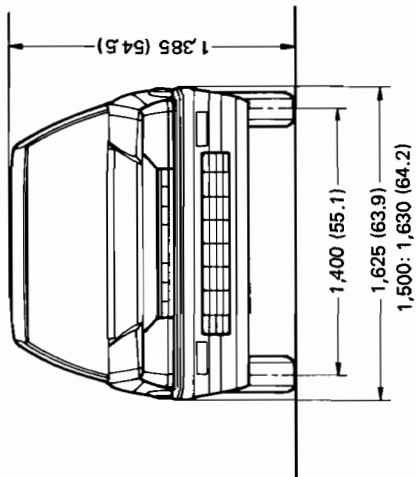
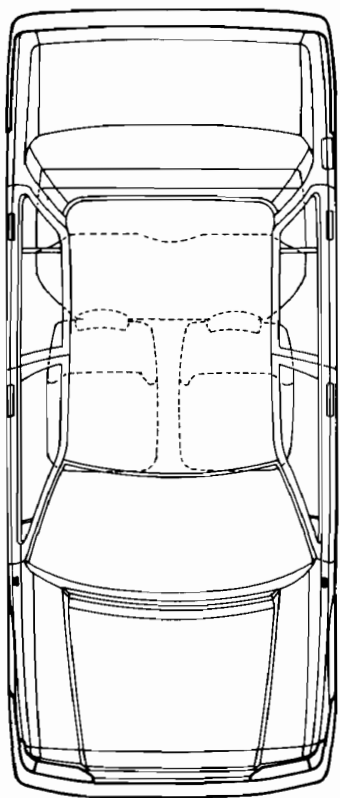


Unit: mm (in.)

(cont'd)


Body Specifications (cont'd)

4D H/B

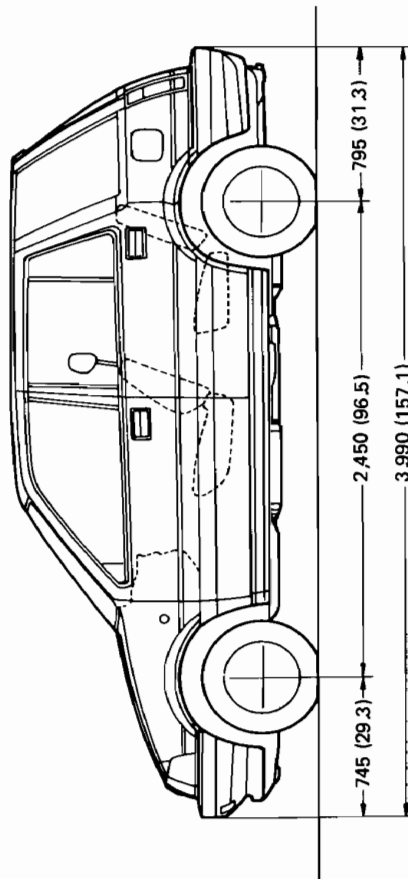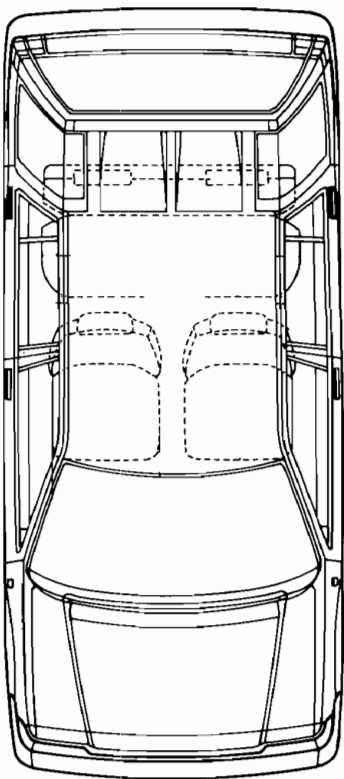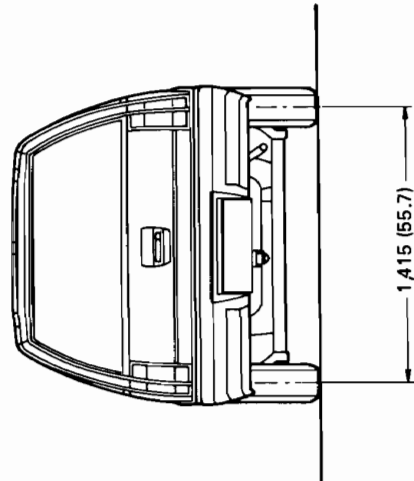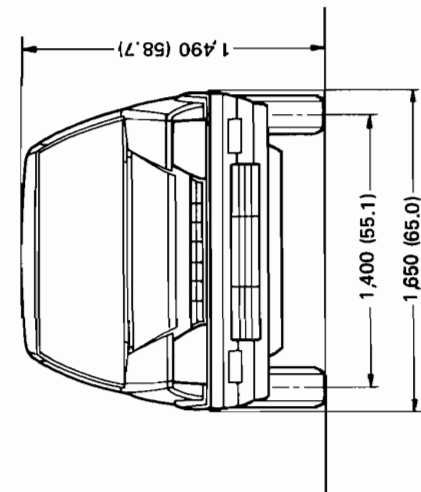


Unit: mm (in.)

Unit : mm

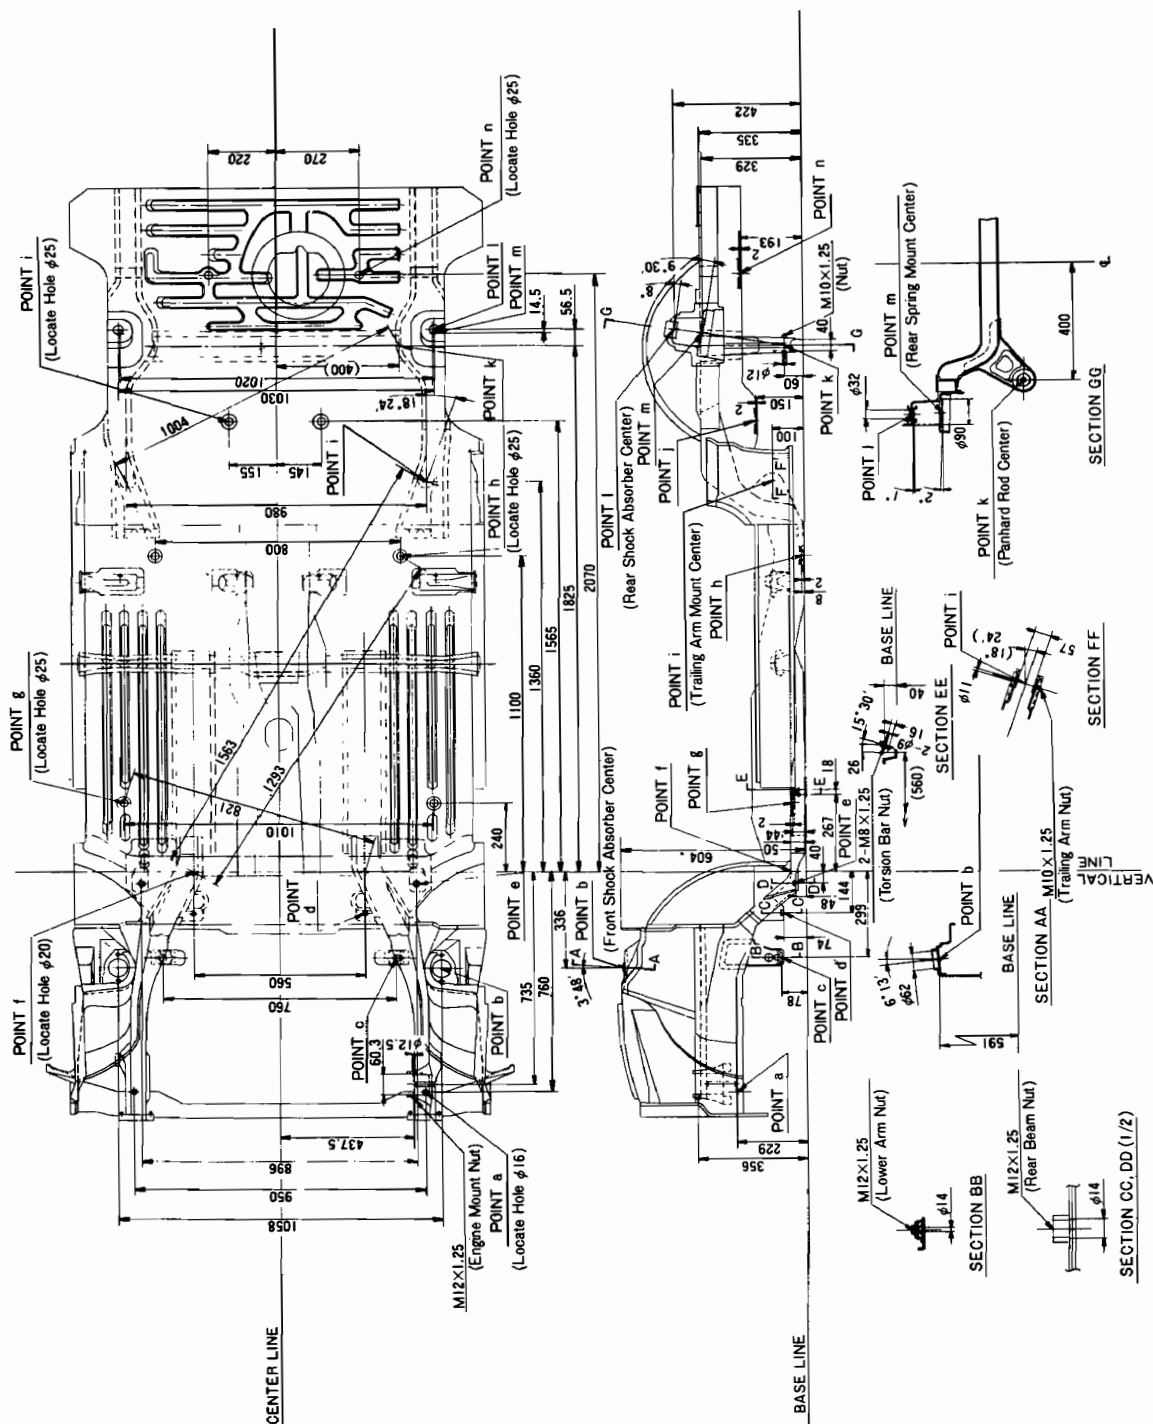

(cont'd)



(cont'd)

4D H/B


[illegible]

Lubrication Point

No.	LUBRICATION POINTS		LUBRICANT
1	Engine	Canadian Except Canadian	API Service Grade: SE or SF grade only API Service Grade: SE or SF grade only SAE Viscosity: See page 4-4 chart
2	Transmission	Manual Hondamatic	API Service Grade: SE or SF SAE30, 10W-30, 10W-40 or 20W-40 grade oil DEXRON Automatic transmission fluid
3	Brake reservoir		Brake fluid DOT 3 or DOT 4
4 5 6 7 8 9 10 11 12 13	Front wheel bearings and seals Torsion-bar spring Tie rod ball joints Steering gearbos Shift lever pivot (Manual) Select lever (Hondamatic) Battery terminals Pedal linkage Rear brake shoe linkage Steering column bushings		Multipurpose Grease
14	Caliper	Piston seal Dust seal Caliper pin Piston	Silicone Grease
15 16 17 18 19 20 21	Shift clevis bushings Door hinges upper and lower Door opening detents Engine hood latch Hood hinges Fuel filler door Trunk hinges		Multipurpose Grease


Recommended Manual Transmission Oil
(SE or SF grade Only)

Manual transmission oil viscosity for
ambient temperature ranges.

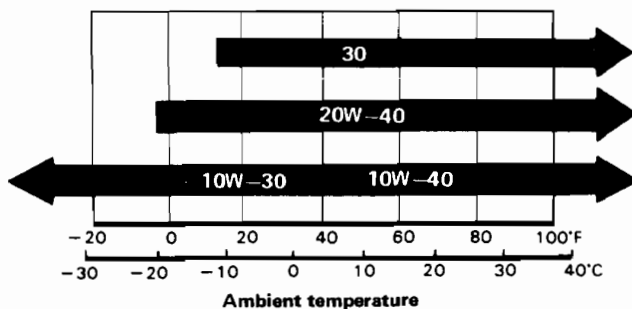





⑪ PEDAL LINKAGE

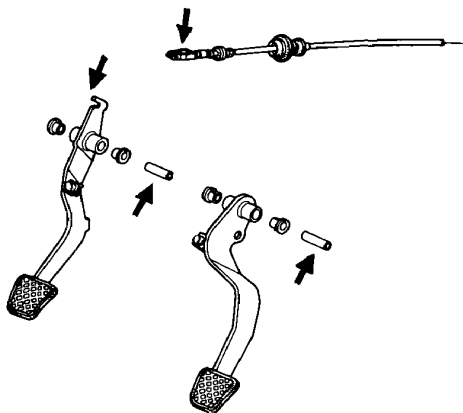



⑨ SELECT LEVER

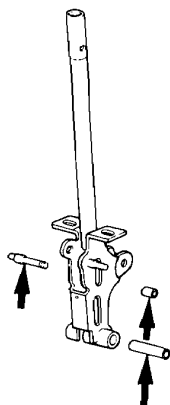


⑪ DOOR OPENING
DETENTS




⑧ SHIFT LEVER PIVOT

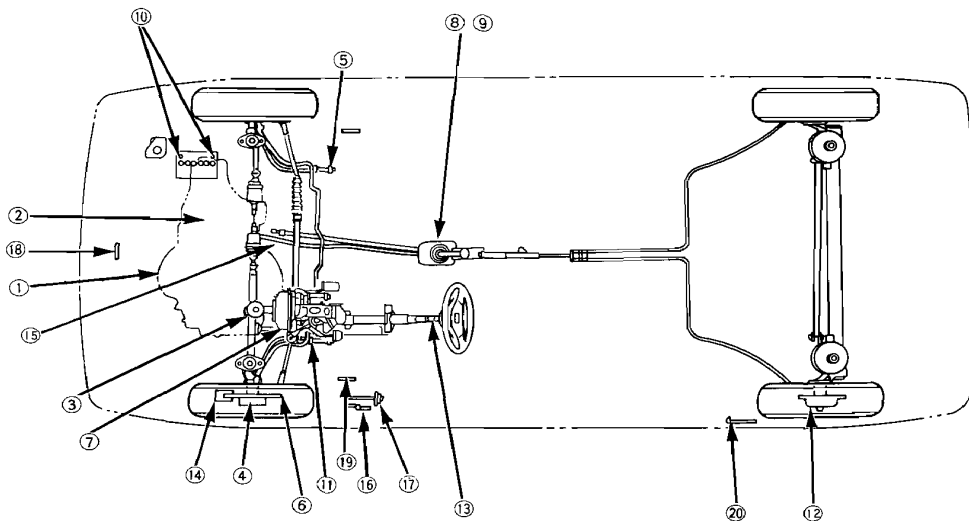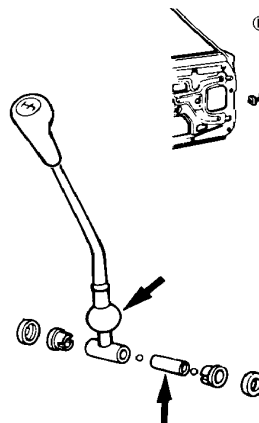


⑭ CALIPERS
Silicone grease

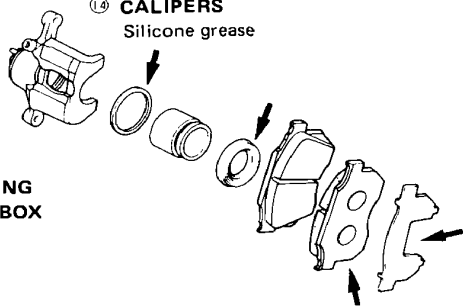

⑤ TORSION - BAR SPRING

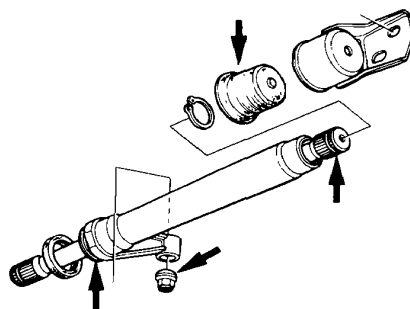

⑦ STEERING
GEAR BOX

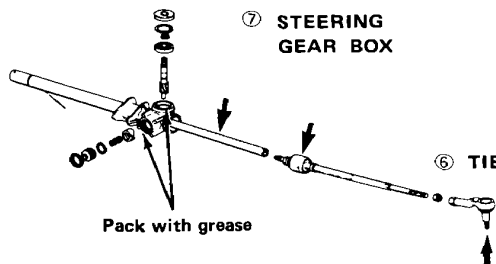


⑥ TIE ROD BALL JOINT

Lubrication (cont'd)

Recommended Engine Oil


Canadian Model

Engine oil viscosity for ambient temperature ranges.

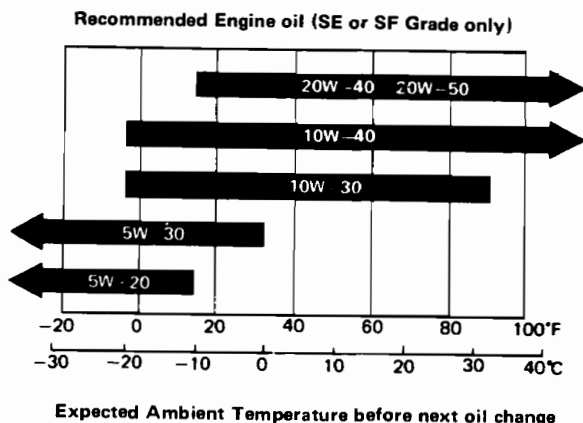

Except Canadian Models

Engine oil viscosity for ambient temperature ranges.

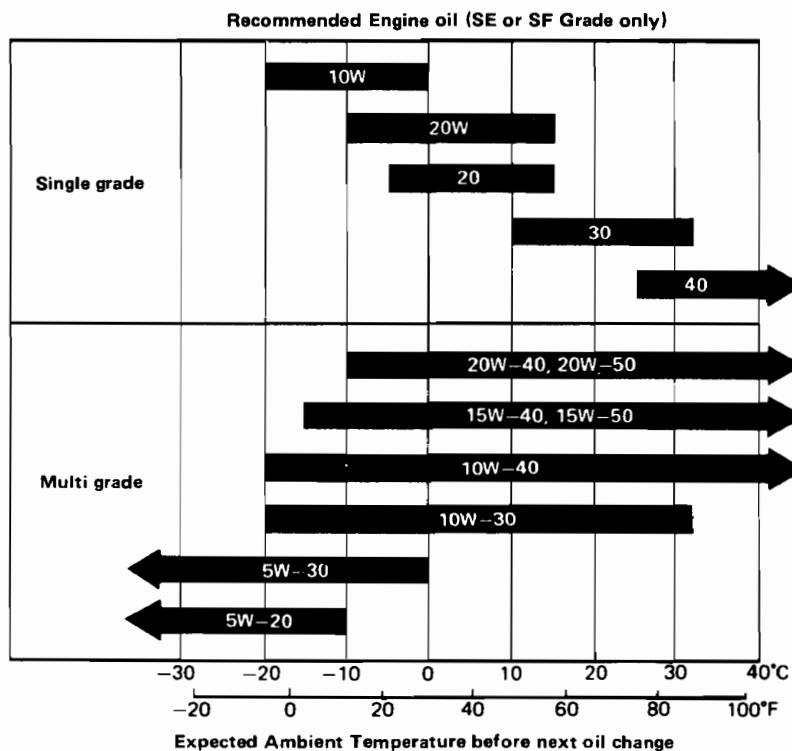

Required Maintenance Schedule



Canadian Model

R — REPLACE

I — INSPECT

AFTER INSPECTION, CLEAN, ADJUST, REPAIR OR REPLACE IF NECESSARY

SERVICE AT THE INTERVAL LISTED x 1,000 KM (OR MILES) OR AFTER THAT NUMBER OF MONTHS, WHICHEVER OCCURS FIRST.		* ¹ Inspect idle CO every 60 months or 96,000 km (60,000 miles), whichever comes first. * ² Thereafter, replace every 2 years or 48,000 km (30,000 miles), whichever comes first.									
ITEMS		miles/months	7.5	15	22.5	30	37.5	45	52.5	60	
		km	12	24	36	48	60	72	84	96	
ENGINE	IDLE SPEED			I		I		I		I ^{*1}	
	VALVE CLEARANCE			I		I		I		I	
	ALTERNATOR DRIVE BELT					I				I	
	ENGINE OIL		R	R	R	R	R	R	R	R	R
	ENGINE OIL FILTER		R	R	R	R	R	R	R	R	R
	TRANSMISSION OIL	MANUAL				R				R	
		HONDAMATIC		R				R			
FUEL SYSTEM	RADIATOR COOLANT							R ^{*2}			
	COOLING SYSTEM, HOSES AND CONNECTIONS					I				I	
	AIR CLEANER ELEMENT					R				R	
	FUEL FILTER									R	
	INTAKE AIR TEMP. CONTROL SYSTEM									I	
	TANK, FUEL LINES AND CONNECTIONS					I				I	
	THROTTLE CONTROL SYSTEM					I				I	
EVAPORATIVE CONTROL SYSTEM	CHOKE MECHANISM					I				I	
	CHARCOAL CANISTER									I	
	TWO-WAY VALVE									I	
IGNITION COMPONENTS	IGNITION TIMING AND CONTROL SYSTEM					I				I	
	SPARK PLUGS			R		R		R		R	
	DISTRIBUTOR CAP AND ROTOR					I				I	
	IGNITION WIRING					I				I	
CRANKCASE EMISSION CONTROL SYSTEM	PCV VALVE					R				R	
	BLOW-BY FILTER					R				R	
FRAME	BRAKE HOSES, LINES		I	I		I		I		I	
	BRAKE FLUID					R				R	
	REAR BRAKES					I				I	
	FRONT BRAKE PADS, DISCS AND CALIPERS		I	I	I	I	I	I	I	I	
	PARKING BRAKE		I			I				I	
	CLUTCH RELEASE ARM TRAVEL		I	I	I	I	I	I	I	I	
	ENGINE EXHAUST SILENCER, SUSPENSION MOUNTING BOLTS		I	I		I		I		I	
	WHEEL ALIGNMENT (FRONT)			I		I		I		I	
	STEERING OPERATION, TIE ROD ENDS, STEERING GEAR BOX AND BOOTS		I			I				I	

CAUTION:

- If vehicle is operated under severe conditions; driving in severe cold condition, short distance driving or driving in dusty condition, change engine oil and engine oil filter every 5,000 km (3,000 miles) or 3 months, whichever comes first.
- Disc brakes should be serviced every 7-1/2 months or 12,000 km (7,500 miles) however, in areas using a high concentration of road salt or other corrosive materials more frequent servicing may be required.

REMARK: DAY TO DAY CARE (such as oil, coolant level check and replenishment etc,) should be done practically according to the Owner's Manual.

(cont'd)

Required Maintenance Schedule (cont'd)

Except Canadian Model

R – REPLACE

I – INSPECT

AFTER INSPECTION, CLEAN, ADJUST, REPAIR OR REPLACE IF NECESSARY

SERVICE AT THE INTERVAL LISTED x 1,000 KM (OR MILES) OR AFTER THAT NUMBER OF MONTHS, WHICHEVER OCCURS FIRST.		*1 Thereafter, replace every 2 years or 48,000 km (30,000 miles), whichever comes first.									
ITEMS		Miles/months	7.5	15	22.5	30	37.5	45	52.5	60	
		km	12	24	36	48	60	72	84	96	
ENGINE	IDLE SPEED AND IDLE CO			I		I		I		I	
	VALVE CLEARANCE			I		I		I		I	
	ALTERNATOR DRIVE BELT				I					I	
	ENGINE OIL*1		R	R	R	R	R	R	R	R	
	ENGINE OIL FILTER		R	R	R	R	R	R	R	R	
	TRANSMISSION OIL	MANUAL				R					R
		HONDAMATIC		R				R			
FUEL SYSTEM	RADIATOR COOLANT							R*1			
	COOLING SYSTEM, HOSES AND CONNECTIONS				I					I	
	AIR CLEANER ELEMENT			R		R		R		R	
	FUEL FILTER					R				R	
	INTAKE AIR TEMP. CONTROL SYSTEM*4									I	
	TANK, FUEL LINES AND CONNECTIONS					I				I	
	THROTTLE CONTROL SYSTEM*2 *4					I				I	
EVAPORATIVE CONTROL SYSTEM*3	CHOKE MECHANISM *4					I				I	
	CHARCOAL CANISTER									I	
	TWO-WAY VALVE									I	
IGNITION COMPONENTS	IGNITION TIMING AND CONTROL SYSTEM					I				I	
	SPARK PLUGS			R		R		R		R	
	DISTRIBUTOR CAP AND ROTOR					I				I	
	IGNITION WIRING					I				I	
CRANCASE EMISSION CONTROL SYSTEM	PCV VALVE					R				R	
	BLOW-BY FILTER					R				R	
FRAME	BRAKE HOSES, LINES		I	I		I		I		I	
	BRAKE FLUID					R				R	
	REAR BRAKES					I				I	
	FRONT BRAKE PADS, DISCS AND CALIPERS		I	I	I	I	I	I	I	I	
	PARKING BRAKE		I			I				I	
	CLUTCH RELEASE ARM TRAVEL		I	I	I	I	I	I	I	I	
	ENGINE EXHAUST SILENCER, SUSPENSION MOUNTING BOLTS		I	I		I		I		I	
	WHEEL ALIGNMENT (FRONT)			I		I		I		I	
	STEERING OPERATION, TIE ROD ENDS, STEERING GEAR BOX AND BOOTS		I			I				I	

CAUTION:

- If vehicle is operated under severe conditions; driving in severe cold condition, short distance driving or driving in dusty condition, change engine oil and engine oil filter every 5,000 km (3,000 miles) or 3 months, whichever comes first.
- Disc brakes should be serviced every 7-1/2 months or 12,000 km (7,500 miles) however, in areas using a high concentration of road salt or other corrosive materials more frequent servicing may be required.

REMARK: DAY TO DAY CARE (such as oil, coolant level check and replenishment etc,) should be done practically according to the Owner's Manual.

*2 Only for Manual transmission on Swedish, Swiss and Australian types.

*3 Only for the cars sold in Australia.

*4 Except the car with Electronical Fuel Injection.

Maintenance Specifications/Settings



TUNE UP CONDITION: Engine at normal operating temperature

Canadian Model

TUNE UP CONDITION: Engine at normal operating temperature.			
SUBJECT	ITEMS OR CONDITIONS		REQUIREMENTS
ENGINE	Ignition timing (At idle)	Manual transmission	10 ± 2° BTDC
		Hondamatic (in gear)	14 ± 2° BTDC
	Valve clearance	Intake	0.17–0.22 mm (0.007–0.009)
		Exhaust	0.22–0.27 mm (0.009–0.011)
	Idle speed (With headlights off and cooling fan off)	Manual transmission (At neutral)	750 ± 50 min ⁻¹ (rpm)
		Hondamatic (in gear)	700 ± 50 min ⁻¹ (rpm)
	Idle CO	Manual and Hondamatic	below 2.0 %
	Choke fast idle	Manual and Hondamatic	1,500–2,500 min ⁻¹ (rpm)
	Standard Spark plug	Type: NGK: BPR6EY–11 Denso: W20EXR–U11 or equivalent	Gap: 1.0–1.1 mm (0.039–0.043 in.)
	Compression	350 min ⁻¹ (rpm) and wide-open throttle	1225 kPa (12.5 kg/cm ² , 176 psi)
EVAPORATIVE EMISSION CONTROLS	Two-way valve	Pressurize	25–55 mmHg (1.0–2.2 in. Hg)
		Draw	5–15 mmHg (0.2–0.6 in. Hg)
	Charcoal canister	Draws	Partial open throttle
CLUTCH	Manual transmission	Pedal free play	16–21 mm (0.63–0.83 in.)
		Pedal height	179 mm (7.05 in.)
SUSPENSION	Tires pressure (cold)	1300 H/B 4MT, 1500 H/B and 4D (front and rear)	180 kPa (1.8 kg/cm ² , 26 psi)
		1300 H/B 5MT and Hondamatic (front) (rear)	240 kPa (2.4 kg/cm ² , 35 psi) 220 kPa (2.2 kg/cm ² , 32 psi)
	Wheel alignment	4D H/B (font and rear) (spare)	220 kPa (2.2 kg/cm ² , 32 psi) 415 kPa (4.2 kg/cm ² , 60 psi)
		Front Camber Caster Toe Kingpin inclination	0°00'±1° 4D H/B 0°20'±1° 4D H/B 2°05'±1° 2D H/B, 4D 2°20' 0±3 mm (0±0.118 in.) 4DH/B 12°00'±30' 2DH/B, 4D 12°50'±30'
BRAKES	Pedal	Free play	1–5 mm (0.04–0.20 in.)
		Pedal-to-floor clearance	174mm(6.8 in.) 4D H/B 168mm(6.6 in.)
	Pad and shoe	Pad wear limit	3 mm (0.1 in.) min. thickness
		Shoe lining wear limit	2.0 mm (0.08 in.) min. thickness
	Drum	Absolute refinishing limit	181 mm (7.13 in.) max. diameter 4D H/B 201 mm (7.91 in.) max. diameter
	Rotor disc	Absolute refinishing limit	12 mm (0.47 in.) min. thickness
		Solid Ventilated	17 mm (0.67 in.) min. thickness

(cont'd)

Maintenance Specifications/Settings (cont'd)

European Model

SUBJECT		ITEMS OR CONDITIONS		REQUIREMENTS
ENGINE	Ignition timing (At idle)	1200 carburetor 1300 carburetor 1500 carburetor PGM-FI (Coupe)		17 ± 2° BTDC 12 ± 2° BTDC 14 ± 2° BTDC 16 ± 2° BTDC
	Valve clearance	Below 38°C (100°F)	Intake	0.17–0.22 mm (0.007–0.009 in.)
			Exhaust	0.22–0.27 mm (0.009–0.011 in.)
	Idle speed *1 (With headlight off and cooling fan off)	Manual transmission (At neutral)		750 ± 50 min ⁻¹ (rpm)
		Hondamatic (in gear)		700 ± 50 min ⁻¹ (rpm)
	Idle CO	Manual and Hondamatic		KS, KX 0.5–2.0% Other types below 3%
	Choke fast idle	Carburetor		1,500–2,500 min ⁻¹ (rpm)
		PGM-FI		1,200–2,000 min ⁻¹ (rpm)
	Standard Spark plug	Type: NGK: BPR6EY-11 Denso: W20EXR-U11		1.0–1.1 mm (0.039–0.043 in.)
	Compression	350 min ⁻¹ (rpm) and wide-open throttle		Carburetor: 1,225kPa (12.5kg/cm ² , 176 psi) PGM-FI: 1,274kPa (13.5kg/cm ² , 185 psi)
Alternator belt	Belt deflection with 98N (10 kg, 22 lb) tension		7–10mm (0.28–0.39 in.)	
Ignition wire	Resistance		25,000 ohms maximum	
Radiator cooling fan	Fan operating temperature		Above 90 ± 1.5°C (194 ± 3°F)	
CLUTCH	Manual transmission	Pedal free play	Except Coupe Coupe	16–21 mm (0.63–0.83 in.) 10–30 mm (0.39–1.18 in.)
		Pedal height	Except Coupe Coupe	179 mm (7.05 in.) 175 mm (6.89 in.)
SUSPENSION	Tires pressure (cold)	Coupe (front and rear) 2D H/B, 4D (front and rear) 4D H/B (front and rear) (spare)		170 kPa (1.7 kg/cm ² , 24 psi) 180 kPa (1.8 kg/cm ² , 26 psi) 190 kPa (1.9 kg/cm ² , 28 psi) 41.5 kPa (4.2 kg/cm ² , 60 psi)
	Wheel alignment	Front Camber		Coupe 2D H/B and 4D 0°00'±1° 4D H/B 0°26'±1°
		Caster		Coupe 2°25'±1°, 2D H/B and 4D 0°00'±1° 4D H/B 1°49'±1°
		Toe Kingpin inclination		0±3 mm (0±0.118 in.) Coupe 12°55'±30', 2D H/B and 4D 12°50'±30', 4D H/B 11°54'±30'
BRAKES	Pedal	Free play		1–5 mm (0.04–0.20 in.)
		Pedal-to-floor clearance		174 mm (6.8 in.) 4D H/B 168 mm (6.6 in.)
	Pad and shoe	Pad wear limit		3 mm (0.1 in.) min. thickness
		Shoe lining wear limit		2.0 mm (0.06 in.) min. thickness
	Front rotor disc	Absolute refinishing limit		Solid disc 12 mm (0.47 in.) min. thickness Ventilated disc 17 mm (0.67 in.) min. thickness
	Rear drum	Absolute refinishing limit		181 mm (7.13 in.) max. diameter 4D H/B 201 mm (7.9 in.) max. diameter

*1 Only for KS Model (With headlights on and cooling fan off)



KQ Model

Only the maintenance specifications and settings for above two models different from those of the European model (Except KS, KX model) are listed.

For the other items not given here, refer to the European model maintenance specifications and settings.

SUBJECT	ITEMS OR CONDITIONS		REQUIREMENTS
ENGINE	Ignition timing(At idle)		14 ± 2° BTDC
	Idle: CO	Manual and Hondamatic	below 2.0 %
EVAPORATIVE EMISSION CONTROLS	Two-way valve	Pressurize	5—15 mmHg (0.2—0.6 in. Hg)
		Draw	15—30 mmHg (0.6—1.2 in. Hg)
	Chacoal canister	Draws	Partical open throttle
SUSPENSION	Tires pressure (cold)	Front and Rear	180 kPa (1.8 kg/cm ² , 26 psi)
		Front Camber Caster Kingpin inclination	2D H/B, 4D 0°00'±1° 4D H/B 2°30'±1° 2D H/B, 4D 2°21'±1° 4D H/B 2°00'±1° 2D H/B, 4D 12°50'±30' 4D H/B 11°45'±30'

KY Model

Only the maintenance specifications and settings for above two models different from those of the European model (Except KS, KX model) are listed.

For the other items not given here, refer to the European model maintenance specifications and settings.

SUBJECT	ITEMS OR CONDITIONS		REQUIREMENTS
ENGINE	Ignition timing(At idle)		16 ± 2° BTDC
	Spark plug	Type: NGK BP6EY—11 Denso W20EX—U11	Gap: 1.0—1.1 mm (0.039—0.043 in.)
SUSPENSION	Tires Pressure (cold)	Front and Rear	180 kPa (1.8 kg/cm ² , 26 psi)
	Wheel alignment	Front Camber Caster Kingpin inclination	2D H/B 0°20'±1° 4D, 4D H/B 0°30'±1° 2D H/B 2°10'±1° 4D 2°15'±1° 4D H/B 2°00'±1° 2D H/B 12°30'±30' 4D 12°15'±30' 4D H/B 11°54'±30'

General Export Model

Only the maintenance specifications and settings for above two models different from those of the European model (Except KS, KX model) are listed.

For the other items not given here, refer to the European model maintenance specifications and settings.

SUBJECT	ITEMS OR CONDITIONS		REQUIREMENTS
ENGINE	Ignition timing(At idle)	1200 1300 1500	17 ± 2° BTDC 12 ± 2° BTDC 16 ± 2° BTDC
	Spark plug	Type: NGK BP6EY—11 Denso W20EX—U11	Gap: 1.0—1.1 mm (0.039—0.043 in.)
SUSPENSION	Tires Pressure (cold)	Front and Rear	180 kPa (1.8 kg/cm ² , 26 psi)
	Wheel alignment	Front Camber Caster Kingpin inclination	2D H/B, 4D 0°00'±1° 4D H/B 0°30'±1° 2D H/B, 4D 2°21'±1° 4D H/B 2°00'±1° 2D H/B, 4D 12°50'±30' 4D H/B 11°45'±30'


Engine Removal/Installation

WARNING

- Make sure jacks and safety stands are placed properly (pages 1-5 thru 7), and hoist brackets are attached to correct positions on the engine (page 5-10).
- Apply parking brake and block rear wheels, so car will not roll off stands and fall on you while working under it.


CAUTION: Use fender covers to avoid damaging painted surfaces.

1. Disconnect the battery negative terminal first, then the positive terminal.

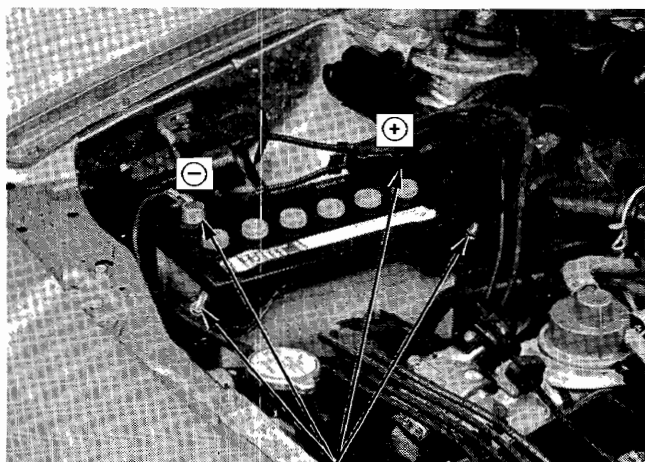

2. Remove the battery then, remove the battery mount.


8 x 1.25 mm
24 N·m (2.4 kg-m, 17 lb-ft)

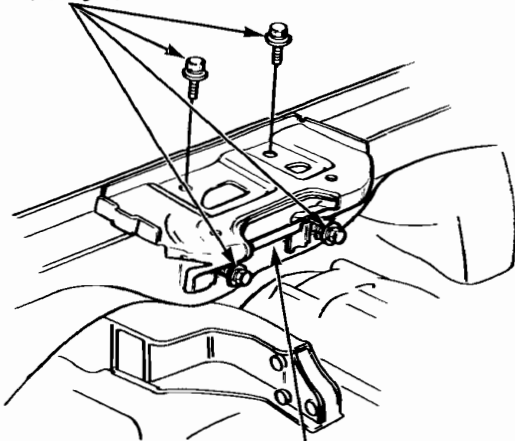

BATTERY MOUNT

3. Unbolt the hood brackets and remove the hood.
 - Disconnect the washer fluid tube.

WASHER FLUID TUBE

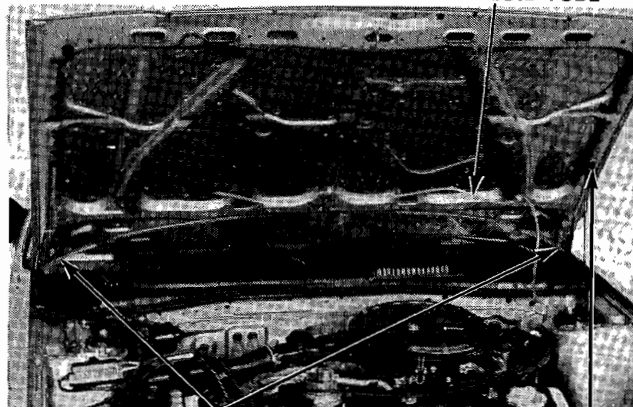

6 x 1.0 mm
10 N·m (1.0 kg-m, 7 lb-ft)

HOOD

CAUTION: Use care when storing the hood to avoid damaging the paint.

4. Remove the engine splash shield.



ENGINE SPLASH SHIELD

5. Remove the wheelwell splash shields.




SPLASH SHIELDS



6. Drain the engine oil. Remove the oil filler cap to speed draining. Reinstall the drain plug with a new washer.


CAUTION: Do not re-use old washer.

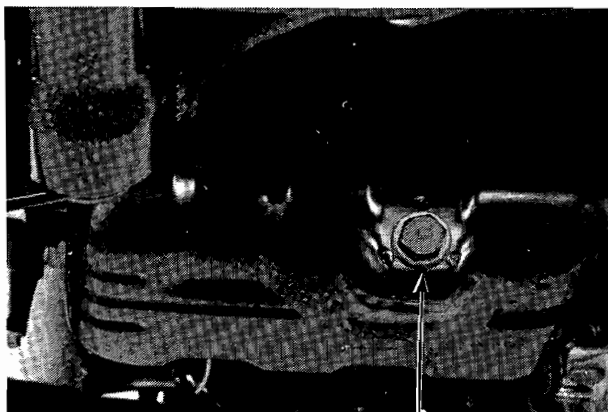

OIL PAN DRAIN PLUG
45 N·m (4.5 kg-m, 33 lb-ft)


7. Drain the coolant from the radiator into a clean pan so it may be re-used. Remove the radiator cap to speed draining.

WARNING Use care when removing radiator cap to avoid scalding by hot coolant or steam.

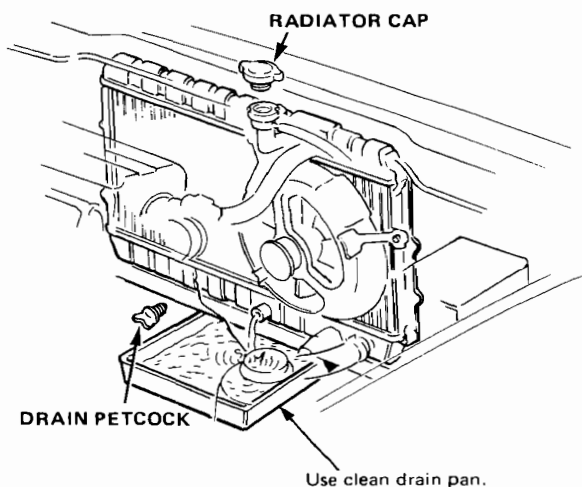


8. Drain transmission oil/fluid. Use a 3/8" drive socket wrench to remove the drain plug. Remove the oil filler plug to speed draining. Reinstall the drain plug with a new washer.

FILLER PLUG/DIPSTICK
Hondamatic Transmission

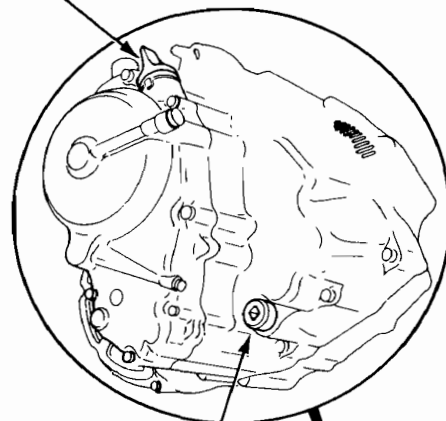

OIL FILLER PLUG
Manual Transmission
45 N·m (4.5 kg-m, 33 lb-ft)

DRAIN PLUG
40 N·m (4.0 kg-m, 29 lb-ft)
Replace washer.

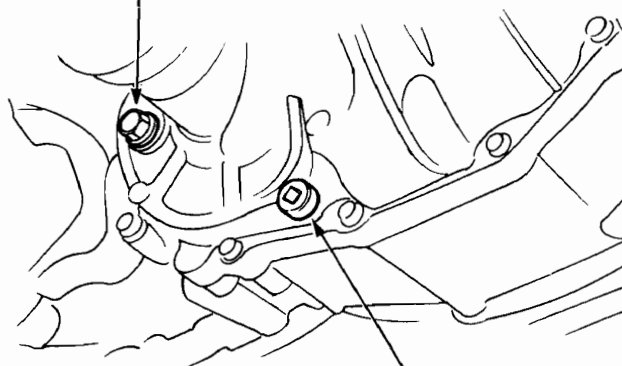


DRAIN PLUG
40 N·m (4.0 kg-m, 29 lb-ft)
Replace washer.

(cont'd)


Engine Removal/Installation (cont'd)

9. Remove the air cleaner: (Expect Coupe)

- Disconnect the air intake duct, hot air duct and air chamber hose.

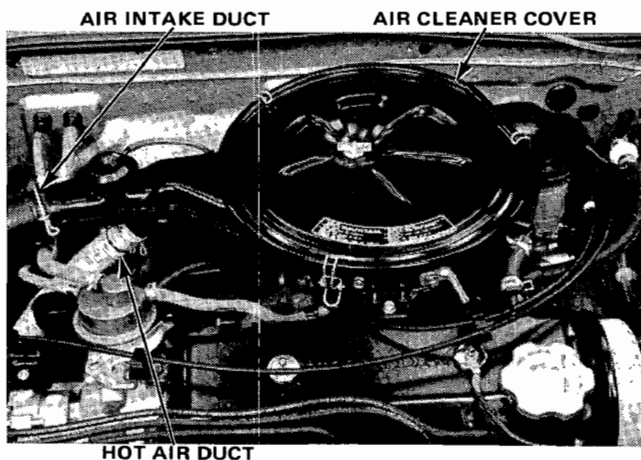

- Remove the air cleaner cover and filter.
- Disconnect the condensation chamber hose.

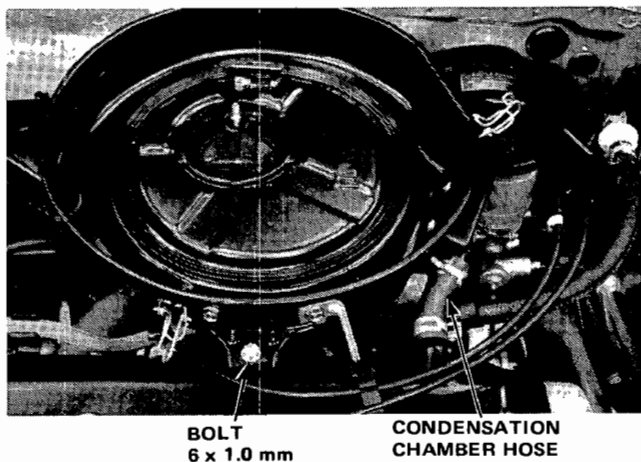


- Remove the bolt holding the air cleaner.
- Disconnect the intake air temperature sensor wire.
- Lift the air cleaner up and disconnect the air bleed valve hose and emission hose.


10. Disconnect the following wires:

NOTE: On reassembly, connect all wires properly; check that they are not pinched or interfering with adjacent parts.

- Disconnect the engine compartment sub harness connector.

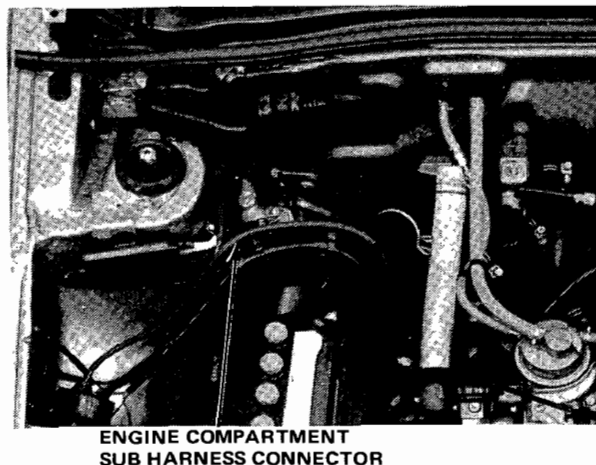

- Disconnect the brake booster vacuum hose.

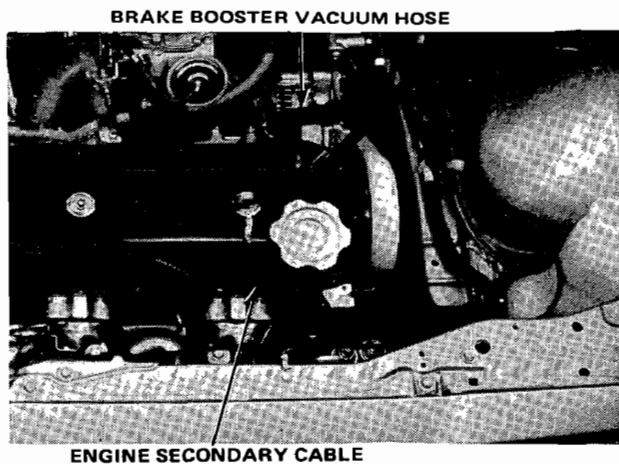


- Remove the engine secondary cable.




11. Disconnect fuel hose at the fuel pump. (Expect Coupe)

WARNING Do not smoke while working on fuel system. Keep open flame away from work area.

FUEL HOSE

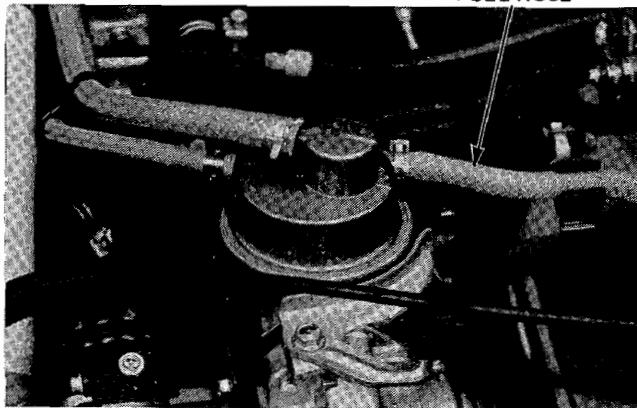

12. Remove the fuel pump cover and fuel pump. (Expect Coupe)

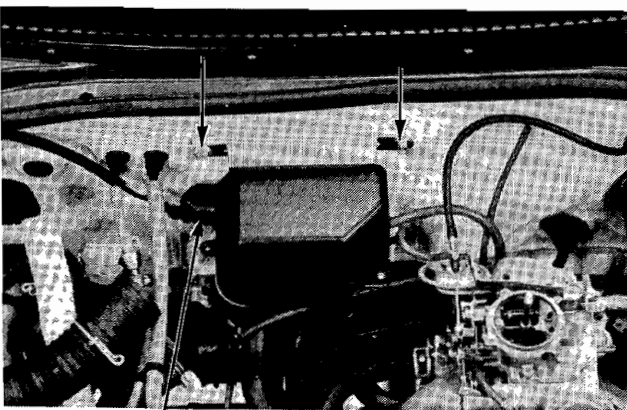


Disconnect the coupler.

14. Remove the choke and throttle cables by loosening the locknuts and the adjusting nuts, then slip the cable ends and out the brackets and carburetor linkage. (Expect coupe)

NOTE: Take care not to bend the cable when removing it. Do not use pliers to remove the cable from the linkage. Always replace a kinked cable with a new one.


CHOKE CABLE LOCK NUT
and ADJUSTING NUT

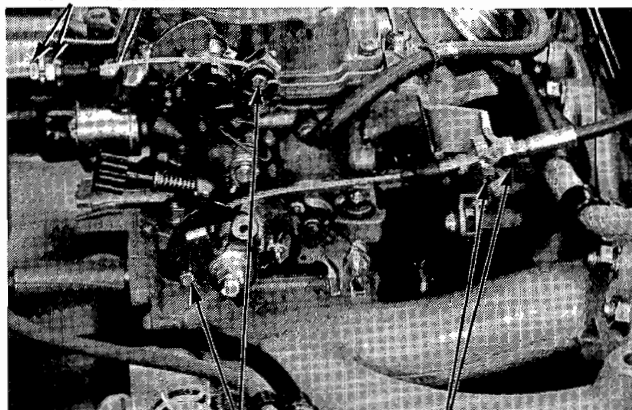

CABLE ENDS THROTTLE CABLE LOCKNUT
and ADJUSTING NUT

13. Disconnect No. 1 control box connector. Lift control box off its bracket, and let it hang next to engine.

15. Disconnect the ignition wires at the spark plugs and remove the distributor. (Expect coupe)

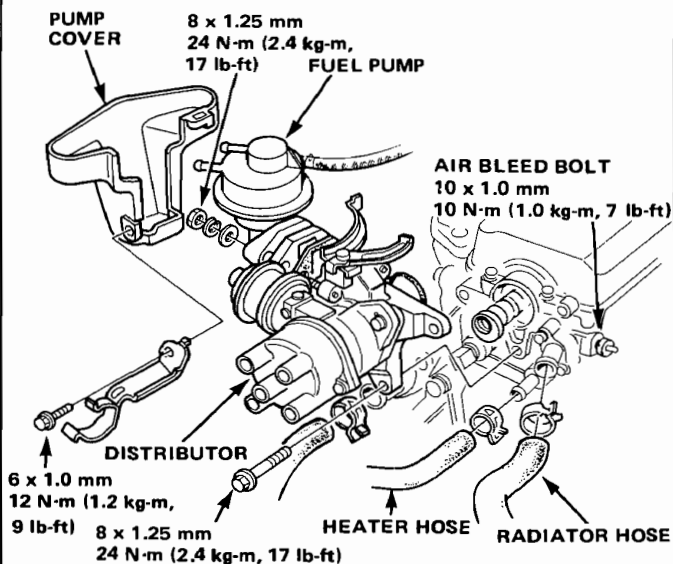

(cont'd)


Engine Removal/Installation (cont'd)

16. Relieve fuel pressure. (Coupe)


WARNING Do not smoke while working on fuel system. Keep open flame away from work area. Drain fuel only into an approved container.

CAUTION: Before disconnecting the fuel line, fuel pressure should be relieved by loosening the service bolt on the top of the fuel filter while engine is stopped.


- 1) Place a shop towel over the fuel filter to prevent pressurized fuel from spreading over the engine.
- 2) Loosen the service bolt slowly by approximately one full turn. This relieves fuel pressure.
- 3) Using a new sealing washer, tighten the service bolt.

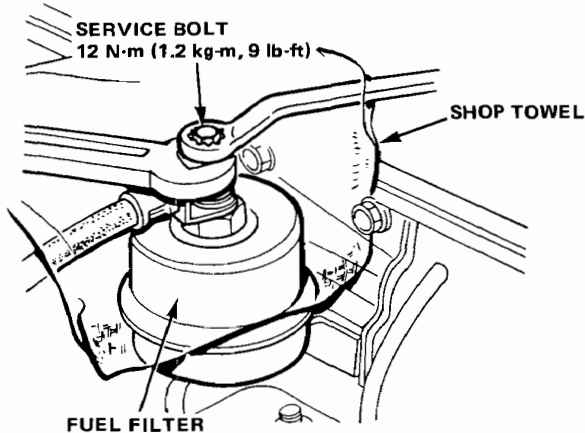

17. Disconnect the fuel return hose from the pressure regulator. Remove the special nut then remove the fuel hose.

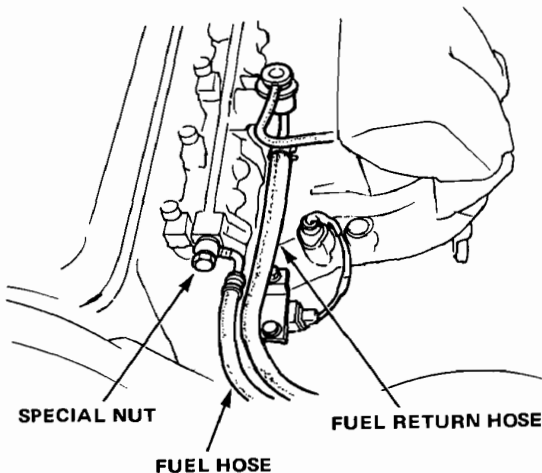


18. Disconnect the air intake duct and vacuum hose. (Coupe)

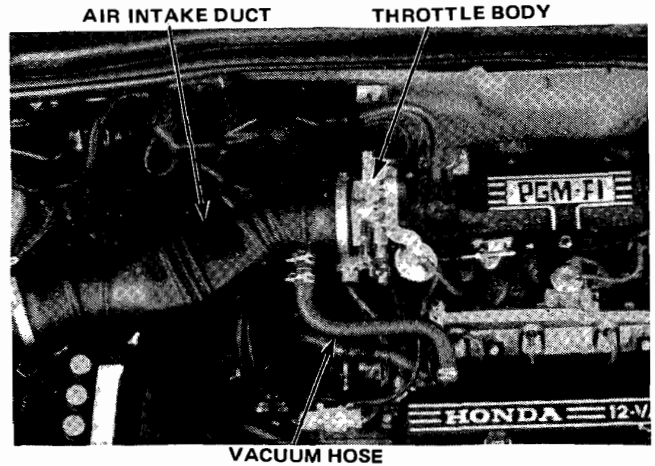

19. Remove the throttle cable by loosening the locknut and adjusting nuts, then slip the cable and out the bracket and linkage. (Coupe)


NOTE: Take care not bend the cable when removing it. Do not use pliers to remove the cable from the linkage. Always replace a kinked cable with a new one.

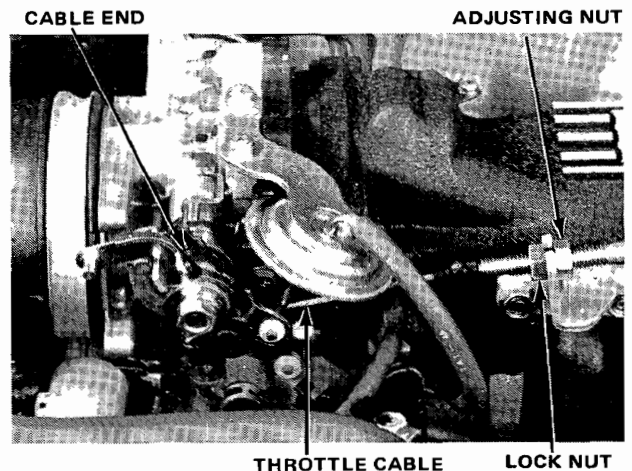




20. Disconnect the sub engine harness connectors.
(Coupe)

SUB ENGINE HARNESS CONNECTOR

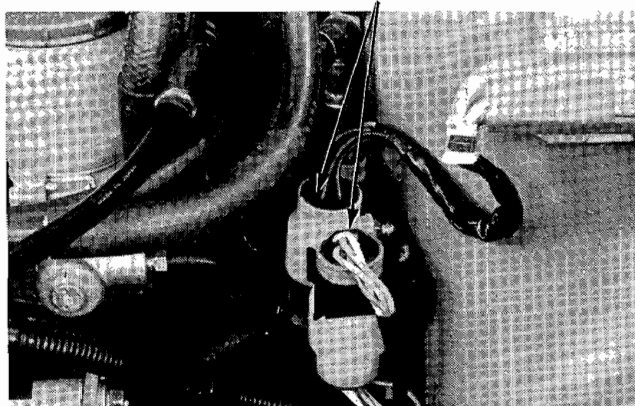

21. Disconnect the ignition wires at the spark plugs and remove the distributor. (Coupe)

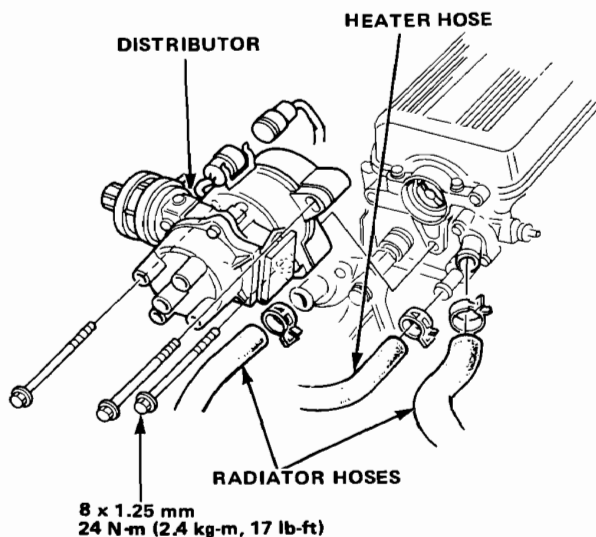

22. Disconnect the radiator hoses and heater hoses at the engine. Mark the heater hoses so they will be reinstalled correctly.


NOTE:

- Do not disconnect the heater valve cable.
- When refilling cooling system, open the heater valve and unscrew the air bleed bolt to bleed air out of the system.


23. On Manual Cars:

- Loosen clutch cable adjusting nut and disconnect clutch cable from release arm.
- Disconnect the transmission ground cable.

NOTE: After installing engine, readjust clutch pedal free play (page 13-3).

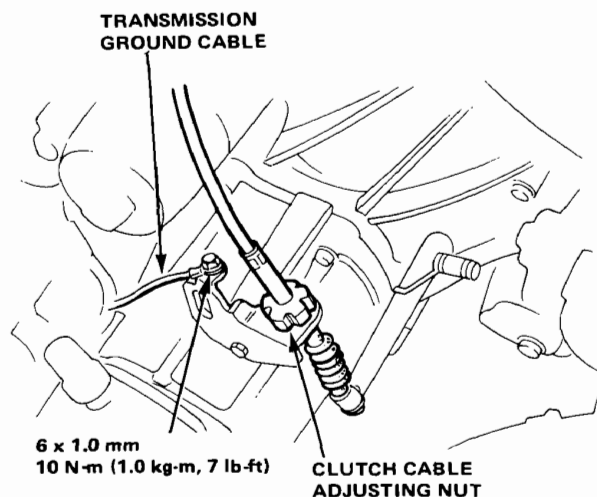

- Disconnect the shift lever torque rod from the clutch housing.

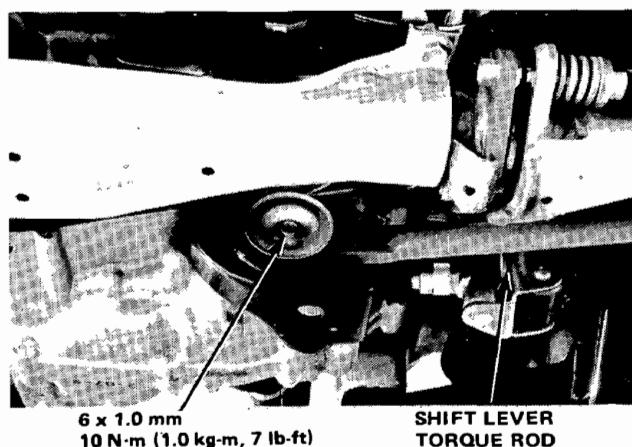


(cont'd)

Engine Removal/Installation (cont'd)


- Slide the pin retainer out of way, drive out the spring pin with pin punch, then disconnect the shift rod.

NOTE: On reassembly, slide the retainer back into place after driving in the spring pin.

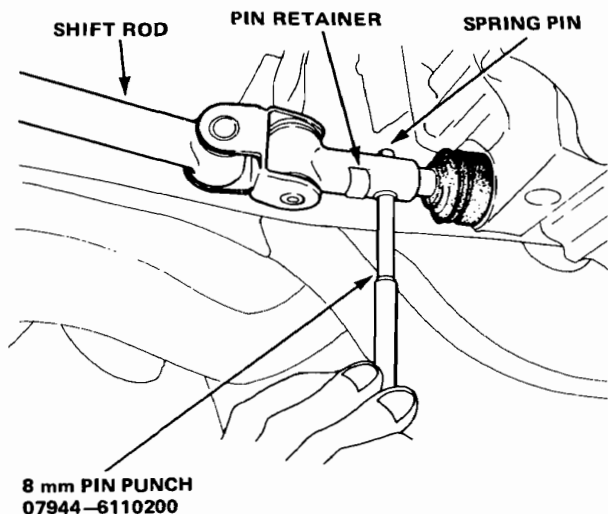


24. On Automatic Cars:

- Disconnect the transmission oil cooler hoses at the transmission, let the ATF drain from hoses, then hang the hoses up out of the way near the radiator.

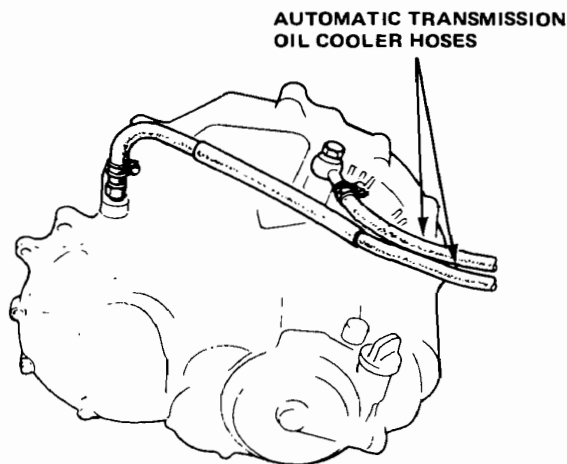


- Remove the center console.
- Place the shift lever in reverse, then remove the lock pin from the end of the shift cable.

NOTE: On reassembly, check the cable adjustment.

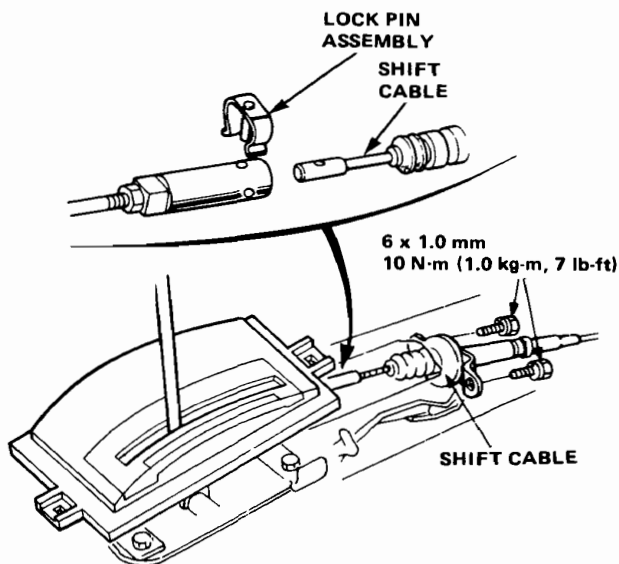


- Unscrew the cable mounting bolts and remove the shift cable holder.

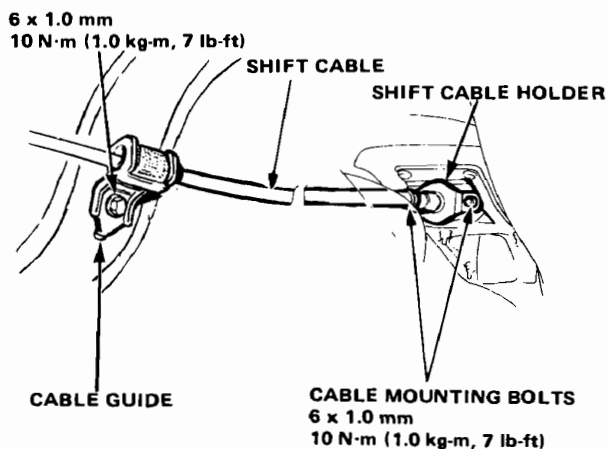




- Remote the throttle control cable in the numbered sequence shown.

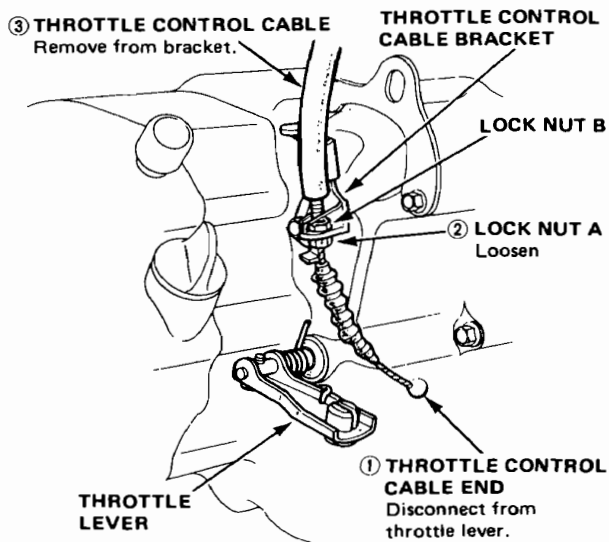

CAUTION: Do not loosen lock nut B as it will change the transmission shift points.

25. Remove the cable clip, then pull the speedometer cable out of the holder.

CAUTION: Do not remove the holder because the speedometer gear may fall into the transmission housing.

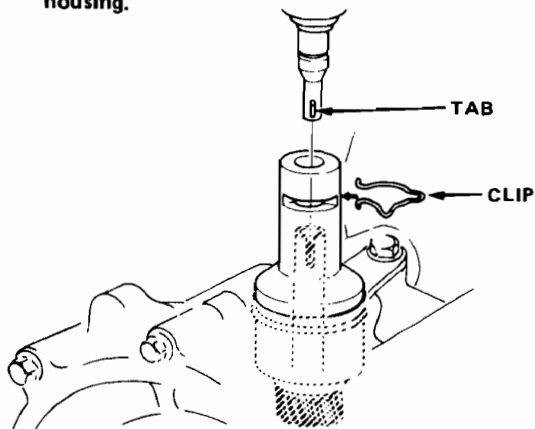



During Installation:

- Align tab on cable end with slot in holder.
 - Install clip so bent leg is on groove side.
- After installing, pull speedometer cable to make sure it is secure.

26. Remove the exhaust header pipe by removing the nuts.

CAUTION:

- To ease disassembly, squirt penetrating oil on the exhaust manifold studs before removing nuts.
- Replace the exhaust gaskets and the self-locking nuts on reassembly.

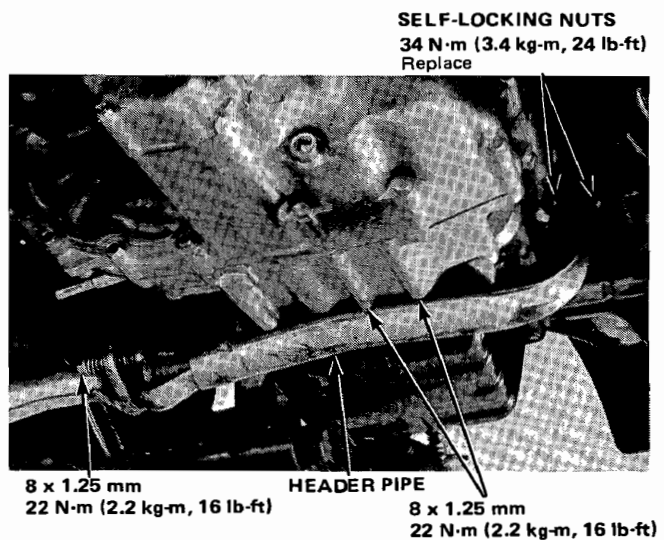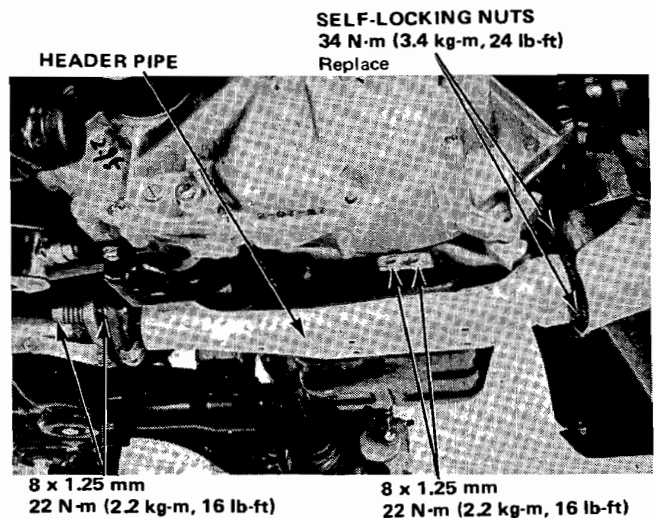


(cont'd)

Engine Removal/Installation (cont'd)


27. Remove the drive shafts (See page 18-2).

- Place a jack under the radius arm ball joint.
- Remove the ball joint nut and pry off the lower arm.
- Use ball joint remover if it is hard to separate the ball joint from the knuckle.

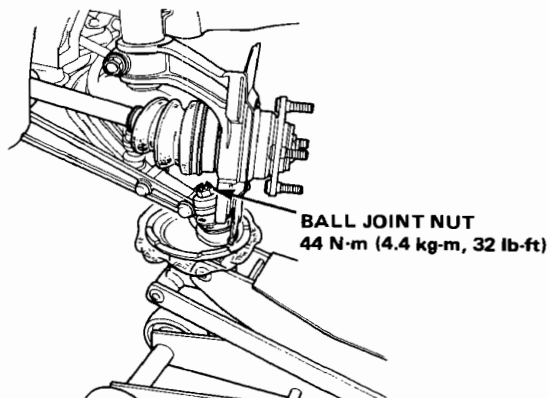

CAUTION: Make sure to place a jack under the lower arm. Otherwise, the arm may "jump" down when the ball joint is free, because the assembly is under tension from the torsion bar.


28. Attach a hoist chain to the engine block and raise the hoist just enough to remove slack from chain with slight tension.

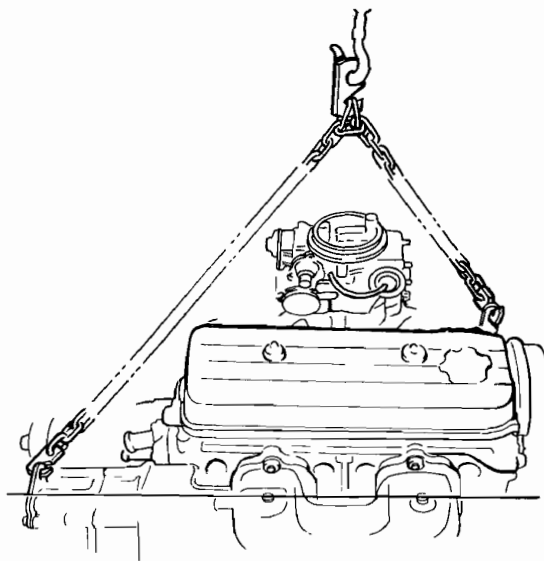

29. Remove the rear transmission mount bracket.

8 x 1.25 mm
22 N·m (2.2 kg-m, 16 lb-ft)

REAR TRANSMISSION MOUNT BRACKET

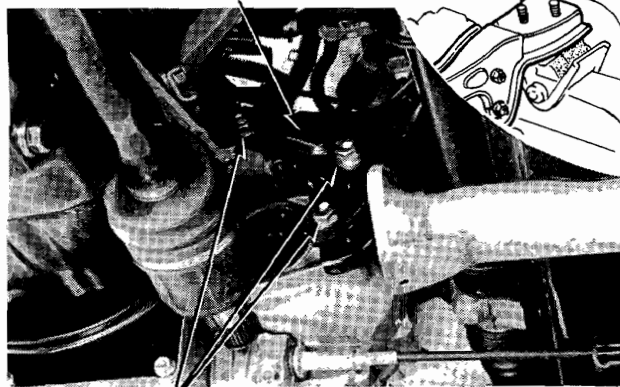


12 x 1.25 mm
65 N·m (6.5 kg-m, 47 lb-ft)
Replace.

NOTE: When installing the transmission mount, make sure that the rubber damper mounting surface is not contaminated with oil.

30. Remove the bolts from the transmission mount.


FRONT TRANSMISSION MOUNT

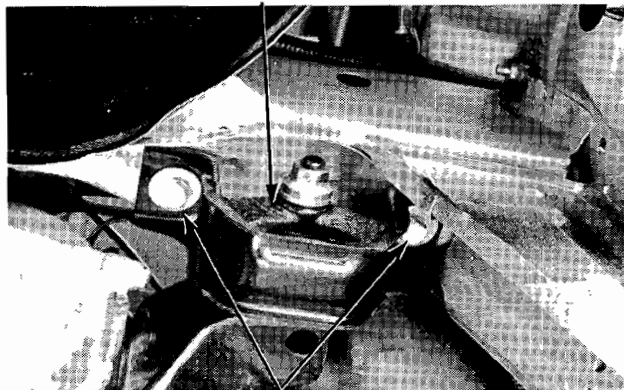

10 x 1.25 mm
39 N·m (3.9 kg-m, 28 lb-ft)




31. Remove the bolt from the engine side mount.

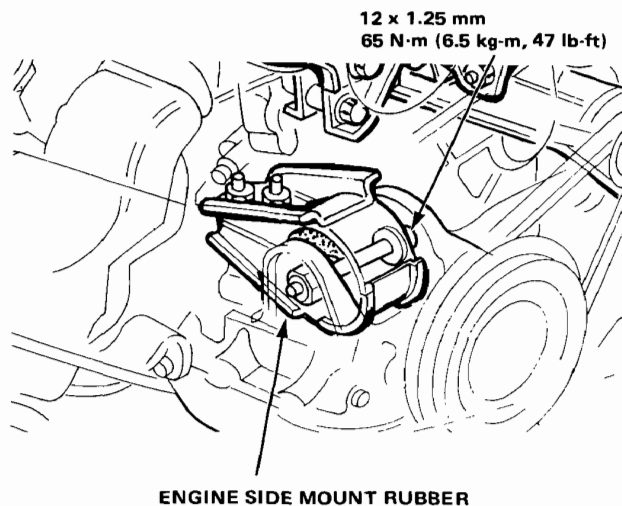


32. On Cars with A/C:

- Loosen the belt adjusting bolt and idler pulley nut.
- Remove the compressor mounting bolts, then lift the compressor out of the bracket with hoses attached, and wire it up to the front beam.

NOTE: The compressor can be moved without discharging the air conditioner system.

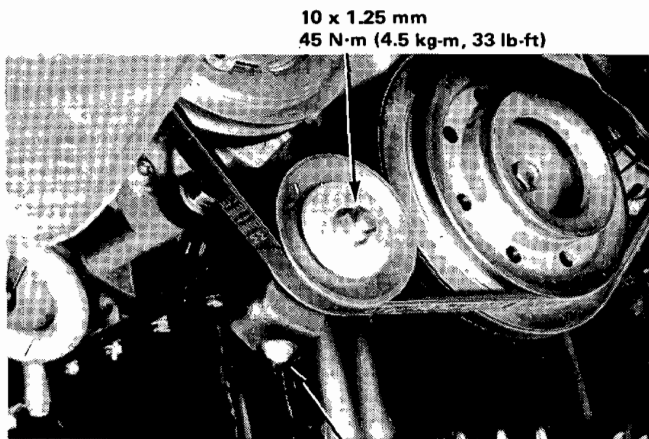


BELT ADJUSTING BOLT
10 N·m (1.0 kg-m, 7 lb-ft)

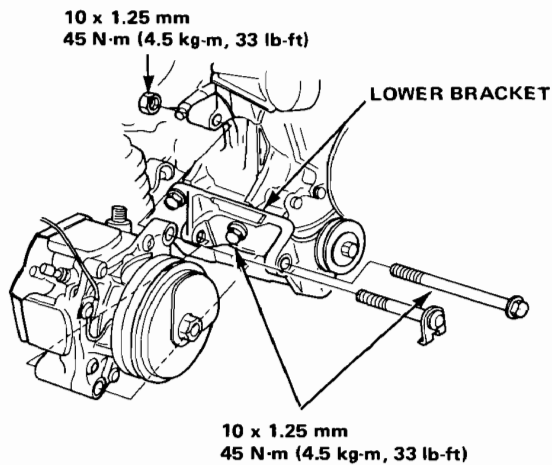

- Remove the lower compressor mounting bracket.

33. Remove the alternator:


- Disconnect the alternator wire harness connectors.
- Remove the belt adjusting bolt and remove the belt.
- Remove the alternator mount bolt and remove the alternator.

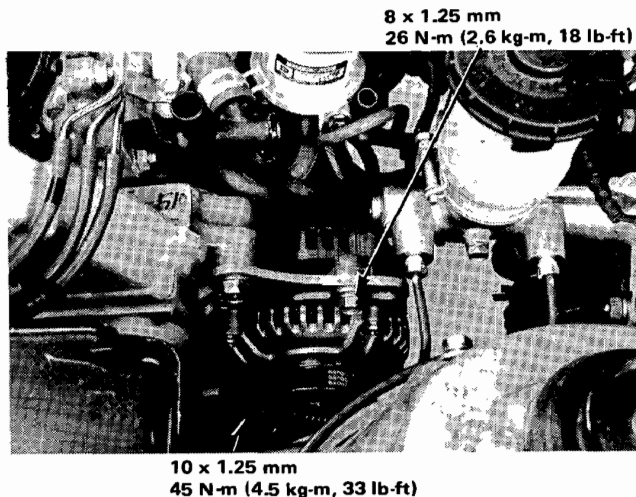

(cont'd)

Engine Removal/Installation (cont'd)

34. Check that the engine/transaxle is completely free of vacuum, fuel, and coolant hoses, and electrical wires.
35. Slowly raise engine approximately 6" and stop. Check once again that all wires and hoses have been disconnected from engine/transaxle.
36. Raise engine all the way and remove the from the car.

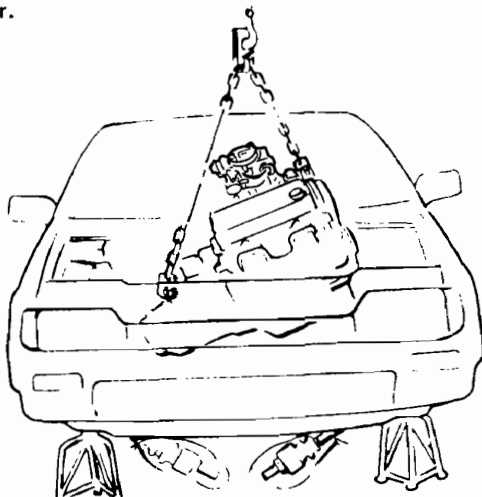

NOTE: Coat all precision finished surfaces with clean engine oil or grease. Tie plastic bags over the drive shaft ends.

37. Install the engine in the reverse order of removal. After the engine is in place:

- Torque engine mount bolts in sequence shown on next page.

CAUTION: Failure to tighten the bolts in the proper sequence can cause excessive noise and vibration, and reduce bushing life; check that the bushings are not twisted or offset.


- Check that the spring clip on the end of each driveshaft clicks into the differential.

CAUTION: Use new spring clips on installation.

- Inspection for fuel leakage. (Coupe)
 - After assembling fuel line parts, turn ON the ignition switch (do not operate the starter) so that the fuel pump is operated for approximately two seconds and the fuel is pressurized. Repeat this operation two or three times and check whether any fuel leakage has occurred in any of the various points in the fuel line.
- Bleed air from the cooling system at the bleed bolt with the heater valve open.
- Adjust the throttle cable and choke cable tension.
- Adjust the alternator belt tension.
- Check the clutch pedal free play.
- Check that the transmission shifts into gear smoothly.
- Connect the air conditioning hoses and wiring.
- Clean battery posts and cable terminals with sandpaper, assemble, then apply grease to prevent corrosion.



ENGINE MOUNT TORQUE SEQUENCE

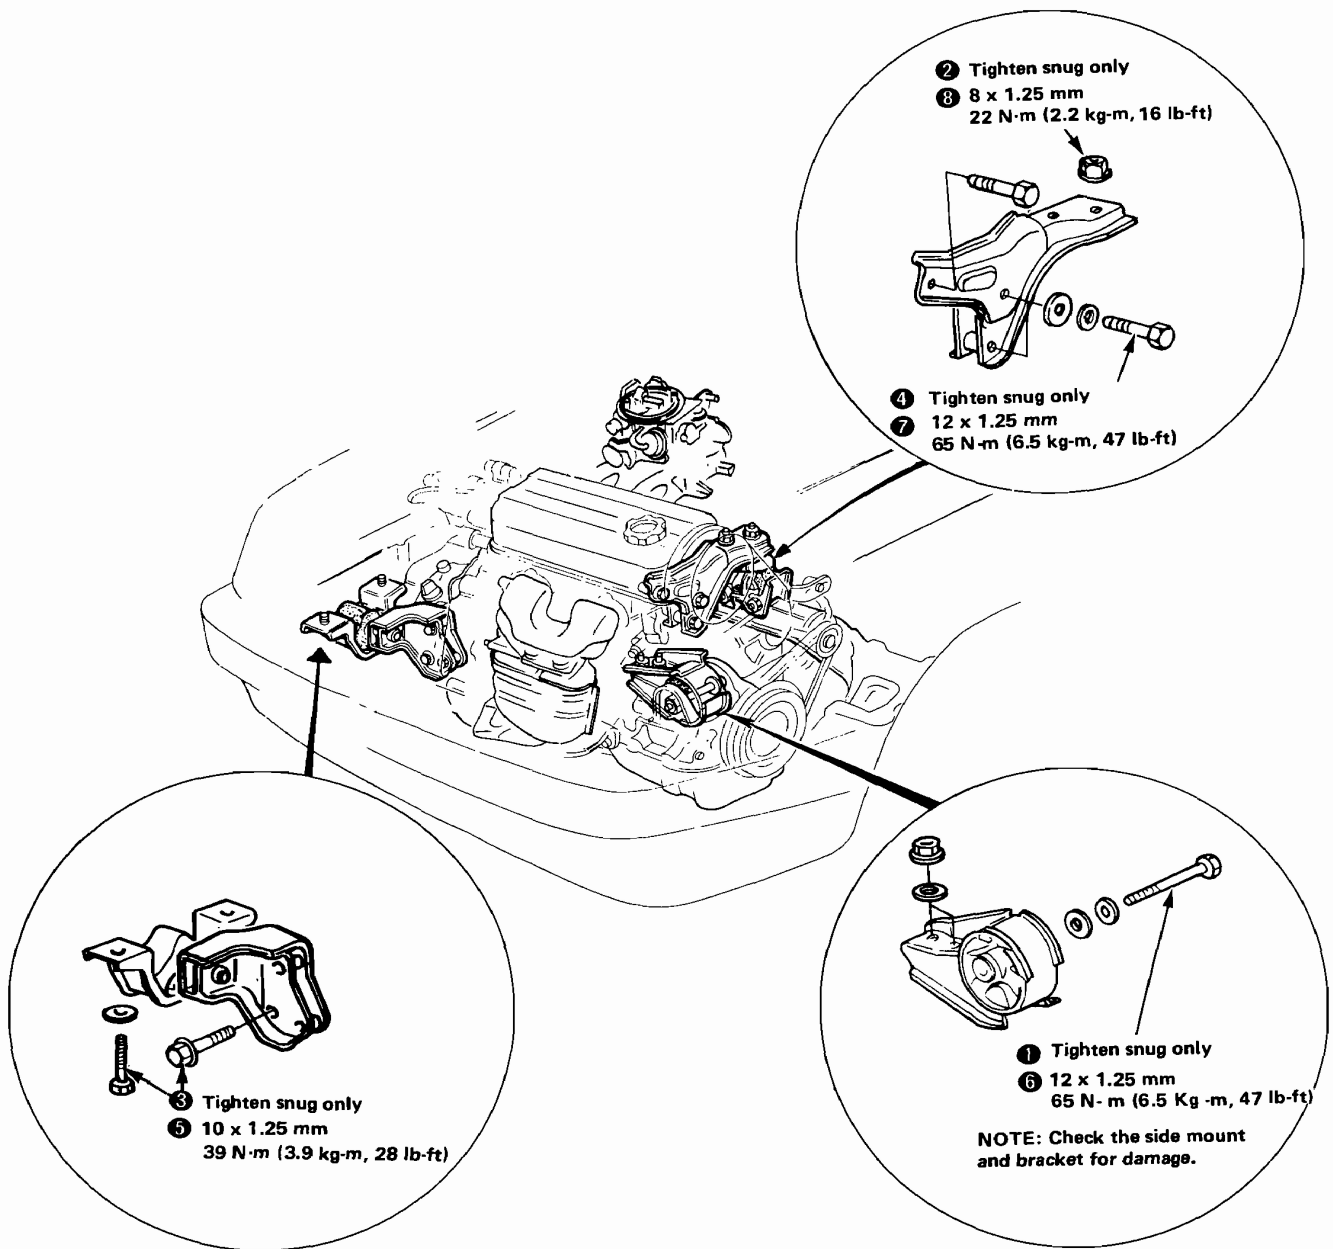


Cylinder Head/Valve Train

Illustrated Index


(1500 shown; 1300 and 1200 similar)

NOTE: Use new O-rings and gaskets whenever reassembling.

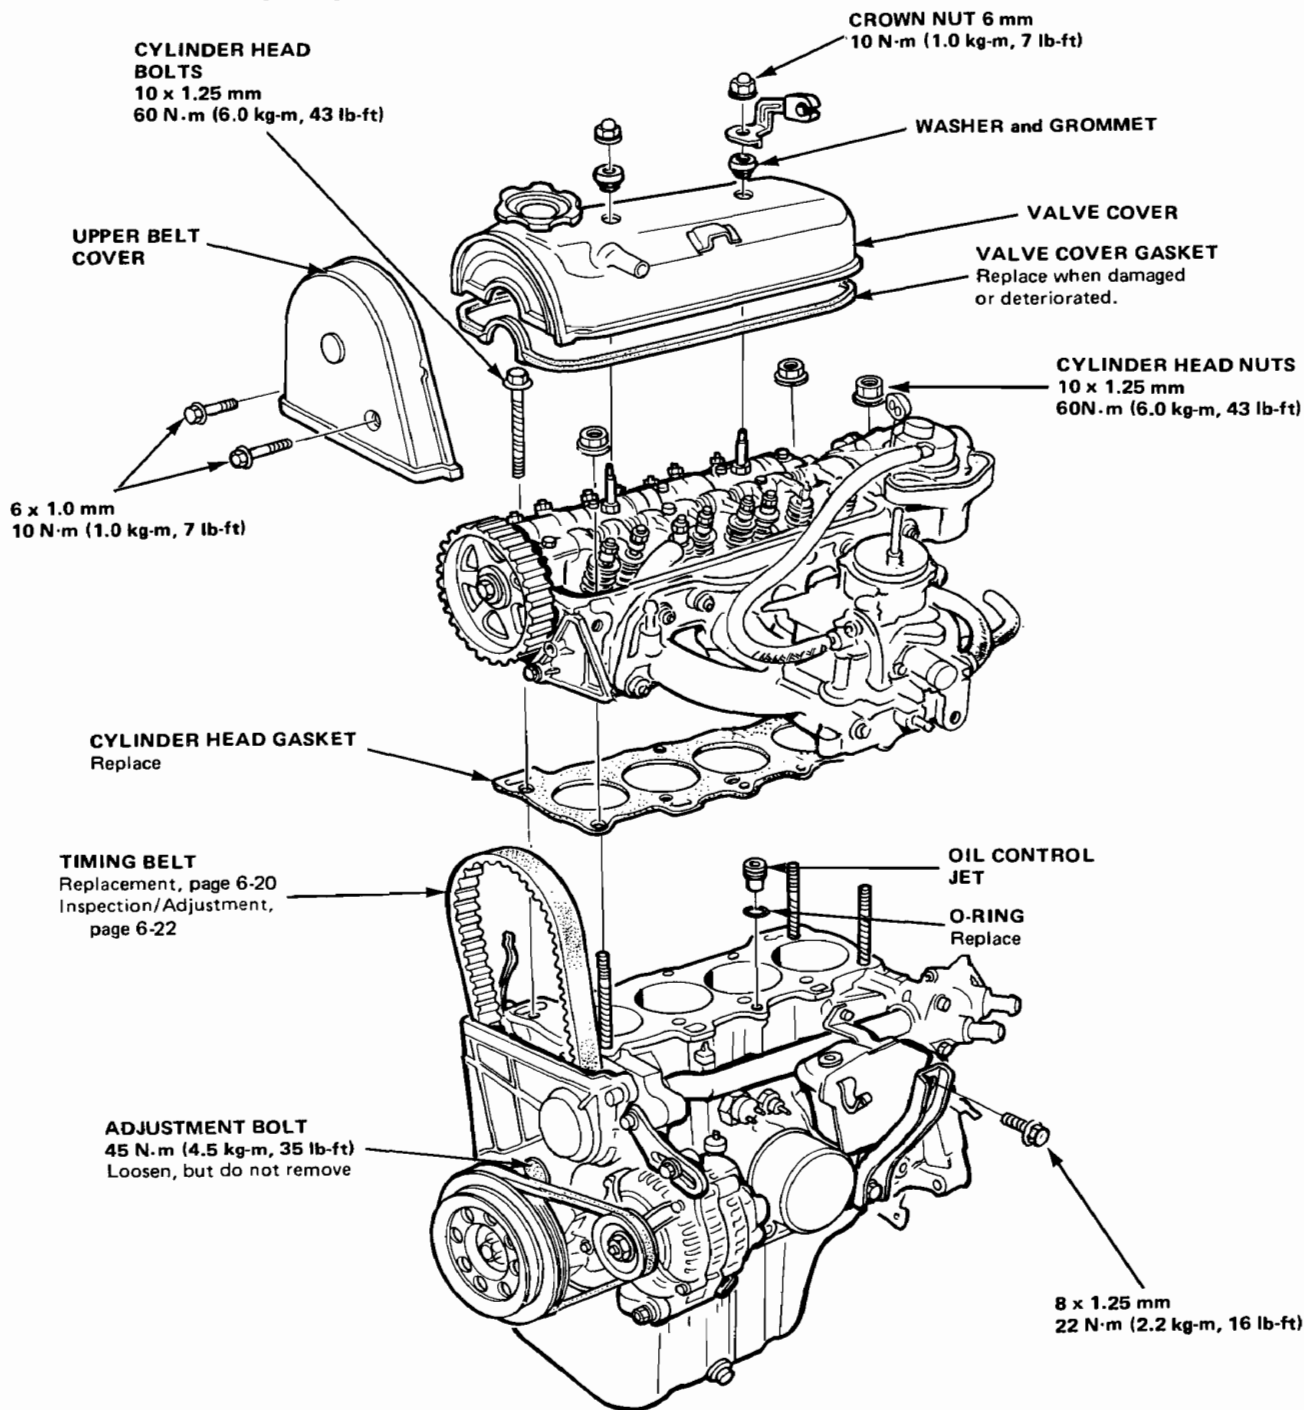



(Coupe)

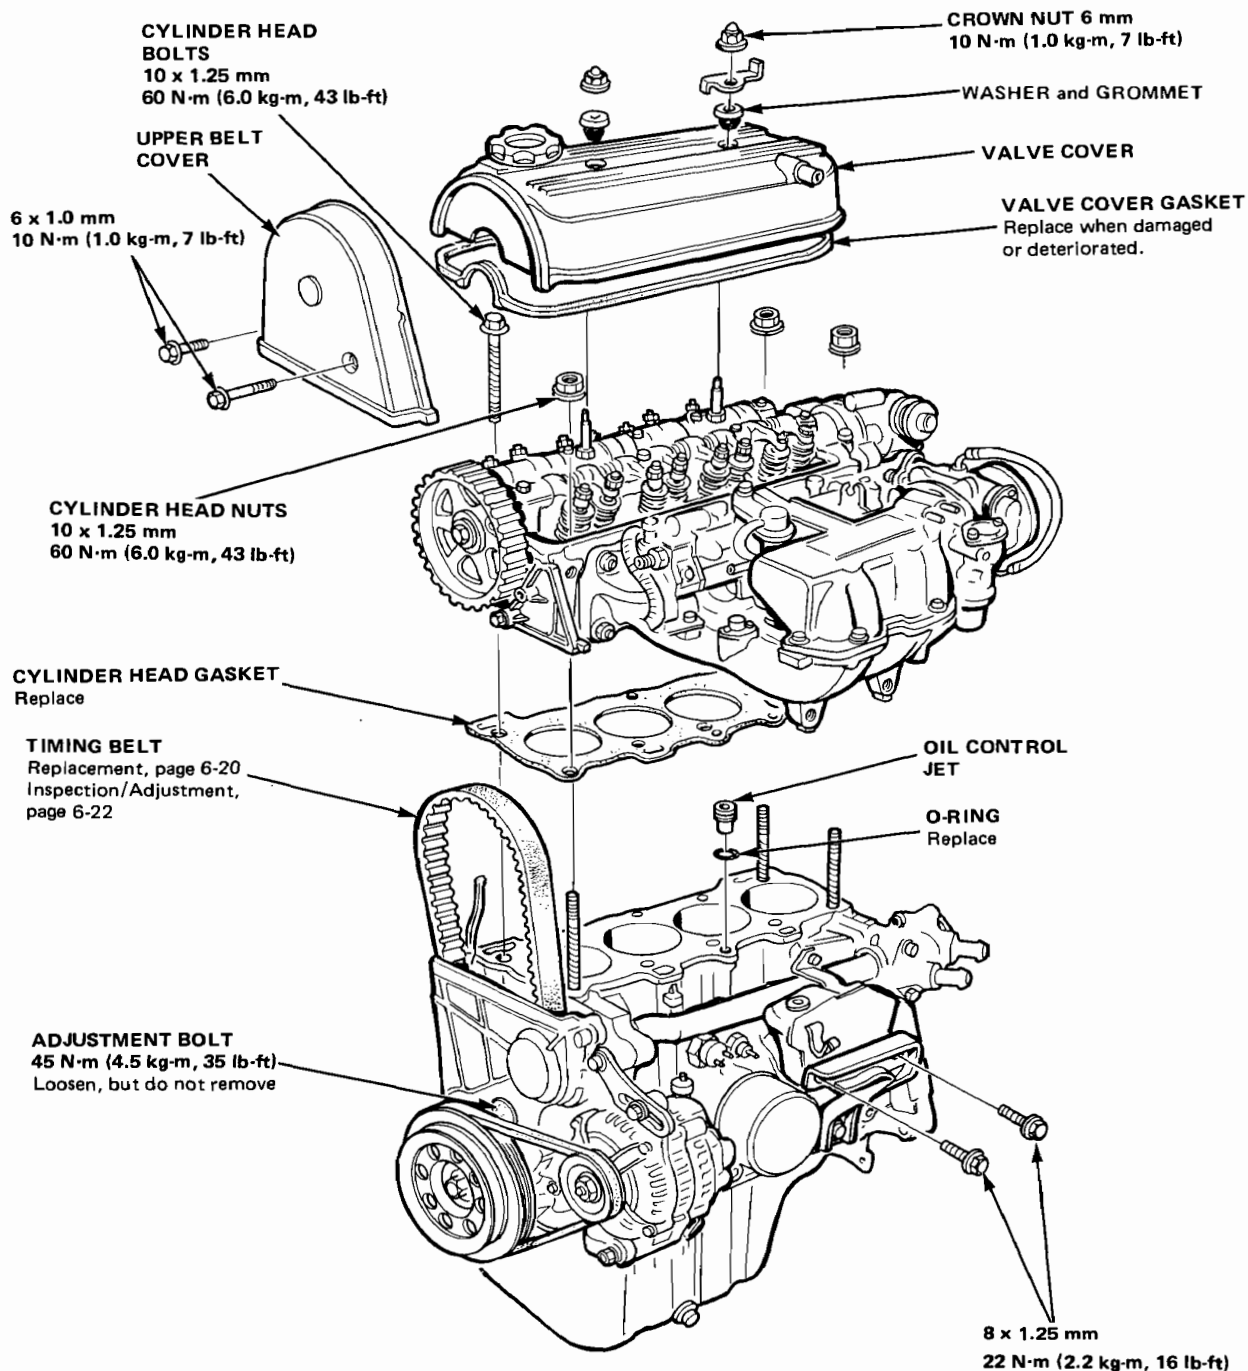

(cont'd)

Illustrated (cont'd)

ROCKER ARM ASSY
Overhaul, page 6-10
Inspection, page 6-11

8 x 1.25 mm
22 N·m (2.2 kg-m, 16 lb-ft)

INTAKE and EXHAUST VALVE ADJUSTING SCREWS

8 x 1.25 mm
22 N.m (2.2 kg-m, 16 lb-ft)

SEAL
Installation,
page 6-17

**8 x 1.25 mm
38 N·m (3.8 kg-m,
27 lb-ft)**

CAMSHAFT
Inspection, page 6-8

DISTRIBUTOR
See page 25-22

8 x 1.25 mm
24 N·m (2.4 kg-m, 18 lb-ft)

O-RING Replace

FUEL PUMP

(Expect Coupe)

8 x 1.25 mm
24 N·m (2.4 kg-m, 18 lb-ft)


**SPECIAL
WASHER**

CAMSHAFT PULLEY
Removal, page 6-7
Installation, page 6-18

CYLINDER HEAD
Removal, page 6-6
Installation, page 6-18



CAUTION: To avoid damaging the cylinder head, wait until the coolant temperature drops below 38°C (100°F) before removing it.

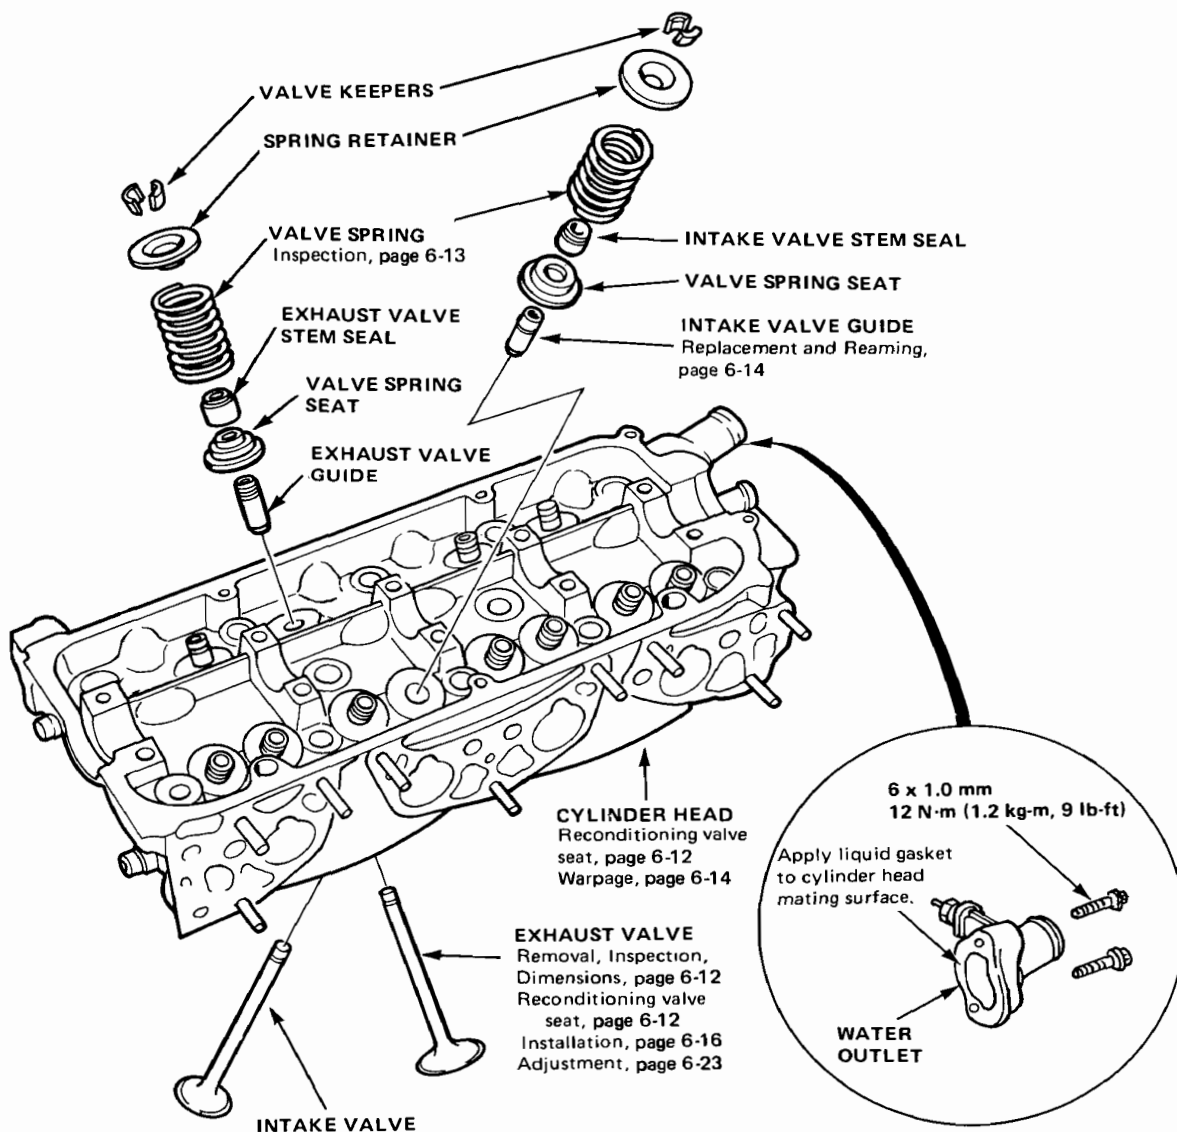

Cylinder Head/Valve Train

Cylinder Head Removal (engine removal not required)

CAUTION: Do not remove the cylinder head until the coolant temperature drops below 38°C (100°F).

NOTE:

- Inspect the timing belt before removing the cylinder head.
- Before removal of the cylinder head, turn the flywheel so that the No. 1 cylinder is at top-dead-center (see page 6-21)
- Mark all emissions hoses before disconnecting them.

1. Disconnect the negative terminal from the battery.
2. Drain the cooling system.
3. Remove the air cleaner cover (Page 5-4).
4. Disconnect the air intake duct and vacuum hose (Page 5-6). (Coupe)
5. Remove the brake booster vacuum tube from the intake manifold.
6. Remove the engine secondary ground cable from the valve cover (Page 5-4).
7. Disconnect the electrical wires from the fuel cut-off solenoid valve, automatic choke and thermosensor.
8. Disconnect the hoses from the charcoal canister.
9. Disconnect the No. 1 control box emission hoses from the tubing manifold (Page 5-5).
10. On cars equipped with air conditioning, disconnect the idle control solenoid hoses.

< Expect Coupe >

11. Disconnect the fuel lines (Page 5-5).

⚠ WARNING Do not smoke while working on fuel system. Keep open flame or spark away from work area.


12. Remove the spark plug caps from the spark plugs, then remove the distributor assembly (Page 5-5).
 13. Disconnect the throttle cable and choke cable at the carburetor (Page 5-5).
- cont'd : 23

< Coupe >


14. Relieve fuel pressure (Page 5-6).

⚠ WARNING Do not smoke while working on fuel system, keep open flame or spark away from work area. Drain fuel only into an approved container.

SERVICE BOLT
12 N·m (1.2 kg-m, 9 lb-ft)

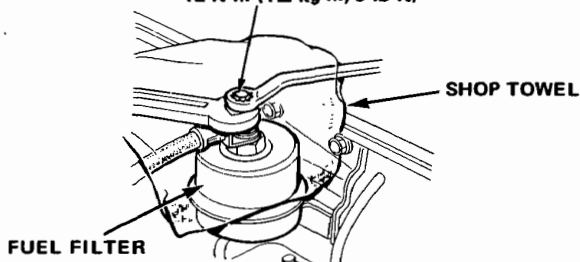


15. Disconnect the throttle cable at the throttle body (Page 5-6).
16. Disconnect the sub engine harness connectors (Page 5-7).
17. Disconnect the fuel hose and fuel return hose (Page 5-6).

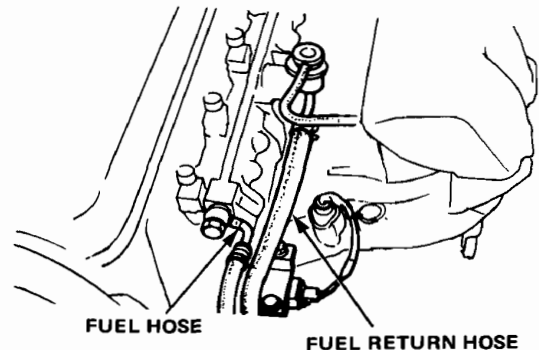


18. Disconnect the TA sensor connector.
19. Remove the injector holder from the intake manifold.
20. Disconnect the TW sensor connector from the cylinder head.
21. Disconnect the throttle sensor connector from the throttle body.
22. Remove the spark plug caps from the spark plugs, then remove the distributor assembly (Page 5-7).
23. Disconnect the upper radiator hose, heater inlet hose, and bypass inlet hose from the cylinder head (page 5-7).
24. Remove the hose between the thermostat housing and the intake manifold.
25. Remove the bolts attaching the exhaust manifold and bracket, then remove the manifold.
26. Remove the bolts attaching the intake manifold and bracket.
27. Disconnect the hose from the intake manifold to the breather chamber.
28. Remove the valve cover and the timing belt upper cover.



29. Loosen the tensioner adjustment bolt, then remove the timing belt.

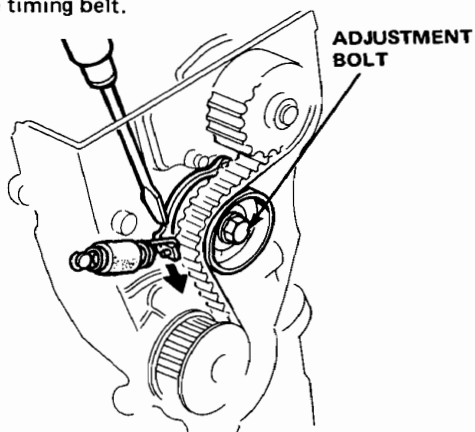

CAUTION: Do not crimp or bend timing belt more than 90° or less than 25 mm (1 in.) in diameter.

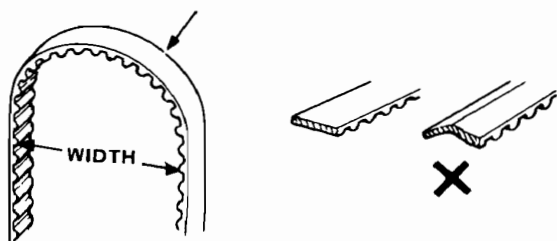


30. Remove the cylinder head bolts, then remove the cylinder head.

CAUTION: To prevent warpage, unscrew bolts 1/3 turn each time and repeat sequence until loose.

31. Remove the exhaust manifold from the cylinder head.


Camshaft Pulley Removal

1. To ease reassembly, turn the pulley until the "UP" mark faces up, and the front timing mark is aligned with the valve cover surface.

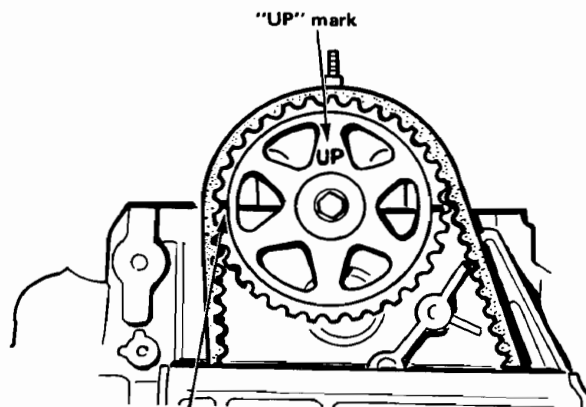

Front timing mark on pulley aligned with the valve cover surface.

2. Remove the pulley retaining bolt and washer, then remove the pulley.

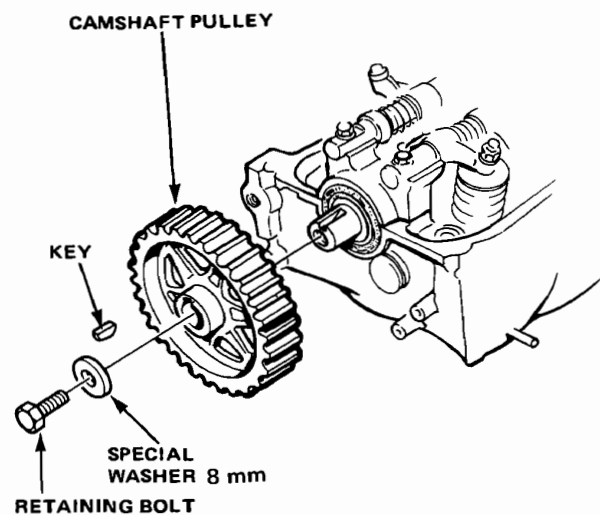

NOTE: Before removing rocker arm assembly, check camshaft end play.

Cylinder Head/Valve Train

Camshaft Inspection


1. Seat camshaft by prying it toward distributor end of head with screwdriver.
2. Zero dial indicator against end of distributor drive, then pry camshaft back toward it, and read end play.

Camshaft End Play:

Standard (New): 0.05–0.15 mm (0.002–0.006 in.)

Service Limit: 0.5 mm (0.02 in.)

Unscrew the adjusting screws

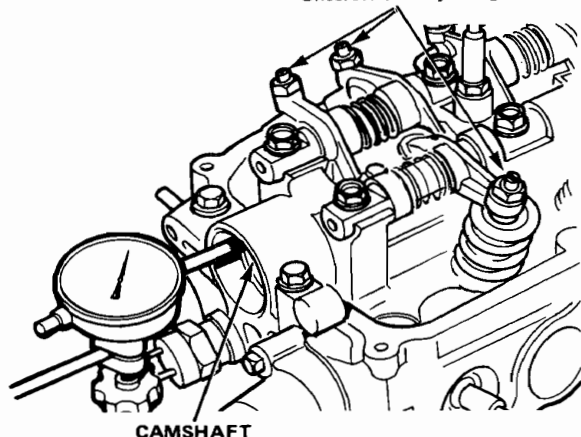

3. Remove the rocker arm bolts, then remove the rocker assembly from the cylinder head.

NOTE: Unscrew the rocker arm bolts, two turns at a time, in a criss-cross pattern, to prevent damaging valves or rocker assembly.

- Lift camshaft out of cylinder head, wipe clean, then inspect lift ramps. Replace camshaft if lobes are pitted, scored, or excessively worn.
- Clean the camshaft bearing surfaces in the cylinder head, then set camshaft back in place.
- Insert plastigage strip across each journal.

NOTE: Do not rotate camshaft during inspection.


- Install the rocker arm assembly and torque bolts to values and in sequence shown on page 6-17, then remove the bolts and the rocker arm assembly.

4. Measure widest portion of plastigage on each journal.

Camshaft Bearing Radial Clearance:

Standard (New): 0.050–0.098 mm
(0.002–0.004 in.)

Service Limit: 0.15 mm (0.006 in.)

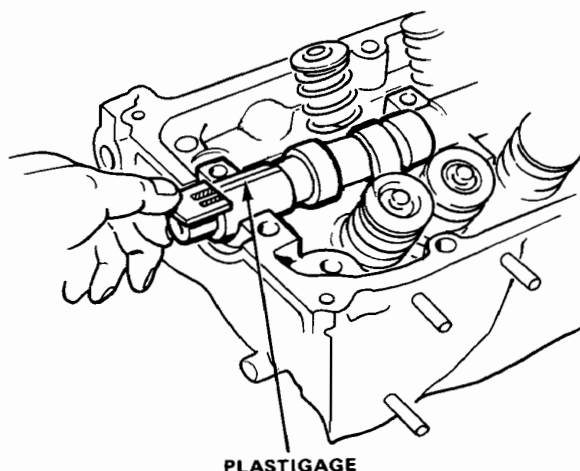

5. If camshaft bearing radial clearance is out of tolerance:


- And camshaft has already been replaced, you must replace the cylinder head.
- If camshaft has not been replaced, first check total runout with the camshaft supported on V-blocks.

Camshaft Total Runout:

Standard (New): 0.03 mm (0.001 in.)

Service Limit: 0.06 mm (0.002 in.)

Rotate camshaft while measuring

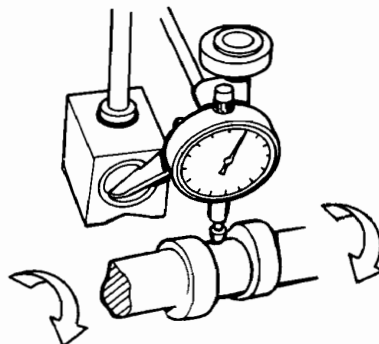



6. If the total runout is within tolerance, replace the cylinder head.
7. If the total runout is not within tolerance, replace the camshaft and recheck the bearing clearance in the cylinder head.
 - If the bearing clearance is still not within tolerance, replace the cylinder head.

[Coupe (PGM-FI)]

Intake Standard: 40.865 mm (1.6089 in.)

Exhaust Standard: 40.884 mm (1.6096 in.)

[1500]

Intake Standard: 40.370 mm (1.5894 in.)

Exhaust Standard: 40.391 mm (1.5902 in.)

[1300]


Intake Standard: 40.056 mm (1.5770 in.)

Exhaust Standard: 40.078 mm (1.5779 in.)

[1200]

Intake Standard: 39.095 mm (1.5392 in.)


Exhaust Standard: 39.120 mm (1.5402 in.)

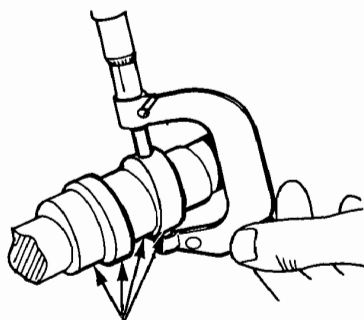

Inspect for wear

Cylinder Head/Valve Train

Rocker Arm Overhaul

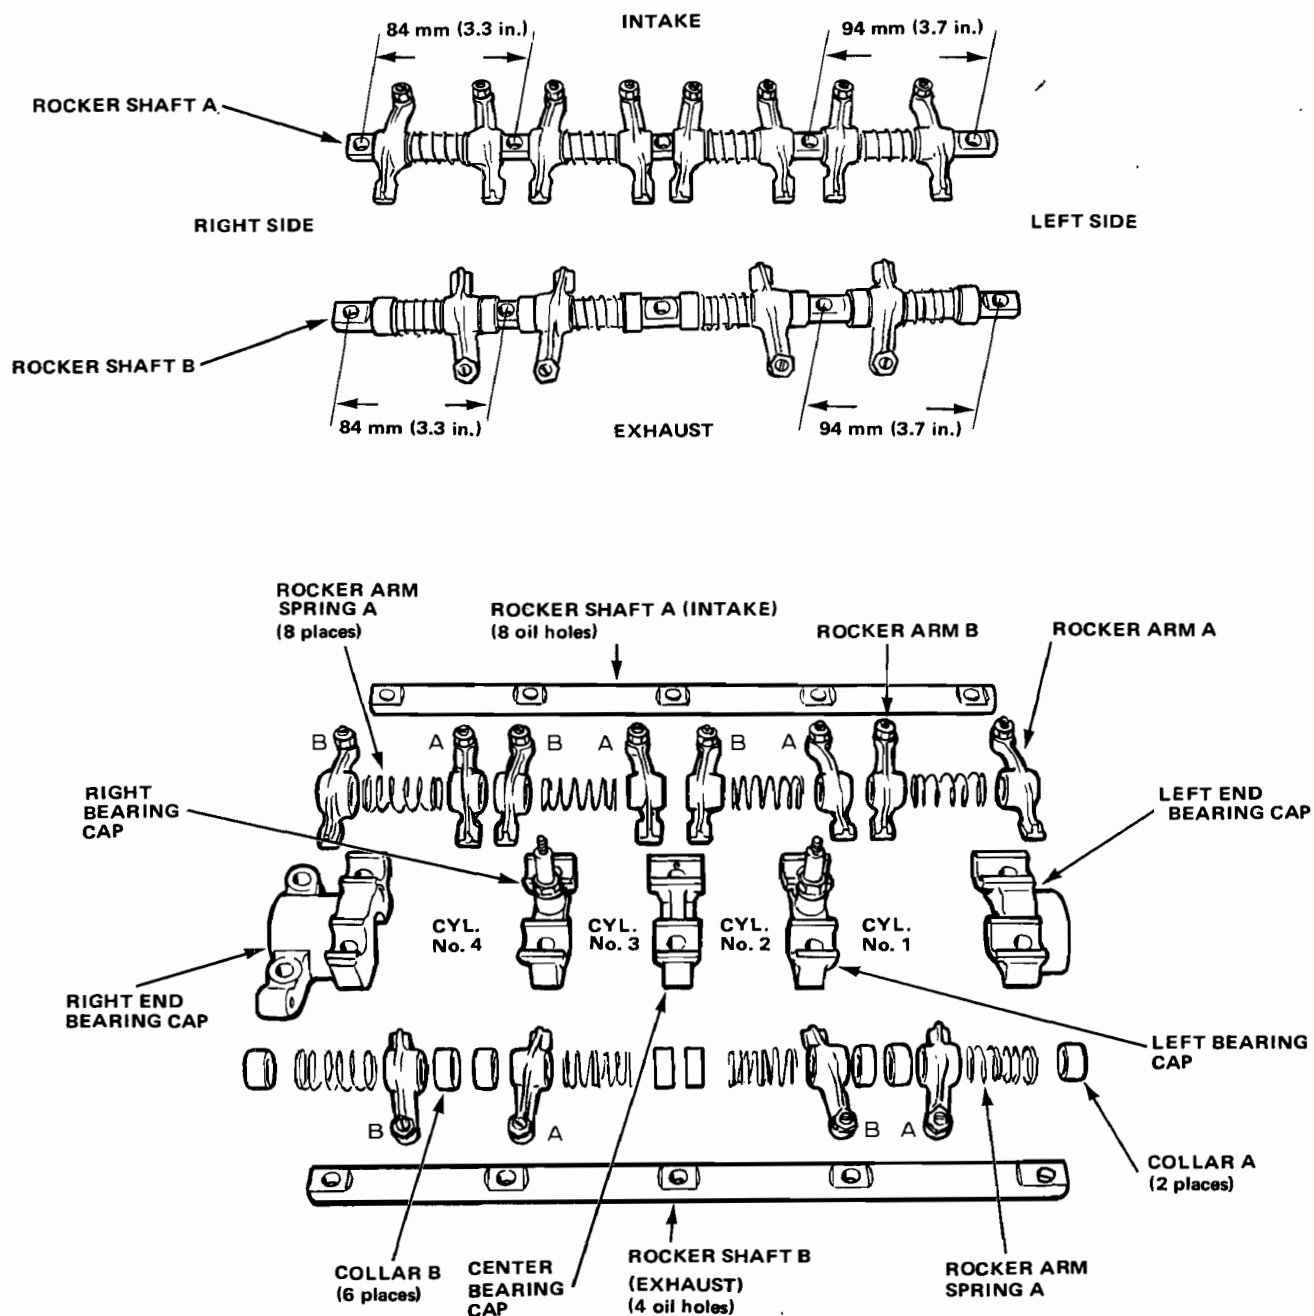

NOTE:


- Identify parts as they are removed to ensure reinstallation in original locations.
- Inspect rocker shaft and rocker arms (page 6-11).




Rocker Arm Clearance

Measure both the intake/exhaust rocker shaft and auxiliary rocker shaft.

1. Measure diameter of shaft at first rocker location.

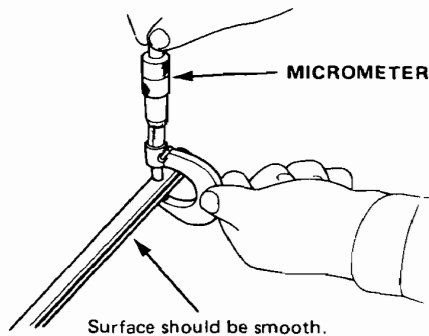


2. Zero gauge to shaft diameter.

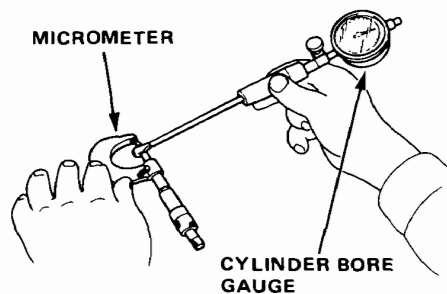

3. Measure inside diameter of rocker arm and check for out-of-round condition.

Rocker Arm Radial Clearance:
Service Limit: 0.08 mm (0.003 in.)

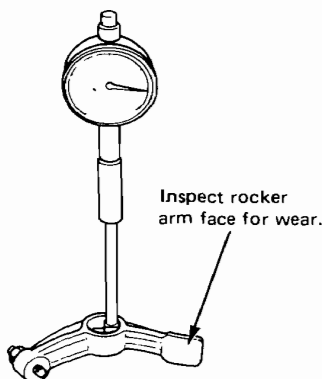


Repeat for all rockers. If over limit, replace rocker shaft and all over-tolerance rocker arms.

Intake and Exhaust Valve Replacement

NOTE: Identify valves and valve springs as they are removed so that each item can be reinstalled in its original position.

1. Tap each valve stem with a plastic mallet to loosen valve keepers before installing spring compressor.
2. Install spring compressor. Compress spring and remove valve keepers.

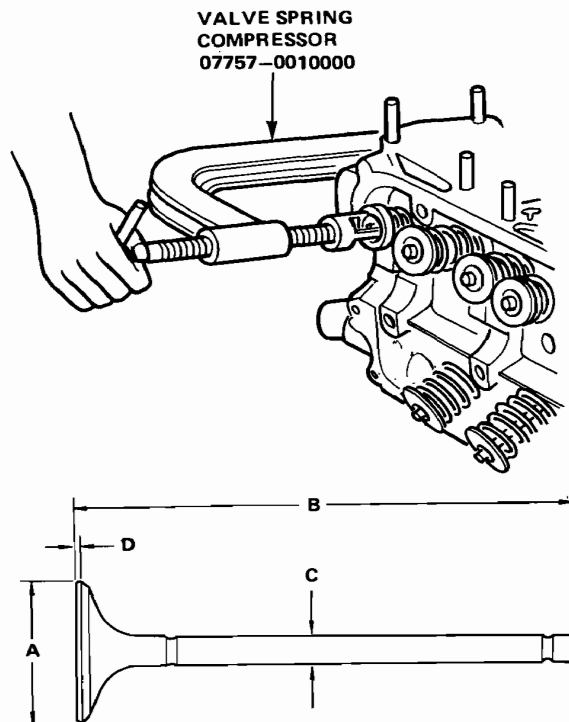

Intake Valve Dimensions

- A Standard (New):** 26.9–27.1 mm (1.059–1.067 in.)
- B Standard (New):** 112.56–112.86 mm (4.431–4.443 in.)
- C Standard (New):** 6.58–6.59 mm (0.2591–0.2594 in.)
- C Service Limit:** 6.55 mm (0.258 in.)
- D Standard (New):** 1.05–1.35 mm (0.041–0.053 in.)

Exhaust Valve Dimensions

- A Standard (New):** 31.9–32.1 mm (1.138–1.146 in.)
- B Standard (New):** 113.66–113.96 mm (4.475–4.487 in.)
- C Standard (New):** 6.55–6.56 mm (0.2579–0.2583 in.)
- C Service Limit:** 6.52 mm (0.257 in.)
- D Standard (New):** 1.65–1.95 mm (0.065–0.077 in.)


Cylinder Head/Valve Train

Valve Seat Reconditioning

1. Renew the valve seats in cylinder head using a valve seat cutter.

NOTE: If guides are worn (page 6-14), replace them (page 6-15) before cutting valve seats.

VALVE SEAT CUTTER

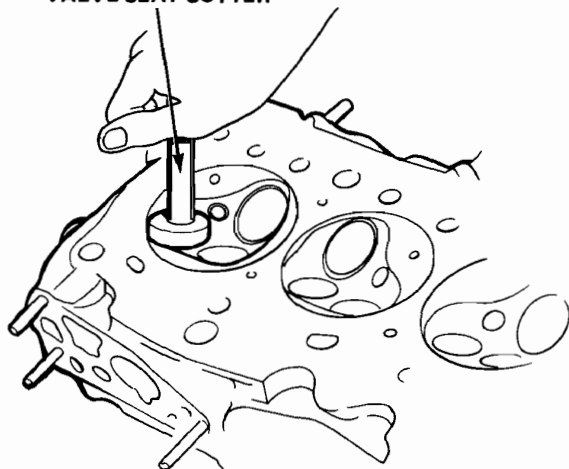


CUTTER	INTAKE	EXHAUST
32°	07780-0012900	07780-0012300
60°	07780-0014000	07780-0014100
45°	07780-0010800	07780-0010400
HOLDER	07781-0010201 and 07781-0010301	

2. Bevel the upper edge of seat with the 32° cutter until required seat width is obtained.
3. Bevel the inner edge of seat slightly with the 60° cutter.
4. Carefully center 45° cutter. Remove as little material as possible. (See measurement after reconditioning shown below.)


Valve Seat Width:

Standard: 1.25–1.55 mm (0.049–0.061 in.)

Service Limit: 2.0 mm (0.08 in.)

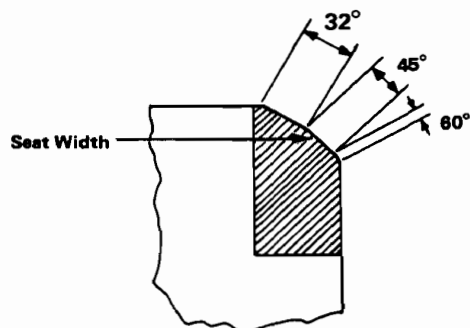

5. After resurfacing seat, inspect for even valve seating: Apply Prussian blue compound to valve face, and insert valve in original location in head, then lift it and snap it closed against seat several times.

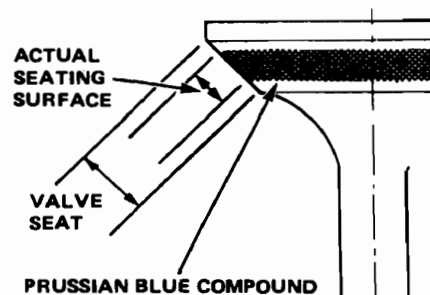

6. The actual valve seating surface, as shown by the blue compound, should be centered on the seat.
 - If it is too high (closer to the valve stem), you must make a second cut with the 60° cutter to move it down, then one more cut with the 45° cutter to restore seat width.
 - If it is too low (closer to valve edge), you must make a second cut with the 32° cutter to move it up, then one more cut with the 45° cutter to restore seat width.

NOTE: The final cut should always be made with the 45° cutter.

7. Insert intake and exhaust valves in head and measure valve stem installed height.

Intake Valve Stem Installed Height:


Standard (New): 48.16 mm (1.896 in.)

Service Limit: 48.95 mm (1.925 in.)

Exhaust Valve Stem Installed Height:

Standard (New): 48.16 mm (1.896 in.)

Service Limit: 48.95 mm (1.925 in.)

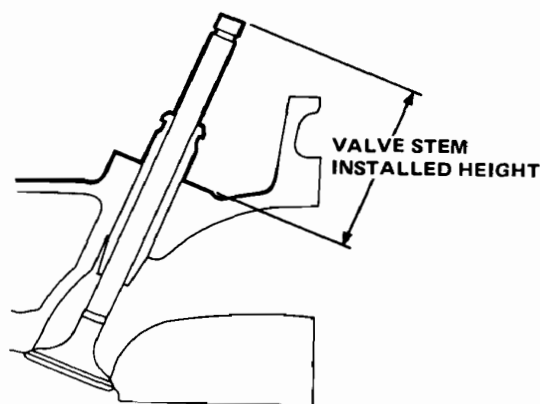


8. If valve stem installed height is over service limit, replace valve and recheck. If still over service limit, replace cylinder head; the valve seat in the head is too deep.



Spring Length and Force Check

1. Compress spring to specified length.
2. Note reading of spring force.

NOTE: Inspect springs for obvious distortion.

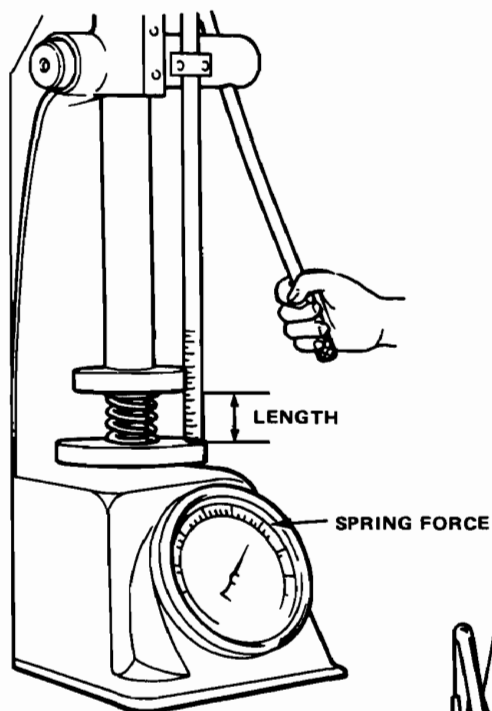


INTAKE and EXHAUST SPRING

Free Length:	47.6 mm (1.89 in.)
Installed Length:	43.0 mm (1.69 in.)
Spring Force:	18.0–21.0 kg (39.7–47.3 lb)
Compressed Length:	34.0 mm (1.34 in.)
Spring Force:	67.6–75.6 kg (149.1–166.7 lb)


Cylinder Head/Valve Train

Valve Guide-to-Valve Stem Clearance

1. Measure the I.D. of the intake and exhaust valve guides with an inside micrometer or ball gauge.

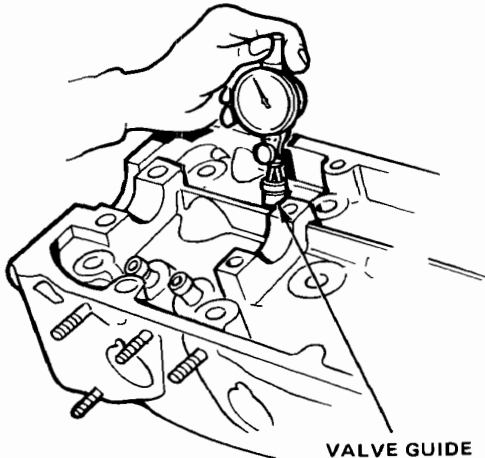

2. Using a micrometer, measure the diameter of valve stem.

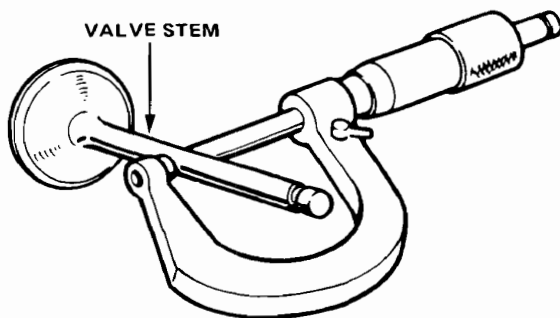

3. Now subtract each stem diameter from its guide I.D.
4. The difference between the largest measurement in the guide and the smallest measurement on the valve stem should not exceed the service limit.

Intake Valve Guide I.D.

Standard (New): 6.61–6.63 mm (0.260–0.261 in.)
Service Limit: 6.65 mm (0.262 in.)

Exhaust Valve Guide I.D.

Standard (New): 6.61–6.63 mm (0.260–0.261 in.)
Service Limit: 6.65 mm (0.262 in.)

Intake Valve Stem-to-Guide Clearance

Standard (New): 0.02–0.05 mm (0.001–0.002 in.)
Service Limit: 0.08 mm (0.003 in.)

Exhaust Valve Stem-to-Guide Clearance


Standard (New): 0.05–0.08 mm (0.002–0.003 in.)
Service Limit: 0.11 mm (0.004 in.)

Cylinder Head Warpage

NOTE: If camshaft bearing clearances are not within specification, the head cannot be resurfaced (page 6-8).

If camshaft bearing radial clearances are within specifications, check head for warpage.


- If warpage is less than 0.05 mm (0.002 in.) cylinder head resurfacing is not required.
- If warpage is between 0.05 mm (0.002 in.) and 0.2 mm (0.008 in.), resurface cylinder head.
- Maximum resurface limit is 0.2 mm (0.008 in.) based on height of 90.0 mm (3.54 in.)

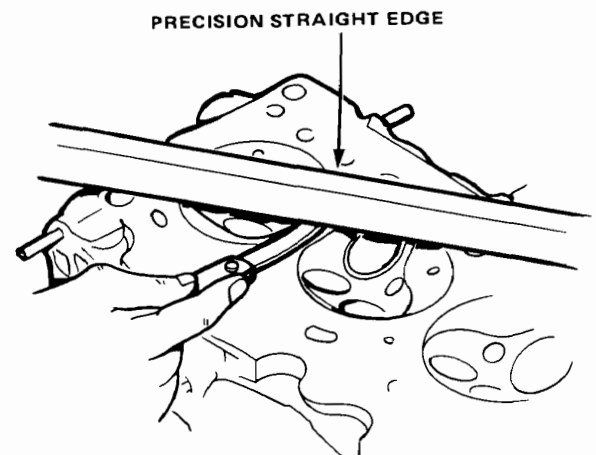

Cylinder Head Height:

New: 90.0 mm (3.54 in.)
Service Limit: 89.8 mm (3.53 in.)

Measure along edges, and 3 ways across center.

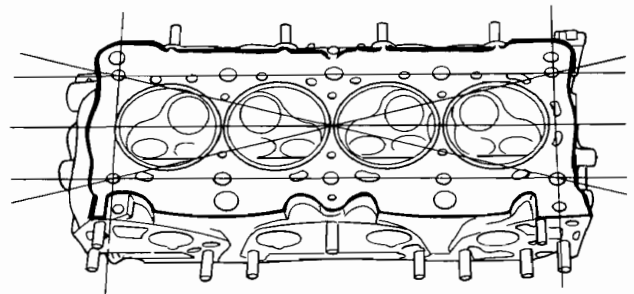




Valve Guide Replacement

NOTE:

- For best results, heat cylinder head to 150°C (300°F) before removing or installing guides.
- It may be necessary to use an air hammer to remove some valve guides.

CAUTION: To avoid burns, use heavy gloves when handling heated cylinder head.


1. Drive the valve guide out from the bottom of the cylinder head.

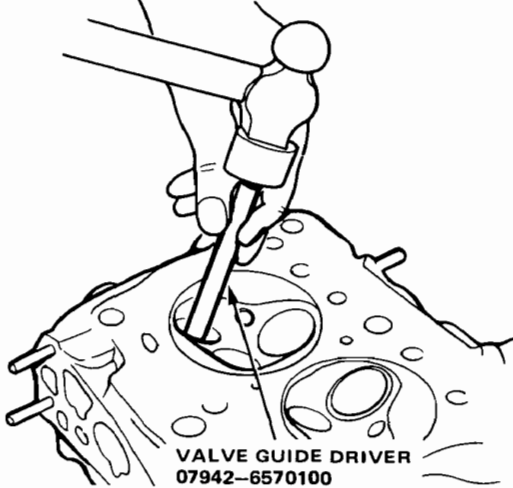


2. Drive in a new valve guide to the specified depth.

Intake: 17.5 mm (0.69 in.)

Exhaust: 16.0 mm (0.63 in.)



NOTE: If using adjustable valve guide driver 07743-0020000, adjust the collar depth to correspond with the measurements given above.

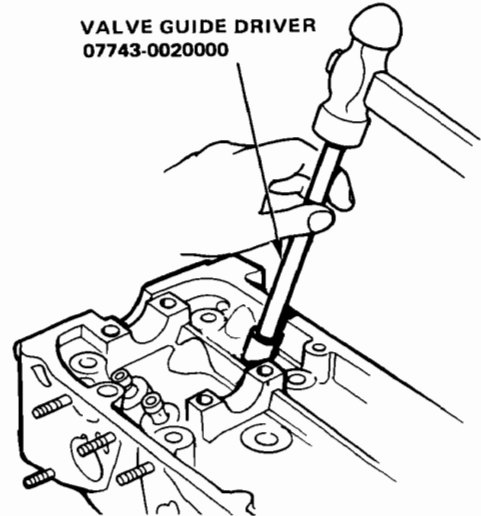


Valve Guide Reaming

NOTE: For new valve guides only.

1. Coat reamer and valve guide with cutting oil.
2. Rotate reamer clockwise the full length of the valve guide bore.
3. Continue to rotate reamer clockwise while removing.
4. Thoroughly wash the guide in detergent and water to remove any cutting residue.
5. Check clearance with valve (page 6-14).

REAMER HANDLE


Turn reamer in clockwise direction only.

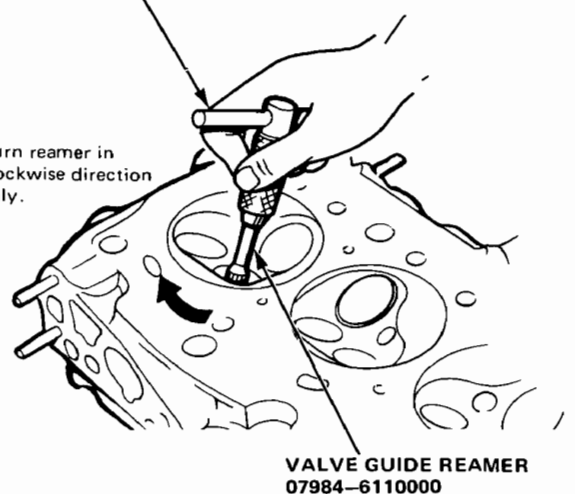

Cylinder Head/Valve Train

Valve Spring Installation Sequence


NOTE: Exhaust and intake valve guide seals are NOT interchangeable.

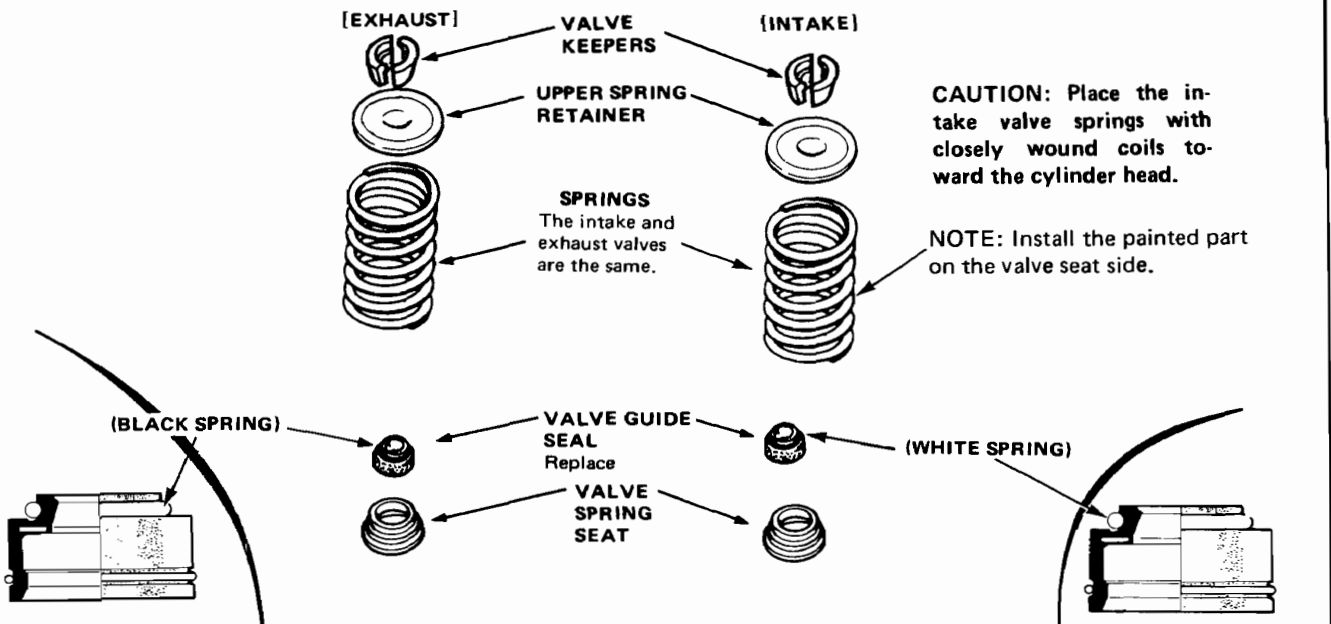

Intake and Exhaust Valve Installation

When installing valves in cylinder head, coat valve stems with oil before inserting into valve guides, and make sure valves move up and down smoothly.

When valves and springs are in place, lightly tap the end of each valve stem two or three times to ensure proper seating of valve and valve keepers (use plastic mallet).

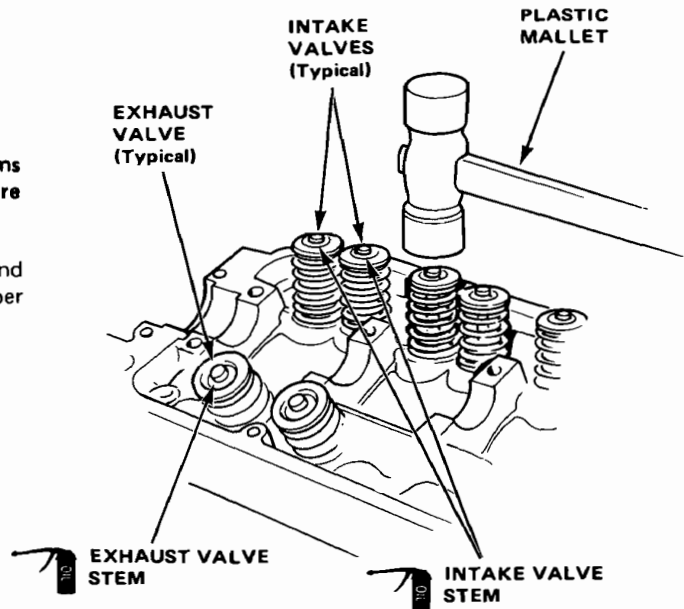



Cam/Rocker Arm and Camshaft Seal/Pulley Installation

CAUTION:


- Make sure that all rockers are in alignment with valves when torquing rocker assembly bolts.
- Valve locknuts should be loosened and adjusting screws backed off before installation.

1. After wiping down cam and journals in cylinder head, lubricate both surfaces and install camshaft.
2. Turn camshaft until its keyway is facing up. (No. 1 cylinder TDC).
3. Install the camshaft seal with the open side (spring) facing in.




Lubricate cam lobes after reassembly.

4. Apply liquid gasket to the head mating surfaces of the Nos. 1 and 5 camshaft holders, and place them on top of the cylinder along with the Nos. 2, 3 and 4.

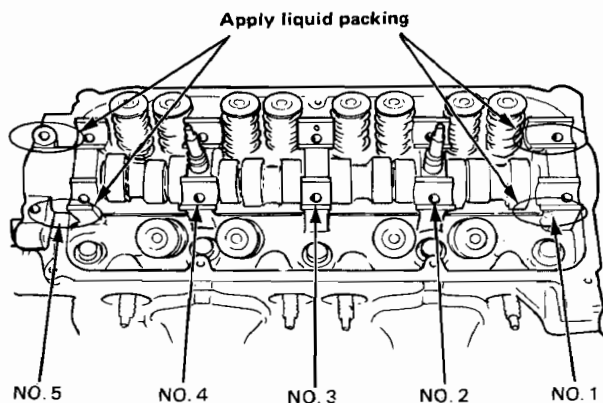


5. Temporarily assemble the rocker arms. To ease assembly, use rubber bands to hold the rocker arms in position.

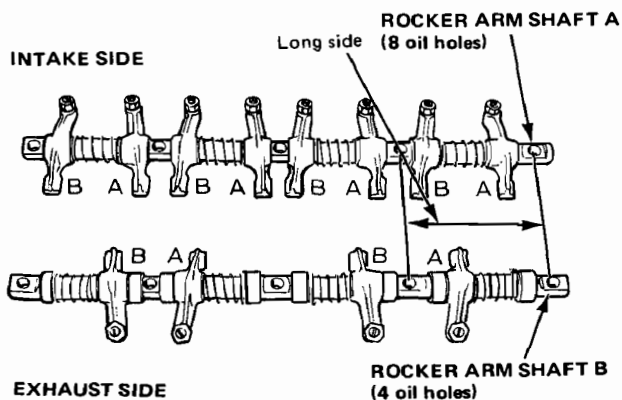


6. Set rocker arm assembly in place, loosely install the bolts, then remove the rubber bands.

NOTE: Do not allow the collars to ride over the camshaft holders.

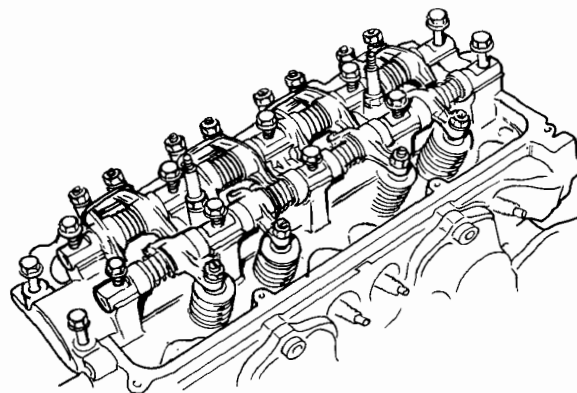

7. Press in the cam shaft oil seal securely with the special tool.

CAMSHAFT SEAL DRIVER
07947-SB00100

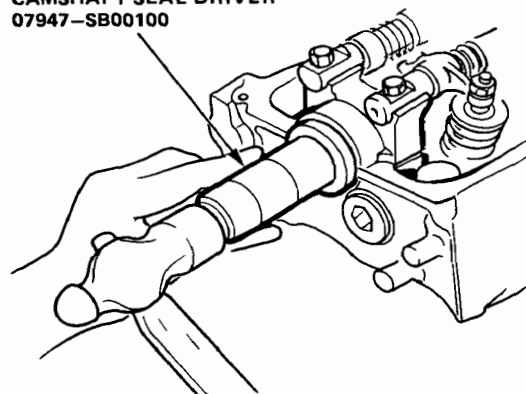


(cont'd)

Cylinder Head/Valve Train

Cam/Rocker Arm and Camshaft Seal/Pulley Installation (cont'd)


8. Tighten each bolt two turns at a time in the sequence shown below to insure that the rockers do not bind on the valves.

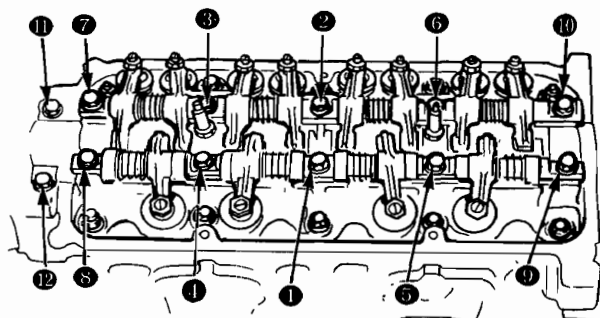

8 x 1.25 mm
22 N·m (2.2 kg-m, 16 lb-ft)

9. Install key into groove in camshaft.

10. Push camshaft pulley onto camshaft, then tighten retaining bolt to torque shown.

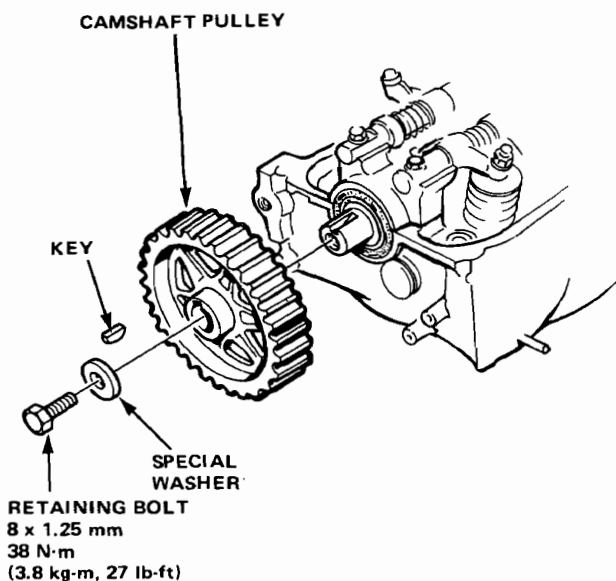


Cylinder Head Installation


1. Install the cylinder head in reverse order of removal:

- Always use a new head gasket.
 - Cylinder head and engine block surface must be clean.
 - "UP" mark on timing belt pulley should be at the top.
2. Install the intake manifold and tighten the nuts in a criss-cross pattern in 2 or 3 steps, beginning with the inner nuts.


(Expect Coupe)

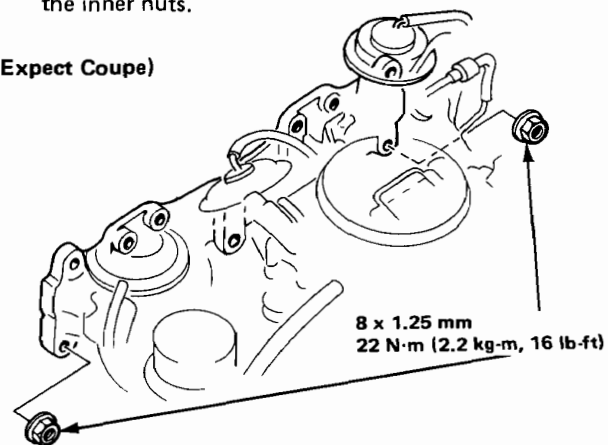

(Coupe)


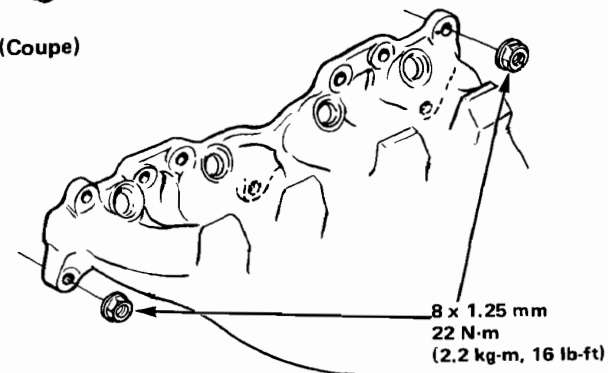


NOTE: Cylinder head dowel pins and oil control jet must be aligned.

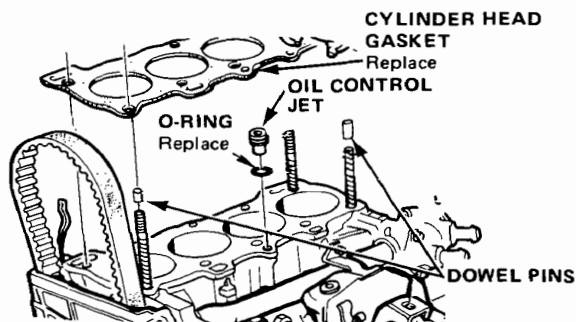




3. Install the exhaust manifold and bracket.

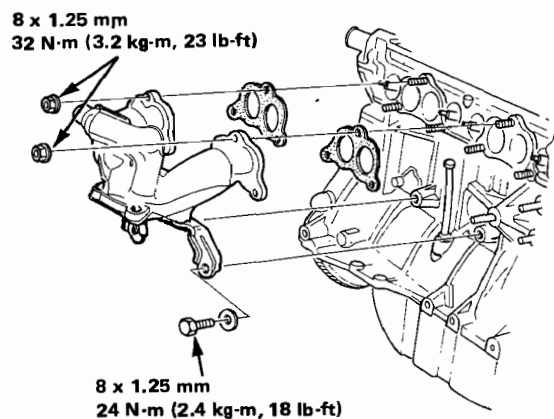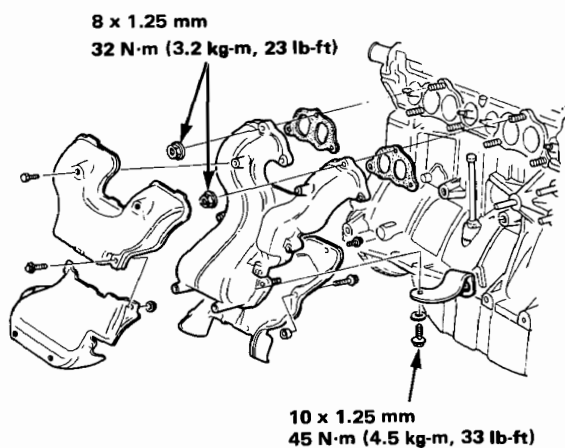

4. Adjust the valve timing (page 6-21).
5. Tighten cylinder head bolts and nuts in two steps. In the first step tighten all bolts and nuts, in sequence, to about 30 N·m (3.0 kg-m, 22 lb-ft); in the final step tighten, in same sequence, to 60 N·m (60 kg-m, 43 lb-ft).

CYLINDER HEAD TORQUE SEQUENCE

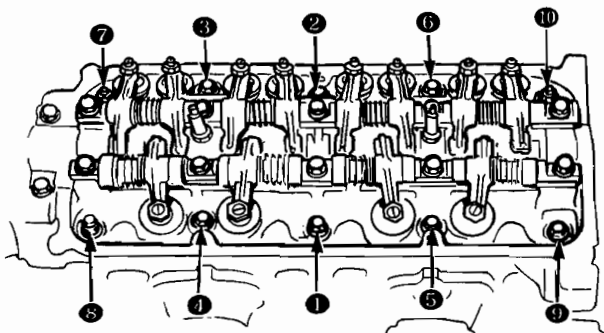


6. After installation, check that all tubes hoses and connectors are installed correctly.

Cylinder Head/Valve Train

Timing Belt Replacement

NOTE:


- Refer to next page for positioning crank and pulley before installing belt.
- Mark direction of rotation before removing.

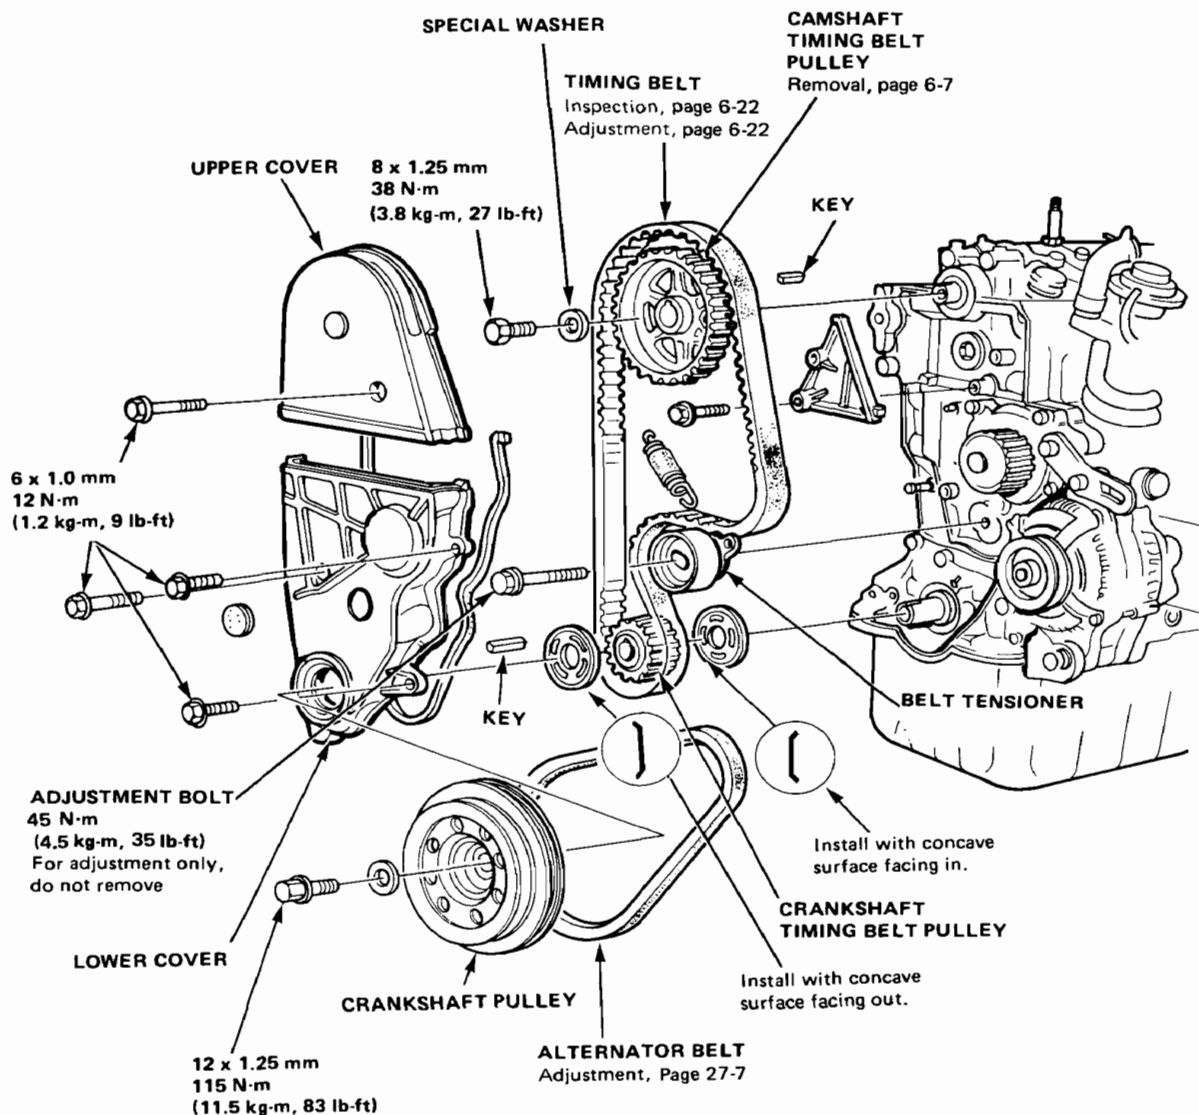



Positioning Crankshaft Before Installing Timing Belt

NOTE: Install the timing belt with the No. 1 piston at TDC (Top Dead Center) of the compression stroke.

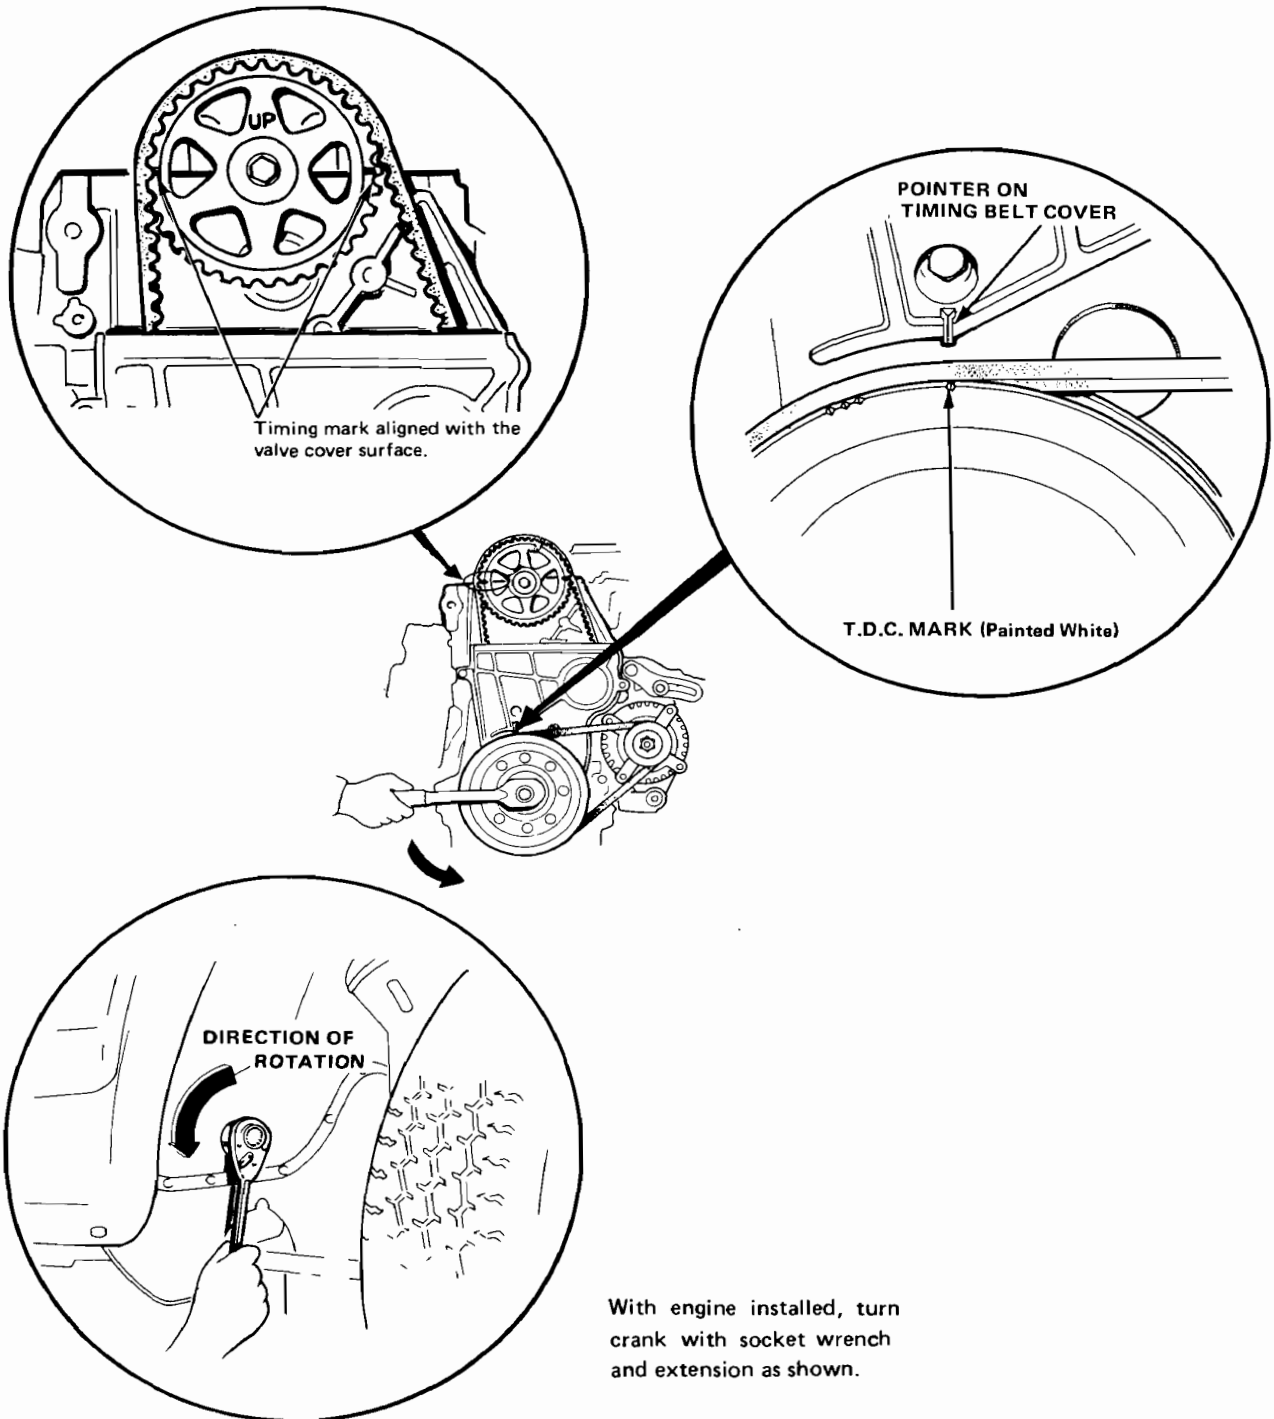


Cylinder Head/Valve Train

Timing Belt Inspection

NOTES:

- Replace belt if oil soaked.
- Remove any oil or solvent that gets on the belt.

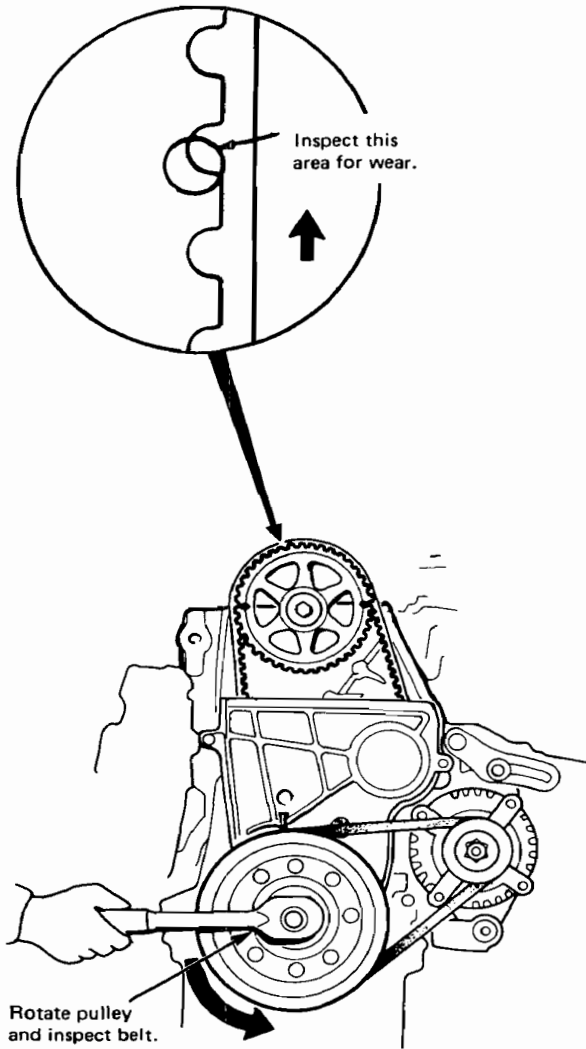


Timing Belt Tension Adjustment

CAUTION: Timing Belt should be tension adjusted cold.

NOTE: Tensioner is spring-loaded to apply proper tension to the belt automatically after making the following adjustment:

1. Set the No. 1 piston at TDC.
2. Loosen adjusting bolt.

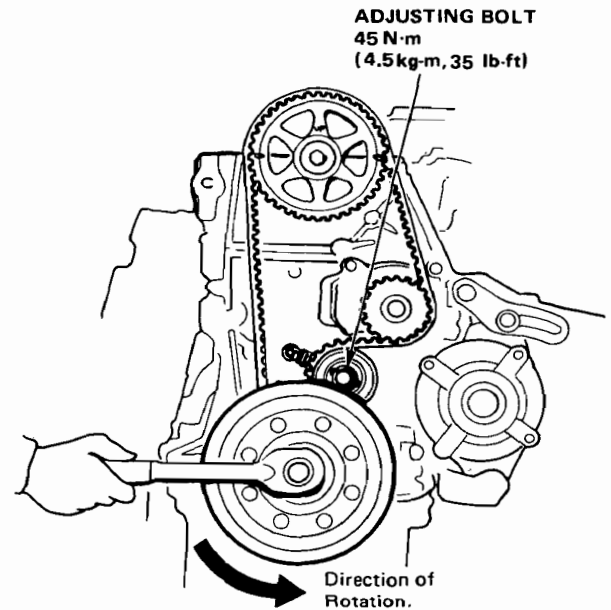

3. Rotate crankshaft counterclockwise 3-teeth on camshaft pulley to create tension on timing belt.
4. Tighten adjusting bolt.
5. If pulley bolt broke loose while turning crank, re-torque it to 115 N·m (11.5 kg-m, 83 lb-ft).

NOTE: Put transmission in gear and set parking brake before retorquing pulley bolt.




Valve Adjustment

NOTE: Valves should be adjusted cold when the cylinder head temperature less than 38°C (100°F). Adjustment is the same for intake and exhaust valves.


1. Remove valve cover.

INTAKE

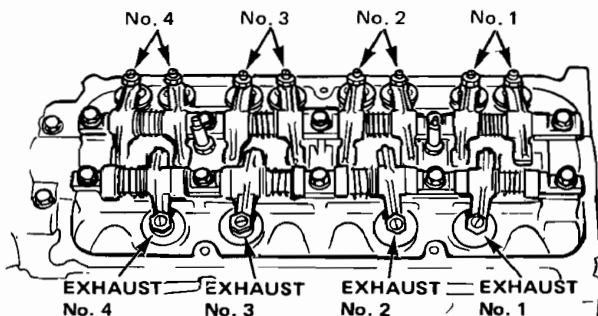

2. Set No. 1 piston at TDC. "UP" mark in puller should be at top, and TDC grooves on back side of puller should align with cylinder head surface. The distributor rotor must be pointing towards No. 1 plug wire.

Number 1 Piston at TDC
UPPER MARK

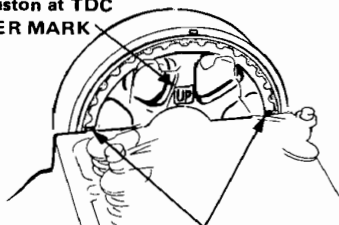

GROOVES


3. Adjust valves on No. 1 cylinder.

Intake: 0.17–0.22 mm (0.007–0.009 in.)

Exhaust: 0.22–0.27 mm (0.009–0.011 in.)


4. Loosen locknut and turn adjustment screw until feeler gauge slides back and forth with slight amount of drag.

**INTAKE and EXHAUST VALVES
LOCKNUTS 7 x 0.75 mm
20 N·m (2.0 kg·m, 14 lb·ft)**

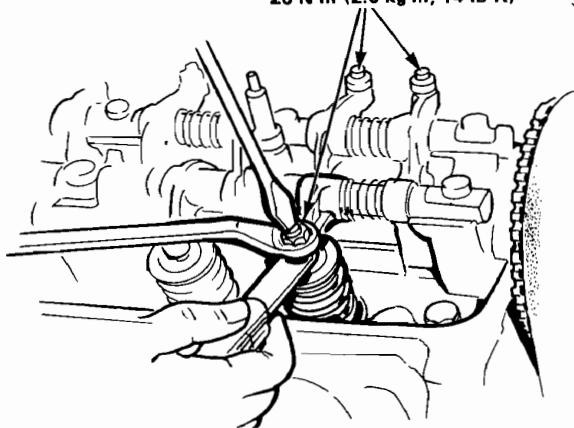


5. Tighten locknut and check clearance again. Repeat adjustment if necessary.
6. Rotate crankshaft 180° counterclockwise (cam pulley turns 90°). TDC groove should be aligned with the indentation in the belt cover. "UP" mark should not be visible. Distributor rotor should point to No. 3 plug wire. Adjust valves on No. 3 cylinder.

Number 3 piston at TDC

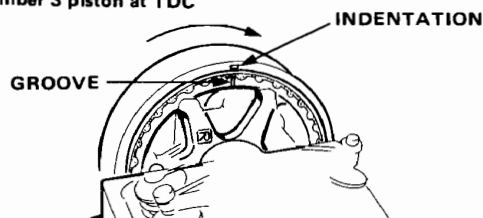

7. Rotate crankshaft 180° counterclockwise to bring No. 4 piston to TDC. Both TDC grooves are once again visible and distributor rotor points to No. 4 plug wire. Adjust valves on No. 4 cylinder.


Number 4 piston at TDC

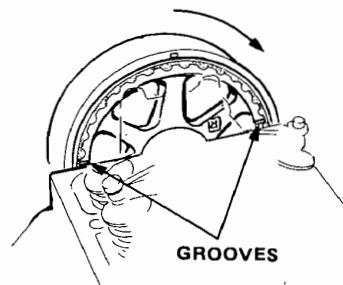

GROOVES


8. Rotate crankshaft 180° counterclockwise to bring No. 2 piston to TDC. Mark on pulley should align with indentation on the belt cover. "UP" mark should be visible. Distributor rotor should point to No. 2 plug wire. Adjust valves on No. 2 cylinder.

Number 2 piston at TDC

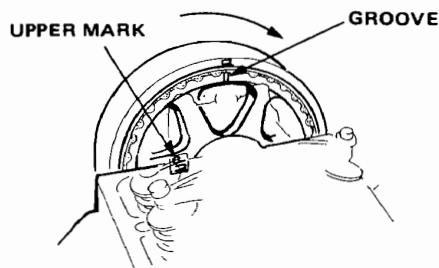


Engine Block

Illustrated Index


 Lubricate all internal parts with engine oil during reassembly.

NOTE: Apply non-hardening liquid gasket to the mating surfaces of the right side cover and oil pump case, before installing them.

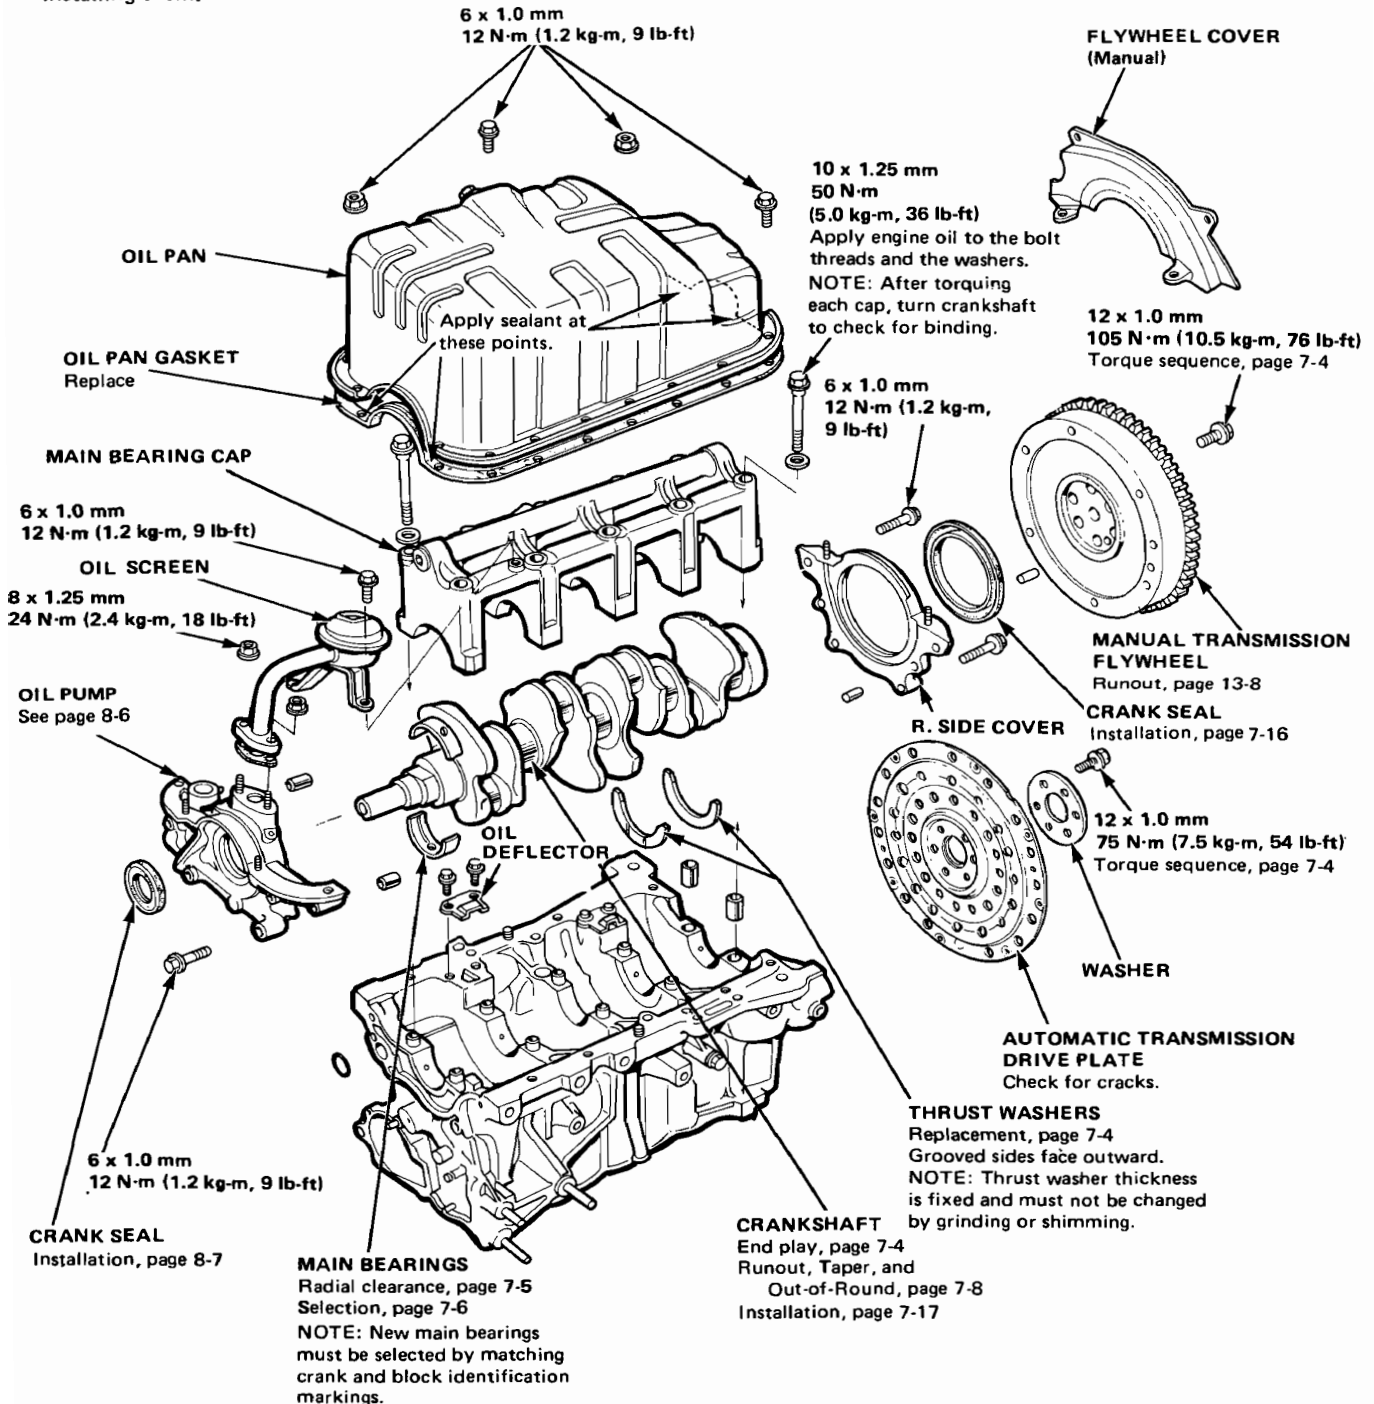



NOTE: New rod bearings must be selected by matching connecting rod and crankshaft identification markings (page 7-6).

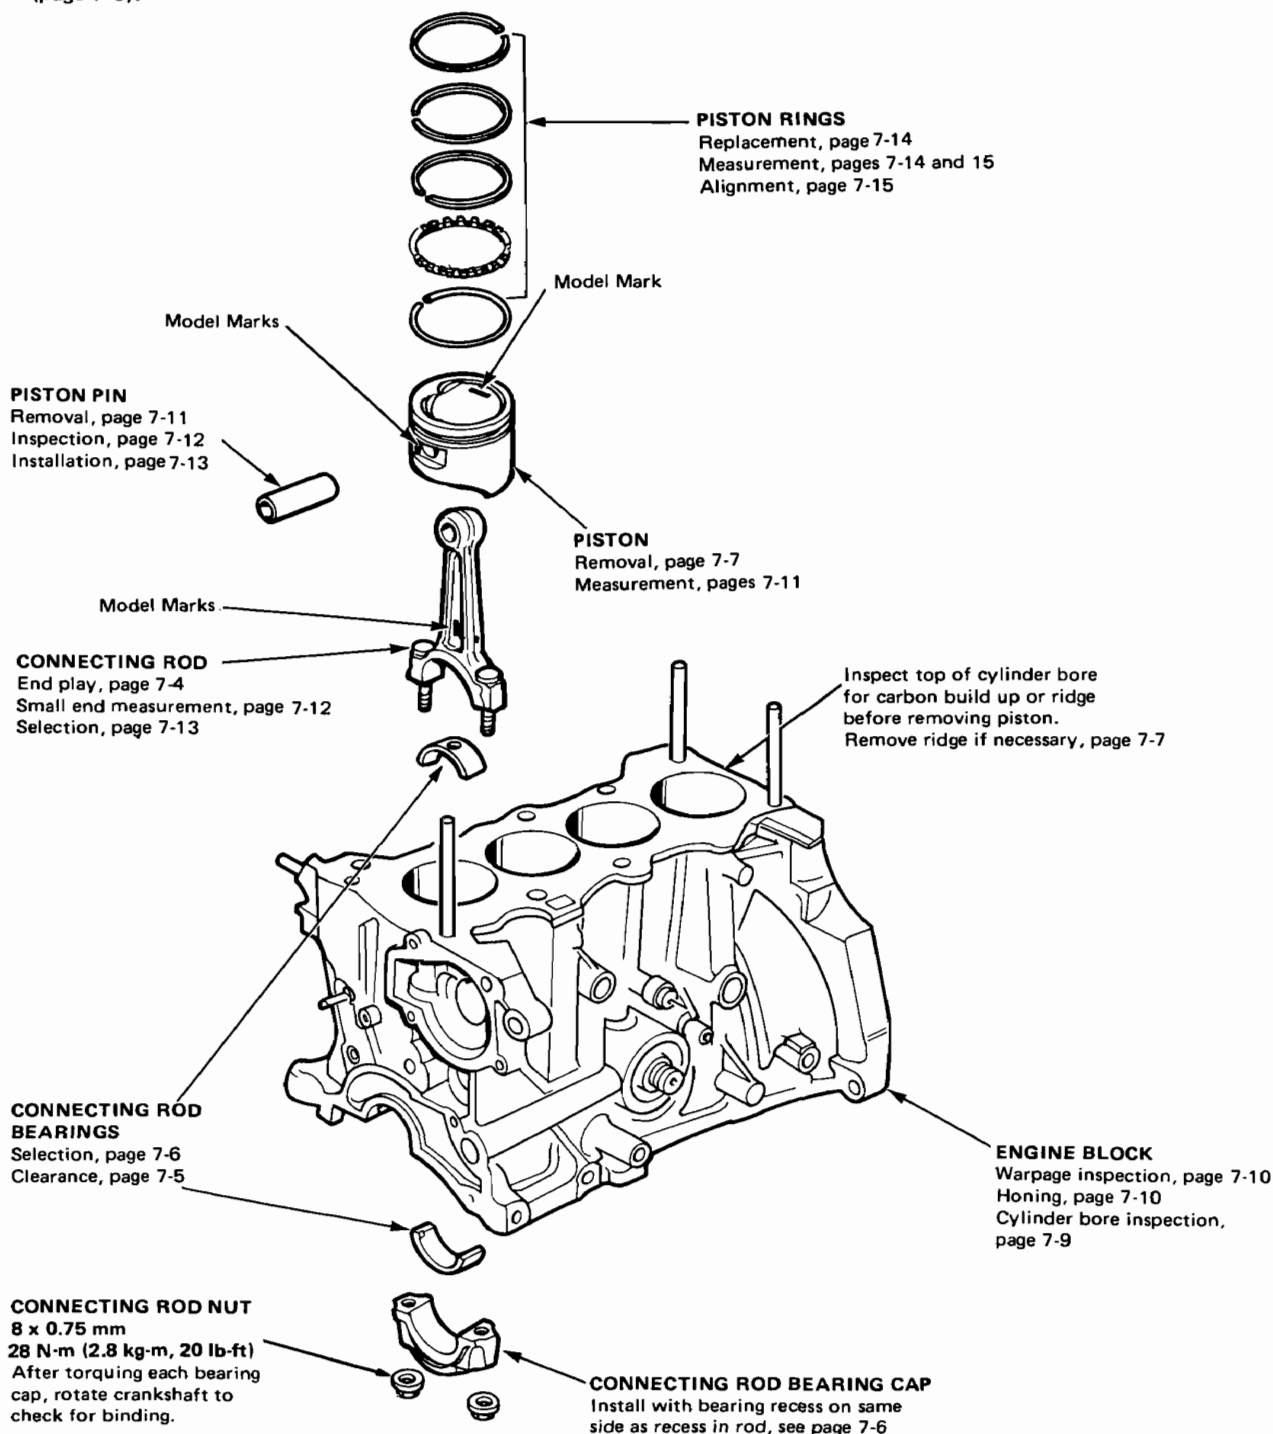


Engine Block

Flywheel Replacement (Manual Transmission)

Remove the six flywheel bolts, then separate the flywheel from the crankshaft flange. After installation, tighten the bolts in the sequence shown.

RING GEAR HOLDER
07924-PE60000

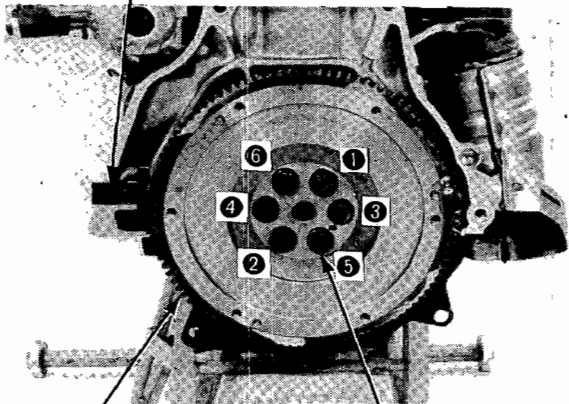


RING GEAR
Inspect ring gear teeth for wear or damage.

12 x 1.0 mm
105 N·m
(10.5 kg-m, 76 lb-ft)

Connecting Rod End Play


Standard (New): 0.15–0.30 mm (0.006–0.012 in.)
Service Limit: 0.40 mm (0.016 in.)

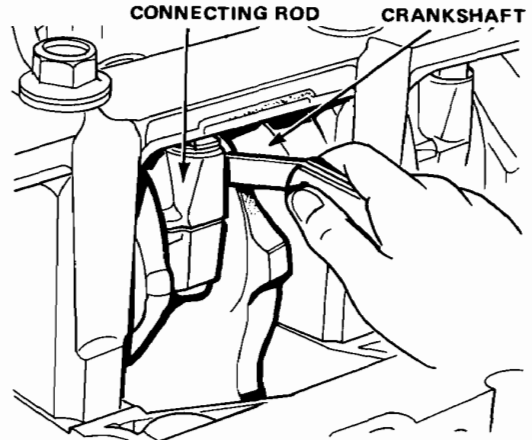

- If out-of-tolerance, install new connecting rod.
- If still out-of-tolerance, replace crankshaft (pages 7-7 and 7-17).

Drive Plate Replacement (Hondamatic Transmission)


Remove the six drive plate bolts, then separate the drive plate from the crankshaft flange. After installation, tighten the bolts in the sequence shown.

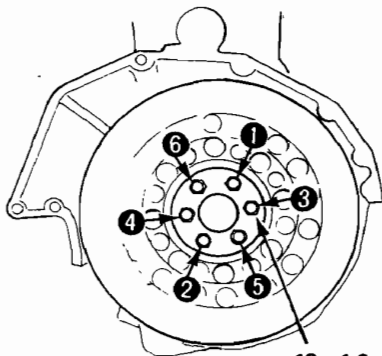

12 x 1.0 mm
75 N·m
(7.5 kg-m, 54 lb-ft)

Crankshaft End Play

Push crank firmly away from dial indicator, and zero dial against end of crank. Then pull crank firmly back toward indicator; dial reading should not exceed service limit.

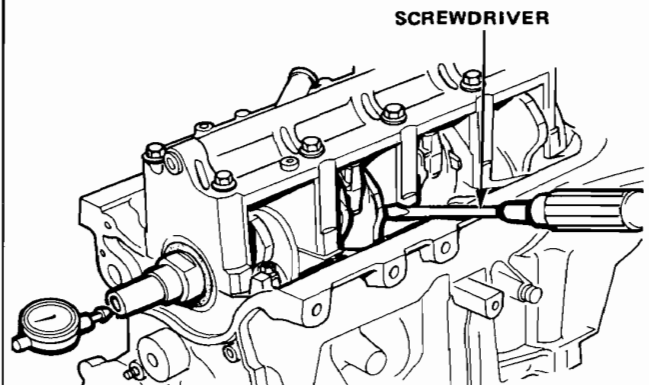

Standard (New): 0.1–0.35 mm (0.004–0.014 in.)
Service Limit: 0.45 mm (0.018 in.)

- If end play is excessive, inspect thrust washers and thrust surface on crankshaft. Replace parts as necessary.

NOTE: Thrust washer thickness is fixed and must not be changed either by grinding or shimming. Thrust washers are installed with grooved sides outward.



Main Bearing Clearance

1. To check main-bearing clearance, remove the main cap and bearing halves.
2. Clean each main journal and bearing half with a clean shop rag.
3. Place one strip of plastigage across each main journal.

NOTE: If the engine is still in the car when you bolt the main cap down to check clearance, the weight of the crank and flywheel will flatten the plastigage further than just the torque on the cap bolts, and give you an incorrect reading. For an accurate reading, support the crank with a jack under the counterweights and check only one bearing at a time.

4. Reinstall the bearings and cap, then torque the bolts to 50 N·m (5.0 kg·m, 36 lb·ft).

NOTE: Do not rotate the crank during inspection.


5. Remove the cap and bearings again, and measure the widest part of the plastigage.

Main Bearing Clearance:

Standard (New): 0.024–0.042 mm
(0.0009–0.0016 in.)

Service Limit: 0.07 mm (0.003 in.)

PLASTIGAGE STRIP

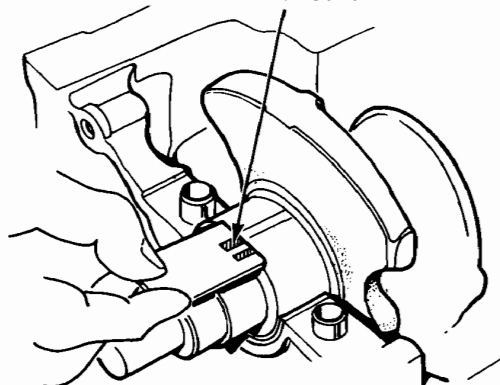

6. If the plastigage measures too wide or too narrow, (remove the engine if it's still in the car), remove the crank, remove the upper half of the bearing, then install a new, complete bearing with the same color code (select the color as shown on the next page), and recheck the clearance.

CAUTION: Do not file, shim, or scrape the bearings or the caps to adjust clearance.

7. If the plastigage shows the clearance is still incorrect, try the next larger or smaller bearing (the color listed above or below that one), and check again.

NOTE: If the proper clearance cannot be obtained by using the appropriate larger or smaller bearings, replace the crank and start over.

Rod Bearing Clearance

1. Remove the connecting rod cap and bearing half.
2. Clean the crankshaft rod journal and bearing half with a clean shop rag.
3. Place plastigage across the rod journal.
4. Reinstall the bearing half and cap, and torque the nuts to 28 N·m (2.8 kg·m, 20 lb·ft).


NOTE: Do not rotate the crank during inspection.

5. Remove the rod cap and bearing half and measure the widest part of the plastigage.

Connecting Rod Bearing Clearance:

Standard (New): 0.020–0.038 mm
(0.0008–0.0015 in.)

Service Limit: 0.07 mm (0.003 in.)

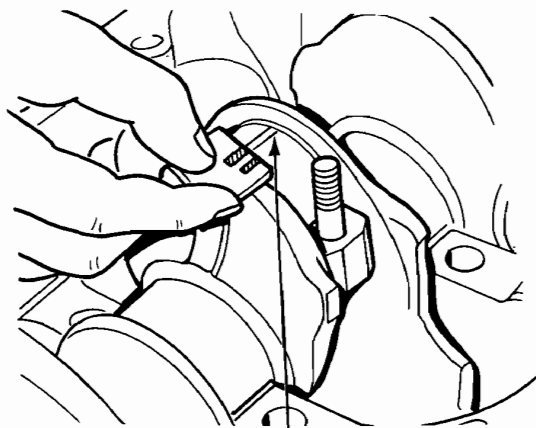

PLASTIGAGE STRIP

6. If the plastigage measures too wide or too narrow, remove the upper half of the bearing, install a new, complete bearing with the same color code (select color as shown on next page), and recheck the clearance.

CAUTION: Do not file, shim, or scrape the bearing or the caps to adjust clearance.

7. If the plastigage shows the clearance is still incorrect, try the next larger or smaller bearing (the color listed above or below that one), and check clearance again.


NOTE: If the proper clearance cannot be obtained by using the appropriate larger or smaller bearings, replace the crank and start over.

Engine Block


Main Bearing Selection

Crank Bore Code Location (Marks)

Marks have been stamped on the end of the block as a code for the size of each of the 5 main journal bores. Use them, and the numbers stamped on the crank (codes for main journal size), to choose the correct bearings.

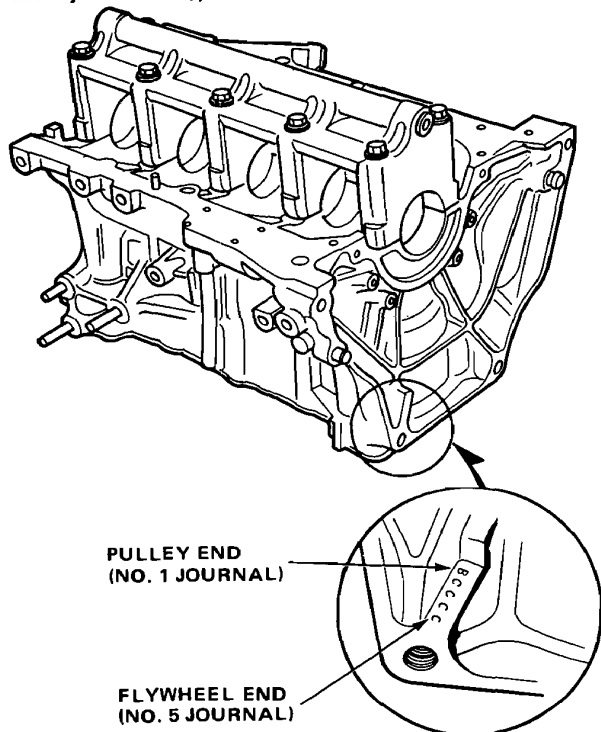

Main Journal Code Locations (Numbers)

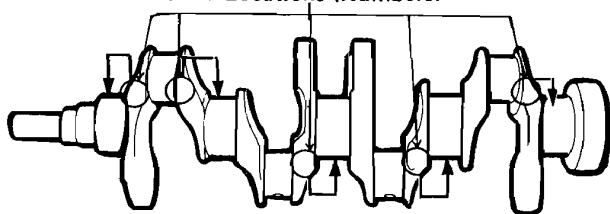

Bearing Identification

Color code is on the edge of the bearing


	Larger crank bore			
	A	B	C	D
1	Red	Pink	Yellow	Green
2	Pink	Yellow	Green	Brown
3	Yellow	Green	Brown	Black
4	Green	Brown	Black	Blue

Smaller main journal Smaller bearing (thicker)


Rod Bearing Selection

Rod Code Location (Numbers)

Numbers have been stamped on the side of each connecting rod as a code for the size of the big end. Use them, and the letters stamped on the crank (codes for rod journal size), to choose the correct bearings.

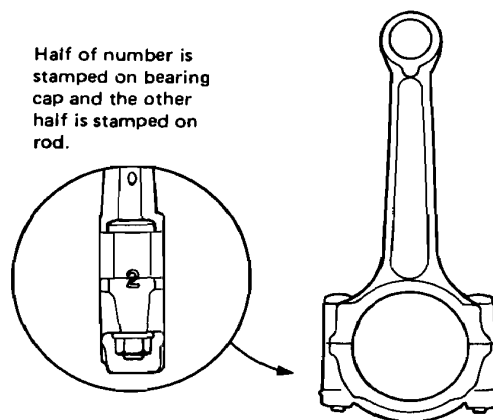

Rod Journal Code Locations (Letters)

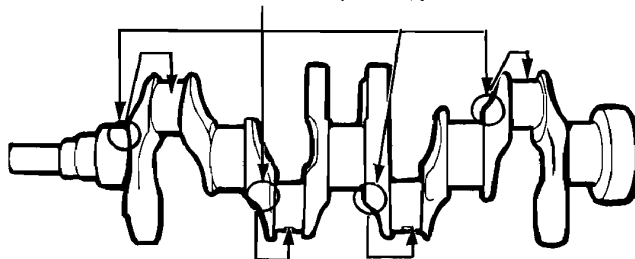

Bearing Identification

Color code is on the edge of the bearing

	Larger rod big end			
	1	2	3	4
A	Red	Pink	Yellow	Green
B	Pink	Yellow	Green	Brown
C	Yellow	Green	Brown	Black
D	Green	Brown	Black	Blue

Smaller rod journal Smaller bearing (thicker)

Engine Block

Crankshaft Inspection

- Clean the crankshaft oil passages with pipe cleaners or a suitable brush.
- Check the keyway and threads.


Alignment

- Measure runout on all main journals to make sure the crank is not bent.
- The Difference between measurements on each journal must not be more than the service limit.

Crankshaft Total Indicated Runout:

Standard (New): 0.03 mm (0.0012 in.)

Service Limit: 0.06 mm (0.0024 in.)

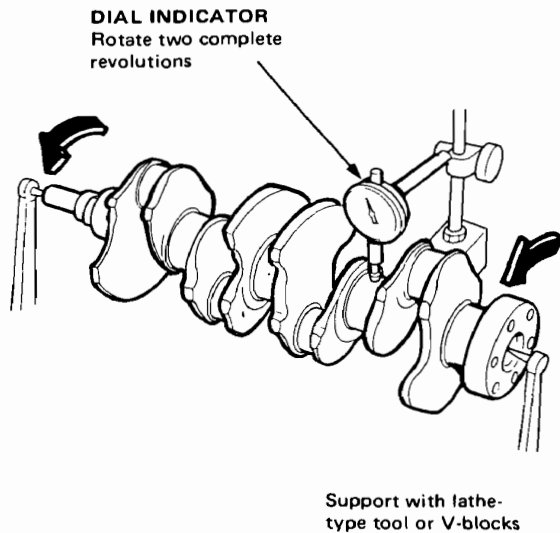


Out-of-Round and Taper

- Measure out-of-round at the middle of each rod and main journal in two places.
- The Difference between measurements on each journal must not be more than the service limit.

Journal Taper:

Standard (New): 0.005 mm (0.0002 in.)

Service Limit: 0.010 mm (0.0004 in.)

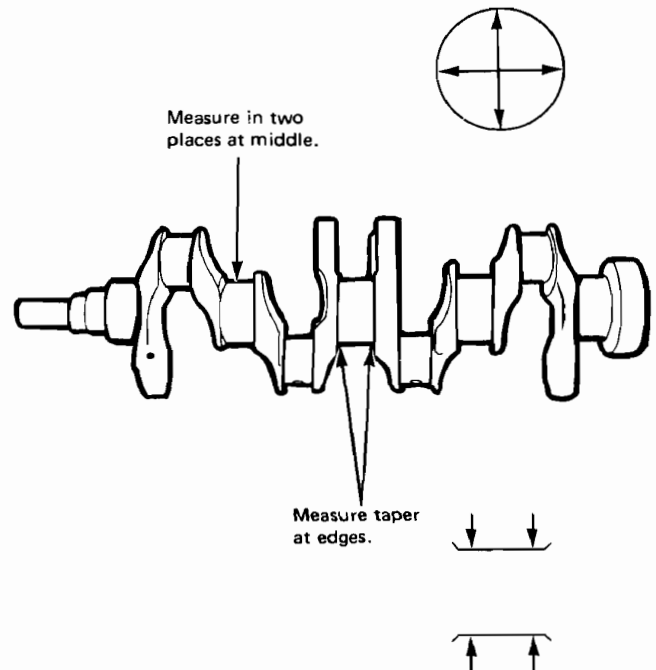

- Measure taper at edges of each rod and main journal.
- The Difference between measurement on each journal must not be more than the service limit.

Journal Out-of-Round:




Standard (New): 0.005 mm (0.0002 in.)

Service Limit: 0.010 mm (0.0004 in.)



Block Inspection

1. Measure wear and taper in directions X and Y at three levels in each cylinder as shown.

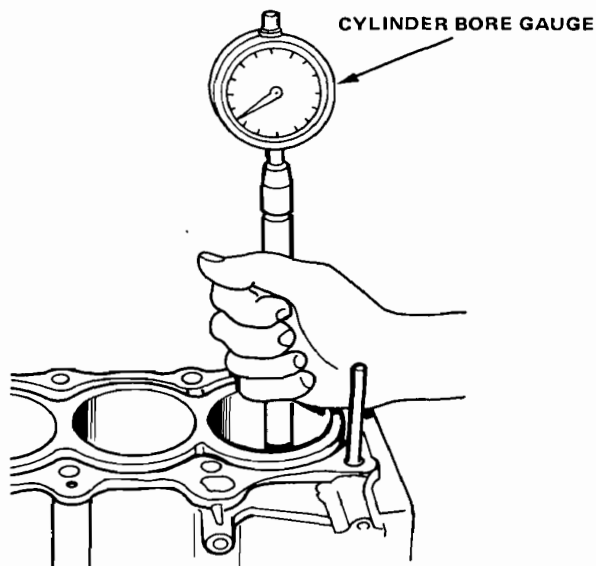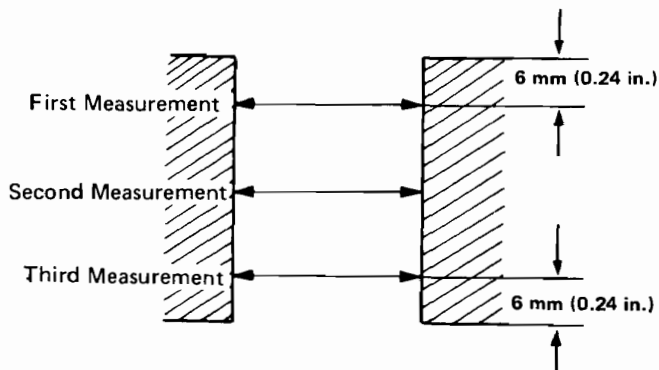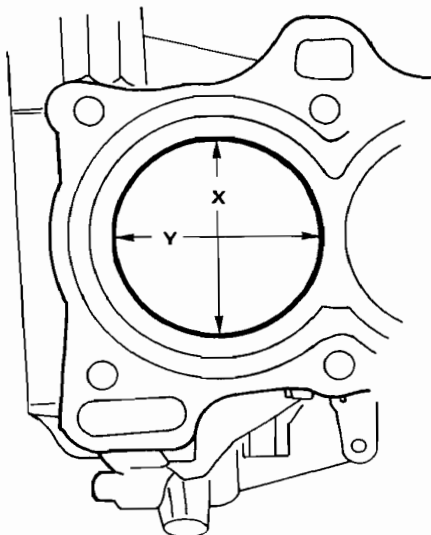

Cylinder Bore Size

Standard (New): 74.00–74.02 mm
(2.9133–2.9142 in.)
Service Limit: 74.10 mm (2.9173 in.)

Overize

Standard 0.25 (New): 74.215–74.248 mm
(2.9218–2.9231 in.)
Standard 0.5 (New): 74.465–74.498 mm
(2.9317–2.9330 in.)

Bore Taper

Limit: (Difference between first and third measurement) 0.05 mm (0.002 in.)

- If measurements in any cylinder are beyond Overize Bore Service Limit, replace the block.
- If block is to be rebored, refer to Piston Clearance Inspection (page 7-11) after reboring.

NOTE: Scored or scratched cylinder bores must be honed (see next page).

Out-of-Round

Service Limit: 0.05 mm (0.002 in.)


(cont'd)

Engine Block

Block Inspection (cont'd)

2. Check the top of the block for warpage.
Measure along the edges and across the center as shown.

SURFACES TO BE MEASURED

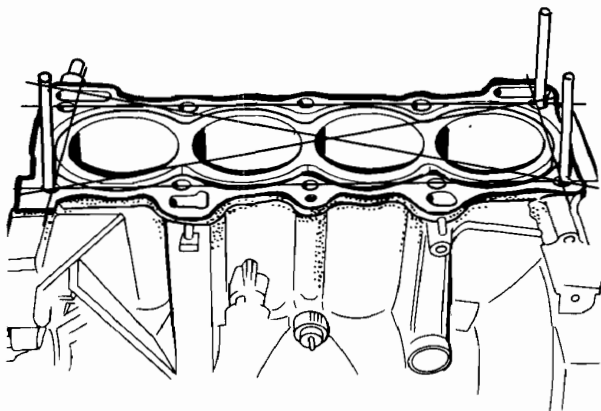


Engine Block Warpage:

Standard (New): 0.07 mm (0.003 in.)


Service Limit: 0.10 mm (0.004 in.)

PRECISION STRAIGHT EDGE

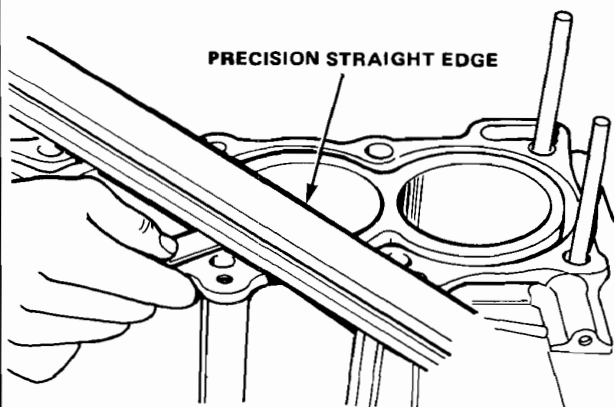


Cylinder Bore Honing

1. Measure cylinder bores as shown on page 7-9. If the block is to be re-used, hone the cylinders, and remeasure the bores.
2. Hone cylinder bores with honing oil and a fine (400 grit) stone in a 60 degree cross-hatch pattern.

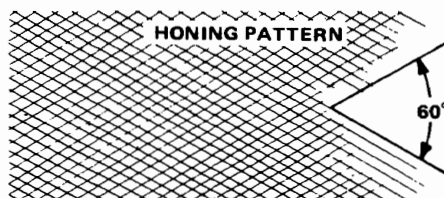

3. When honing is complete, thoroughly clean the engine block of all metal particles. Wash the cylinder bores with hot soapy water, then dry and oil immediately to prevent rusting.
4. If Scoring or scratches are still present in cylinder bores after honing to service limit, rebore the engine block.

NOTE: Some light vertical scoring and scratching is acceptable if it is not deep enough to catch your fingernail and does not run the full length of the bore.

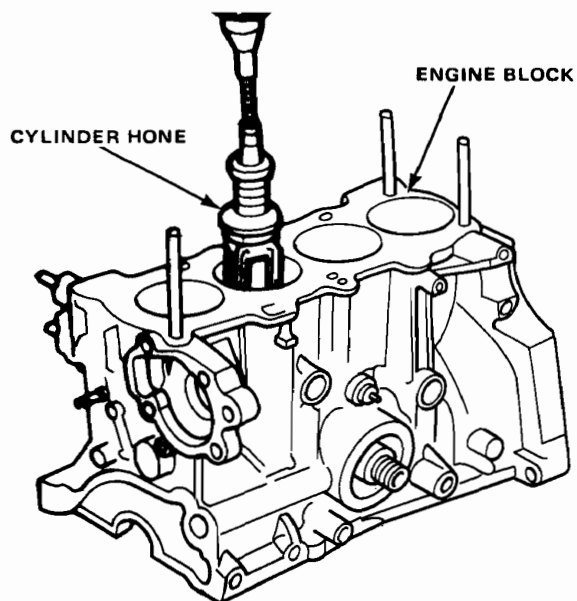



Piston Clearance Inspection



NOTE: If cylinder is bored, an oversized piston must be used.

1. Measure piston diameter at a point 16 mm (0.63 in.) from bottom of skirt.

Piston Diameter

Standard (New): 73.97–73.99 mm
(2.9122–2.9133 in.)

Service Limit: 73.96 mm (2.9118 in.)

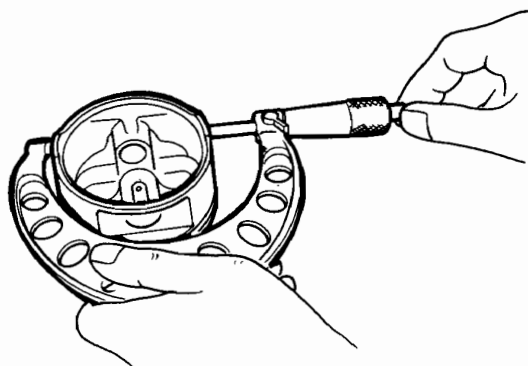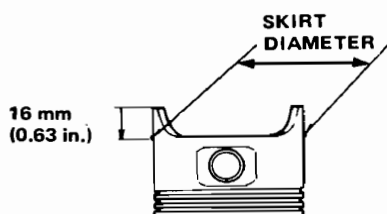

Oversize Piston Diameter

Standard 0.25: 74.215–74.248 mm
(2.9218–2.9231 in.)

Standard 0.5: 74.465–74.498 mm
(2.9317–2.9330 in.)


2. Calculate difference between cylinder bore diameter on page 7-9 and piston diameter.

Piston-to-Cylinder Clearance:

Standard (New): 0.01–0.05 mm
(0.0004–0.0020 in.)

Service Limit: 0.07 mm (0.003 in.)


Piston Pin Removal

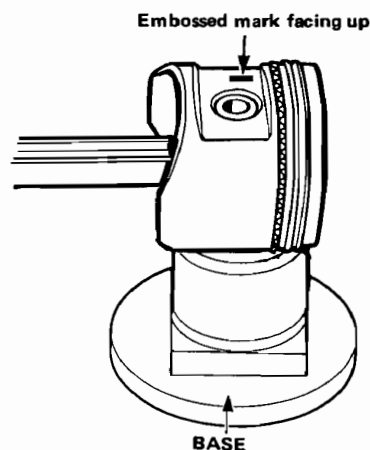


PISTON PIN DRIVER
07973-PE00301



PILOT COLLAR
07973-PE00200

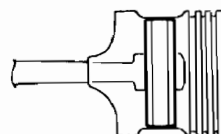

PISTON PIN BASE INSERT
07973-PE00400

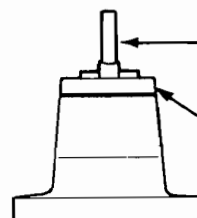

PISTON BASE HEAD
07973-PE00100

BASE IS PART OF
TOOL SET 07973-6570002
or
07973-6570001

Use hydraulic press. When pressing pin in or out, make sure that the recessed portion of the piston aligns with the lips on the collar.

Engine Block

Piston Pin Inspection


1. Measure the diameter of the piston pin.

Piston Pin Diameter:


Standard (New): 18.994–19.0 mm
(0.7478–0.7480 in.)

Oversize: 18.997–19.003 mm
(0.7479–0.7481 in.)

NOTE: All replacement piston pins are oversize.

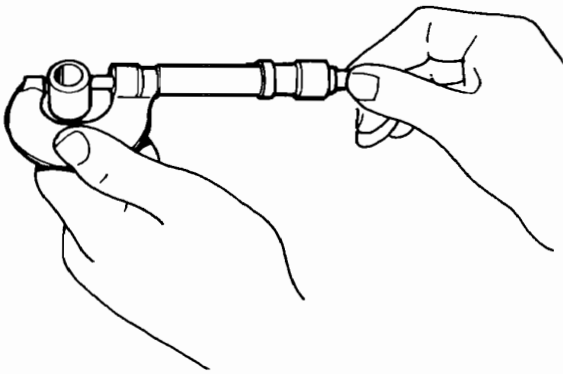

2. Zero the dial indicator to the piston pin diameter.

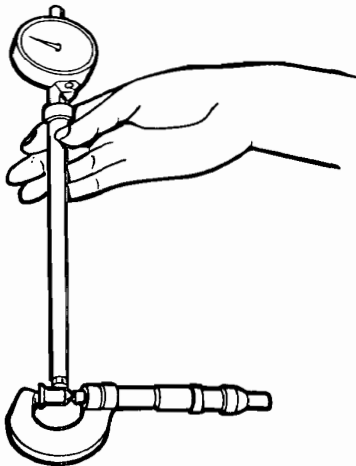


3. Measure the piston pin-to-piston clearance.

NOTE: Check the piston for distortion or cracks.

If the piston pin clearance is greater than 0.022 mm (0.0009 in.) re-measure using an oversize piston pin.

Piston Pin-to-Piston Clearance:


Service Limit: 0.010–0.022 mm
(0.0004–0.0009 in.)

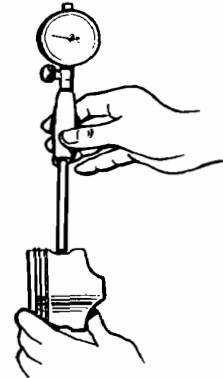

4. Check the difference between piston pin diameter and connecting rod small end diameter.

Piston Pin-to-Connecting Rod Interference:

Standard (New): 0.02–0.04 mm
(0.0008–0.0016 in.)

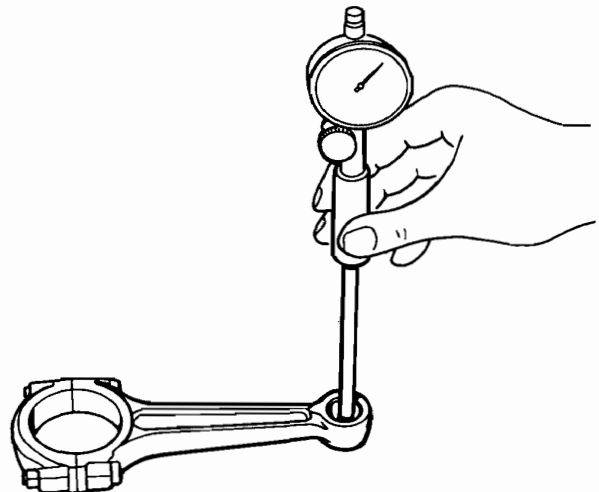



Connecting Rod Selection

Each rod is sorted into one of four tolerance ranges (from + 0.006 to 0.024 mm, in 0.006 mm increments) depending on the size of its big end bore. It's then stamped with a number (1, 2, 3, or 4) indicating that tolerance. You may find any combination of 1, 2, 3, or 4 in any engine.

Normal Bore Size:

1500: 45 mm (1.77 in.)

1300: 43 mm (1.69 in.)


1200: 43 mm (1.69 in.)

NOTE:

- Reference numbers are for big end bore size and do NOT indicate the position of rod in engine.
- Inspect connecting rod for cracks and heat damage.

CONNECTING ROD BORE REFERENCE NUMBER



Half of number is stamped on bearing cap, the other half on connecting rod.

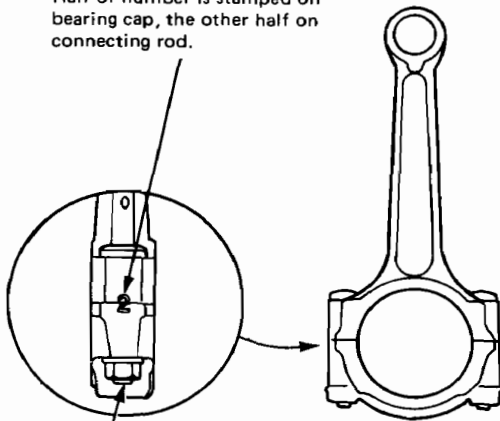

Inspect bolts and nuts for stress cracks.

Piston Pin Installation

Use a hydraulic press for installation. When pressing pin in, be sure you position the recessed flat on the piston against the lugs on the base attachment.

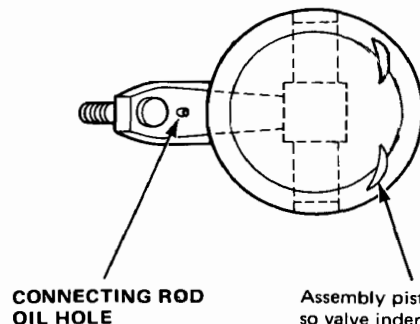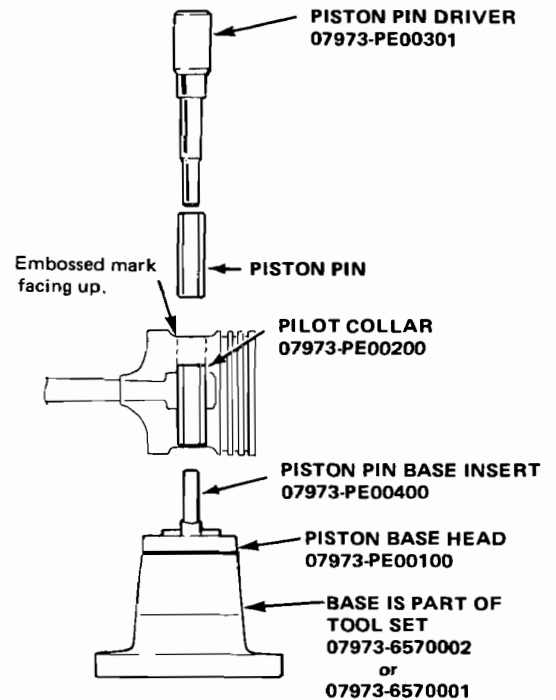

NOTE: Install the assembled piston and rod with the oil hole facing the intake manifold.

Engine Block

Piston Ring End Gap

1. Using a piston, push a new ring into the cylinder bore 15–20 mm (0.6–0.8 in.) from the bottom.
2. Measure the piston ring end-gap with a feeler gauge:
 - If the gap is too small, check to see if you have the proper rings for your engine.
 - If the gap is too large, re-check the cylinder bore diameter against the wear limits on page 7-9. If the bore is over limit, the engine block must be rebored.

Piston Ring End-Gap:

Top and Second Ring


Standard (New): 0.15–0.35 mm (0.006–0.014 in.)

Service Limit: 0.60 mm (0.024 in.)

Oil Ring

Standard (New): 0.3–0.9 mm (0.012–0.035 in.)

Service Limit: 1.1 mm (0.043 in.)

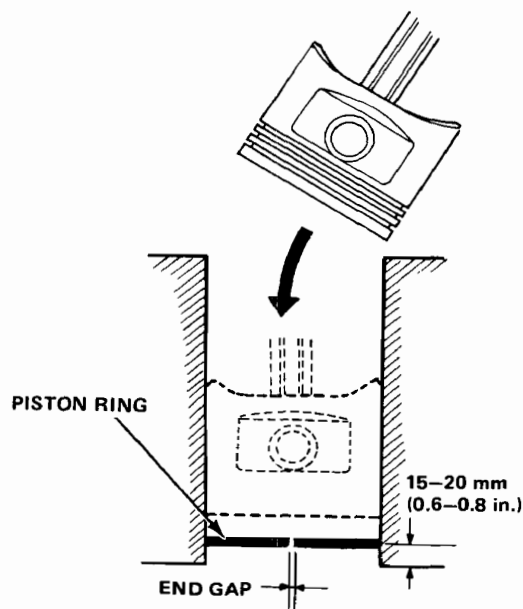

Piston Ring Replacement

1. Using ring expander, remove old piston rings.
2. Clean all ring grooves thoroughly.


NOTE: Use squared-off broken ring, or file down blade on ring groove cleaner to fit (compression rings are 1.5 mm wide; oil ring is 4.0 mm wide).

CAUTION: Do not use a wire brush to clean ring lands, or cut ring lands deeper with cleaning tool.

NOTE: If piston is to be separated from connecting rod, do not install new rings yet.

3. Install new rings in proper sequence and position (page 7-15).

NOTE: Do not re-use old piston rings.

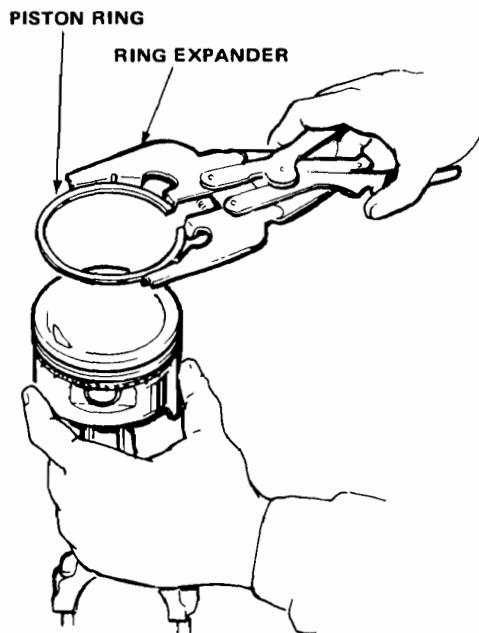



Ring Land Clearances

After installing new set of rings, measure ring-to-land clearances:

Top/Second Ring Clearance:

Standard (New): 0.03–0.06 mm
(0.0012–0.0024 in.)


Service Limit: 0.13 mm (0.005 in.)




Piston Ring Alignment

1. Install the rings as shown on page 7-14.


Identify top and second rings by the chamfer on the edge, and make sure they are in proper grooves on piston.

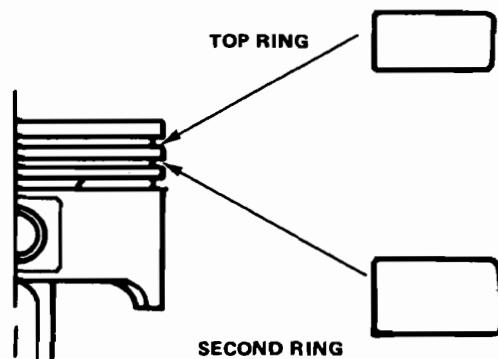

2. Rotate the rings in grooves to make sure they do not bind.
3. The manufacturing marks must be facing upward.

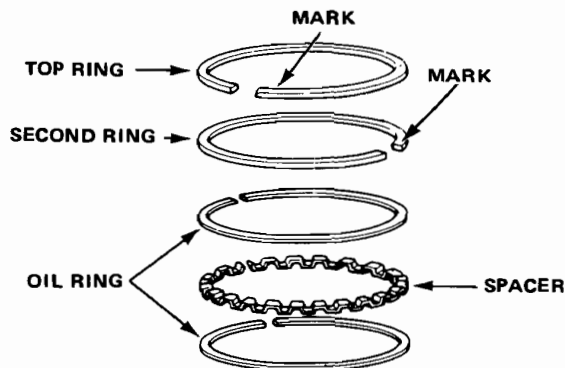


4. Position the ring end gaps as shown:

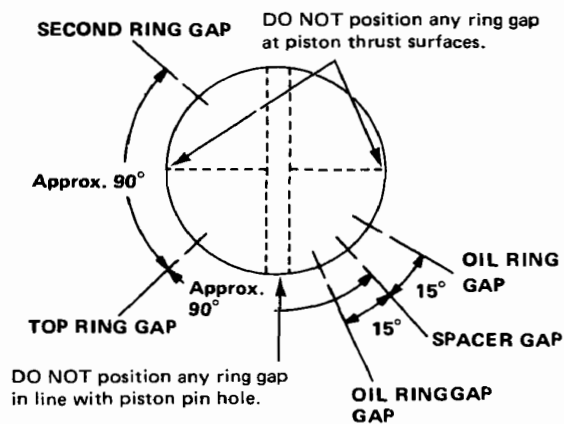


Engine Block

Piston Installation


 Before installing the piston, apply a coat of engine oil to the ring grooves and cylinder bores.

1. If the crankshaft is already installed:
 - Remove the connecting rod caps, then slip short sections of rubber hose over the threaded ends of the connecting rod bolts.
 - Install the ring compressor, check that the bearing is securely in place, then position the piston in the cylinder and drive it in using the wooden handle or a hammer. Stop after the ring compressor pops free and check the connecting rod-to-crank journal alignment before driving rod into place.
 - Install the rod caps with bearings, and torque the nuts to 28 N·m (2.8 kg·m, 20 lb·ft).


2. If the crankshaft is not installed:
 - Remove the rod caps and bearings, install the ring compressor, then position the piston in the cylinder and drive it in using the wooden handle of a hammer.

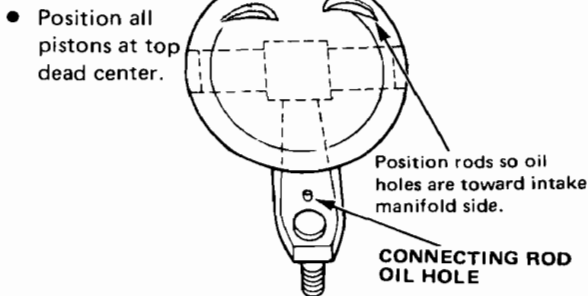


NOTE: Maintain downward force on ring compressor to prevent rings from expanding before entering the cylinder bore.

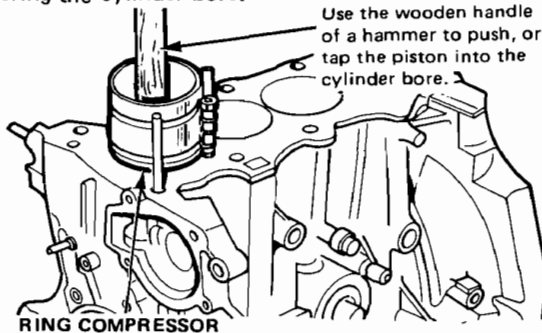

Oil Seal Installation

 The seal surface on the block should be dry. Apply a light coat of oil to the crankshaft and to the lip of seal.

1. Drive in flywheel-end seal until to bottoms against R. side cover.

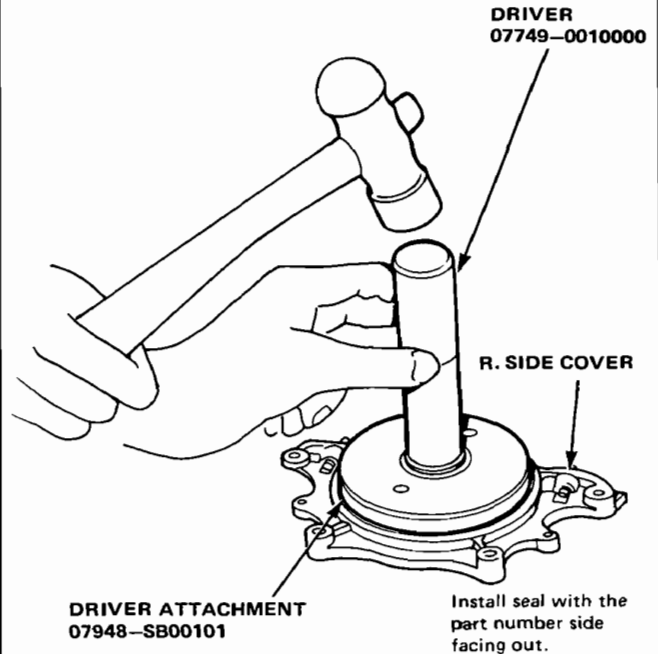

NOTE: Refer to page 8-7 for steps on the oil pump side oil seal.




Crankshaft Installation



Before installing the crankshaft, apply a coat of engine oil to the main bearings and rod bearings.

1. Insert bearing halves in the engine block and connecting rods.
2. Hold the crankshaft so rod journals for cylinder No. 2 and No. 3 are straight down.
3. Lower the crankshaft into the block, seating the rod journals into connecting rods No. 2 and No. 3 and install rod caps and nuts finger tight.

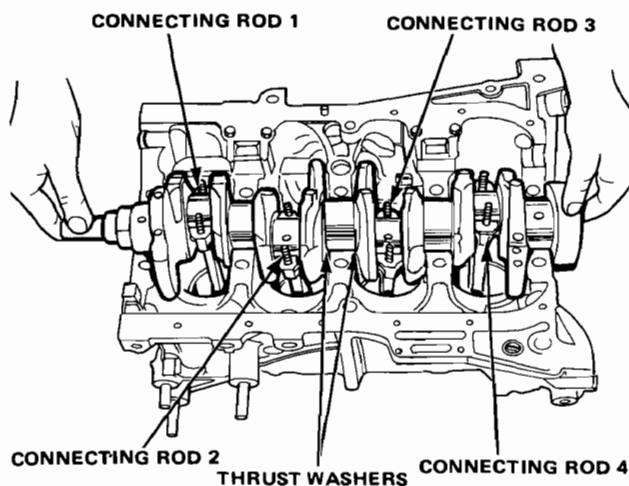

4. Rotate the crankshaft clockwise, seat journals into connecting rods No. 1 and No. 4, and install the rod caps and nuts finger tight.
5. Install the thrust washers, main bearing halves and cap, check clearance with plastigage (page 7-5), then torque the nuts to 50 N·m (5.0 kg-m, 36 lb-ft), Oil thrust washer surfaces.
6. Check the rod bearing clearance with plastigage (page 7-5), then torque nuts to 28 N·m (2.8 kg-m, 20 lb-ft).


NOTE: Reference numbers on connecting rod are for big-end bore tolerance and do NOT indicate the position of piston in engine.

CAUTION: Whenever any crankshaft or connecting rod bearing is replaced, after reassembly run the engine at idling speed until it reaches normal operating temperature, then continue to run for approximately 15 minutes.

7. Apply non-hardening liquid gasket to the block mating surface of the right side cover and oil pump case, and install them on the engine block.

NOTE:

- Use HONDA PARTS NO 08740-99986 as a liquid gasket.
- Check that the mating surfaces are clean and dry before applying liquid gasket.
- Apply liquid gasket by starting with an even bend, centered between edges of the mating surface.
- To prevent leakage of oil, apply liquid gasket to the inner threads of the bolt holes.
- Do not allow the liquid gasket to dry before assembly.
- Fill the case with clean engine oil 30 minutes after assembly.

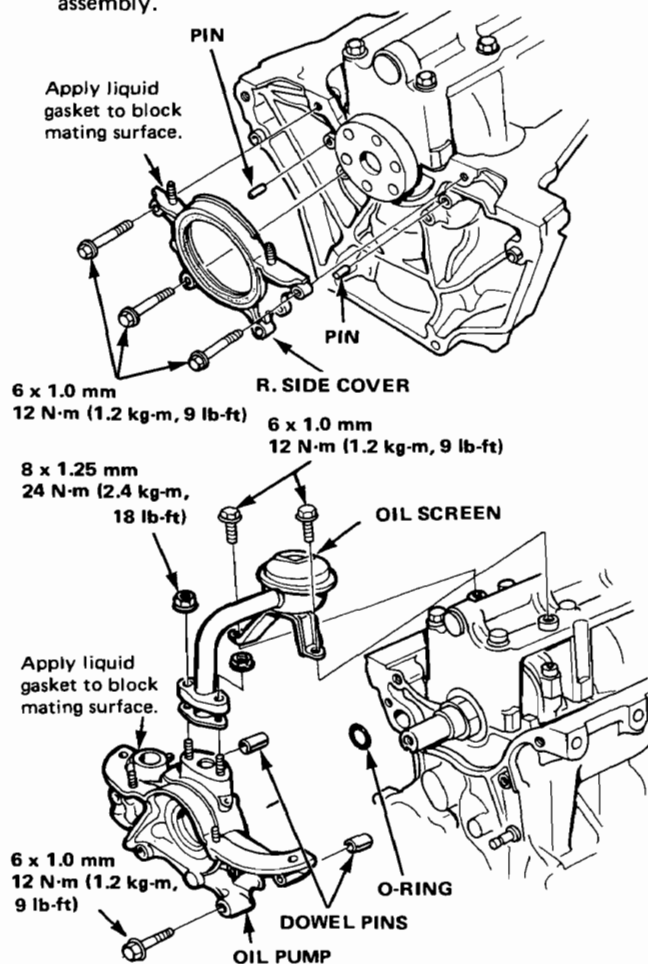


8. Install the oil strainer.
9. Install the oil pan.

Engine Lubrication

Illustrated Index



NOTE: Use new O-rings whenever reassembling.

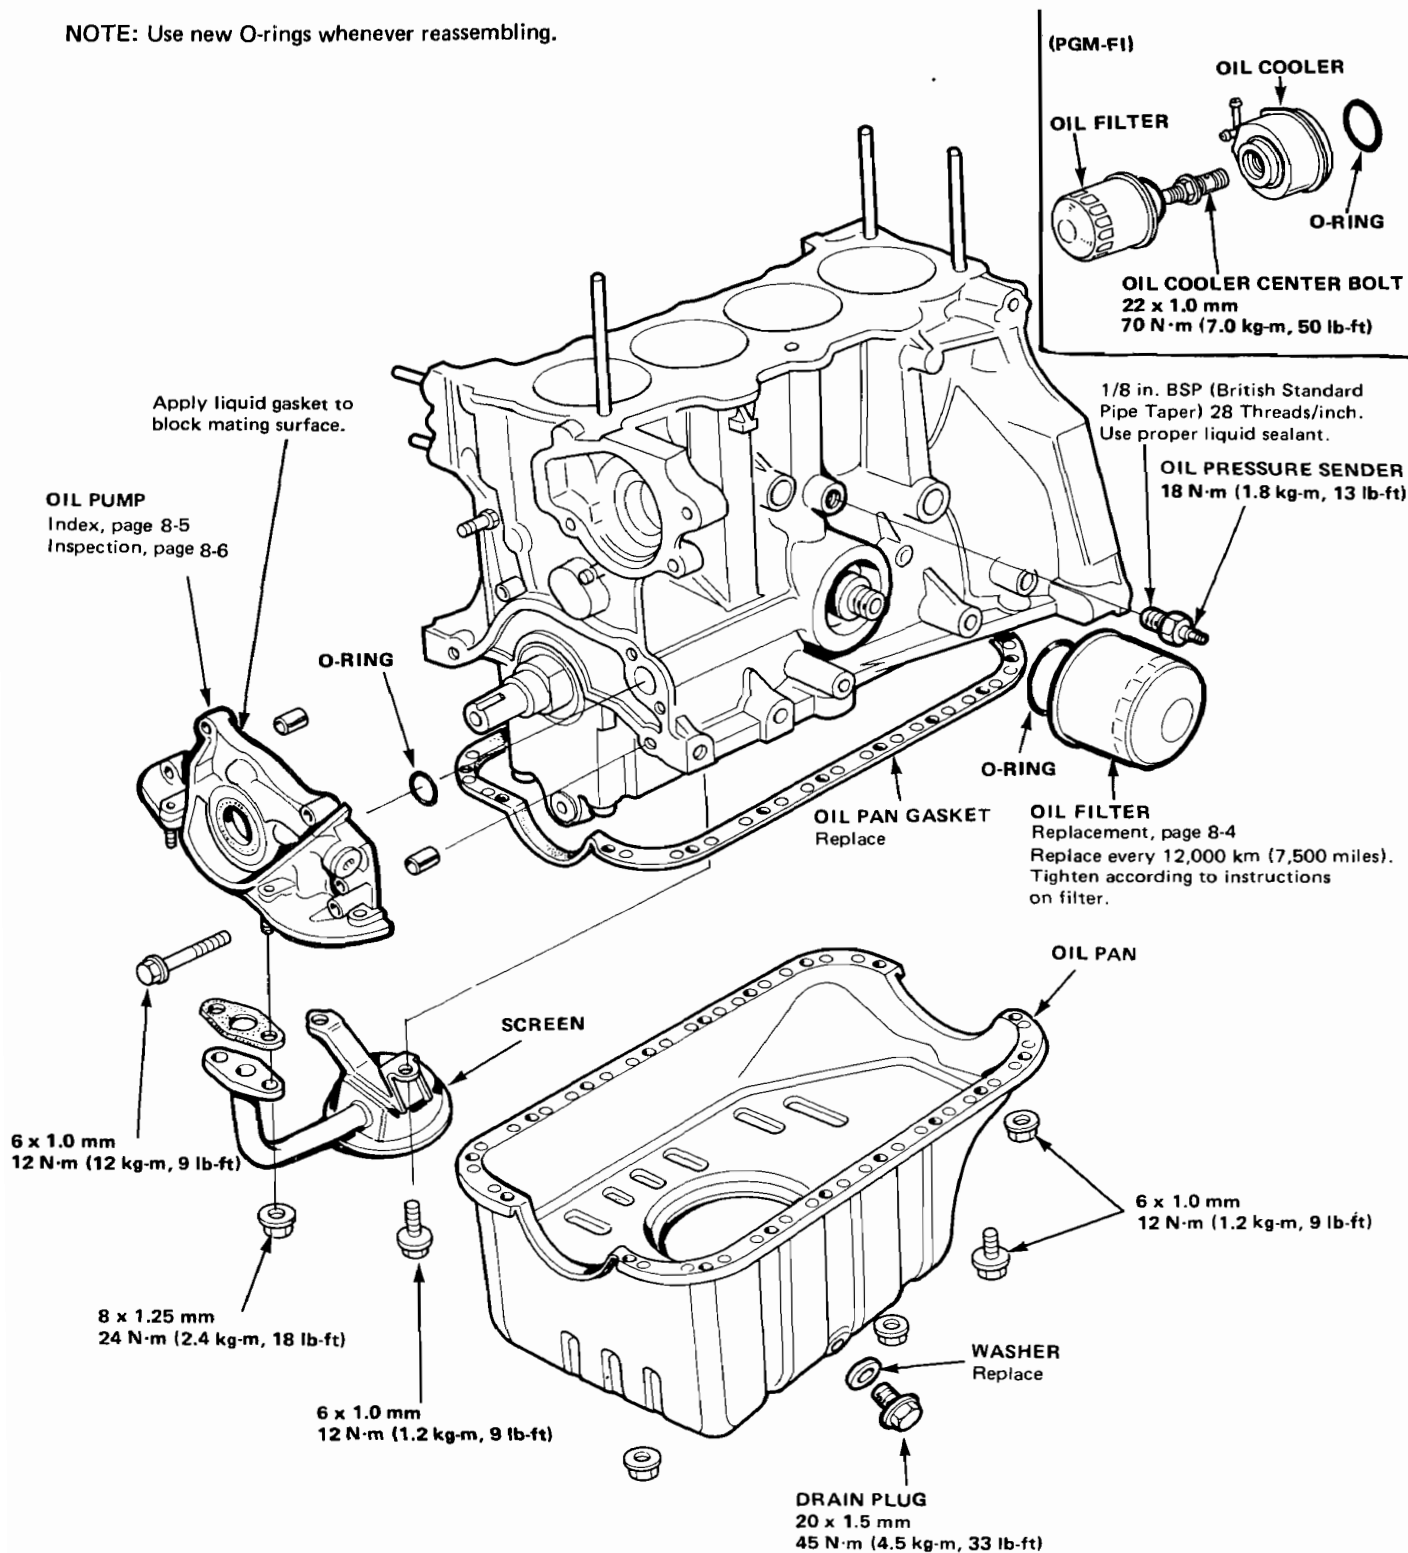



Oil Level Inspection


1. Check engine oil with the engine off and the car parked on level ground.
2. Make certain that the oil level indicated on the dipstick is between the upper and lower marks.
3. If the level has dropped close to the lower mark, add oil until it reaches the upper mark.

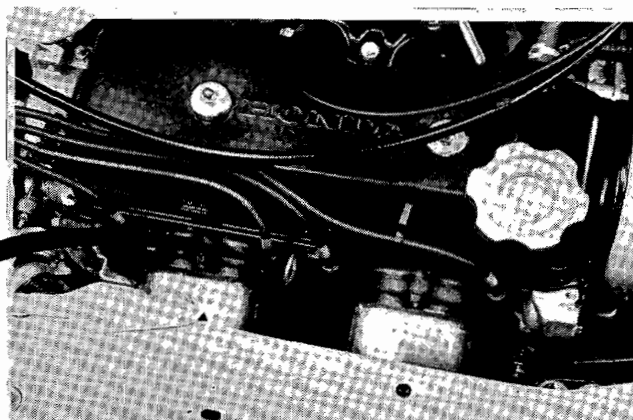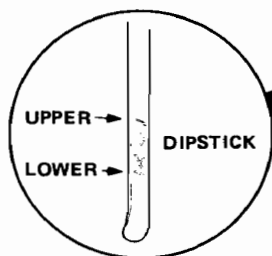

Oil Replacement

1. Warm up the engine.
2. Drain the engine oil.

NOTE: Remove the filler cap to speed draining.

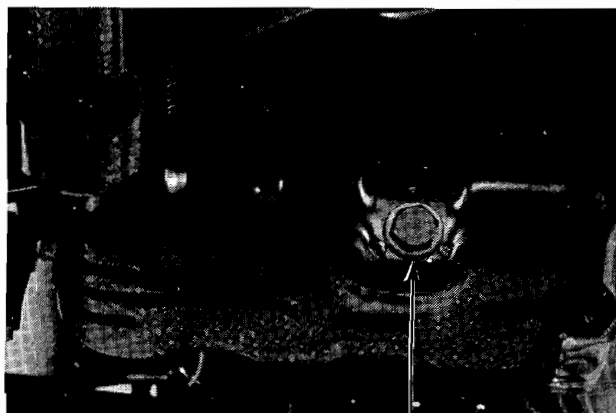


OIL PAN DRAIN PLUG
45 N·m (4.5 kg·m, 33 lb·ft)

3. Reinstall the drain plug with a new washer, and re-fill with the recommended oil.

Capacity	3.0 lit (3.2 US qt, 2.6 Imp. qt) Exclude oil filter 3.5 lit (3.7 US qt, 3.1 Imp. qt) Adding replace oil filter 4.0 lit (4.2 US qt, 3.5 Imp. qt) Means designed value
Change	Every 12,000 km (7,500 miles)

Canadian Model


Recommended Engine Oil (SE or SF Grade only)

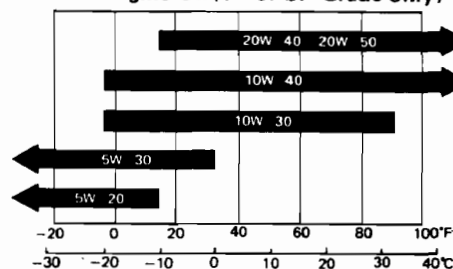

Expected Ambient Temperature before next oil change

Except Canadian Model

Recommended Engine Oil (SE or SF Grade only)

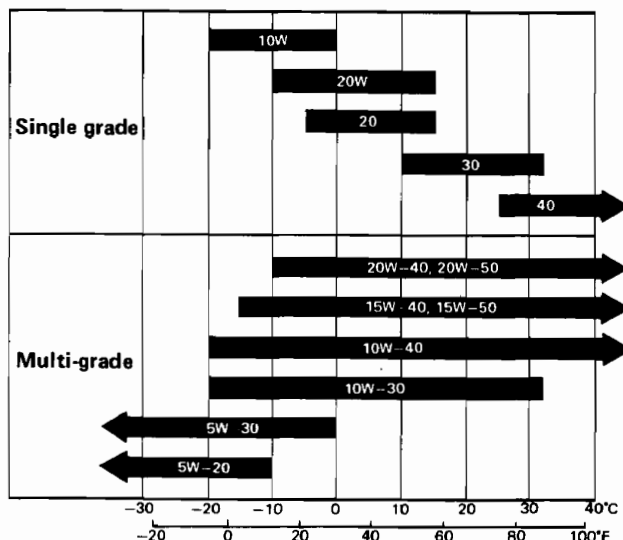


Expected Ambient Temperature before next oil change

Engine Lubrication

Oil Filter Replacement

CAUTION: After the engine has been run, the exhaust pipes will be hot; be careful when working around the exhaust manifold.


1. Remove the oil filter with the special oil filter socket.

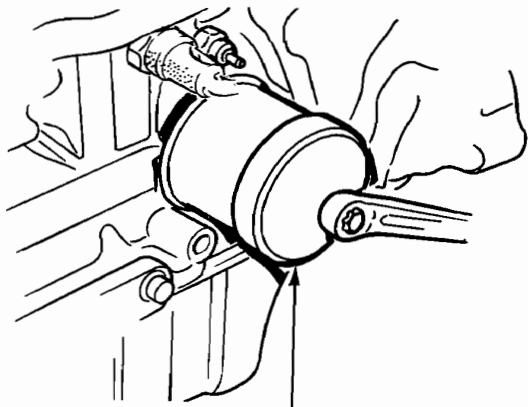

OIL FILTER SOCKET WRENCH
07912-6340001
28 N·m (2.8 kg-m, 20 lb-ft)

2. Inspect the threads and gasket on the new filter. Wipe off seat on engine block, then apply a light coat of oil to gasket, and install filter. Tighten according to instructions on, or with, the filter.

NOTE: Use only filters with a built-in bypass system.

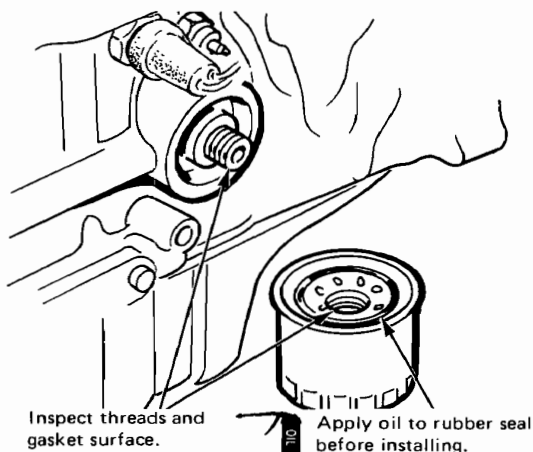

Oil Pressure Test


If the oil pressure warning light stays on with the engine running. Check the engine oil level. If the oil level is correct:

1. Remove the oil pressure sender and install an oil pressure gauge.
2. Start the engine and allow to reach operating temperature (fan comes on at least twice).
3. Pressure should be:

Engine Oil Pressure:

Idle: 147 kPa (1.5 kg/cm², 21 psi) minimum
3,000 min⁻¹ (rpm): 333–340 kPa (3.4–4.2 kg/cm², 48–60 psi)

- If oil pressure is within specifications, replace oil pressure sender and recheck.
- If oil pressure is NOT within specifications, inspect oil pump (pages 8-6 and 7).

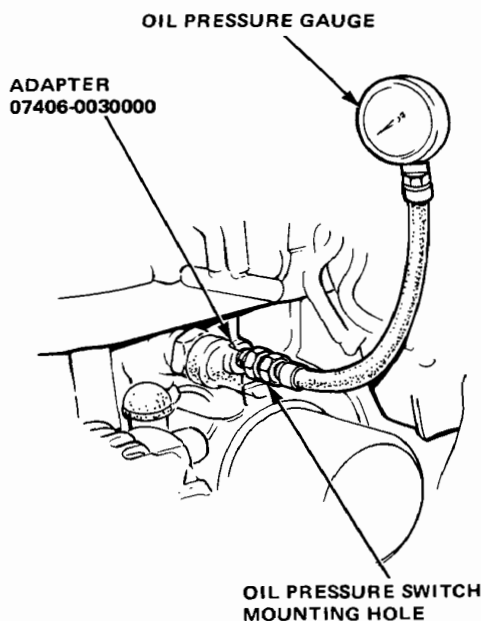




Oil Pump Illustrated Index

NOTE:


- Note the installation direction of the rotors.
- After assembling, check that the rotors turn smoothly.

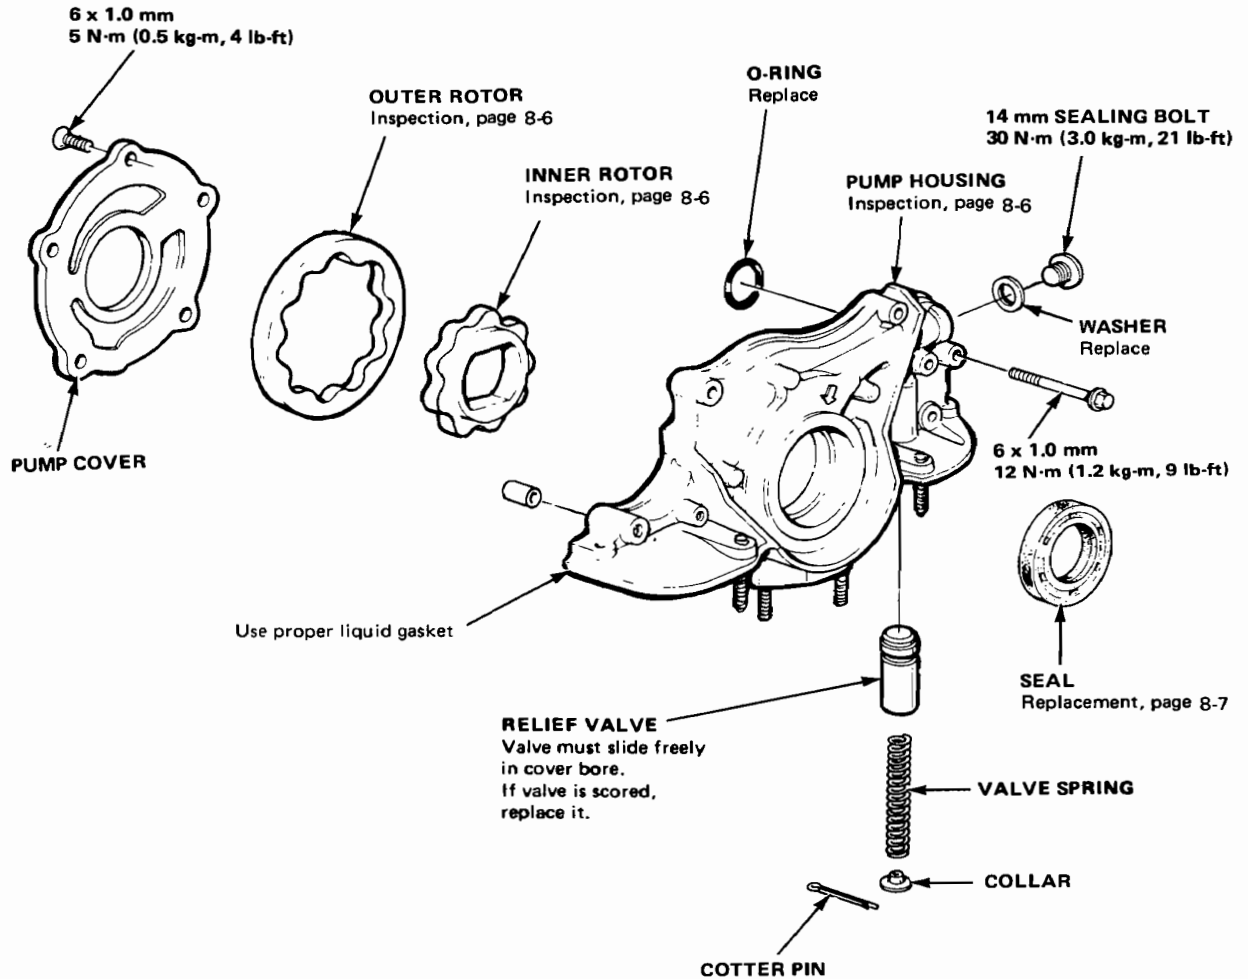

Engine Lubrication

Oil Pump Removal/Inspection

1. Drain the engine oil.
2. Turn the crankshaft and align the "T" mark on the crankshaft pulley with the index mark on the cover.
3. Remove the cylinder head cover and timing belt upper cover.
4. Remove the alternator belt.
5. Remove the crankshaft pulley and remove the timing belt lower cover.
6. Release the belt tensioner, and remove the timing belt and driven pulley.
7. Remove the oil pan.
8. Remove the oil screen.
9. Remove the mounting bolts and the oil pump assembly.

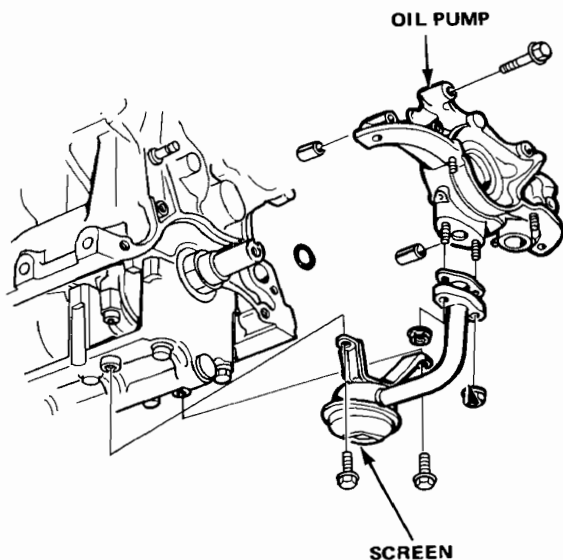


10. Remove the five screws from the pump housing, then separate the housing and cover.

11. Check the radial clearance on the pump rotor.

Rotor Radial Clearance

Standard (New): 0.14 mm (0.006 in.)

Service Limit: 0.2 mm (0.008 in.)

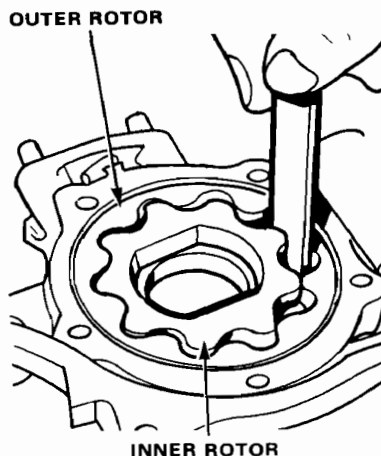


12. Check the axial clearance on the outer pump rotor.

Housing-to-Rotor Axial Clearance

Standard (New): 0.03–0.08 mm
(0.001–0.003 in.)

Service Limit: 0.15 mm (0.006 in.)

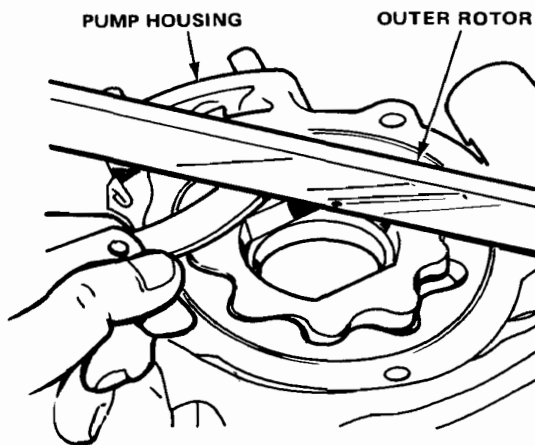




13. Check the radial clearance between the housing and the outer rotor.


Housing-to-Rotor Radial Clearance

Standard (New): 0.1–0.175 mm
(0.004–0.007 in.)

Service Limit: 0.2 mm (0.008 in.)

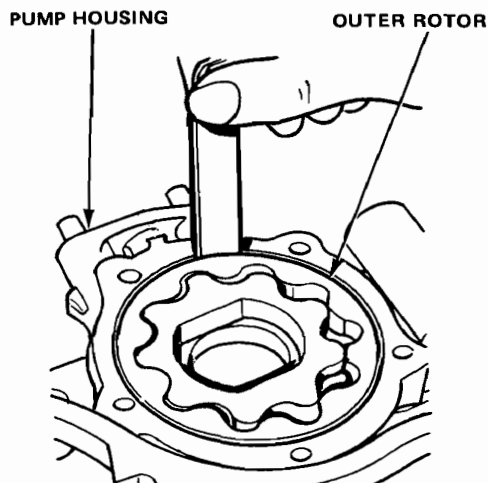

14. Inspect both rotors and pump housing for scoring or other damage.
Replace parts as necessary.
15. Remove the old oil seal from the oil pump.
16. Gently tap in the new oil seal until the tool bottoms on the pump.

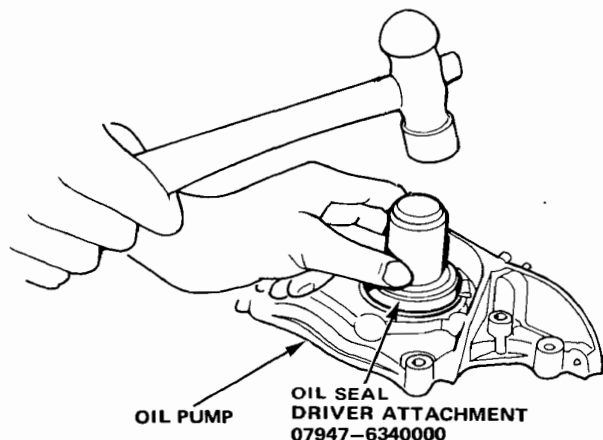

17. Reassemble the oil pump, applying locking fluid to the pump housing screws.

18. Check that the oil pump turns freely.


19. Apply a light coat of oil to the seal lip.

20. Install the two dowel pins and new O-ring on the cylinder block.

21. Apply liquid gasket to the cylinder block mating surface of the oil pump.

NOTE:

- Use HONDA PART NO. 08740-99986 as a liquid gasket.
- Check that the mating surfaces are clean and dry before applying liquid gasket.
- Apply liquid gasket evenly, in a narrow bead centered on the mating surface.
- To prevent leakage of oil, apply liquid gasket to the inner threads of the bolt holes.
- Do not allow the liquid gasket to dry before assembly.
- Fill the case with clean engine oil 30 minutes after assembly.

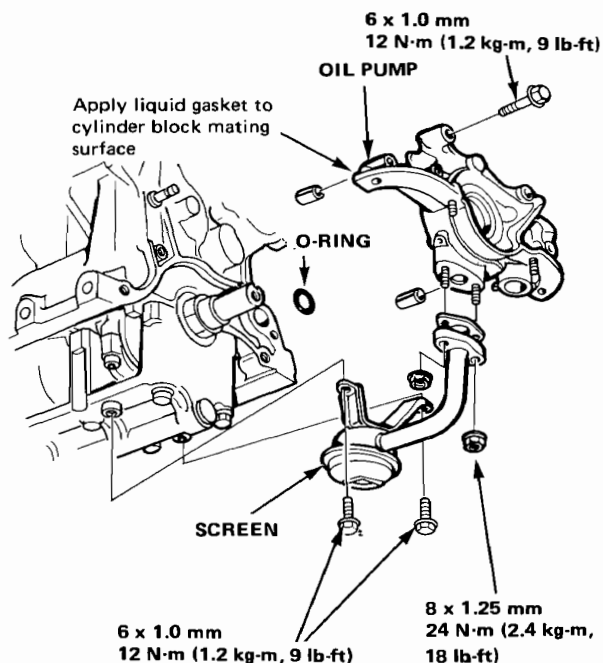


22. Install the oil pump on the cylinder block.

23. Install the oil screen.


Intake Manifold/Exhaust System

Intake Manifold Replacement

(Expect Coupe)


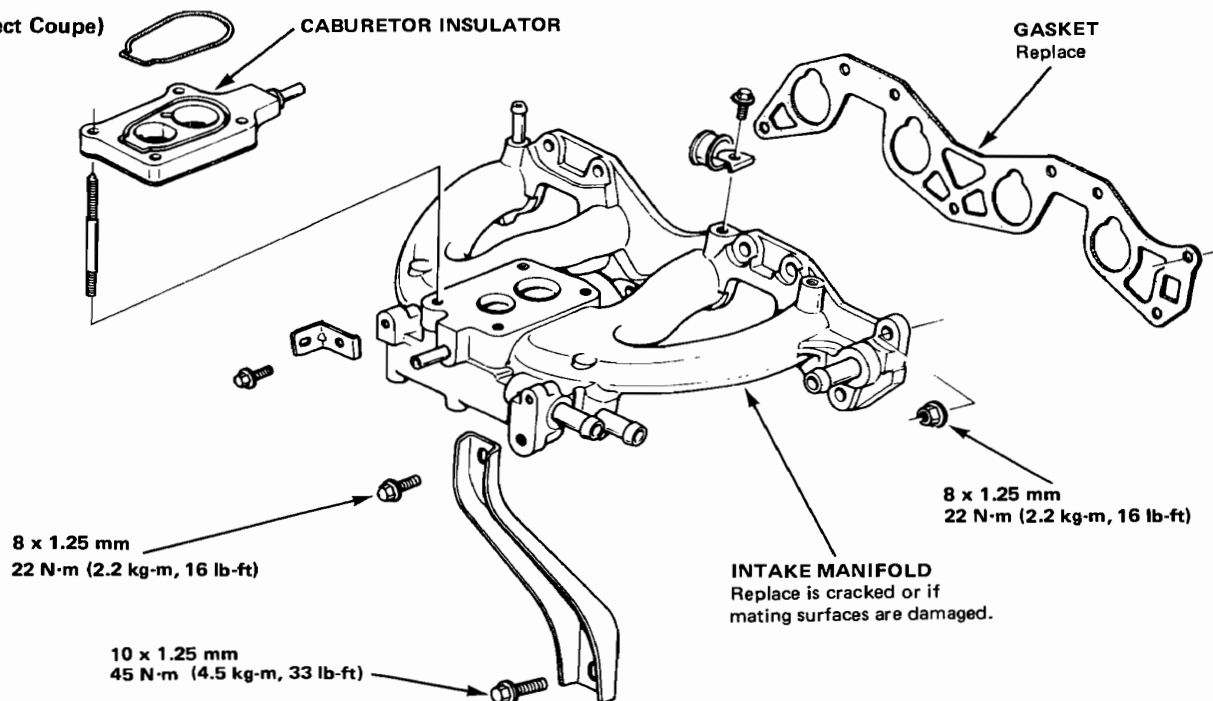


(Coupe)

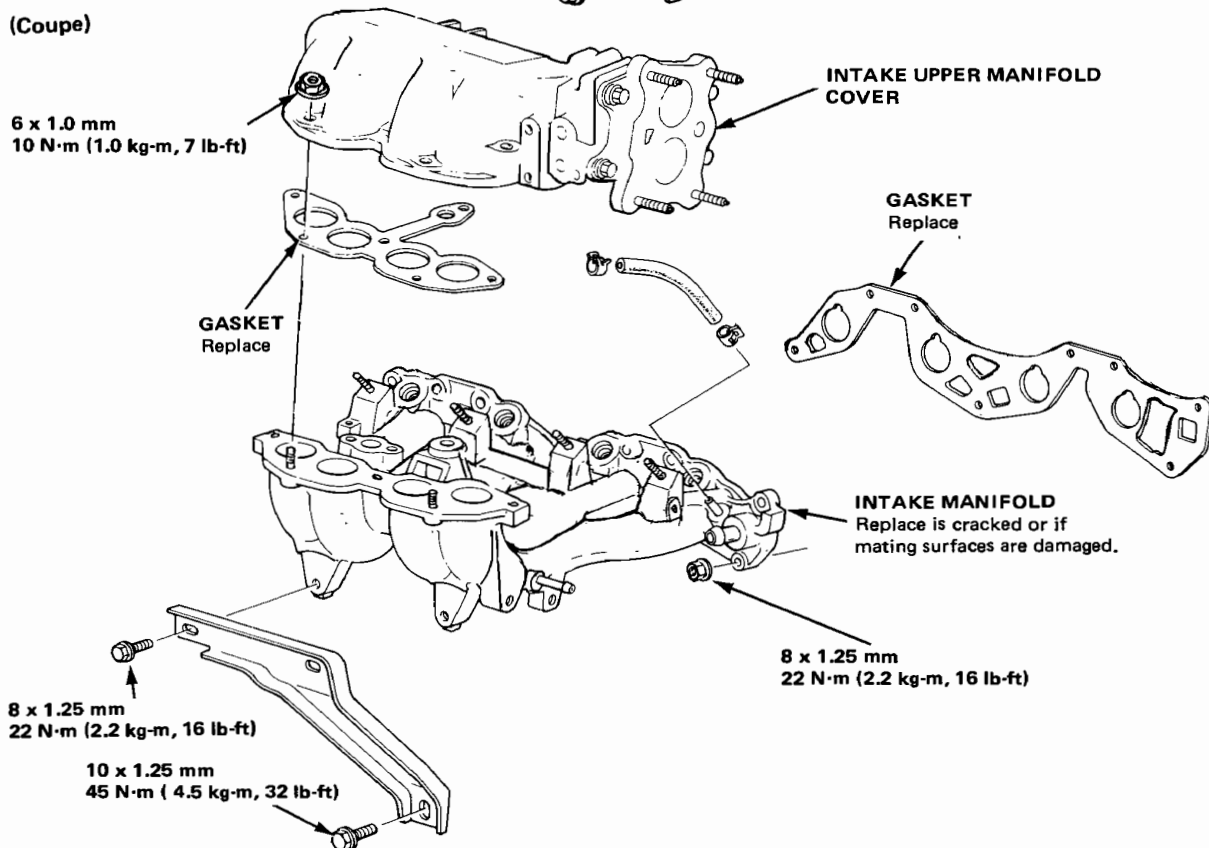




Exhaust Manifold Replacement

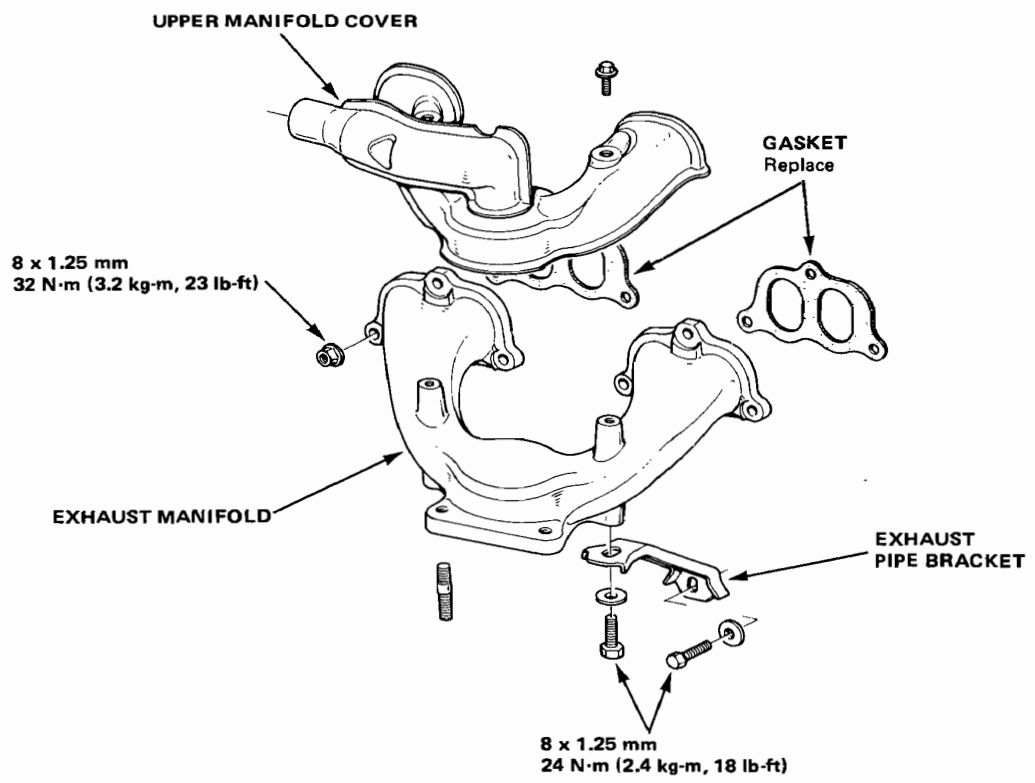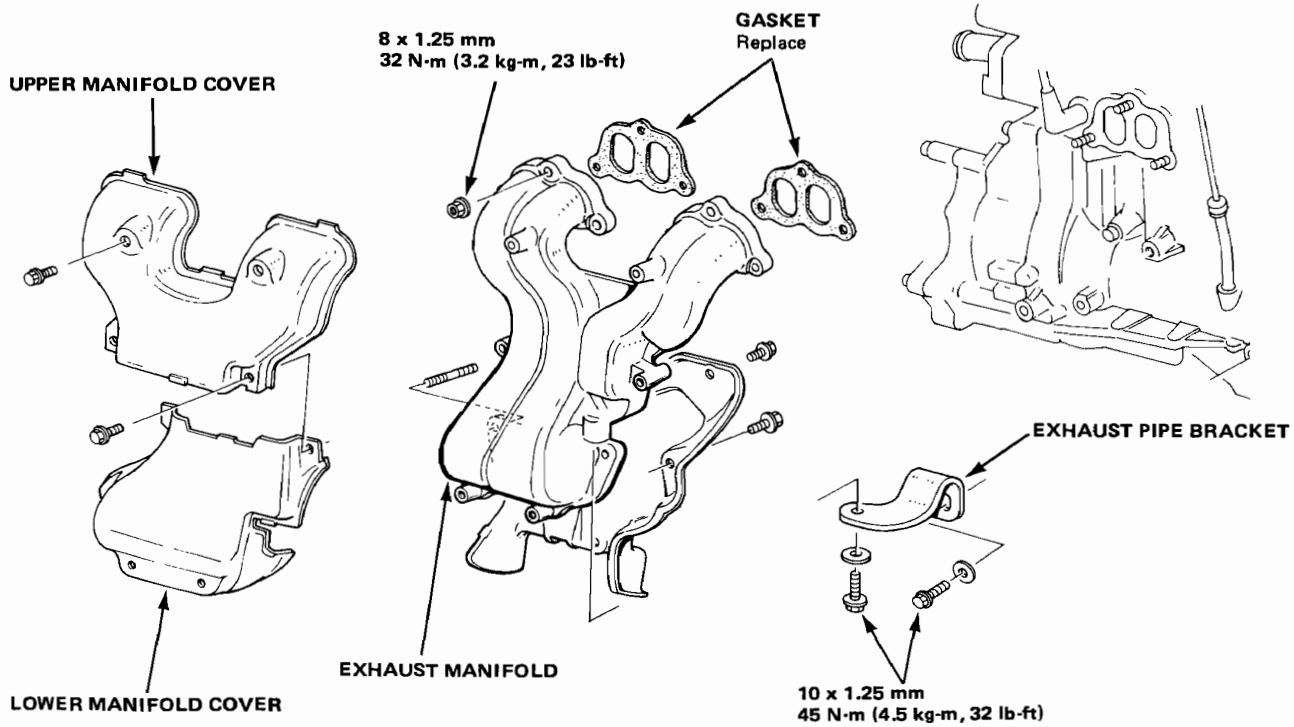

Intake Manifold/Exhaust System

Exhaust Pipe and Muffler Replacement

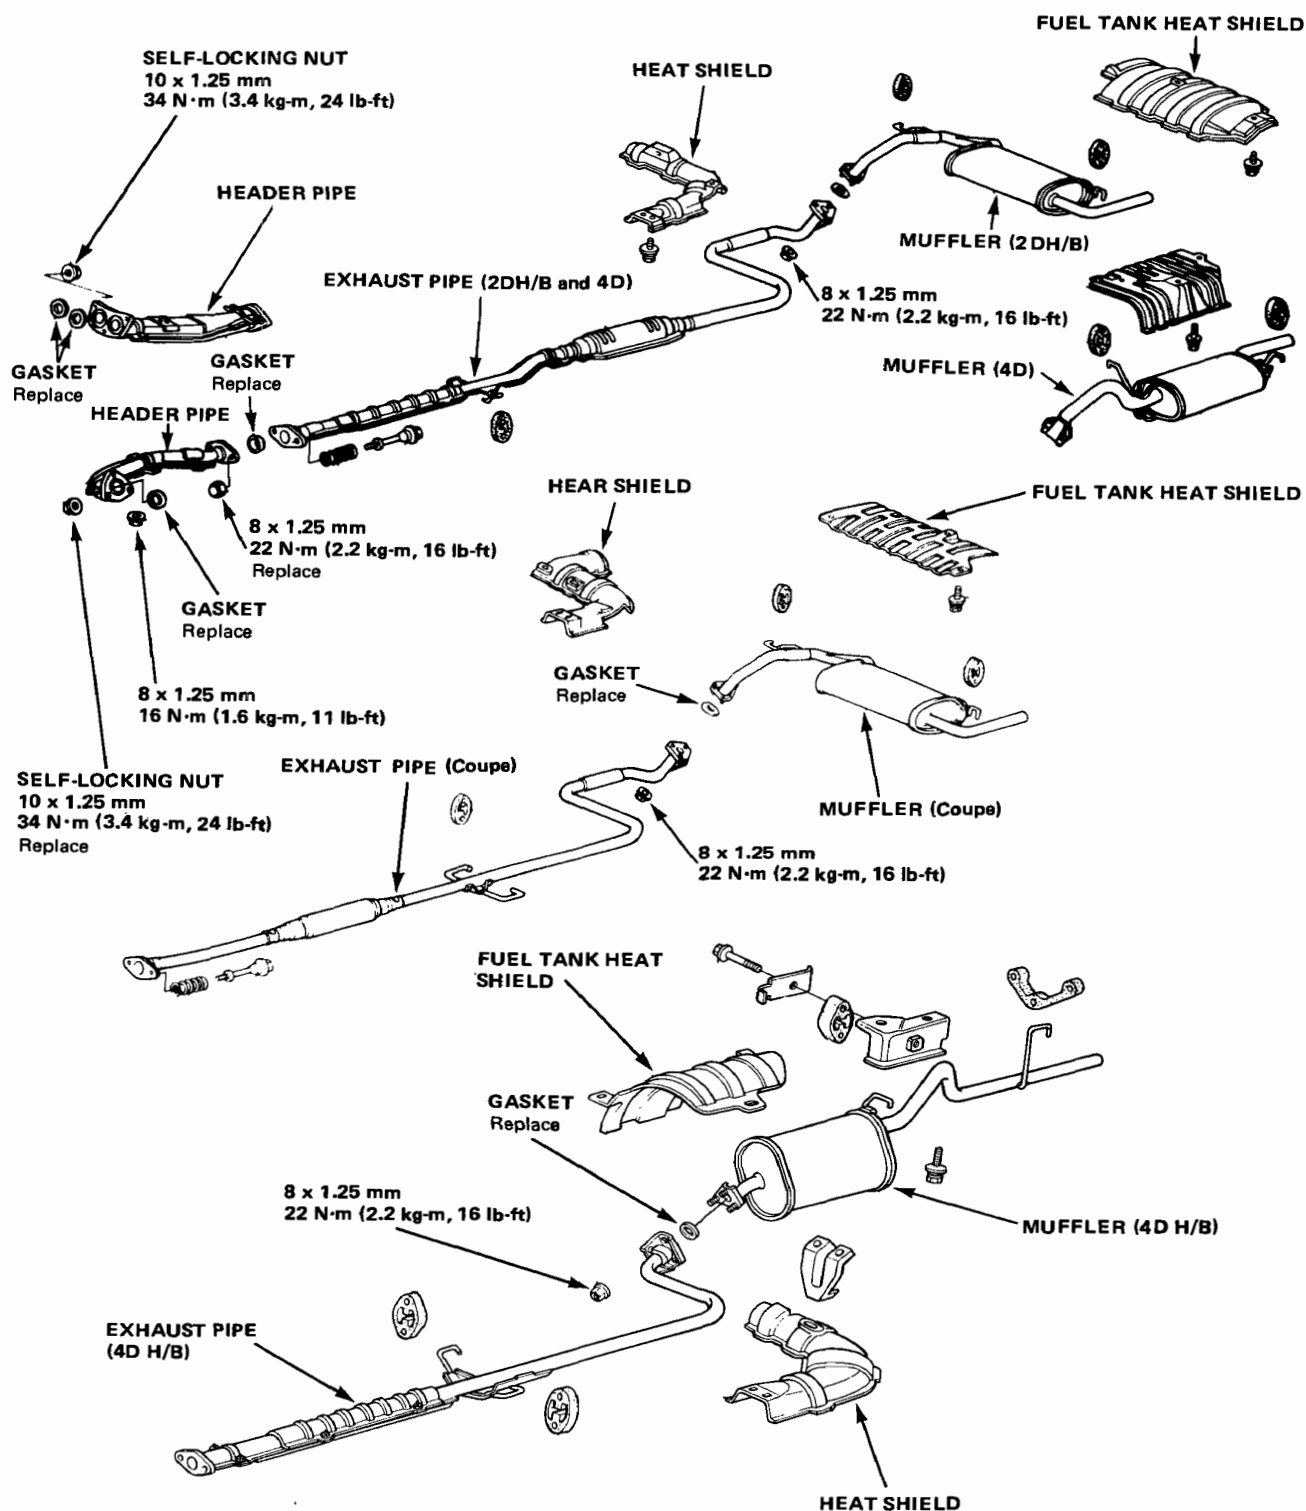

Radiator

Replacement

(Except Coupe)

WARNING

- System is under high pressure when engine is hot. To avoid danger of releasing scalding coolant, remove cap only when engine is cool.

Total Cooling System Capacity (Incl. heater, incl. reservoir tank):

See Specifications Section, page 3-3.

CAUTION: If any coolant spills on painted portions of the body, rinse it off immediately.

NOTE:

- Check all cooling system hoses for damage, leaks or deterioration and replace if necessary.
- Check all hose clamps and retighten if necessary.
- Use new O-ring whenever reassembling.

RADIATOR


Leak test, page 10-5

Refilling, page 10-4

Inspect soldered joints and seams for leaks.

Blow dirt out from between core fins with compressed air.

If insects, etc., are clogging radiator, wash them off with low pressure water

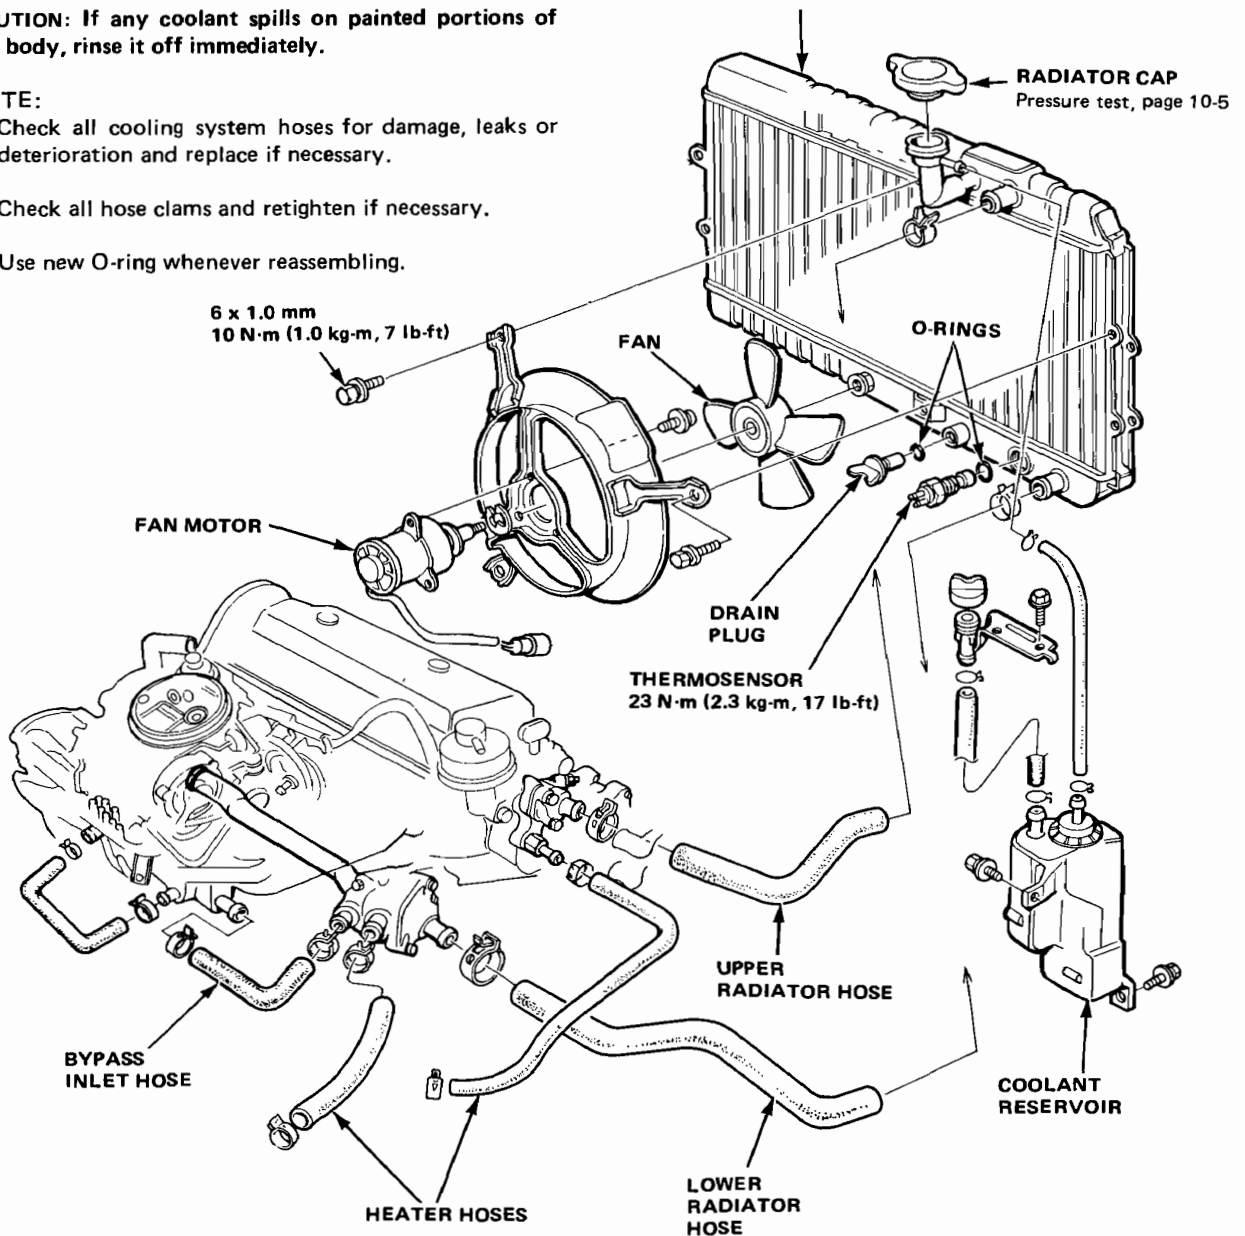



(Coupe)

WARNING

- System is under high pressure when engine is hot. To avoid danger of releasing scalding coolant, remove cap only when engine is cool.

Total Cooling System Capacity (Incl. heater, incl. reservoir tank): 5.1 liter (1.3 U.S. gal., 1.1 Imp. gal.)

CAUTION: If any coolant spills on painted portions of the body, rinse it off immediately.

NOTE:

- Check all cooling system hoses for damage, leaks or deterioration and replace if necessary.
- Check all hose clamps and retighten if necessary.
- Use new O-ring whenever reassembling.

RADIATOR

Leak test, page 10-5

Refilling, page 10-4


Inspect soldered joints and seams for leaks.

Blow dirt out from between core fins with compressed air.

If insects, etc., are clogging radiator, wash them off with low pressure water

RADIATOR CAP

Pressure test, page 10-5

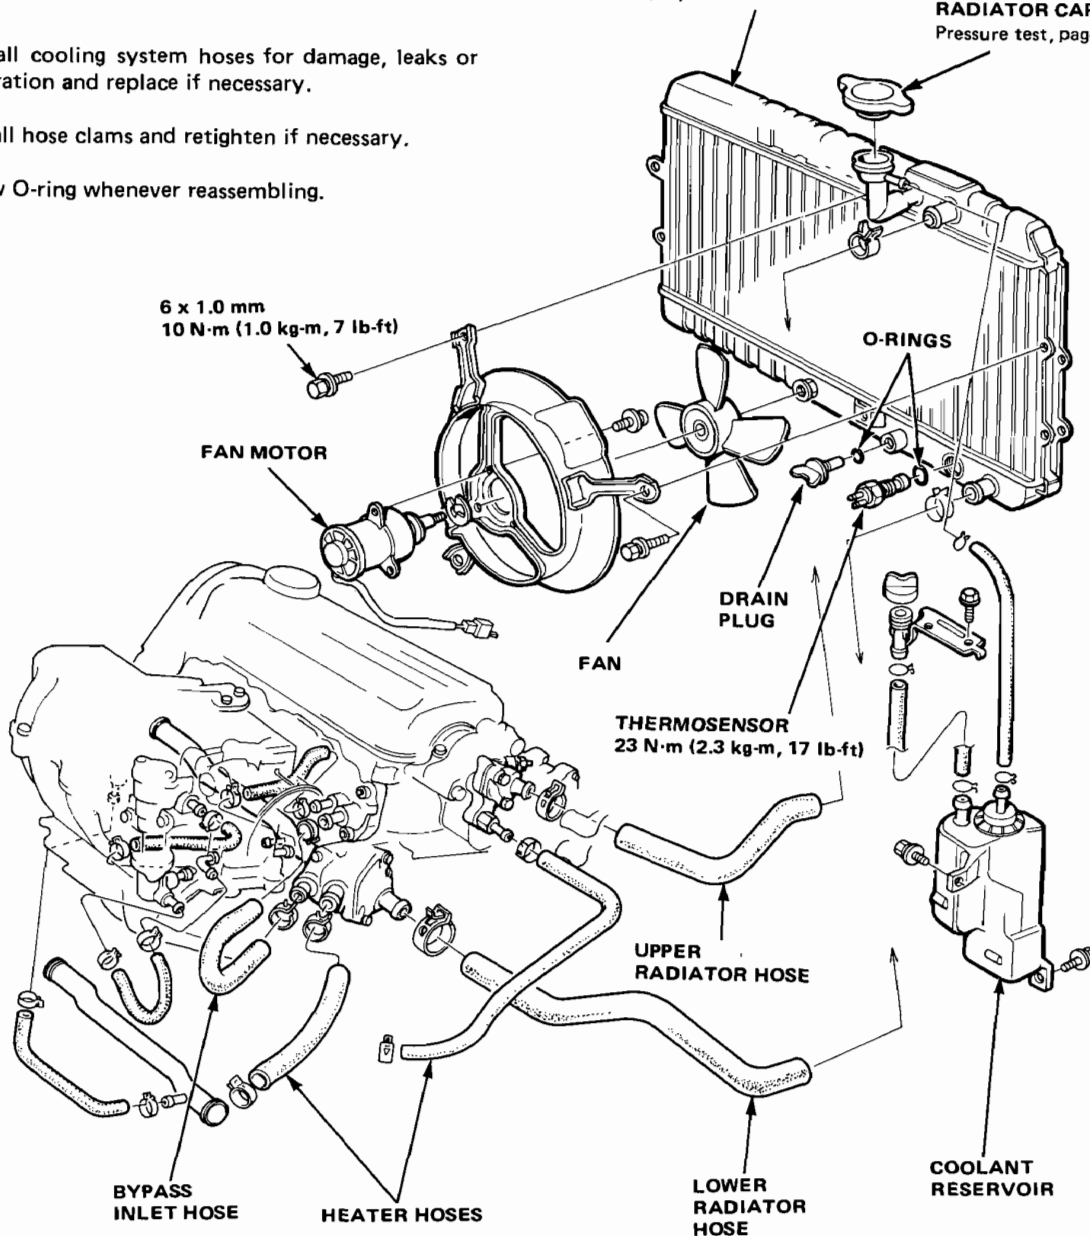

Radiator

Refilling and Bleeding

1. Set the heater temperature lever to maximum heat.
2. When the radiator is cool, remove the radiator cap and drain plug, and drain the radiator.
3. Reinstall the radiator drain plug and tighten it securely.
4. Remove, drain and reinstall the reserve tank. Fill the tank halfway to the MAX mark with water, then up to the MAX mark with coolant.
5. Mix the recommended anti-freeze with an equal amount of water, in a clean container.

NOTE:


- Use only HONDA-RECOMMENDED anti-freeze/coolant.
- For best corrosion protection, the coolant concentration must be maintained year-round at 50% MINIMUM. Coolant concentrations less than 50% may not provide sufficient protection against corrosion or freezing.
- Coolant concentrations greater than 60% will impair cooling efficiency and are not recommended.

CAUTION:

- Do not mix different brand anti-freeze/coolants.
- Do not use additional rust inhibitors or anti-rust products; they may not be compatible with the recommended coolant.

Radiator Coolant Refill Capacity (Incl. reserve tank): See Specifications Section, page 3-3.

6. Loosen the air bleed bolt in the water outlet, then fill the radiator to the bottom of the filler neck with the coolant mixture. Tighten the bleed bolt as soon as coolant starts to run out in a steady stream without bubbles.

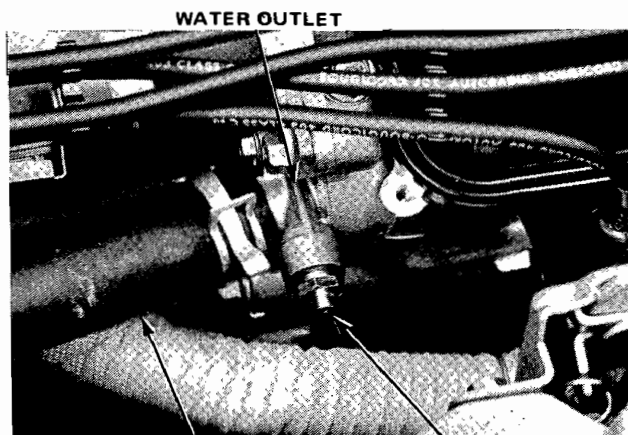

UPPER WATER HOSE

BLEED BOLT

10 x 1.25 mm


10 N·m (1.0 kg-m, 7 lb-ft)

7. With the radiator cap off, start the engine and let it run until warmed up (fan goes on at least twice). Then, if necessary add more coolant mix to bring the level back up to the bottom of the filler neck.
8. Put the radiator cap on, then run the engine again and check for leaks.



Cap Testing


1. Remove the radiator cap, wet its seal with coolant, then install it on the pressure tester.
2. Apply a pressure of 0.75–1.05 kg/cm² (78–98 kPa, 11–14 psi).
3. Check for a drop in pressure.

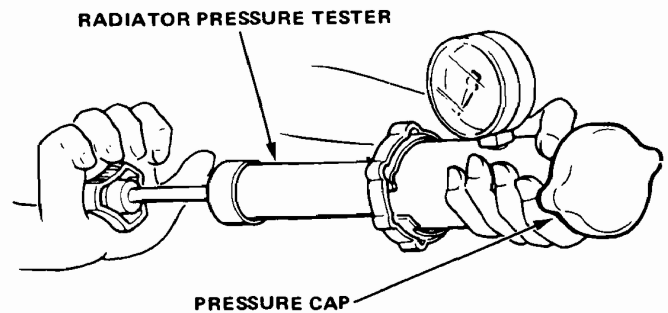

Radiator Testing


1. Wait until the engine is cool, then carefully remove the pressure cap and fill the radiator with coolant to the top of the filler neck.
2. Attach the pressure tester to the radiator and apply a pressure of 0.75–1.05 kg/cm² (78–98 kPa, 11–14 psi).
3. Inspect for coolant leaks and a drop in pressure.
4. Remove the tester and reinstall the pressure cap.

NOTE: Check for engine oil in coolant and/or coolant in engine oil.

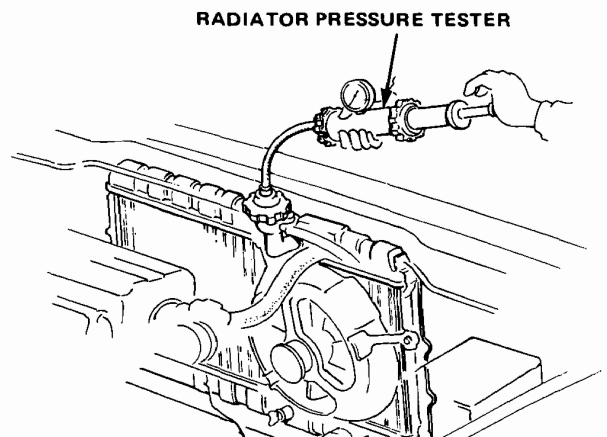

Thermostat

Replacement

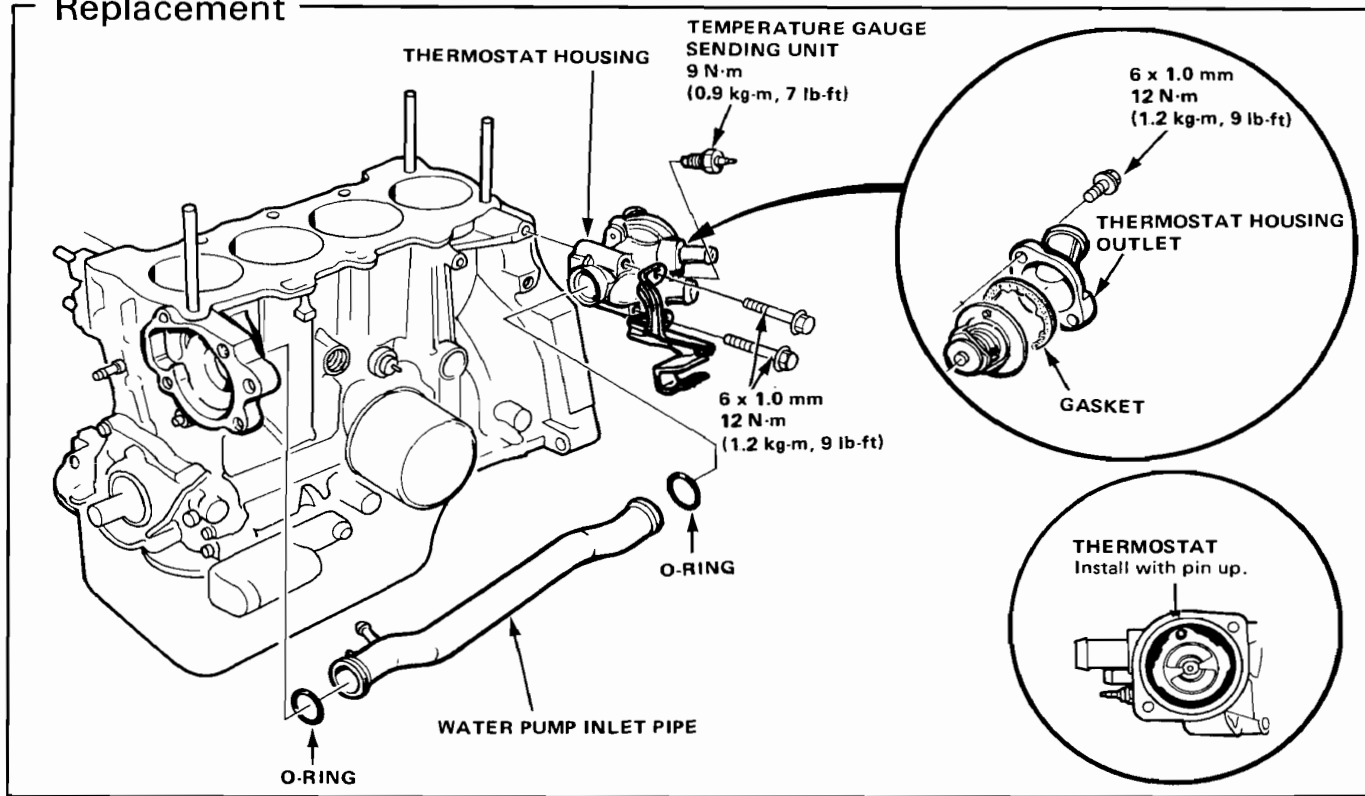

Thermostat Testing

Replace thermostat if it is open at room temperature.

To test a closed thermostat:


1. Suspend the thermostat in a container of water as shown.
2. Heat the water and check the temperature with a thermometer. Check the temperature at which the thermostat first opens and at full lift.

CAUTION: Do not let thermometer touch bottom of hot container.

3. Measure lift height of thermostat when fully open.

STANDARD THERMOSTAT

Lift height: 8 mm (0.32 in.)
Starts opening: 76–80°C (169–176°F)
Fully open: 91°C (196°F)

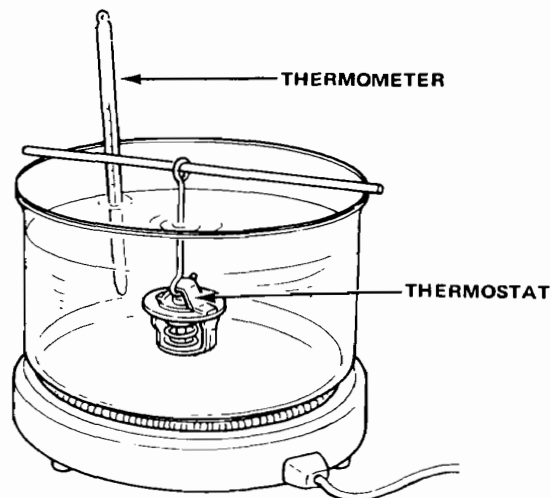


Water Pump, Temperature Gauge



Replacement

NOTE: Use new gaskets and O-rings whenever reassembling.

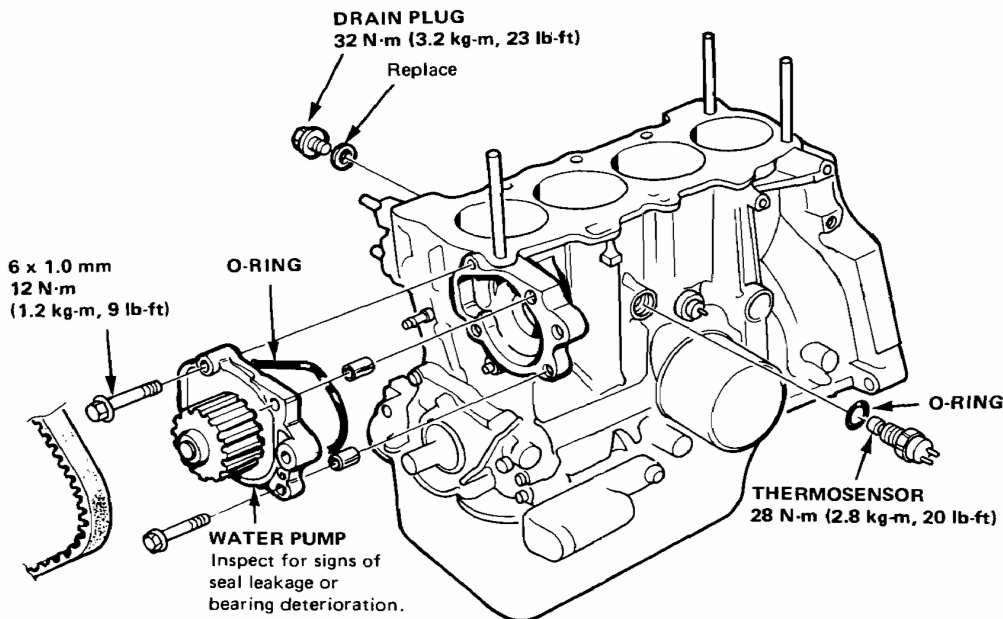

Temperature Gauge Testing

NOTE: If both the temperature gauge and fuel gauge malfunction simultaneously (and show H and F respectively), replace the fuel/temp gauge assembly.



1. Disconnect the yellow/green wire from the temperature gauge sending unit and short it to ground.
2. Turn the ignition switch to ON.
3. The temperature gauge needle should move all the way to H.

If not, check the fuse, wiring and connections; if all are OK, replace the gauge.


CAUTION: Do not leave sending unit wire grounded for longer than a few seconds or temperature gauge will be damaged.

4. Turn ignition switch off.

TEMPERATURE GAUGE

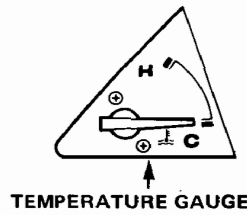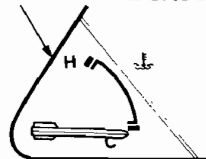

TEMPERATURE GAUGE

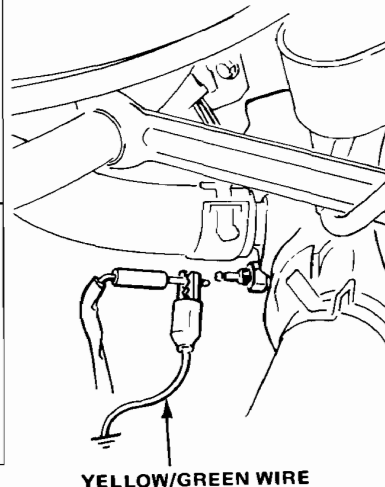

YELLOW/GREEN WIRE

Fan Thermosensor




Testing

The cooling fan motor is actuated by a thermosensor located in the right tank of the radiator. Run the engine until the coolant temperature reaches $88.5\text{--}91.5^{\circ}$ ($191\text{--}197^{\circ}\text{F}$). The fan motor should start running.

The fan motor should stop when the coolant temperature drops to $82\text{--}88^{\circ}\text{C}$ ($180\text{--}190^{\circ}\text{F}$).

If the fan motor does not start:

1. Disconnect the black and the blue wire leads from the cooling fan thermosensor and short the wires together.
 2. Turn the ignition switch on.
 3. The cooling fan motor should start running.
- If the motor runs, replace the cooling fan thermosensor and re-test.
 - If the motor does not run, check for battery voltage from the blue wire lead (positive) to the black wire lead (negative) of the cooling fan motor.
 - If voltage is not available, check for a blown or faulty fuse, loose terminals and connectors, and open circuit.
 - If voltage is available, check for faulty cooling fan motor.

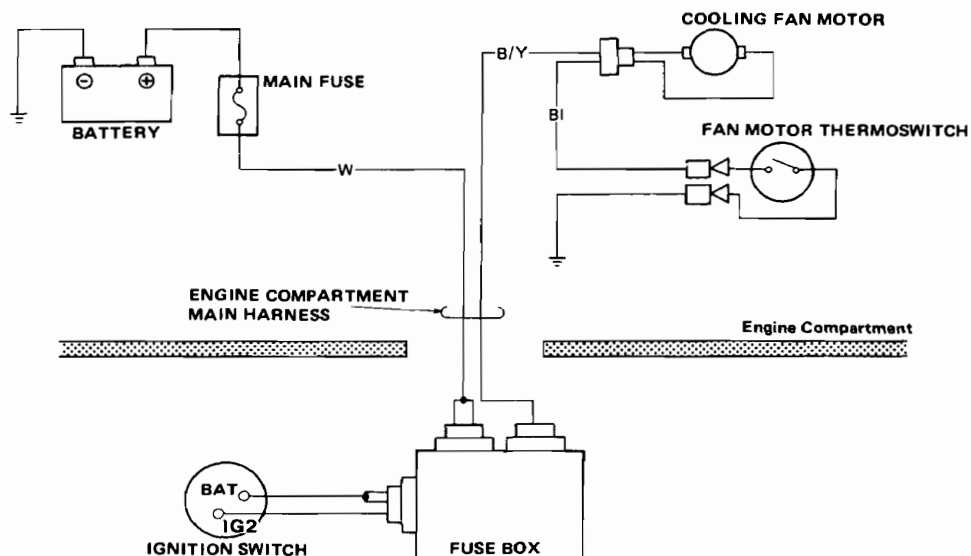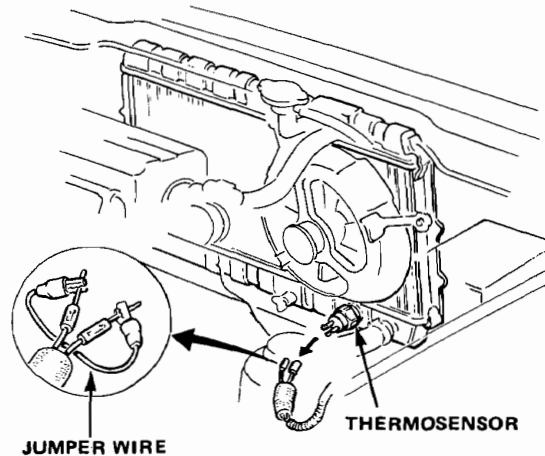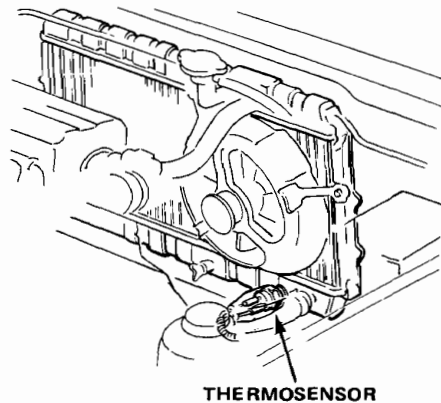





Temperature Gauge Sending Unit

Testing

1. Disconnect the yellow/green wire from the sending unit.

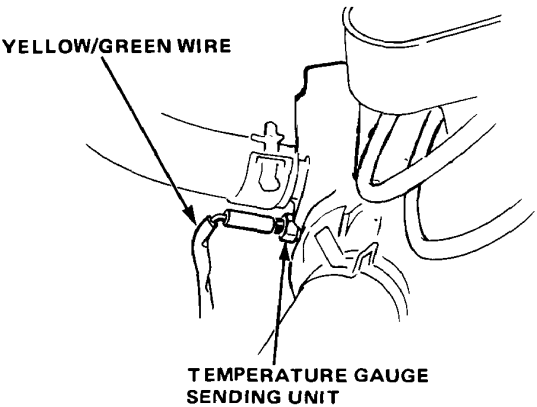


2. With the engine cold, use an ohmmeter to measure the resistance between the sending unit terminal and the engine.
3. Check the temperature of the coolant as shown.

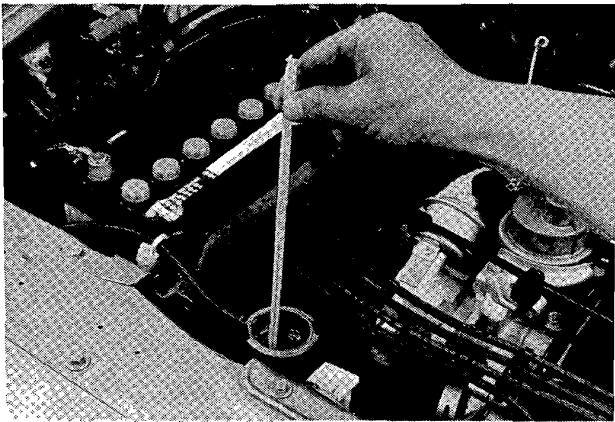

4. Run the engine and measure the change in resistance with engine at operating temperature.

Temperature	50°C (122°F)	80°C (176°F)
Resistance (ohms)	154 +22 -20	52 +4.9 -4.4

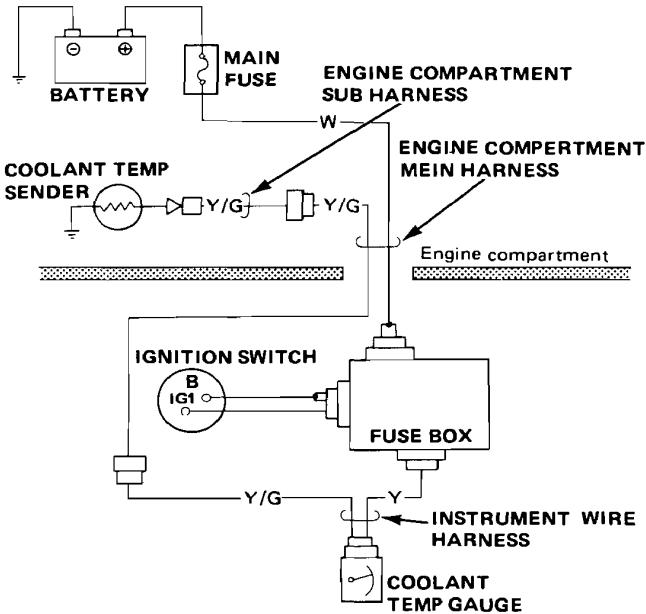


Preparation of Work

Special Caution Items For This Section

1. Troubleshooting for PGM-FI


- First, check the self-diagnosis lamps on the control unit.



- Be sure to turn the ignition switch OFF before disconnecting or connecting the coupler.
- In case there is some abnormality and yet the self-diagnosis lamp is not lighted, carry out the inspection by following the numerical order of the self-diagnosis lamp indication given in the troubleshooting table. (Page, 11-6 to 8)
- After the completion of any inspection or repair work for PGM-FI system, be sure to leave the (—) terminal of the battery disconnected for ten seconds or more to reset the control unit.


2. Fuel Line Servicing

- Relieve fuel pressure by loosening the service bolt provided on the top of the fuel filter before disconnecting a fuel hose or a fuel pipe. (Page 11-25)

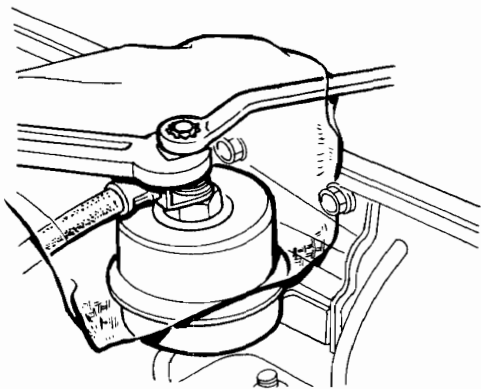


- Be sure to replace washers, O-rings, and seal rubbers with new ones when servicing fuel line parts.

SEAL RUBBER



- When assembling the flare joint of the high-pressure fuel line, clean the joint and coat with new engine oil.
- When installing an injector, check the angle of the coupler. The center line of the coupler should align with the setting mark on the injector holder.

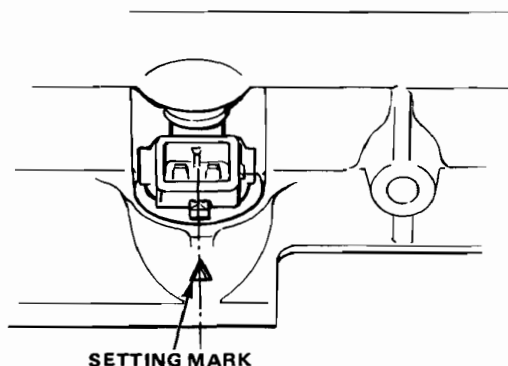

3. Inspection for fuel leakage

- After assembling fuel line parts, turn ON the ignition switch (do not operate the starter) so that the fuel pump is operated for approximately two seconds and the fuel is pressurized. Repeat this operation two or three times and check whether any fuel leakage has occurred in any of the various points in the fuel line.

4. Installation of an amateur radio


Care has been taken for the PGM-FI control unit (computer) and its wiring to prevent erroneous operation from external interference, but erroneous operation of the computer may be caused by entry of extremely strong radio waves. Attention must be paid to the following items to prevent erroneous operation of the computer.

- The antenna and the body of the radio must be at least 200 mm (7.9 in.) away from the computer. (The computer installation position is under the right side seat.)
- Do not lead the antenna feeder and the coaxial cable over a long distance parallel to the wiring, and when crossing with the wiring is required, execute crossing at a right angle.
- Do not install a radio with a large output (max. 10 W).


PGM-FI System



Index

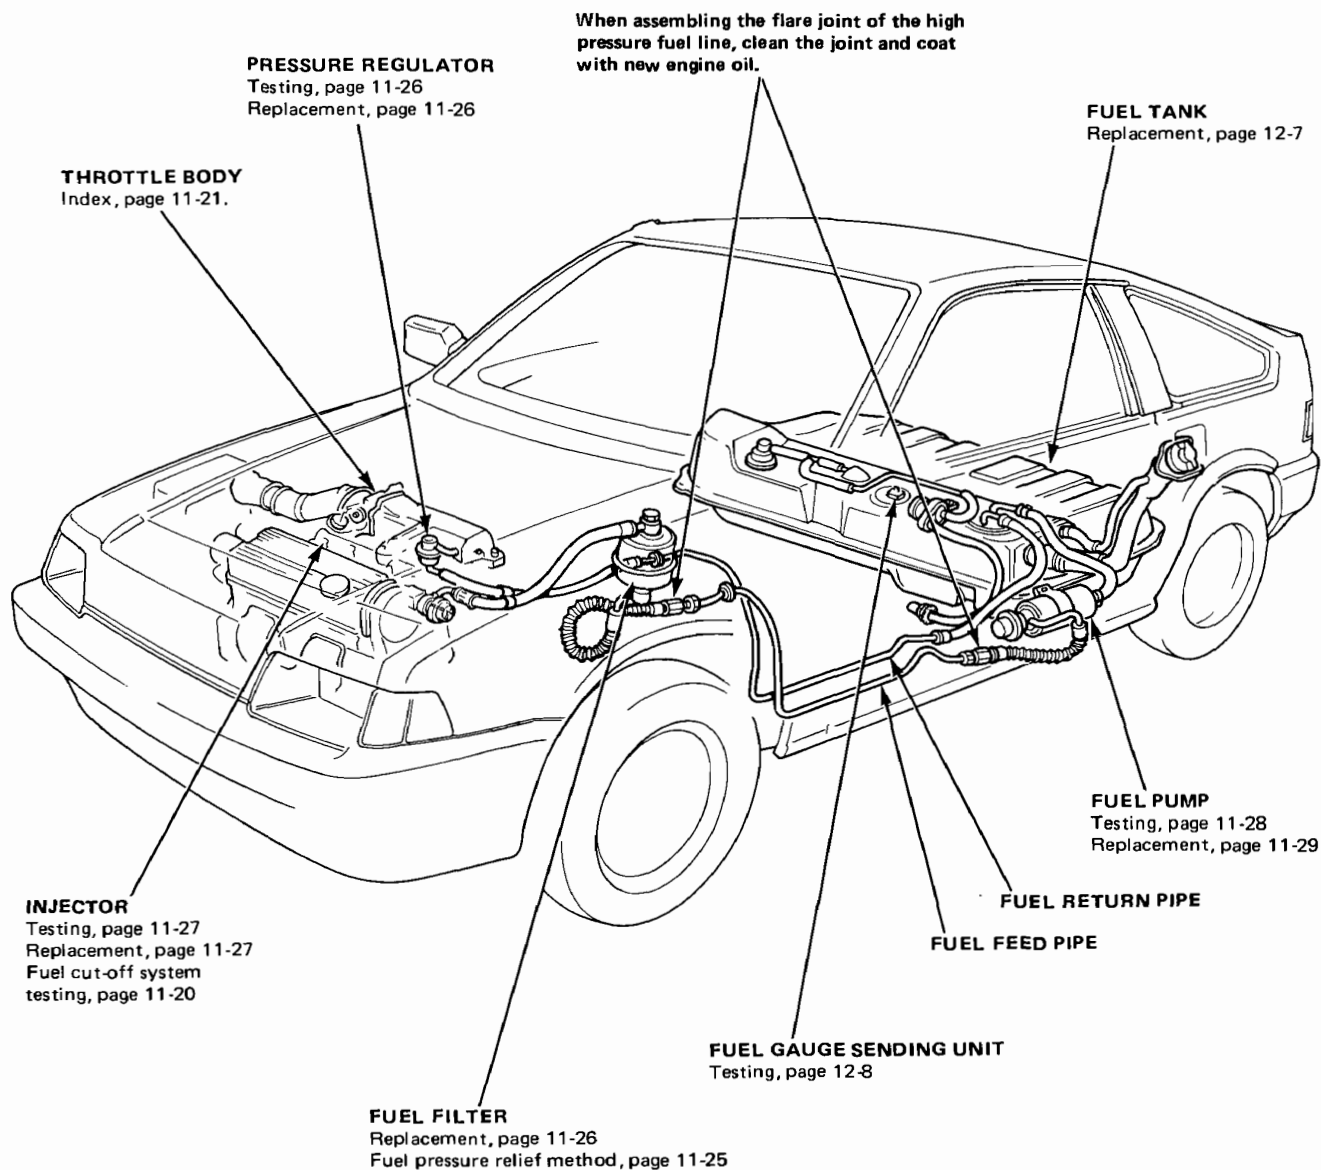


Wiring Diagram





Wire Arrangement in Connectors

NOTE: THE ILLUSTRATED WIRE ARRANGEMENT IS THE VIEW FROM THE WIRE SIDE OF THE CONNECTOR.

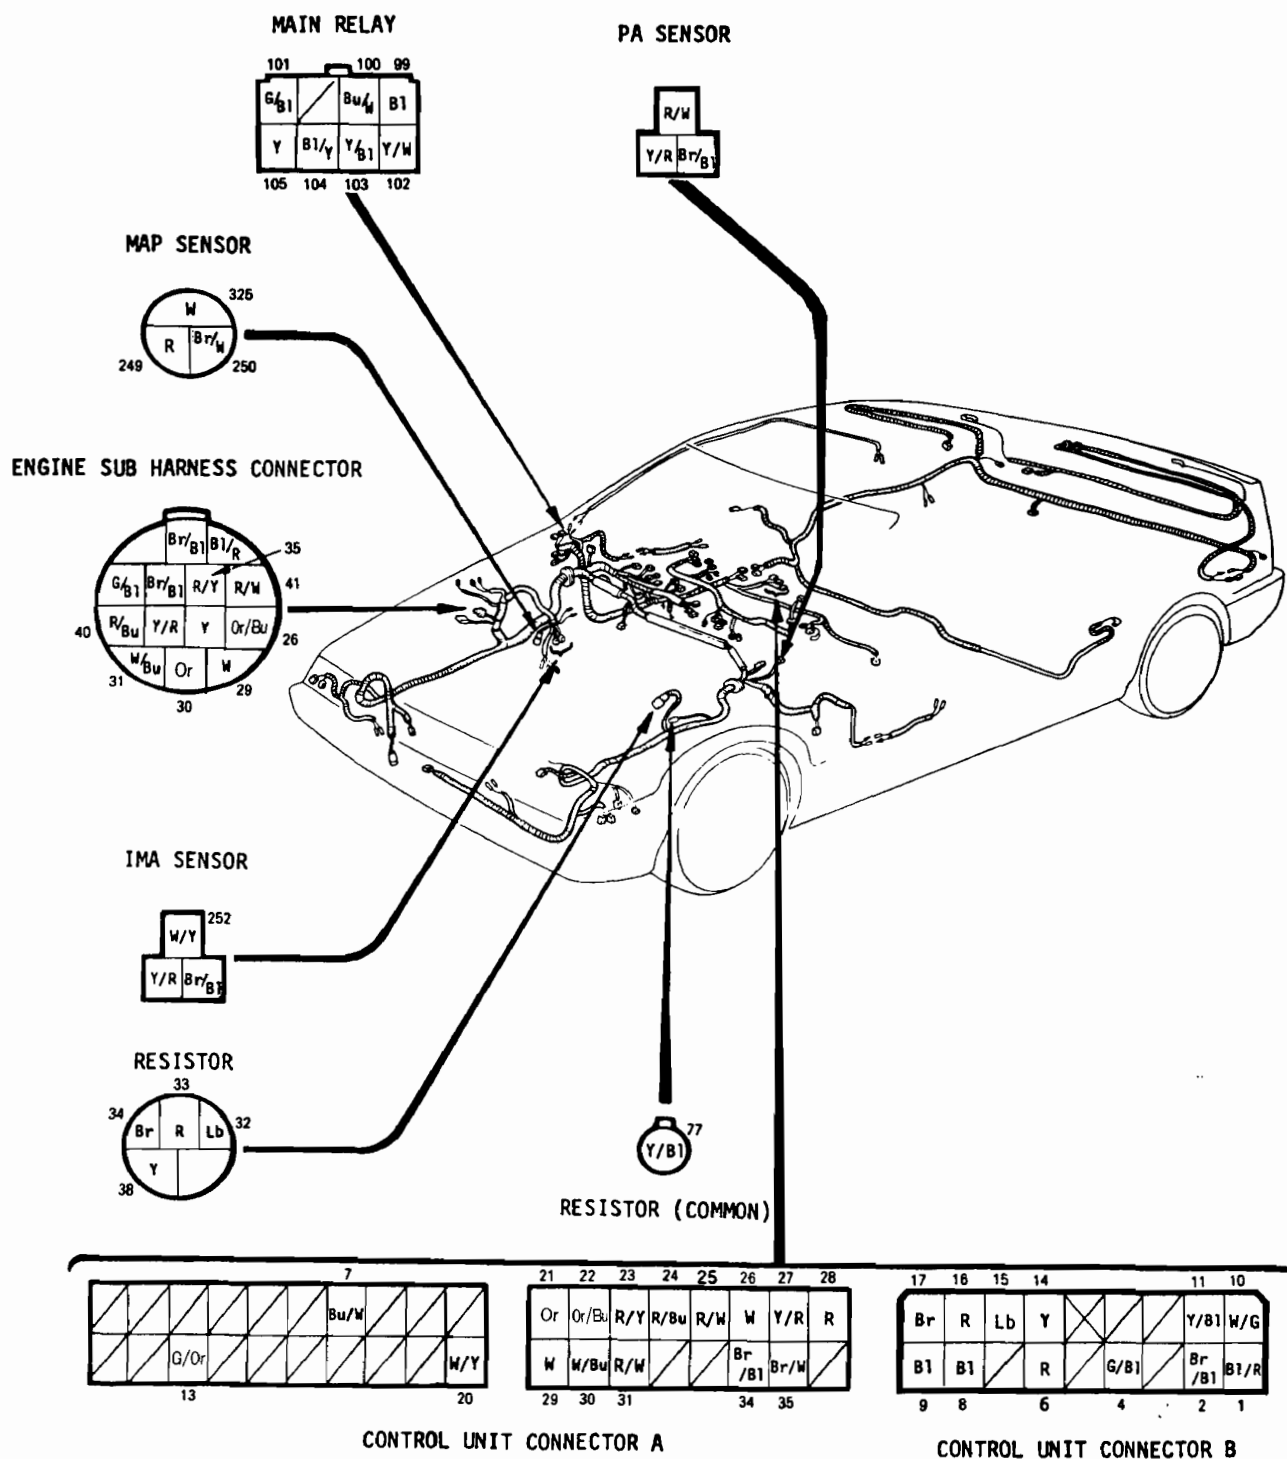

PGM-FI System

Troubleshooting Chart

CAUSAL PART SYMPTOM		ENGINE	AIR CLEANER	BLOW-BY SYSTEM	IGNITION	ELC. POWER SOURCE	CONTROL UNIT	INJECTOR	FUEL PUMP	FUEL LINE
DIFFICULT TO START ENGINE	WHEN COLD				DISTRIB'TR /IG COIL FAILURE	BLOWN FUSE MAIN RELAY FAILURE	CONTROL UNIT FAILURE	OPEN/SHORT CIRCUIT DAMAGED INJECTOR	PUMP/MAIN RELAY FAIL- URE POOR GND	FROZEN FUEL LINE CLOGGED FILTER
	AT RESTART- ING WHEN HOT						↑	STUCK IN- JECTOR CURRENT LEAKAGE VAPOR LOCK		VAPOR LOCK
IRREGULAR IDLING	WHEN COLD	LACK OF TAPPET CL. EXCESSIVE PLUG GAP			DISTRIB'TR /IG COIL FAILURE DISCONN'TD VAC'M TUBE		↑	OPEN/SHORT CIRCUIT EXCESSIVE CONTACT RESISTANCE		
	AFTER WARMING UP	↑		CLOG'D TUBE /PCV VALVE STUCK PCV VALVE	↑		↑	↑		
	AFTER RESTARTING WHEN HOT	↑		↑	↑		↑	↑ VAPOR LOCK		VAPOR LOCK
	RPM TOO HIGH			↑						
TEND TO STALL	WHILE WARMING UP						CONTROL UNIT FAILURE	OPEN/SHORT CIRCUIT	PUMP/MAIN RELAY FAIL- URE POOR GND	INCORRECT FUEL PRES- SURE CLOGGED FILTER
	AFTER WARMING UP	LACK OF TAPPET CL. EXCESSIVE PLUG GAP		CLOG'D TUBE /PCV VALVE STUCK PCV VALVE			↑	↑		↑
POOR PERFORM- ANCE	POOR DRIV- ABILITY LARGE FUEL CONSUMPT'N	INCORRECT TAPPET ADJUSTMENT	LARGE SUCTION RESISTANCE		DISTRIB'TR FAILURE DISCONN'TD VAC'M TUBE		↑	OPEN/SHORT CIRCUIT EXCESSIVE CONTACT RESISTANCE		↑
	AFTER BURN	LACK OF TAPPET CL.			DISCONN'TD /TORN VAC'M TUBE		↑			
	BACK FIRE				↑		↑	WRONG WIR- ING EXCESSIVE CONTACT RESISTANCE	PUMP/MAIN RELAY FAILURE POOR GND	INCORRECT FUEL PRES- SURE CLOGGED FILTER
	KNOCKING						↑	↑		↑
	LACK OF POWER AT LOW RPM	INCORRECT TAPPET CL. LACK OF COMPRESS'N			DISTRIB'TR FAILURE DISCONN'TD VAC'M TUBE		↑	↑		↑
	LACK OF POWER AT MID RPM	↑	LARGE SUCTION RESISTANCE		↑		↑	↑		↑
	LACK OF POWER AT HIGH RPM		↑		DISTRIB'TR FAILURE		↑			
WARNING LAMP TURNS ON	PGM-FI LAMP						⊙			
	SELF DIAG- NOSIS LAMP									



THROTTLE BODY	TDC/CYL SENSOR	MAP SENSOR	PA SENSOR	TW SENSOR	THROTTLE SENSOR	TA SENSOR	IMA SENSOR	IDLE CONTROL SOL'ND	IMPORTANT NOTES
STUCK AIR BY-PASS VALVE	OPEN/SHORT CIRCUIT SENSOR FAILURE			OPEN/SHORT CIRCUIT SENSOR FAILURE					CHECK FUEL PUMP AND INJECTOR, POSSIBLE TO START BY OPENING THROTTLE? (STUCK AIR BY-PASS VALVE)
	↑								VAPOR LOCK (FUEL LINE) POSSIBLE TO START BY OPENING THROTTLE? (VAPOR LOCK IN INJECTOR)
STUCK AIR BY-PASS VALVE				OPEN/SHORT CIRCUIT SENSOR FAILURE					CHECK IGNITION SPARK AND INJECTORS
STUCK AIR BY-PASS VALVE	OPEN/SHORT CIRCUIT SENSOR FAILURE	OPEN/SHORT CIRCUIT SENSOR FAILURE						SOLENOID VALVE REMAINS CLOSED	
	↑	↑						↑	CHECK VAPOR LOCK IN FUEL LINE PCV VALVE CLOGGED?
STUCK AIR BY-PASS VALVE		↑						SOLENOID VALVE REMAINS OPEN	CHECK FAST IDLE VALVE
				OPEN/SHORT CIRCUIT SENSOR FAILURE		OPEN/SHORT CIRCUIT SENSOR FAILURE			CHECK FAST IDLE VALVE CHECK TW SENSOR
	OPEN/SHORT CIRCUIT SENSOR FAILURE								IDLING O.K.? FUEL CUT O.K.?
	↑	OPEN/SHORT CIRCUIT SENSOR/TUBING FAILURE	OPEN/SHORT CIRCUIT SENSOR FAILURE	OPEN/SHORT CIRCUIT SENSOR FAILURE	OPEN/SHORT CIRCUIT SENSOR FAILURE	OPEN/SHORT CIRCUIT SENSOR FAILURE	OPEN/SHORT CIRCUIT SENSOR FAILURE	IDLE CONTROL SYSTEM FAILURE	
		↑		↑	↑				IGNITION TIMING O.K.? FUEL CUT O.K.?
		↑		↑					IGNITION TIMING MAP SENSOR INJECTORS O.K.?
				↑	OPEN/SHORT CIRCUIT SENSOR FAILURE				IGNITION TIMING O.K.?
				↑	↑				IGNITION TIMING (VAC. ADVANCER TUBE) INJECTORS
		OPEN/SHORT CIRCUIT SENSOR/TUBING FAILURE		↑	↑				IGNITION TIMING
SECONDARY VALVE NOT OPENING FULLY		↑							SECONDARY THROTTLE VALVE OPENS FULLY? MAP SENSOR THROTTLE SENSOR
			⊙			⊙	⊙		
	TDC CYL SENSOR	⊙⊙⊙⊙ ⊙⊙⊙⊙	⊙⊙⊙⊙	⊙⊙⊙⊙	⊙⊙⊙⊙	⊙⊙⊙⊙	⊙⊙⊙⊙		


PGM-FI System

Selfdiagnosis System

No.	LAMP PATTERN	PGM-FI LAMP	FAILURE ATTRIBUTABLE TO:	SYMPTOM
0	○○○○	☼	* Control Unit * Short-circuit in combination meter	* Engine cannot be started * No noticeable symptom
3	○○☼☼		* MAP sensor * Disconnected MAP sensor coupler * Open/shorted MAP sensor wiring	* Poor pick-up response of engine * Idle speed lowers * Engine tend to stall
5	○☼○☼		* Disconnected MAP sensor vacuum tube	* Spark plugs tend to foul * Idle speed lowers * Engine tend to stall
6	○○☼☼○		* TW sensor * Disconnected TW sensor coupler * Open circuit in TW sensor wiring	* Difficult to start when cold * Idle speed too high when warming-up
7	○○☼☼☼		* Throttle sensor * Disconnected throttle sensor coupler * Open/Shorted throttle sensor wiring	* Poor pick-up response when cold * Poor quick revving response * Starting car not smooth when cold
8	☼○○○		* TDC sensor * Open/shorted wiring of the sensor * Disconnected coupler of the sensor	* Irregular idle speed * Poor pick-up response
9	☼○☼○☼		* CYL sensor * Open/Shorted wiring of the sensor * Disconnected coupler of the sensor	* Irregular idle speed * Poor pick-up response
10	☼○☼○	☼	* TA sensor * Disconnected TA sensor coupler * Open-circuit in TA sensor wiring	* Irregular idle speed when cold
11	☼○☼☼	☼	* IMA sensor * Disconnected IMA sensor coupler * Open/shorted IMA sensor wiring	* No particular symptom noticeable
13	☼☼○☼	☼	* PA sensor * Disconnected PA sensor coupler * Open/shorted PA sensor wiring	* Poor performance at high altitude

Notes:



1. The self-diagnosis lamps are located in on the control unit which is attached under the right hand side front seat.
2. The PGM-FI lamp (warning lamp) is provided in the combination meter.
3. To measure voltage, use the digital circuit tester (No. 07411-0020000) or equivalent. (DC Voltage accuracy is 0.2% at 2,000 m V range)
4. To check the control system, use the special tool, System Checker Harness (No. 07999-PE70000).

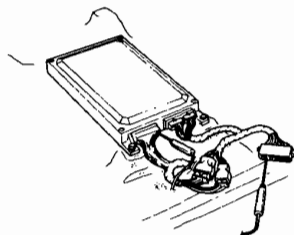



Troubleshooting


POWER SUPPLY CHECK

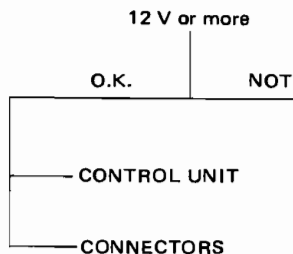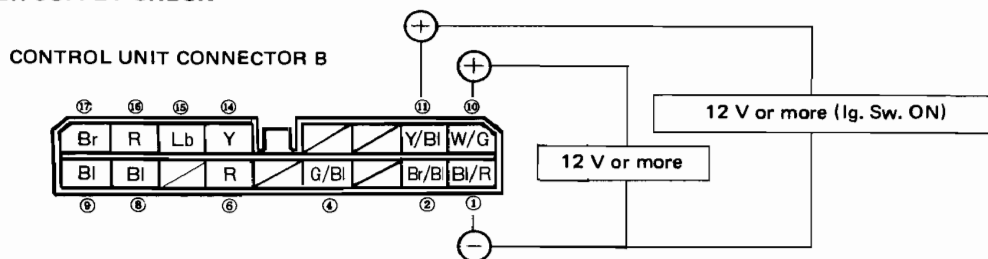

FUSES



WIRING

BATTERY

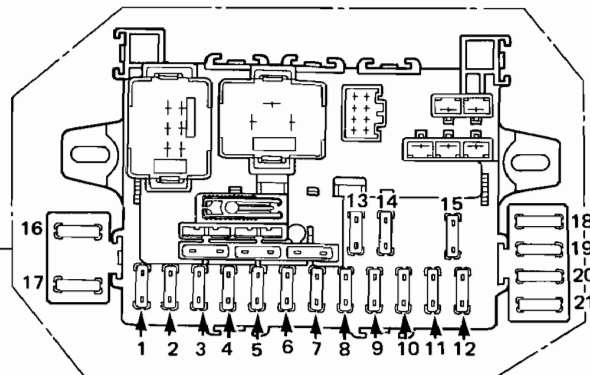

Model	Fuse No.
KF, KG, KX KB, KW	4, 10, 17, 21
KE	4, 10, 19, 20
KS	4, 10, 17, 20
Finland	4, 10, 20, 21

☉ ☉ ☼ ☼ (MAP SENSOR)

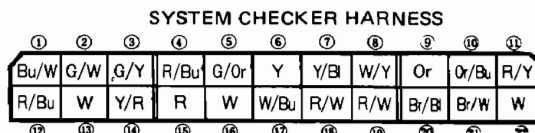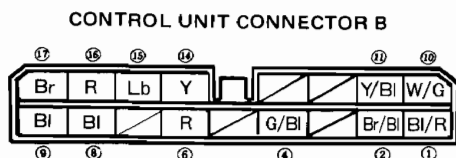


* 2.76 ~ 2.96 V

(2)

4.75 ~ 5.25 V

(1)

(lg. Sw. ON)

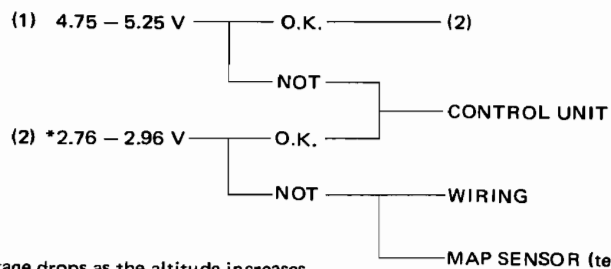

*The voltage drops as the altitude increases.
(0.3 V for every 1,000 m)

☉ ☉ ☼ ☼ (MAP SENSOR)



(cont'd)

Check vacuum line from throttle body to MAP sensor. If it is O.K., carry out the same tests as for ☉ ☉ ☼ ☼

PGM-FI System

Troubleshooting (cont'd)

○ ☀ ☀ ○ (TW SENSOR)

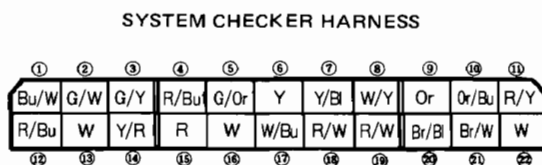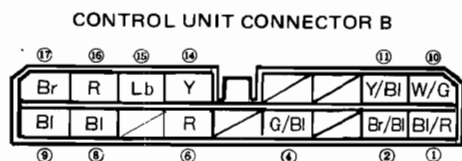

(Ig. Sw. ON)

0.25 – 0.58 V

After warming up
(Cooling fan operated twice)

0.25 – 0.58 V


O.K.

CONTROL UNIT

NOT


WIRING

TW. SENSOR
(Testing, page 11-14)

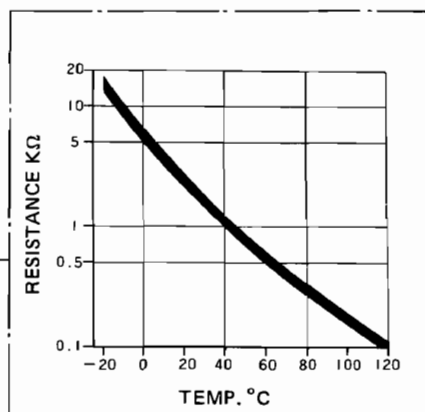


○ ☀ ☀ ☀ (THROTTLE SENSOR)

CONTROL UNIT CONNECTOR B



SYSTEM CHECKER HARNESS



(Ig. Sw. ON)

4.1 – 4.9 V FULL OPEN
0.4 – 0.6 V CLOSED

(1) 4.75 – 5.25 V

(1) 4.75 – 5.25 V

O.K.

(2)

NOT

CONTROL UNIT

(2) 4.1 – 4.9 V FULL OPEN


O.K.

0.4 – 0.6 V CLOSED

NOT

WIRING



THROTTLE
SENSOR
(Testing, page 11-15)

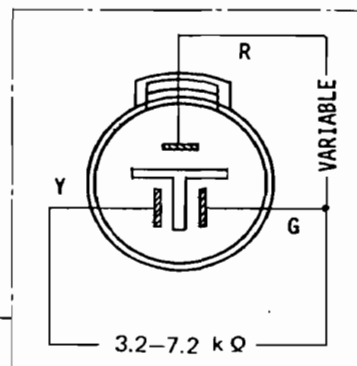



CONNECTOR






☀ ○ ○ ○ (TDC SENSOR)

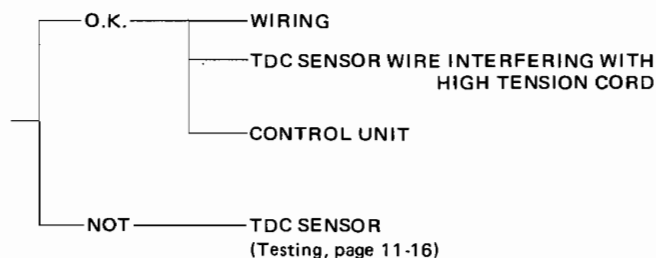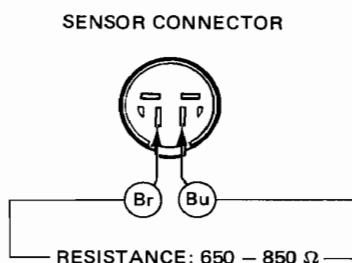

☀ ○ ○ ☀ (CYL SENSOR)

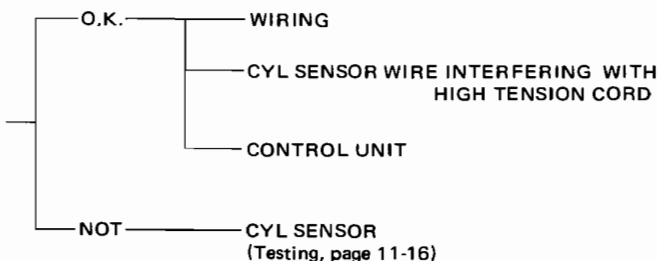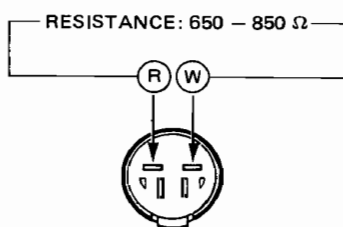

☀ ○ ☀ ○ (TA SENSOR)

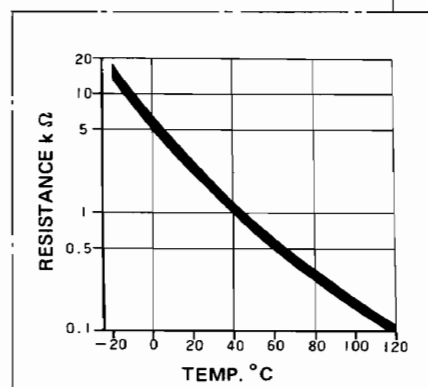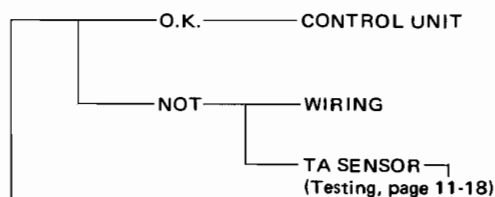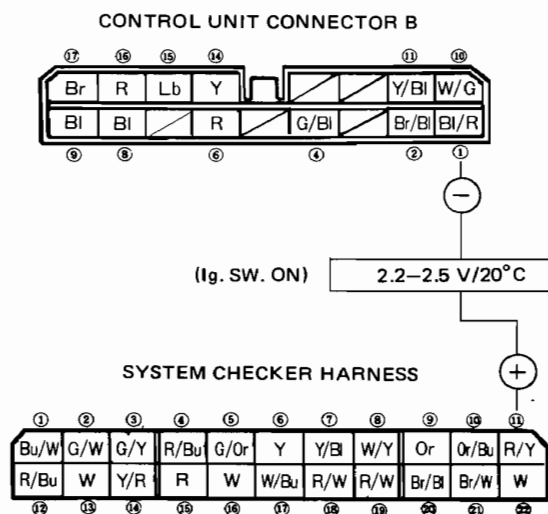


(cont'd)


PGM-FI System

Troubleshooting (cont'd)


☀ ☀ ☀ ☀ (IMA SENSOR)

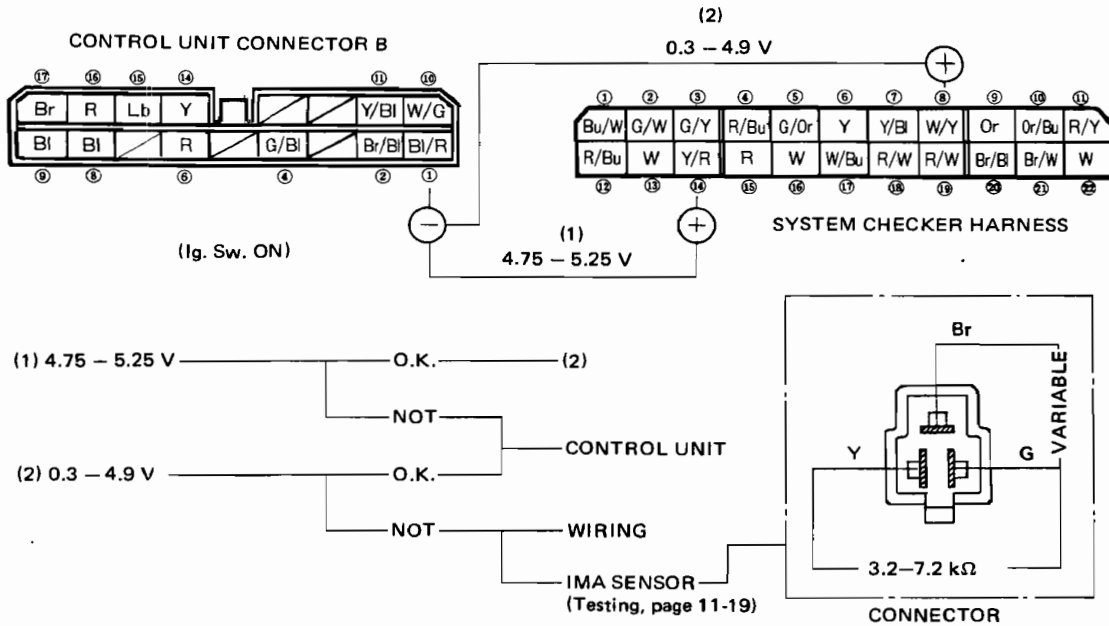

☀ ☀ ☀ ☀ (PA SENSOR)

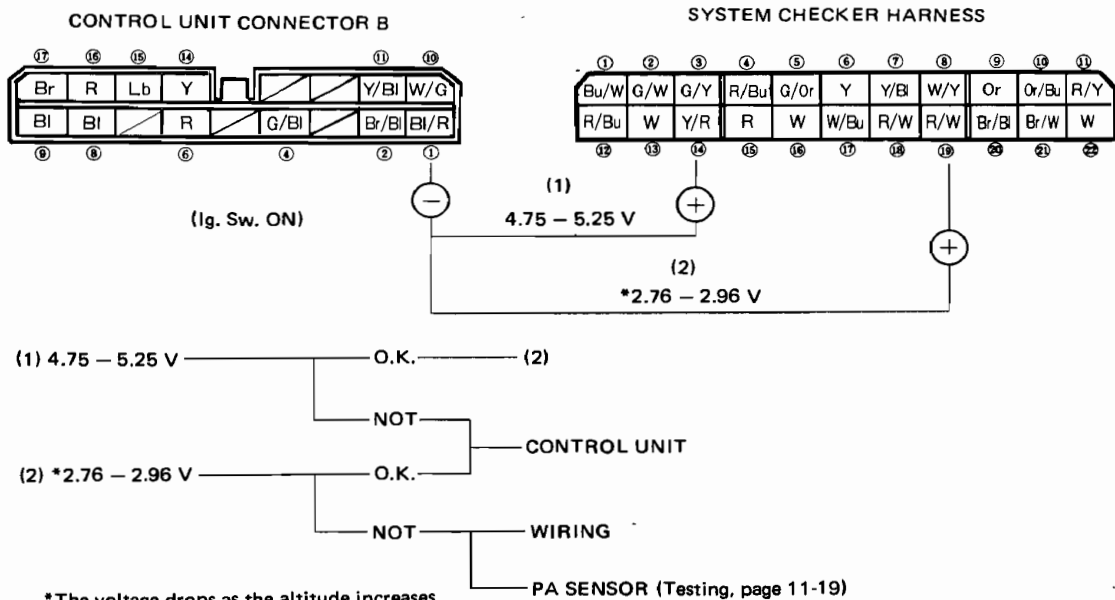

*The voltage drops as the altitude increases.
(0.3 V for every 1,000 m)

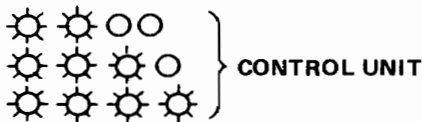


MAP Sensor




Testing

1. Disconnect the hose No. 21 from the throttle body to the MAP sensor in the control box, and plug the throttle body output port with a cap and connect a vacuum pump to the hose.

NOTE: Use commercially available vacuum pump.

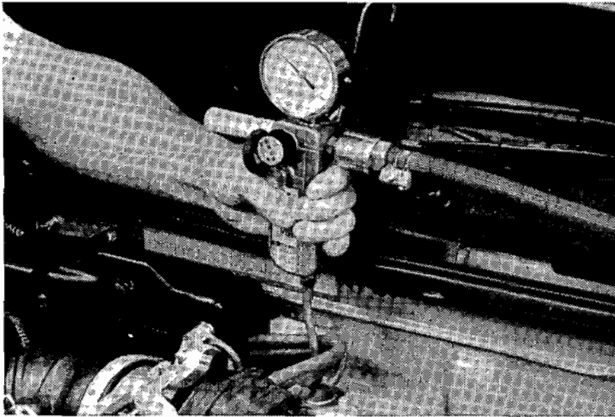


2. Disconnect the control unit connectors, and connect the special tool 'System Checker Harness' between the control unit and the wireharness connector.

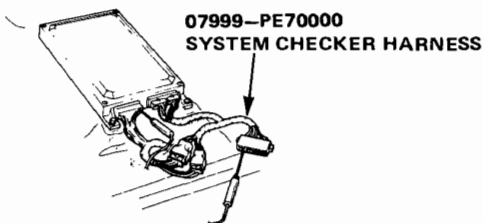

3. Connect digital voltmeter positive probe to the terminal No. 13 of the system checker harness and connect negative probe to the terminal No. 1 of the control unit connector B. Turning the ignition switch ON, apply negative pressure by means of the vacuum pump, and check the change in output voltage.

SYSTEM CHECKER HARNESS

①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪
Bu/W	G/W	G/Y	R/Bu	G/Or	Y	Y/Bl	W/Y	Or	Or/Bu	R/Y
R/Bu	W	Y/R	R	W	W/Bu	R/W	R/W	Br/Bl	Br/W	W
12	13	14	15	16	17	18	19	20	21	22

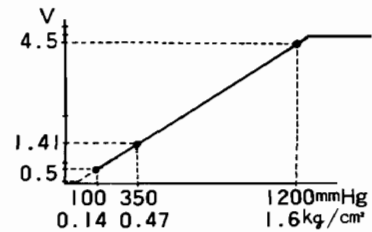

Voltmeter should indicate voltage along with the chart above.


- If the voltage does not attain, check the hose and the wireharness.
- If the hose and the wireharness are OK, replace the MAP sensor.

NOTE: The voltage drops as the altitude increases (0.3 V for every 1,000 m)

TW Sensor


Testing

1. Drain the coolant until its level is lower than the cylinder head.
2. Disconnect the connector and remove the TW sensor from the cylinder head.

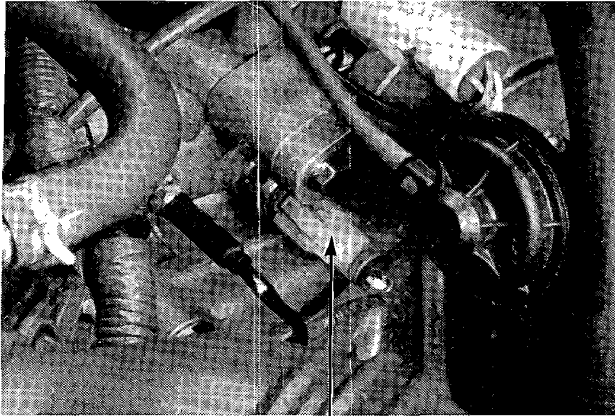

TW SENSOR

3. To test a TW sensor, suspend it in cold water and heat the water slowly.
4. Measure resistance between the terminals.

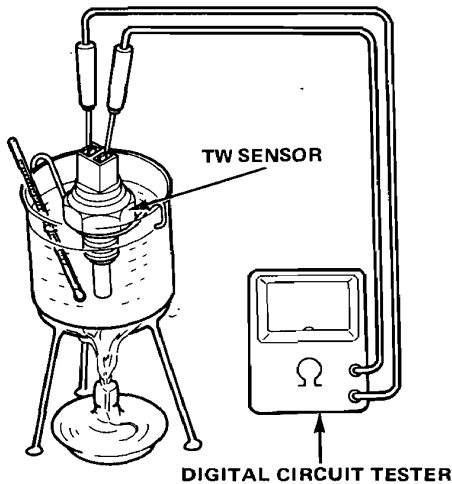


Resistance should be:

1–1.65 K Ω at 35°C (95°F)

0.25–0.36 K Ω at 80°C (176°F)

- If resistance is outside above ranges, replace TW sensor.

The chart below shows the change in resistance over a range of coolant temperatures.

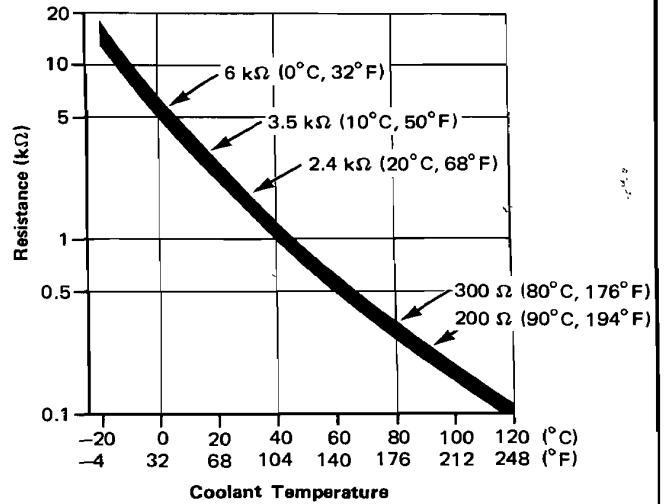

NOTE: Don't let the TW sensor touch the bottom of the container.

Throttle Sensor


Testing

WARNING

- Do not perform any adjustment of the throttle valve stop screw since it has been adjusted in a very precise and accurate way.

1. Disconnect the connector of the throttle sensor.
2. Measure full resistance between the yellow terminal and the green terminal at the sensor.

Resistance should be:
3.2–7.2 KΩ

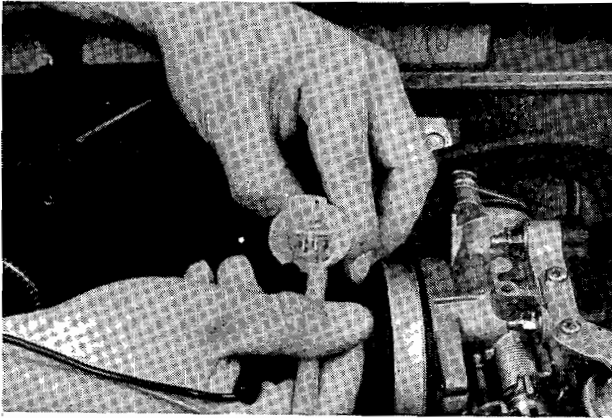

- If resistance is inside above ranges, adjust the installation position of the throttle sensor.
- If resistance is outside above ranges, replace the throttle sensor.


Replacement

Disassembly

1. Remove the plastic cap and remove the throttle sensor.

Reassembly

1. Align the lever pin of the sensor with the throttle valve shaft groove and tighten temporarily.
2. Disconnect the control unit connectors and connect the special tool 'System Checker Harness' between the control unit and the wireharness connector.

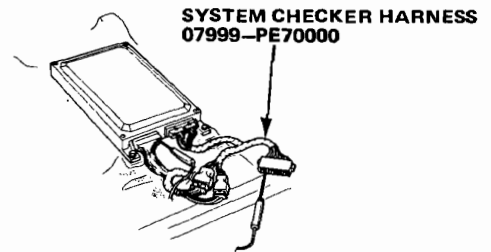

3. Connect a digital voltmeter positive probe to No. 12 terminal of the system checker harness and negative probe to No. 1 terminal of the control unit connector B.

SYSTEM CHECKER HARNESS


①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪
Bu/W	G/W	G/Y	R/Bu	G/Or	Y	Y/B	W/Y	Or	Or/Bu	R/Y
R/Bu	W	Y/R	R	W	W/Bu	R/W	R/W	Br/B	Br/W	W
⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲	⑳	㉑	㉒

4. Adjust the sensor into the position which the throttle stopper lever contacts with the stop screw.
5. Turn the ignition switch ON and measure voltage of two terminals.

There should be: 0.48- 0.52 V

THROTTLE STOPPER LEVER

STOP SCREW

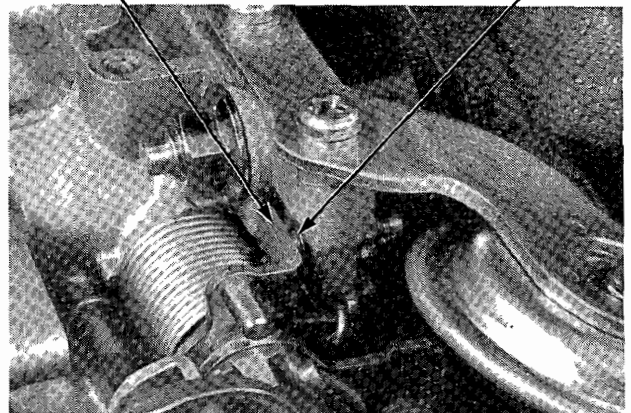


(cont'd)

Throttle Sensor

Replacement (cont'd)

6. Making sure that the voltage within a limit, tighten the sensor bolts and put the plastic cap on.

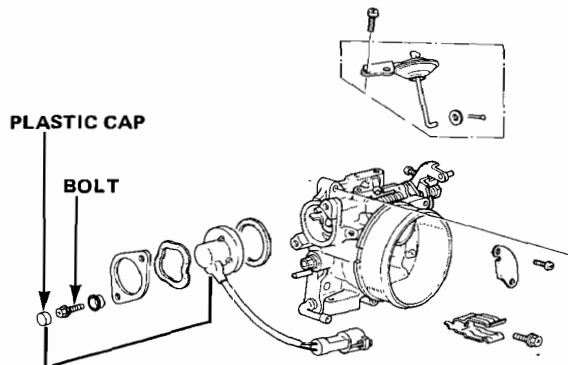

NOTE: After reassemble the sensor, test the deceleration fuel cut-off device. (see page 11-18).



If the deceleration fuel cut-off device does not work, repeat the step (1) through (6) and check the voltage.

Crank Angle Sensor

Testing

1. Disconnect the connector of the crank angle sensor.
2. Measure resistance between the white terminal and the red terminal, and the brown terminal and the blue terminal at the sensor.

Resistance should be:
0.65—0.85 K Ω

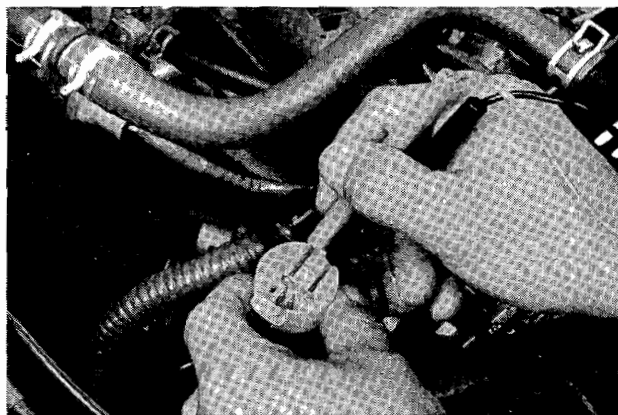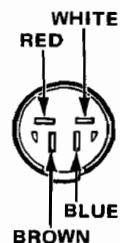

3. Measure insulation resistance between each terminal at the sensor and the sensor housing.


Insulation resistance should be 100 K Ω or more.

- If resistance is outside above ranges, replace TDC or CYL coil assemblies.




Replacement


1. Remove the distributor assy. from the cylinder head.
2. Slide off the pin retainer, being careful not to stretch it.
3. Drive out roll pin as shown.

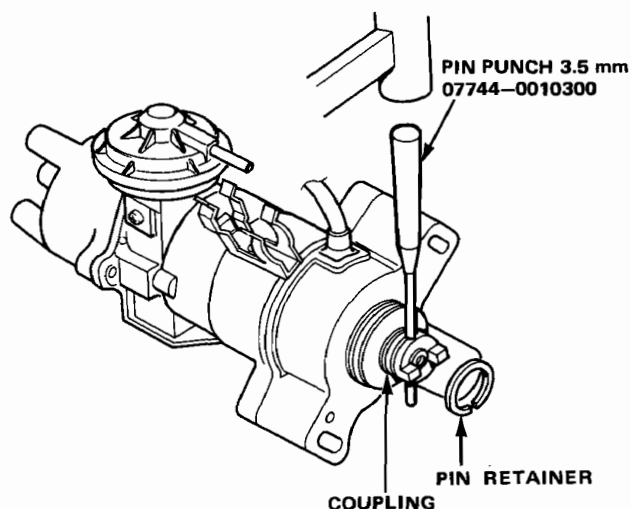


4. Remove the sensor housing from the distributor assy.

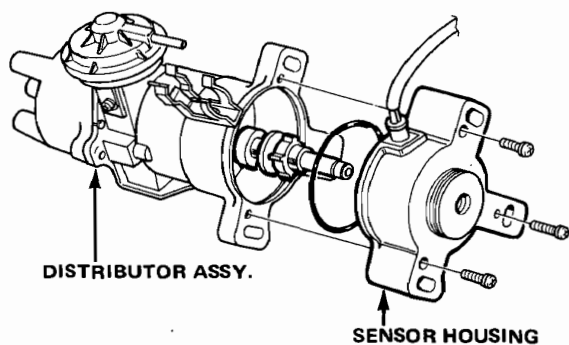

5. Remove the coil assy. from the sensor housing.

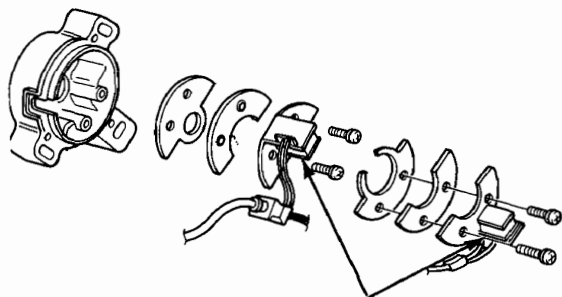

6. After scribing an aligning mark on the rotor and the shaft, drive out roll pin as shown.

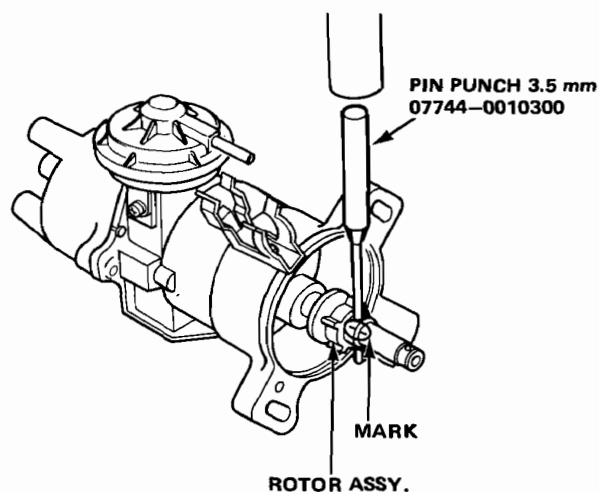

7. Carefully pry up rotor assy. by using two screwdrivers. Do not damage rotor assy.


Reassembly is the reverse order of disassembly.

Installation of the distributor assy. see page 26-10.


Crank Angle Sensor

Oil Seal Replacement

1. Drive out the oil seal.

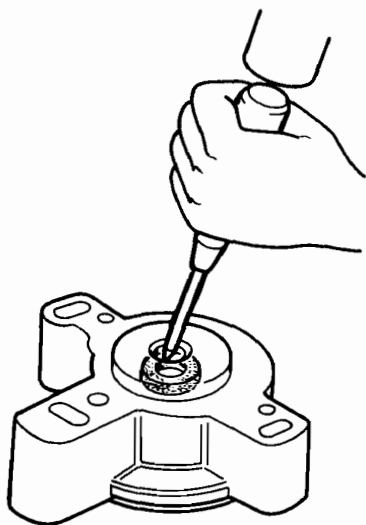


2. Drive the new oil seal into the sensor housing using special tools.

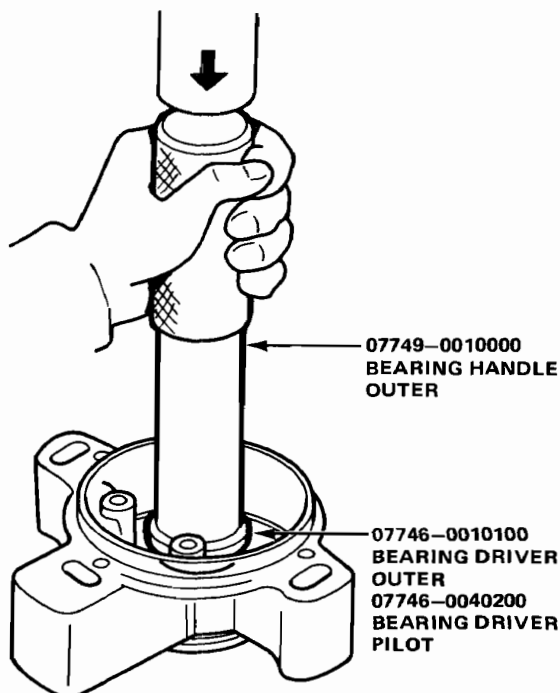

TA Sensor

Testing

1. Disconnect the connector and remove the TA sensor from the intake manifold.
2. To test a TA sensor, suspend it in cold water and heat the water slowly.
3. Measure resistance between the terminals.

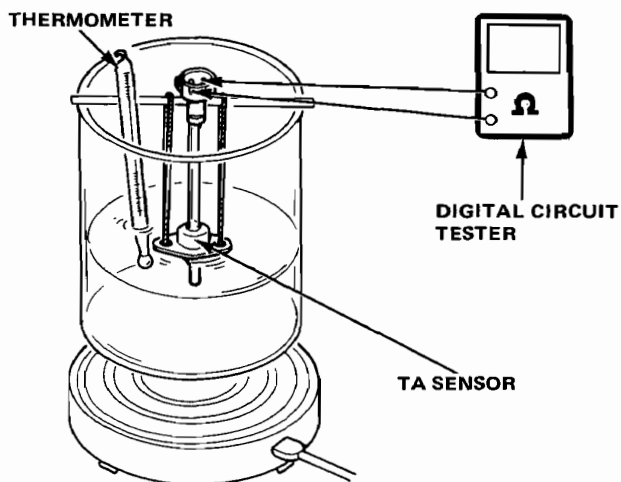


Resistance should be:

2–3.2 K Ω at 20°C (68°F)

0.22–0.35 K Ω at 80°C (176°F)

- If resistance is outside above ranges, replace TA sensor.

The chart below shows the change in resistance over a range of coolant temperatures.

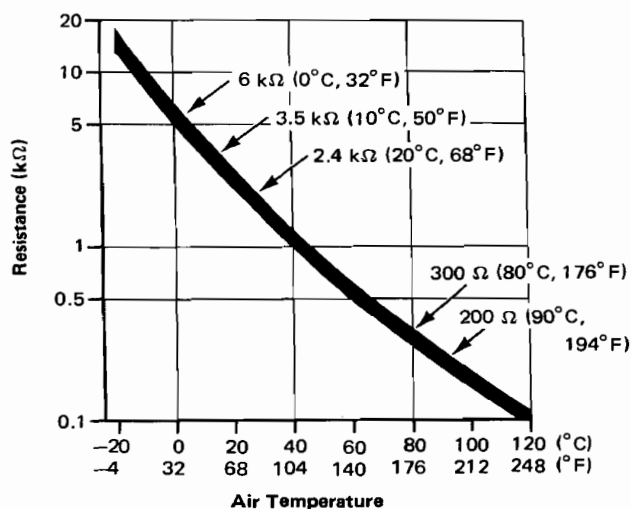


NOTE: Don't let the TA sensor touch the bottom of the container.

IMA Sensor


Testing

1. Disconnect the connector of the IMA sensor at the control box.
2. Turning the idle adjusting screw fully, measure resistance between the brown terminal and the green terminal at the sensor.

Resistance should be:
0.25–6.2 K Ω

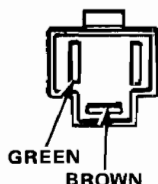

IDLE ADJUSTING SCREW

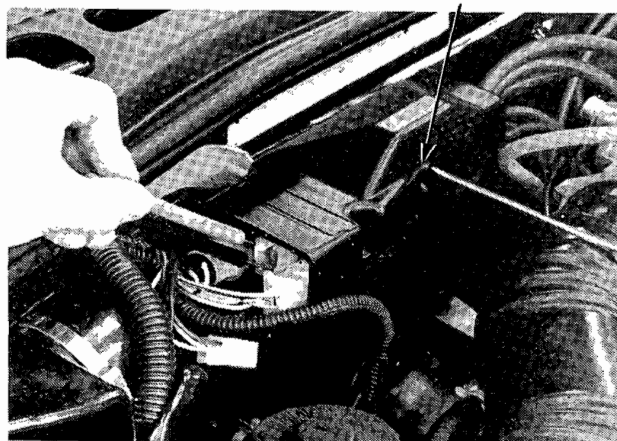

- If resistance is outside above ranges, replace IMA sensor.


NOTE: Whenever the inspection or the replacement of IMA sensor is performed, check specification for CO. See page 11–23.

PA Sensor



Testing


1. Disconnect the control unit connectors and connect the special tool 'System Checker Harness' between the control unit and the wireharness connector.

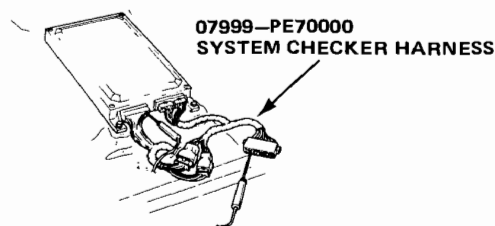

2. Connect a digital voltmeter positive probe to the terminal No. 19 of the system checker harness and connect negative probe to the terminal No. 1 of the control unit connector B. Turn the ignition switch ON and measure voltage of two terminals. There should be: 2.76–2.96 V

SYSTEM CHECKER HARNESS

①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪
Bu/W	G/W	G/Y	R/Bu	G/Or	Y	Y/Bl	W/Y	Or	Or/Bu	R/Y
R/Bu	W	Y/R	R	W	W/Bu	R/W	R/W	Br/Bl	Br/W	W
⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲	⑳	㉑	㉒

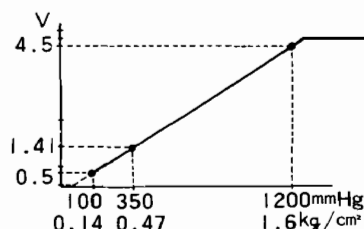


- If the voltage does not attain, check the wire harness.
- If the wire harness is OK, replace the PA sensor.

NOTE: The voltage drops as the altitude increases. (0.3 V for every 1,000 m)

PA sensor is located under the left side dash. (R/H drive: Right side)

PA SENSOR


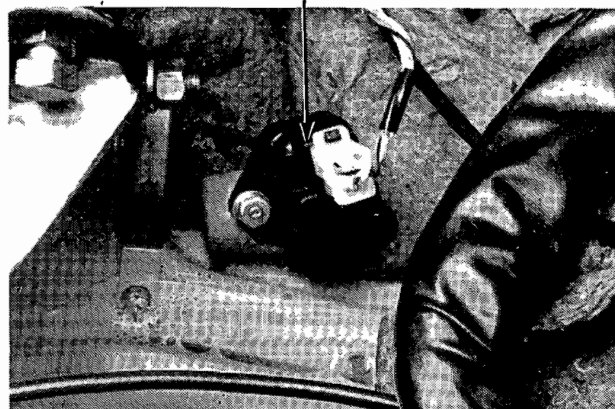


Resistor

Testing

1. Disconnect the connectors of the resistor.
2. Measure resistance between A terminal and each terminal.

Resistance should be 5–7 Ω

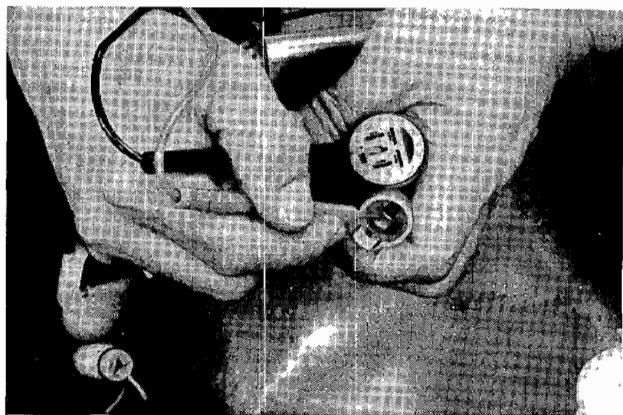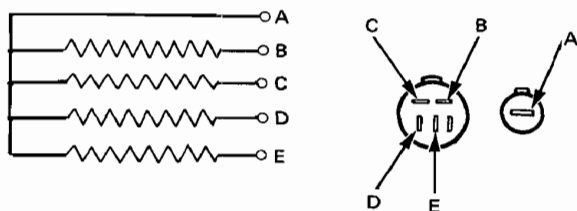


- If resistance is outside above ranges, replace the resistor.


Fuel Cut-off System

Testing

1. Warm up the engine, and confirm that the idling speed is constant and stable.
2. Disconnect the vacuum tube from the dash pot.

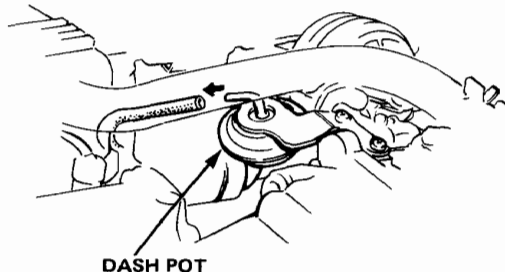

3. Raise the engine speed to approximately 3,000 rpm, confirm the injector operation by monitoring ticking noises.

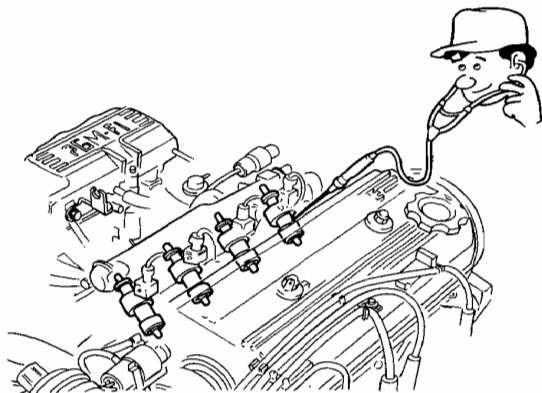

4. Check that the ticking noise of the injector stops momentarily when the accelerator pedal is released.


If the Injection does not stop, it is conceivable that the system is affected by a defect in the control unit, or a defect in the throttle sensor. Check the self-diagnosis lamps in the PGM-FI control unit, and carry out inspections according to the troubleshooting inspection chart. (See page 11–8).

Throttle Body



Index

NOTE: The throttle valve stop screw is factory set.
Do not turn the stop screw for idle adjustment.

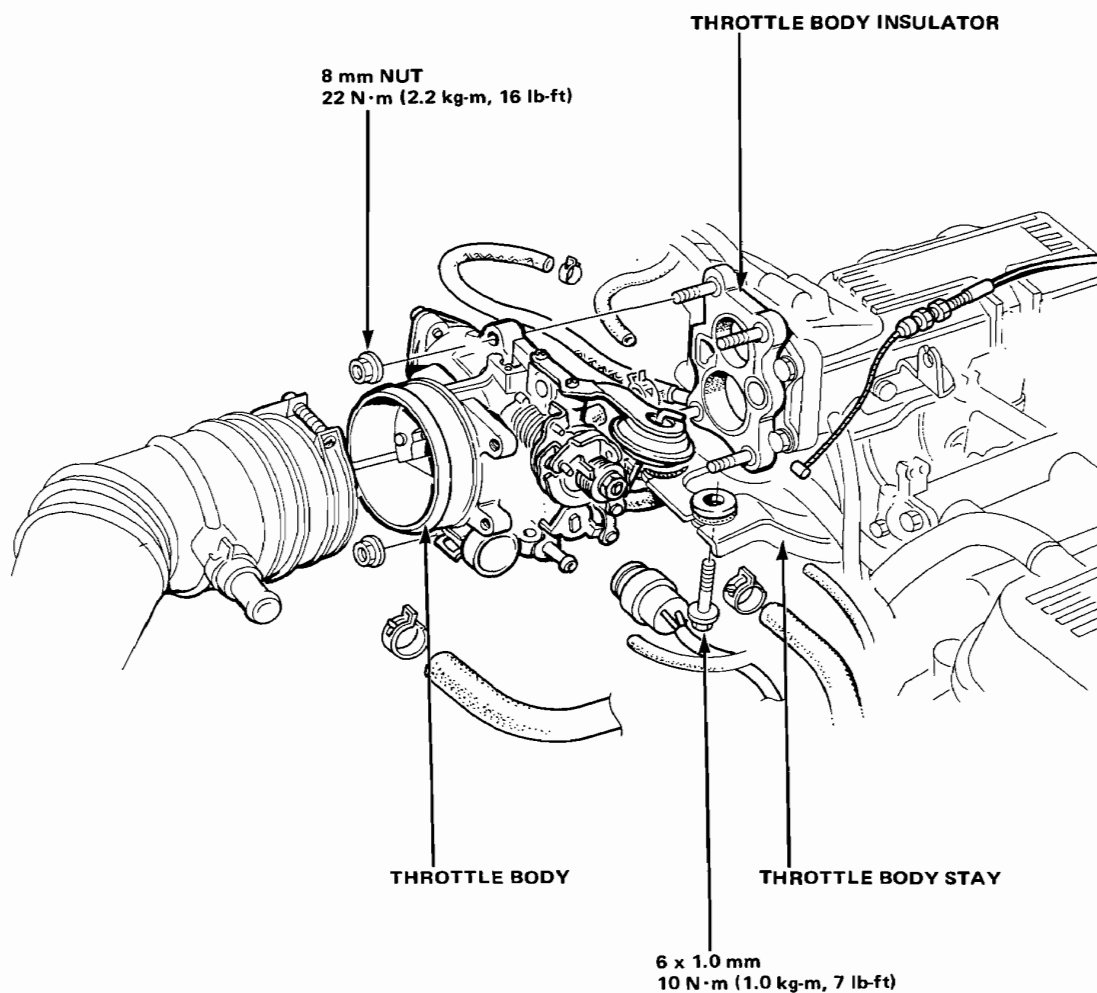


Throttle Cable

Inspection/Adjustment

1. Check that throttle cable operates smoothly with no binding or sticking. Repair as necessary.
2. Check cable free-play at throttle linkage. Cable deflection should be 10–12 mm (0.39–0.47 in.)
3. If deflection is not within specs, loosen locknut and turn adjusting nut until you can deflect cable as specified. Then tighten locknut.
4. With cable properly adjusted, check throttle valve to be sure it opens fully when you push accelerator pedal to the floor.

CAUTION: Check throttle valve to be sure it returns to idle position whenever you release accelerator.

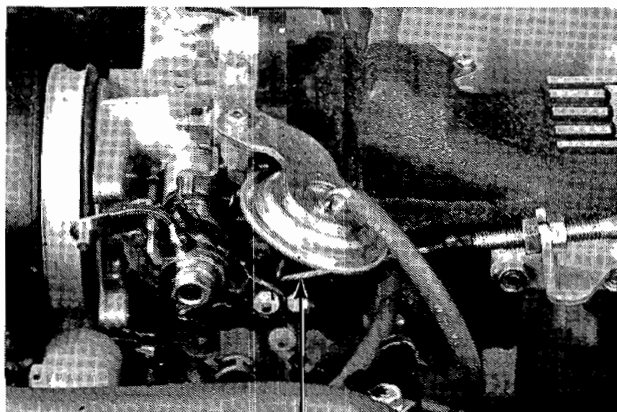


THROTTLE CABLE

Idle Speed

Adjustment

1. Start engine and warm up to normal operating temperature, the cooling fan will come on.
2. Check idle speed with the headlights, heater blower, cooling fan and air conditioner off.

The idle speed should be: $850 \pm 50 \text{ min}^{-1} \text{ (rpm)}$

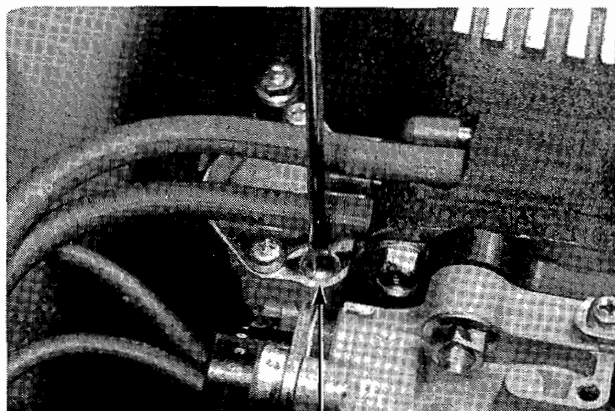


IDLE ADJUSTING SCREW

Adjust the idle speed, if necessary, by turning the idle adjusting screw.

If equipped with air conditioning, make a second check with the A/C on.

The idle speed should be: $750 \pm 50 \text{ min}^{-1} \text{ (rpm)}$

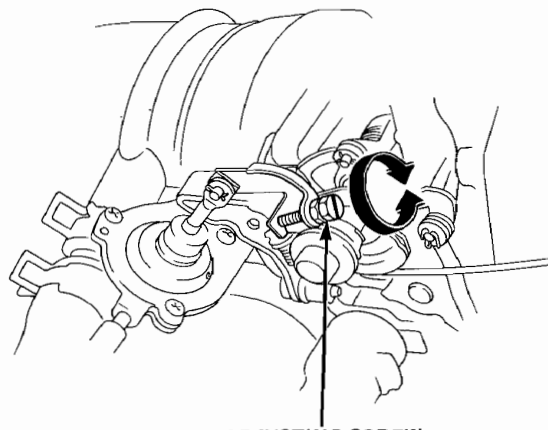

ADJUSTING SCREW

Adjust the idle speed, if necessary, by turning the adjusting screw.

Idle Control Solenoid Valve

Idle Speed and Mixture



Testing

An idle control solenoid valve, which is activated by commands from the control unit, is installed in the control box.

When the solenoid valve opens, idle speed increases approximately 150 rpm. Idling speed increases under the following conditions:

- For 30 seconds after starting the engine.
- Altitude higher than 800 m.
- Coolant temperature lower than 70°C (158°F).
- For 0.5 seconds when quick deceleration is detected at 1,000 min⁻¹ (rpm).

1. Start engine and warm up to normal operating temperature; the cooling fan will come on.
2. Raise engine speed to 3,500 min⁻¹ (rpm) and release the throttle suddenly.
3. Listen for a clicking noise from the idle control solenoid valve at 1,000 rpm.

- If a clicking noise is heard, the solenoid valve is OK.
- If no noise is heard, replace the solenoid valve and re-test.

Adjustment

NOTE:

- Perform the measurement in a place with good ventilation and with no direct exposure to the wind and rain.
- Perform the measurement while the engine is idling. (under no load).
- Use a precise tachometer to check engine rpm.
- Use the NDIR CO meter in accordance with the manufacturers' recommended procedures.
- The following inspections and adjustments should be completed before the measurement.

Air cleaner element

Ignition timing and control system

Spark plugs

Idling speed

Valve clearance

PCV valve


1. Start the engine, and, after the radiator cooling fan works two times, further warm up the engine at 3,000 rpm for two minutes or more.
2. Insert exhaust gas sampling probe into the tail pipe at least 40 cm (16 in.)
3. Check specification for idle speed and CO with the headlights off (On Swedish model: on) and cooling fan off.

The idle speed should be: 850 ± 50 min⁻¹ (rpm)

	Specified CO%
Swedish model	Below 1.5%
Switzerland model	0.5–2%

4. If unable to obtain this reading, remove the rubber cap on the control box and remove the hole plug on the IMA sensor. Adjust by turning adjusting screw of the IMA sensor.

ADJUSTING SCREW

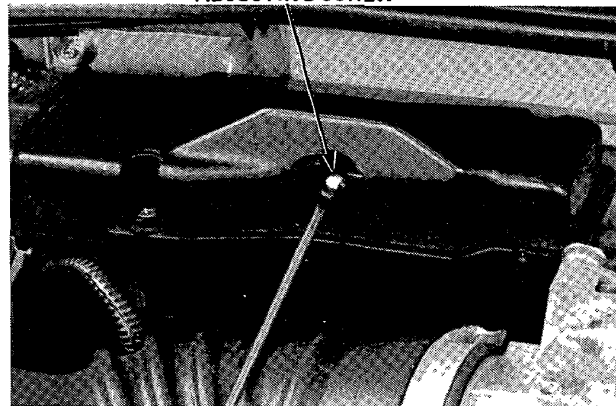

If unable to obtain a CO reading of specified % by this procedure, check the engine tune-up condition. Be sure to put the rubber cap and hole plug on when the adjustment is completed.

Fast Idle Valve

Testing


NOTE:

- As the fast idle valve is factory adjusted, the valve should not be disassembled.
- Check beforehand the PCV (engine breather) circuit tubing for breakage, disconnection, clogging, etc.
- Confirm that the throttle valves are fully closed.

If idle speed does not obtain by turning the idle adjusting screw, check the following.

Idle speed too high after engine is warmed up.

1. Confirm that the engine is adequately warmed up.
2. Check whether the idling control function is normal. (See page 11-23)
3. Remove the cover of the fast idle valve.
4. Check that the valve is completely closed. If not, air is being suck from the valve seat area. It can be detected by putting your finger on the valve seat area.

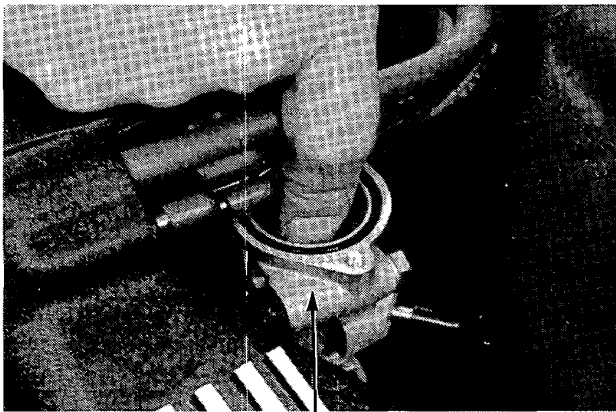


FAST IDLE VALVE ASSY.

If any sucking is felt, the valve is leaking. Replace the fast idle valve and adjust idle speed.

Idle speed is too low after engine is warmed up.

1. Remove the idle adjusting screw.

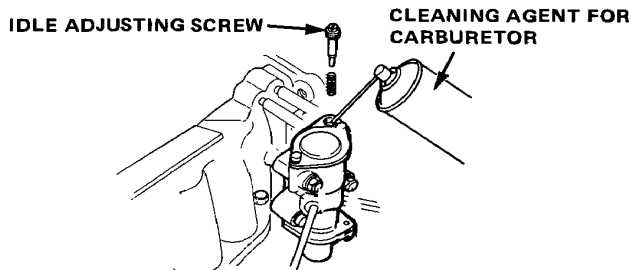


2. Wash the idle adjusting screw and the air by-pass channel with carburetor cleaner agent generally available on the market.
3. Readjust idle speed after cleaning.


Fast idle speed is low when engine is cold (coolant temperature below 50°C (122°F)).

The fast idle speed should be: 1,200–2,000 min⁻¹ (rpm)

1. Remove the fast idle valve assy. from the intake manifold.
2. Apply cold water and cool down the wax part of the fast idle valve to 5–30°C. (41–86°F)

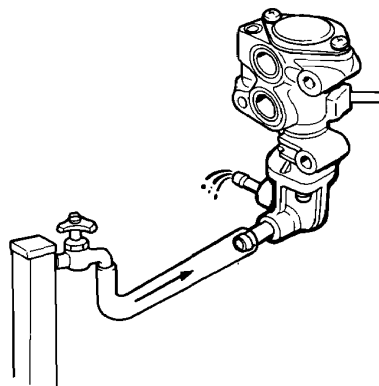

3. Suck the part A in the fast idle valve, and check that a fairly large amount of air flows without resistance.

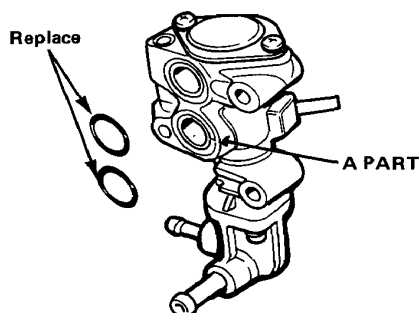

If air does not flow or the resistance is large, replace the fast idle valve and adjust idle speed. (See page 11-22)

Fuel Line



Testing

WARNING Do not smoke while working on fuel system. Keep open flame away from work area. Drain fuel only into an approved container.


CAUTION: Before disconnecting the fuel line, fuel pressure should be relieved by loosening the service bolt on the top of the fuel filter while engine is stopped.

Fuel Pressure Relief Method

1. Disconnect the negative terminal from the battery.
2. Place a shop towel over the fuel filter to prevent pressurized fuel from spreading over the engine.
3. Loosen the service bolt slowly by approximately one full turn. This relieves fuel pressure.
4. Using a new sealing washer, tighten the service bolt.

SERVICE BOLT
12 N·m (1.2 kg-m, 9 lb-ft)

SHOP TOWEL

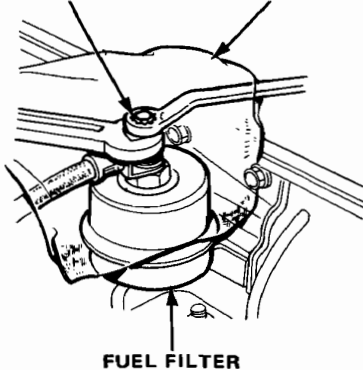

FUEL FILTER


Fuel Pressure Measurement

1. Relieve fuel pressure.
2. Remove the service bolt and attach the fuel pressure gauge.
3. Start the engine, and measure the fuel pressure.

Pressure should be:

230–270 kPa (2.35–2.75 kg/cm², 33–39 psi.)

(Engine at idling, with the vacuum tube of the regulator disconnected.)

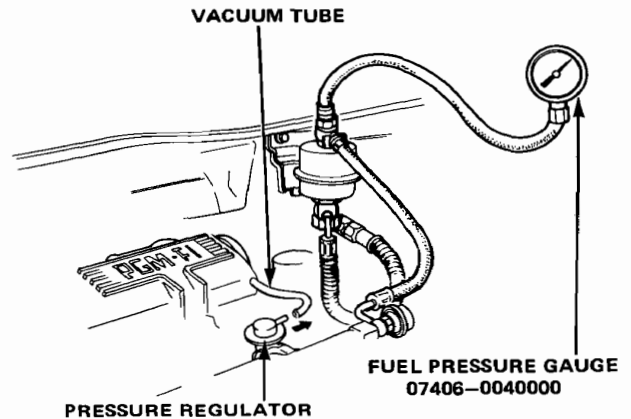

If the fuel pressure is out of the limit, check the fuel pump first.

Then, check the following:

In case the fuel pressure is higher than the standard value:

- Pinched or clogged fuel return hose or piping.
- Pressure regulator failure

In case the fuel pressure is lower than the standard value:

- Clogged fuel filter
- Pinched or clogged fuel hose from the fuel tank to the fuel pump
- Pressure regulator failure
- Leakage in the fuel line

Check that the vacuum tube from the intake manifold to the pressure regulator is properly connected and it is not pinched or damaged.

Fuel Filter


Replacement

WARNING Do not smoke while working on fuel system. Keep open flame away from work area.

Fuel filter should be replaced;

- Every 48,000 Km (30,000 miles)
- When fuel pressure drops below the specified value ($2.55 \pm 0.2 \text{ kg/cm}^2$ with the vacuum pressure tube disconnected) after making it sure that the fuel pump and the pressure regulator are normal.

1. Relieve the fuel pressure by loosening the service bolt. (See page 11–25)
2. Remove the upper special bolt.
3. Remove the fuel filter retainer bolt.
4. Remove the lower special bolt.
5. Assemble the new fuel filter using new sealing washers.

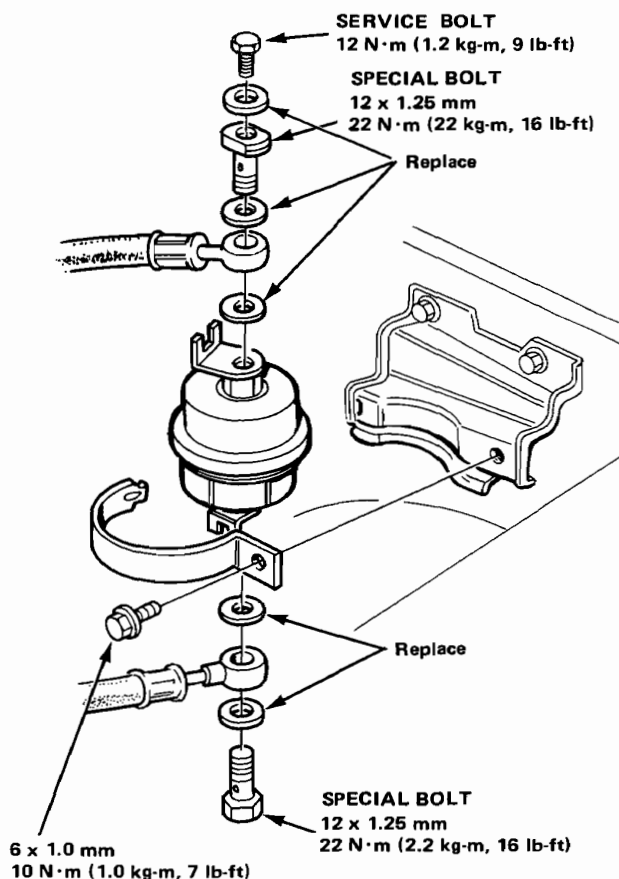

Pressure Regulator

Testing/Replacement

Check the pressure regulator for the following:

- Broken, pinched or disconnected vacuum tube for the pressure regulator.
- Check that the fuel pressure rises with the vacuum tube of the pressure regulator disconnected. (See page 11–25)


Pressure should be:

230–270 kPa (2.35–2.75 kg/cm², 33–39 psi)

(With the vacuum tube disconnected)

If the fuel pressure does not rise, check that the fuel pressure rises when the return pipe from the pressure regulator to the fuel tank is slightly pinched.

SHOP TOWEL

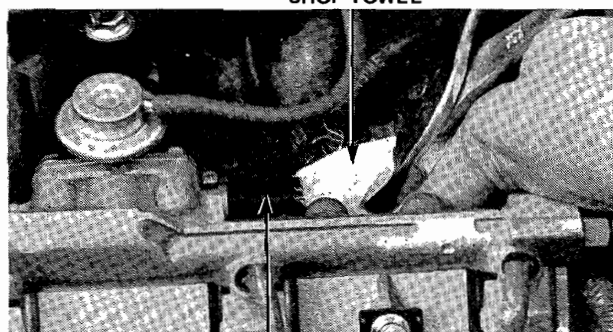


RETURN PIPE

NOTE: Place a shop towel under the pressure regulator before removing the pressure regulator.

Replacement

1. Disconnect the negative terminal of the battery.
2. Relieve fuel pressure. (See page 11–25)
3. Disconnect the vacuum tube and the fuel return hose.
4. Remove the two 6 mm retainer bolts.

- Replace the O-ring.
- When assembling the regulator, apply gasoline to the O-ring and assemble it into its proper position, taking care not to damage the O-ring.

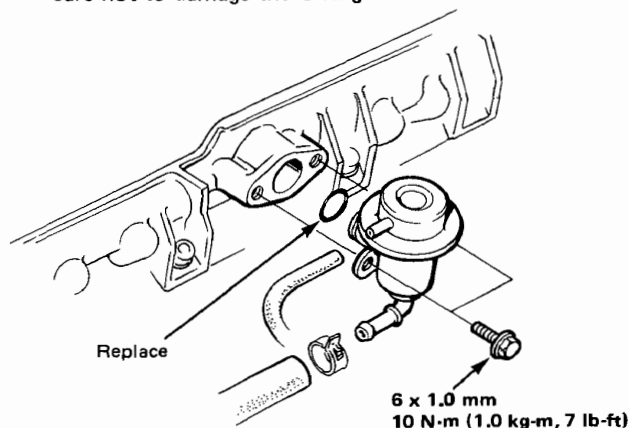

Fuel Injector



Testing / Replacement

Testing

NOTE: Check the engine tune-up condition before testing.

In Case the Engine can be Started


1. With the engine idling, disconnect one by one the coupler of the injector for each cylinder, and inspect the change in the idling speed.

If the idling speed changes almost in the same way as in the case of other cylinder, the injector is normal.

2. Check the ticking noise of each injector by means of a sound scope (if unavailable, with a small screw driver) when the engine is idling.

If the ticking noise is not generated on a injector, check the noise again after the replacement of the injector with a normal one. Check wiring between the control unit and the injector.

NOTE: Do not mistake other engine noises (tappet noise, etc.) for the injector noise.

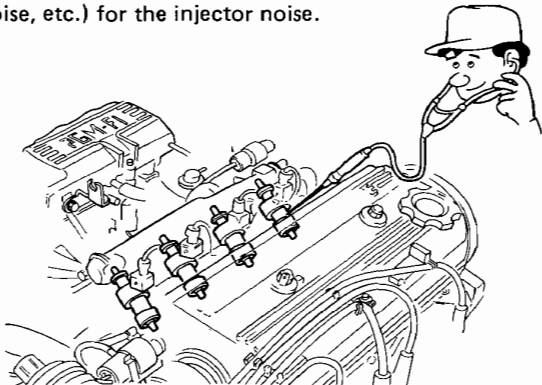


In Case the Engine can not be Started

1. Remove the coupler of the injector, and measure the resistance value between the terminals of the injector.

Resistance should be:

1.5–2.5 Ω

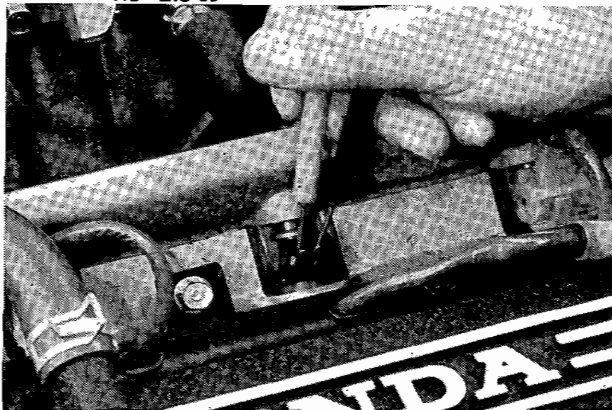

If out of the limit, replace the injector.


If the resistance is normal, check the following:

- Whether there is any short circuiting, wire-breakage, or poor contact in the wiring between the injector and the resistor.
- Whether the resistor is normal.
- Whether there is any short-circuiting, wire-breakage, or poor connection in the wiring between the resistor and the control unit.

Replacement

WARNING Do not smoke while working on fuel system. Keep open flame away from work area. Drain fuel only into an approved container.

1. Relieve fuel pressure. (See page 11–25)
2. Disconnect fuel lines.
3. Disconnect the coupler of the injector.
4. Remove the two 6 mm bolts of the harness holder.
5. Remove the fuel-line retainer nuts.
6. Remove the fuel line and the injector holder from the intake manifold.
7. Remove the injector holder retainer bolts.
8. Remove the injector from the injector holder.

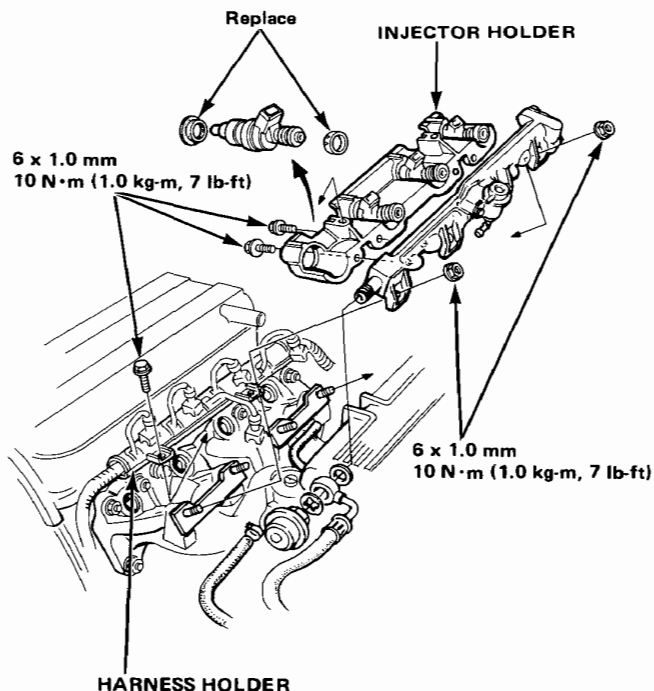

Fuel Pump

Testing

CAUTION: Be sure to turn the ignition switch OFF before disconnecting the coupler.

Confirm that the operation noise of the fuel pump is generated for approximately two seconds when the ignition switch is turned ON.

If the pump does not make the operation noise, carry out the inspection described below:

1. Check that the battery voltage can be detected just when the ignition switch is turned ON at the fuel pump wire couplers. (Positive probe to the yellow wire, negative probe to the black wire)




- If the battery voltage is detected, replace the fuel pump.
- If there is no voltage, check the main relay and the wire harness.

Output Test


WARNING Do not smoke during the test. Keep any open flame away from your work area.

1. With the ignition switch OFF, disconnect connector from main relay.
2. Connect the yellow and black/yellow wires together using a jumper wire.

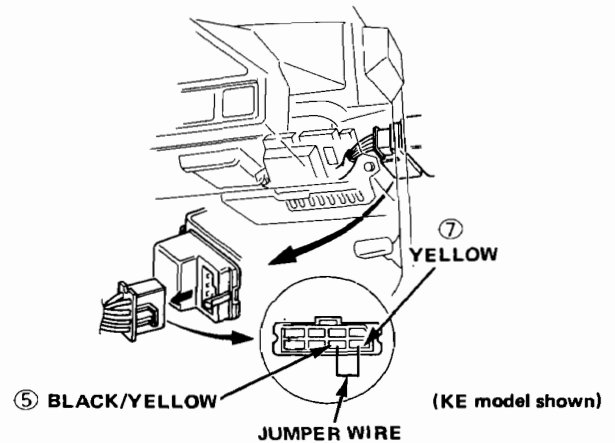

3. Relieve fuel pressure. (See page 11-25)
4. Disconnect fuel return hose at pressure regulator and connect a hose for measurement to it and hold a graduated container under the hose.
5. Turn ignition ON, measure amount of full flow for 10 seconds, then turn ignition OFF.

Fuel flow should be more than 230 cm^3 (7.8 oz.) in 10 seconds with battery voltage at 12 volts.

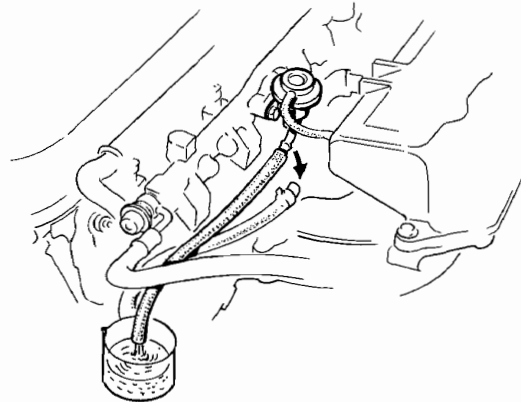

If fuel flow is less than 230 cm^3 (7.8 oz.);

- Fuel pump failure
- Clogged fuel filter
- Clogged fuel pipe
- Pressure regulator failure




Main Relay

Replacement

WARNING

- Do not smoke while working on fuel system. Keep open flame away from work area.
- Block front wheels before jacking up rear of car.

1. Jack up rear of car and place jack stands in proper locations.
2. Remove left rear wheel.
3. Remove the fuel pump cover.
4. Disconnect fuel lines and electrical leads at the fuel pump.
5. Removing three bolts, remove fuel pump with mount.

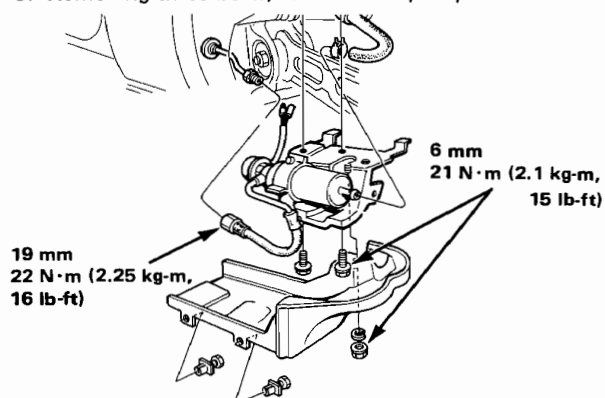


NOTE:

- When assembling the flare joint part, clean the joint area and coat its screw part with new engine oil. (Assemble the joint soon after engine oil is applied to it.)
- Bring the sealing surfaces into proper contact, tighten the flare nut.
- After the installation work is completed, turn the ignition switch ON. (Do not operate the starter) As the fuel pump is operated for approximately two seconds, the fuel pressure in the fuel line rises. Repeat this operation two to three times, and check whether there is any leakage of fuel in the fuel line.

Silencer Replacement



1. Remove the fuel line and the silencer from the pump.

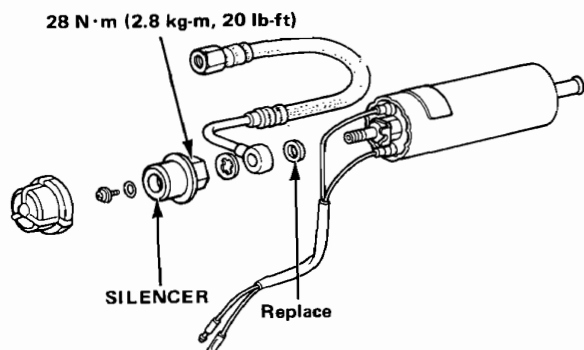

CAUTION: Do not disassemble the pump

Testing

1. Remove the main relay located under the dash.
2. Connect the battery positive terminal to the No. 4 terminal and the battery negative terminal to the No. 8 terminal of the main relay.
3. Check that there is continuity between the No. 5 terminal and the No. 7 terminal of the main relay.
4. Connect the battery positive terminal to the No. 5 terminal and the battery negative terminal to the No. 2 terminal of the main relay.
5. Check that there is continuity between the No. 1 terminal and the No. 3 terminal of the main relay.
6. Connect the battery positive terminal to the No. 3 terminal and the battery negative terminal to the No. 8 terminal of the main relay.
7. Check that there is continuity between the No. 5 terminal and the No. 7 terminal of the main relay.

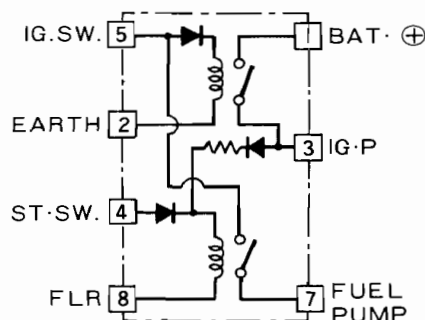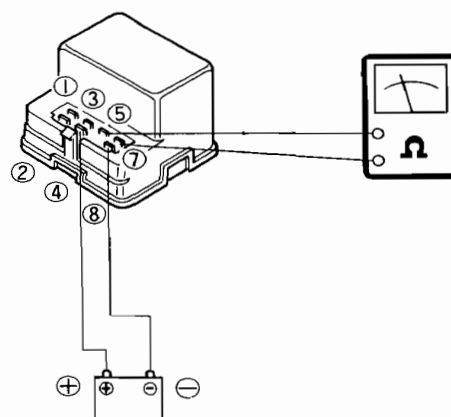

If there is no continuity, replace the main relay.


Wire Harness

Testing

Connection between the battery and the main relay

1. Keep the ignition switch in the OFF position.
2. Disconnect the main relay coupler.
3. Connect the positive terminal of the circuit tester to the yellow/white wire (1) in the coupler and ground the negative terminal of the tester to the body.

- The tester should indicate the battery voltage.
- If there is no voltage, check the wiring between the battery and the main relay as well as the fuse No. 17. (KE: 20, Finland: 21)

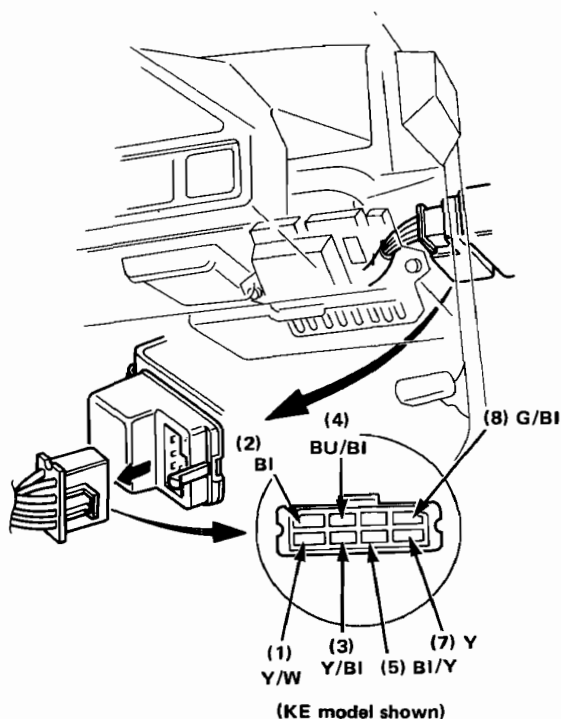

Connection between the battery and the main relay. (IG1)

1. Keep the ignition switch in the OFF position.
2. Disconnect the main relay coupler.
3. Connect the positive terminal of the tester to the black/yellow wire (5) of the coupler and ground the negative terminal of the tester to the body.
4. Turn the ignition switch ON.

- The tester should indicate the battery voltage.
- If there is no voltage, check the wiring from the ignition switch and the main relay as well as the fuse No. 4.

Connection between the battery and the main relay (ST. SW.)

1. Keep the ignition switch in the OFF position.
2. Disconnect the main relay coupler.
3. Connect the positive terminal of the tester to the blue/white (KE: blue/black) wire (4) in the coupler and ground the negative terminal to the body.
4. Turn the ignition switch to the START position.

- The tester should indicate the battery voltage.
- If there is no voltage, check the wiring between the ignition switch and the main relay, as well as the fuse No. 21. (KE: 19, KS, Finland: 20)


Connection between the battery and the fuel pump

1. Keep the ignition switch in the OFF position.
2. Disconnect the main relay coupler.
3. Connect with a jumper wire between the yellow/white wire (1) and the yellow wire (7) in the coupler.

- Confirm that the fuel pump operates.
- If the fuel pump does not work, check the wiring between the battery and the fuel pump and the wiring from the fuel pump to the earth (black wire).

Fuel System

Index

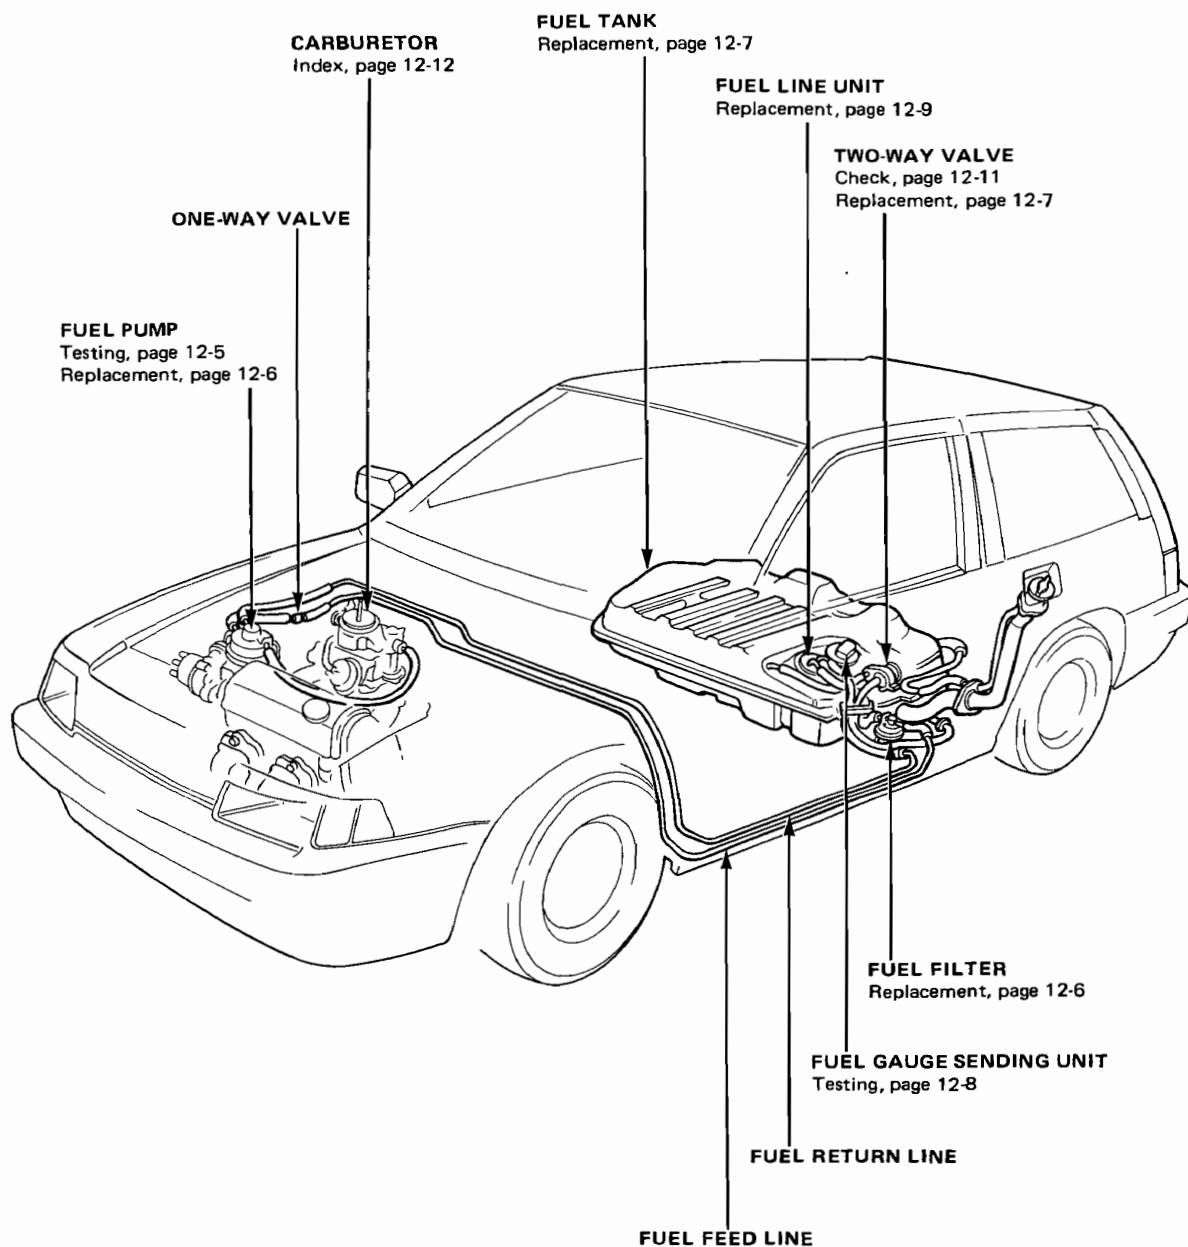


Throttle Cable/Choke Cable



Removal/Installation

1. Push back boot and unscrew locknut.
2. Pull back throttle cable outer and slide cable out of throttle cable bracket.
3. Remove throttle cable end from throttle link.
4. Remove throttle cable end from accelerator pedal.
5. Remove throttle cable from cable stay on valve cover.
6. Turn grommet 90° and pull throttle cable through firewall from engine side.

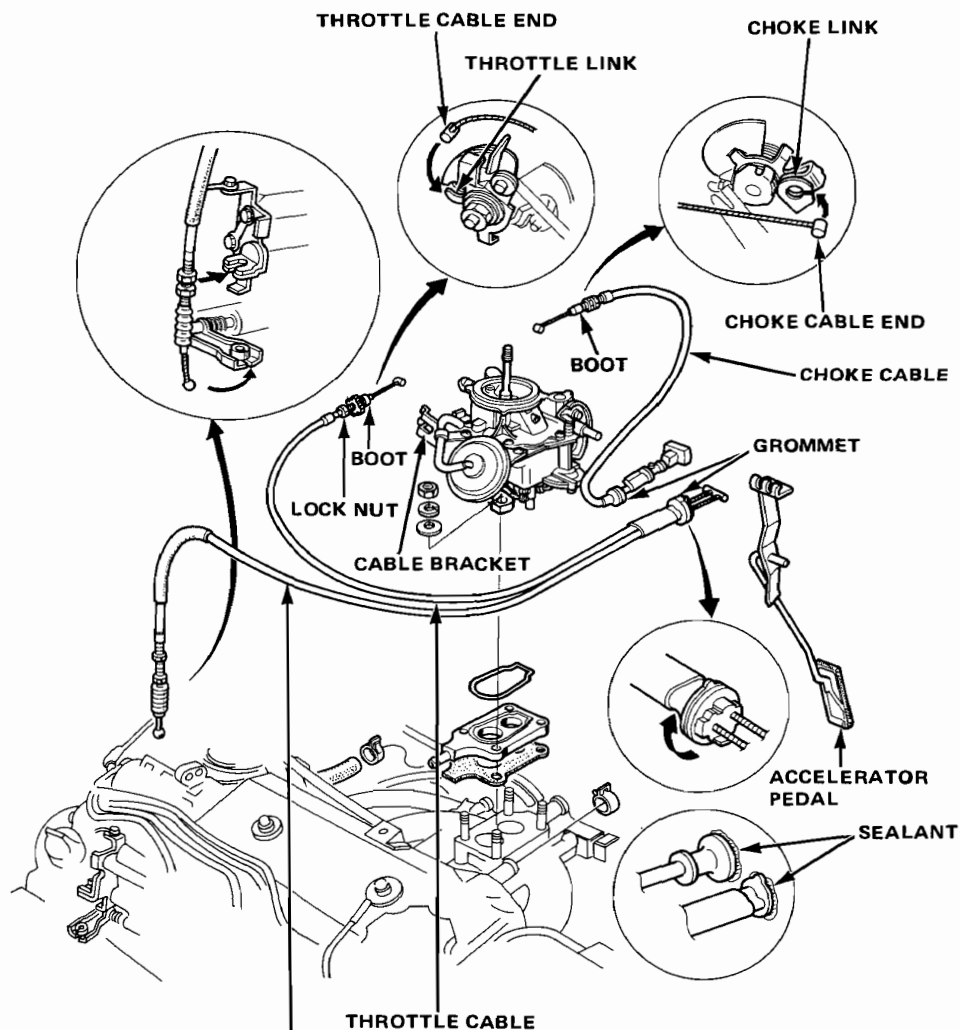


THROTTLE CONTROL CABLE
(Part of the throttle cable on cars
with Hondamatic transmission)
See page 16-60 for adjustment.

Throttle Cable

Inspection/Adjustment

1. Check that throttle cable operates smoothly with no binding or sticking. Repair as necessary.
2. Check cable free-play at throttle linkage. Cable deflection should be 4–10 mm (3/16–3/8 in.)

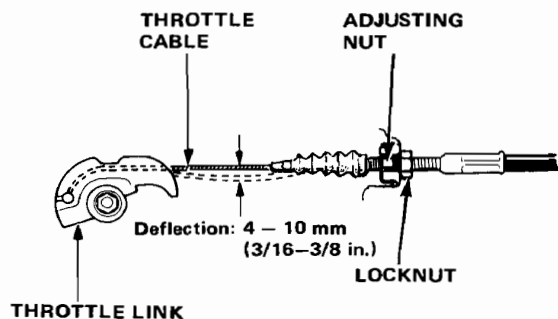


3. If deflection is not within specs, loosen locknut and turn adjusting nut until you can deflect cable as specified. Then tighten locknut.
4. With cable properly adjusted, check throttle valve to be sure it opens fully when you push accelerator pedal to the floor.

CAUTION: Check throttle valve to be sure it returns to idle position whenever you release accelerator.

Installation

1. Install the throttle cable in the throttle link.

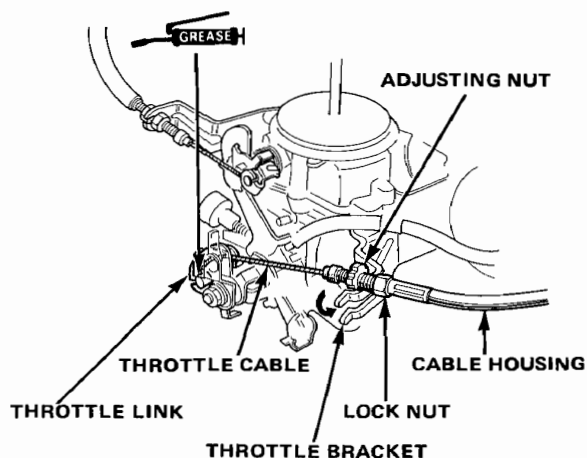


2. Slip the cable housing into the throttle bracket and adjust the cable deflection as described in the previous procedure.
3. On models with Hondamatic transmission, adjust the throttle control cable. See page 16-60.


Choke Cable

Adjustment

1. Check that choke control operates smoothly with no evidence of binding or sticking.
Repair as necessary.

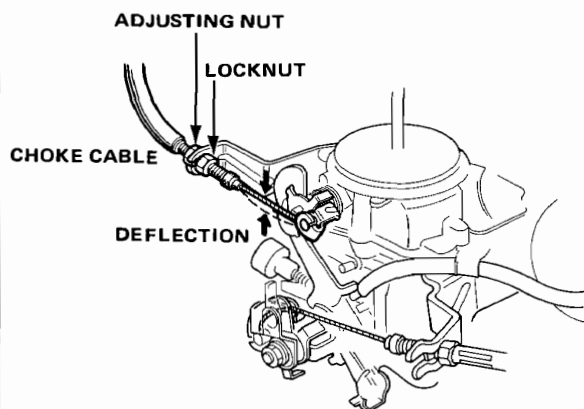

2. Push choke knob all the way in.
Choke butterfly valve should be fully open.
3. Check cable free-play at choke linkage.
Cable deflection should be 5–6 mm (0.20–0.24 in.) with fingers pushed on the cable.
4. Pull the knob all the way out.
Choke butterfly valve should be fully close.

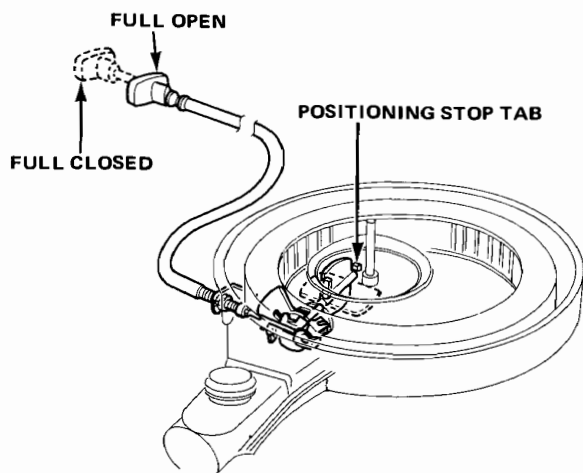

5. If butterfly valve does not fully open, turn adjusting nut until butterfly valve moves off the positioning stop tab. Turn adjusting nut until cable has no deflection. Loosen adjusting nut until cable deflects 5–6 mm (0.20–0.24 in.). Tighten locknut.
6. If butterfly valve does not close properly, inspect for binding of the valve and shaft, and for proper operation of the return spring.

Fuel Pump




Output Test

WARNING Do not smoke during the test. Keep any open flame away from your work area.

NOTE: Check for a clogged fuel filter and/or fuel line before checking fuel pump pressure.

1. Disconnect the fuel line at the fuel filter in the engine compartment, and connect a pressure gauge to it as shown.
2. Disconnect the fuel return line at the fuel pump, and plug the return fitting with a cap.

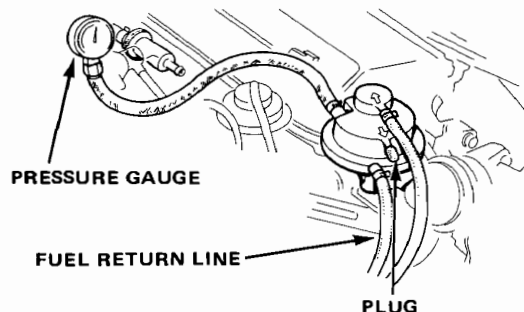

3. Start the engine, and allow it to idle until pressure stabilizes, then stop engine.

Pressure should be:

17.7–26.5 kPa (0.18–0.27 kg/cm², 2.7–3.8 psi)


- If gauge shows at least 17.7 kPa (0.18 kg/cm², 2.7 psi), go on to step 4.
- If gauge shows less than 17.7 kPa (0.18 kg/cm², 2.7 psi), replace pump and re-test.

4. Remove pressure gauge and hold a graduated container under the hose.
5. Start the engine, and allow it to idle for 60 seconds, then stop the engine.

Fuel volume should be 170 cm³ (5.7 oz).

- If fuel volume is less than specified, replace the fuel pump and re-test.

NOTE: Check for a clogged fuel filter and/or fuel line before replacing pump.

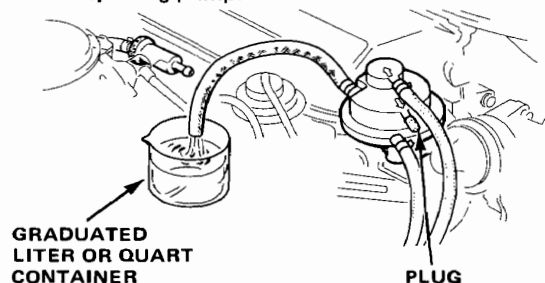

6. Remove plug from fuel pump return fitting and reconnect return line.


Fuel Pump

Replacement

WARNING Do not smoke while working on fuel system. Keep open flame away from work area.

1. Attach fuel line clamps to fuel pump lines.
2. Disconnect fuel lines at fuel pump.

CAUTION: When disconnecting fuel lines, slide back clamps then twist lines as you pull, to avoid damaging them.

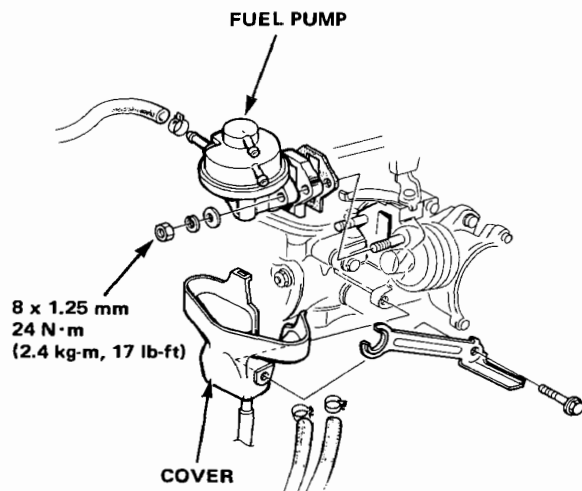

3. Remove fuel pump.
4. Install in the reverse order of removal.

CAUTION: Make sure that the fuel lines are connected properly and securely.

Fuel Filter

Replacement


Replace filter every 48,000 Km (30,000 miles)

WARNING

- Do not smoke while working on fuel system. Keep open flame away from work area.
- Block front wheels before jacking up rear of car.

1. Raise the rear of the car and place the jackstands in proper locations.
2. Remove the fuel filter cover (Except for coupe model).
3. Push in the tab of the fuel filter to release the holder, then remove the filter from its bracket.
4. Attach fuel line clips to the fuel lines and disconnect the lines from the filter.

CAUTION: To avoid damaging the fuel lines when disconnecting, slide back the clamps then twist the lines as you pull.

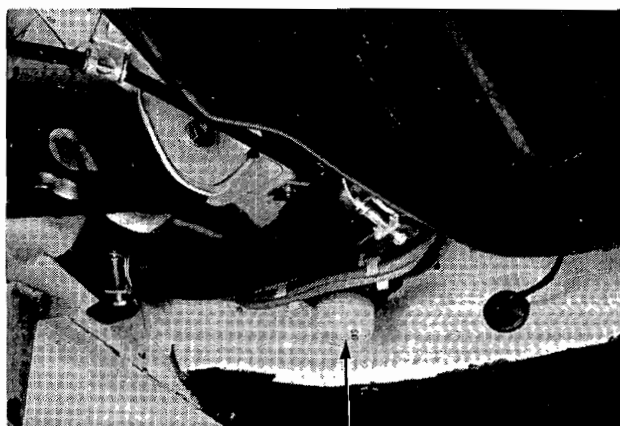

Fuel Tank/Two-way Valve

Replacement


WARNING

- Do not smoke while working on fuel system. Keep open flame away from work area.
- Block front wheels before jacking up rear of car.

1. Raise the rear of the car and place jackstands in the proper locations.
2. Remove the fuel filter cover. (Except for Coupe model)
3. Remove the drain bolt and drain the fuel into an approved container.
4. Disconnect the sending unit connectors.
5. Disconnect the hoses.

CAUTION: When disconnecting the hoses, slide back the clamps, then twist hoses as you pull, to avoid damaging them.

6. Place a jack, or other support, under the tank.
7. Remove the strap nuts and let the straps fall free.
8. Remove the fuel tank.
9. Install a new washer on the drain bolt, then install parts in the reverse order of removal.

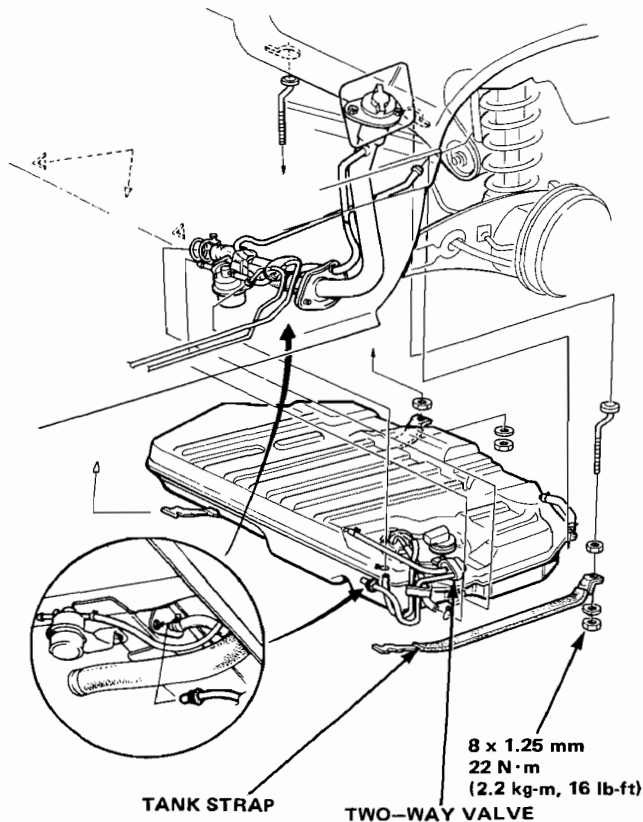

Fuel Gauge





Testing

1. Raise the rear of the car and place jackstands in the proper locations.
2. Check that ignition switch is OFF.
3. Disconnect fuel sending unit connector to check fuel gauge continuity and movement.
4. Connect the yellow/white wire to the black wire using a jumper wire.
5. Turn ignition switch ON and watch the fuel gauge; turn the ignition OFF as soon as gauge needle stops moving. Needle should have moved to FULL mark.

CAUTION: Do not leave ignition ON for longer than 5 seconds or fuel gauge will be damaged.

- If gauge needle went to FULL, re-connect sending unit wires and go on to sending unit test on next page.
- If needle did not go to FULL, check fuse, wiring and connectors. If OK, replace gauge and re-test.

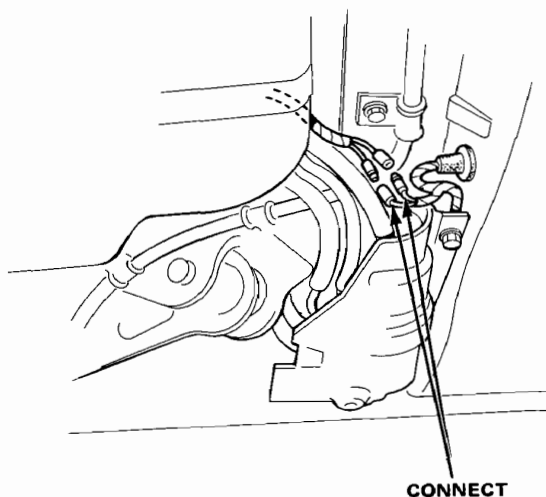


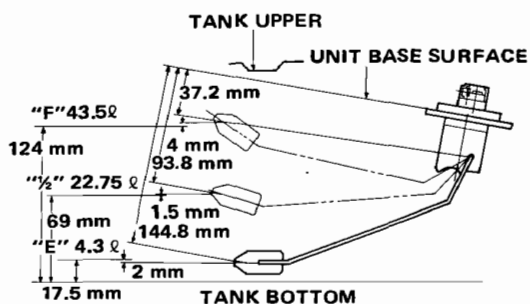

Fuel Gauge Sending Unit Fuel Line Unit

Testing (cont'd)

4D H/B

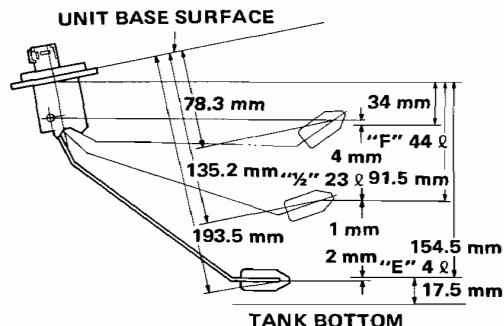

- If resistance is correct, replace fuel gauge and re-test.
- If resistance is incorrect, replace sending unit. Test new unit as described above before installing it.


Fuel Line Unit Replacement

WARNING

- Do not smoke while working on fuel system. Keep open flame away from work area.
- Block front wheels before jacking up rear of car.

1. Drain and remove fuel tank as shown on page 12-6.
2. Remove fuel line unit from tank.

FUEL SENDER WRENCH
07920-SB20000

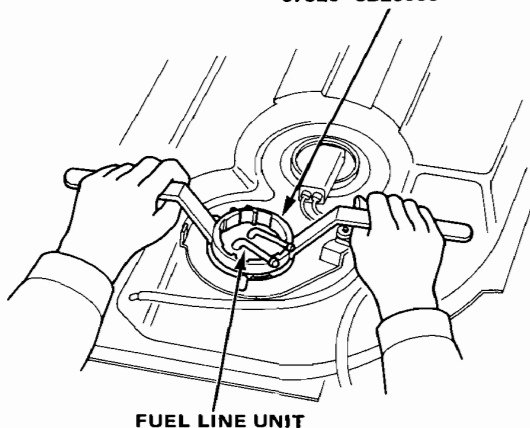

FUEL LINE UNIT

Fuel Cut-off Valve



Replacement

[Coupe only]

WARNING


- Do not smoke while working on fuel system. Keep open flame away from work area.
- Block front wheels before jacking up rear of car.

1. Raise rear of car and place jackstands in the proper locations.
2. Place jack under fuel tank.

CAUTION: Place a flat piece of wood on the jack lifting pad to prevent damage to the fuel tank.

3. Remove the tank mounting nuts and bolts, then lower the tank just enough to gain access to the fuel cut-off valve.
4. Turn the valve ¼ turn (90°), so its lugs are aligned with the slots in the mount, then lift it out.

FUEL CUT-OFF VALVE

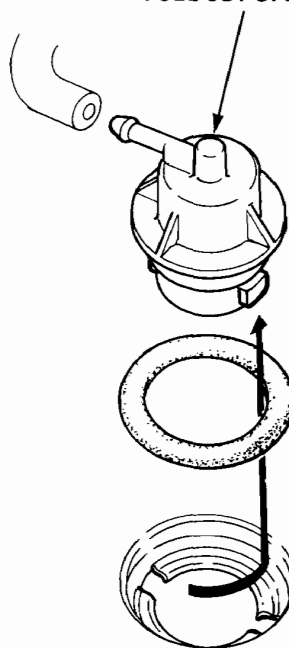


Evaporative Emission Control System

Charcoal Canister Check

[Canadian and Australian Models]

1. Connect tachometer, start engine and allow to reach normal operating temperature (cooling fan comes on).
2. Remove fuel filler cap.
3. Remove canister purge air hose from frame and connect hose to vacuum gauge as shown.

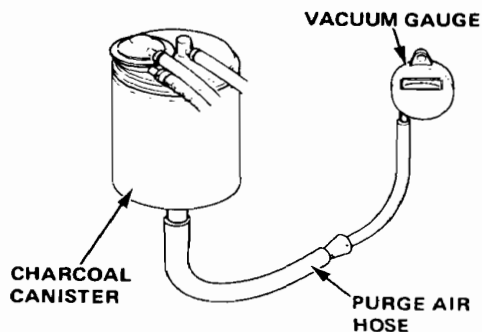

4. Start engine and raise speed to 3500 min⁻¹ (rpm).

Vacuum should appear on gauge within 1 minute.


- If vacuum appears on gauge in 1 minute, remove gauge and go on to step 9.
- If no vacuum, disconnect vacuum gauge and reinstall fuel filler cap.

5. Remove charcoal canister and check for signs of damage or defects.
If defective, replace canister.
If OK, go on to step 6.

6. Stop engine. Disconnect hose from canister "PCV" fitting.
Connect hand vacuum pump to canister "PURGE" fitting as shown, and draw vacuum.

Vacuum should remain steady.


PURGE CONTROL DIAPHRAGM VALVE HAND VACUUM PUMP

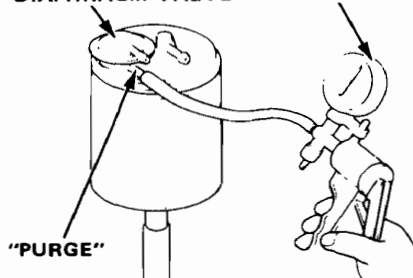

- If vacuum remains steady, go on to step 7.
- If vacuum drops, replace canister and re-test.

7. Draw air from canister "PCV" fitting as shown.

"PURGE" side vacuum should drop to zero.

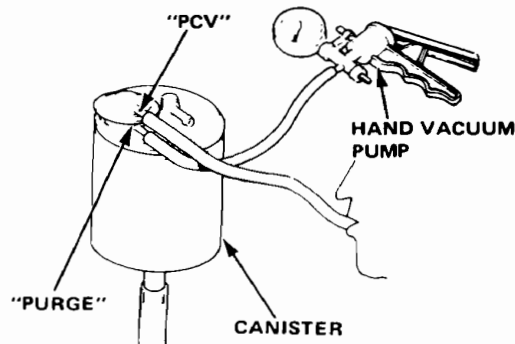

- If "PURGE" side vacuum does not drop to zero, replace canister and re-test.
- If "PURGE" side vacuum drops to zero, disconnect vacuum pump, and go on to step 8.


8. Connect hand vacuum pump to canister "PCV" fitting and draw vacuum.

Vacuum should remain steady.

- If vacuum remains steady, go on to step 9.
- If vacuum drops, replace canister and re-test.

9. Connect vacuum pump to "TANK" fitting as shown, and draw vacuum.

There should not be any vacuum.

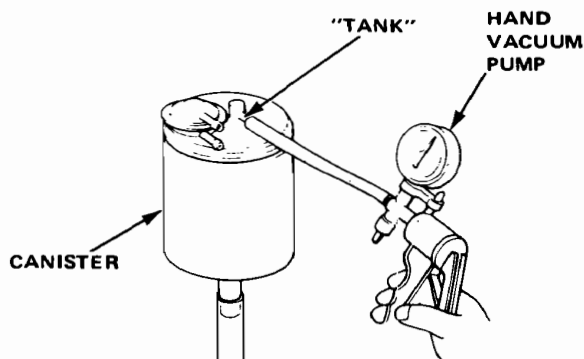


- If no vacuum, reinstall fuel filler cap and canister, test complete.
- If there is vacuum, replace canister and re-test.




Two-way Valve Check

[Canadian model]

1. Remove the filler cap.
2. Remove vapor line from the fuel tank and connect to T-fitting from vacuum gauge and vacuum pump as shown.

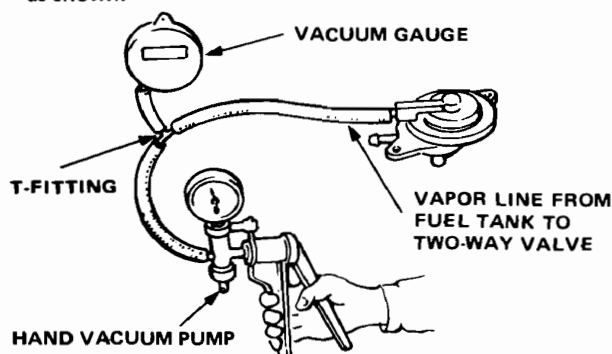

3. Slowly draw a vacuum while watching the gauge. Vacuum should stabilize at 5 to 15 mmHg (0.2 to 0.6 in.Hg).
 - If vacuum stabilizes momentarily (two-way valve opens) between 5 and 15 mmHg (0.2 and 0.6 in.Hg), go on to Step 4.
 - If vacuum stabilizes (valve opens) below 5 mmHg (0.2 in.Hg) or above 15 mmHg (0.6 in.Hg), install new valve and re-test.
4. Move hand pump hose from vacuum to pressure fitting, and move vacuum gauge hose from vacuum to pressure side as shown.

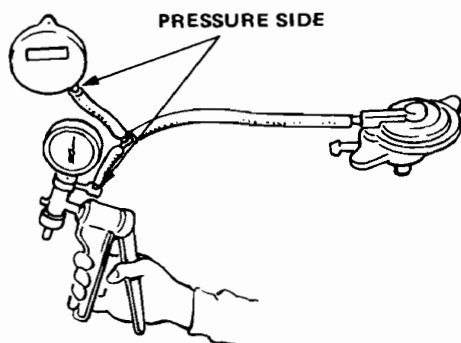


5. Slowly pressurize the vapor line while watching the gauge.

Pressure should stabilize at 25 to 55 mmHg (1.0 to 2.2 in.Hg).


- If pressure momentarily stabilizes (valve opens) at 25 to 55 mmHg (1.0 to 2.2 in.Hg), the valve is OK.
- If pressure stabilizes below 25 mmHg (1.0 in.Hg) or above 55 mmHg (2.2 in.Hg), install a new valve and re-test.

[Other model]

1. Remove the fuel filler cap.
2. Remove the vapor line from the canister or frame, and connect to a T-fitting from the vacuum gauge and the vacuum pump as shown.

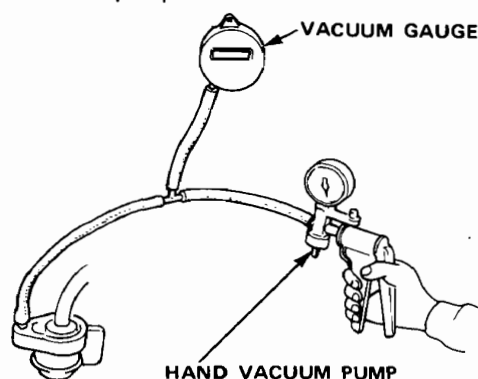

3. Slowly draw a vacuum while watching the gauge. Vacuum should stabilize at 15 to 30 mmHg (0.6 to 1.2 in.Hg).
 - If vacuum stabilizes momentarily (Two-way Valve opens) between 15 and 30 mmHg (0.6 and 1.2 in.Hg), go on step 4.
 - If vacuum stabilizes (valve opens) below 15 mmHg or above 30 mmHg (1.2 in.Hg), install new valve and retest.
4. Move hand pump hose from vacuum to pressure fitting, and move vacuum gauge hose from vacuum to pressure side as shown.

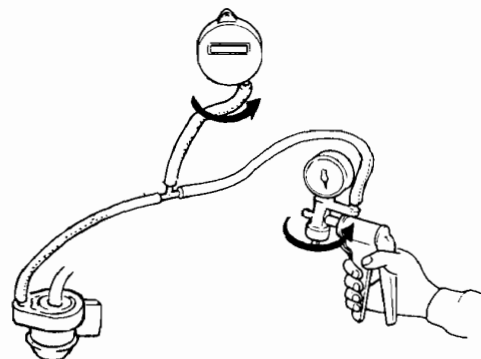

5. Slowly pressurize the vapor line while watching the gauge.


Pressure should stabilize at 5 to 15 mmHg (0.2 to 0.6 in.Hg).

- If pressure momentarily stabilizes (Valve opens) at 5 to 15 mmHg (0.2 to 0.6 in.Hg), the valve is OK.
- If pressure stabilizes below 5 mmHg (0.2 in.Hg) or above 15 mmHg (0.6 in.Hg), install a new valve and re-test.

Carburetor

Index

NOTE: Use new gaskets and O-rings whenever reassembling.

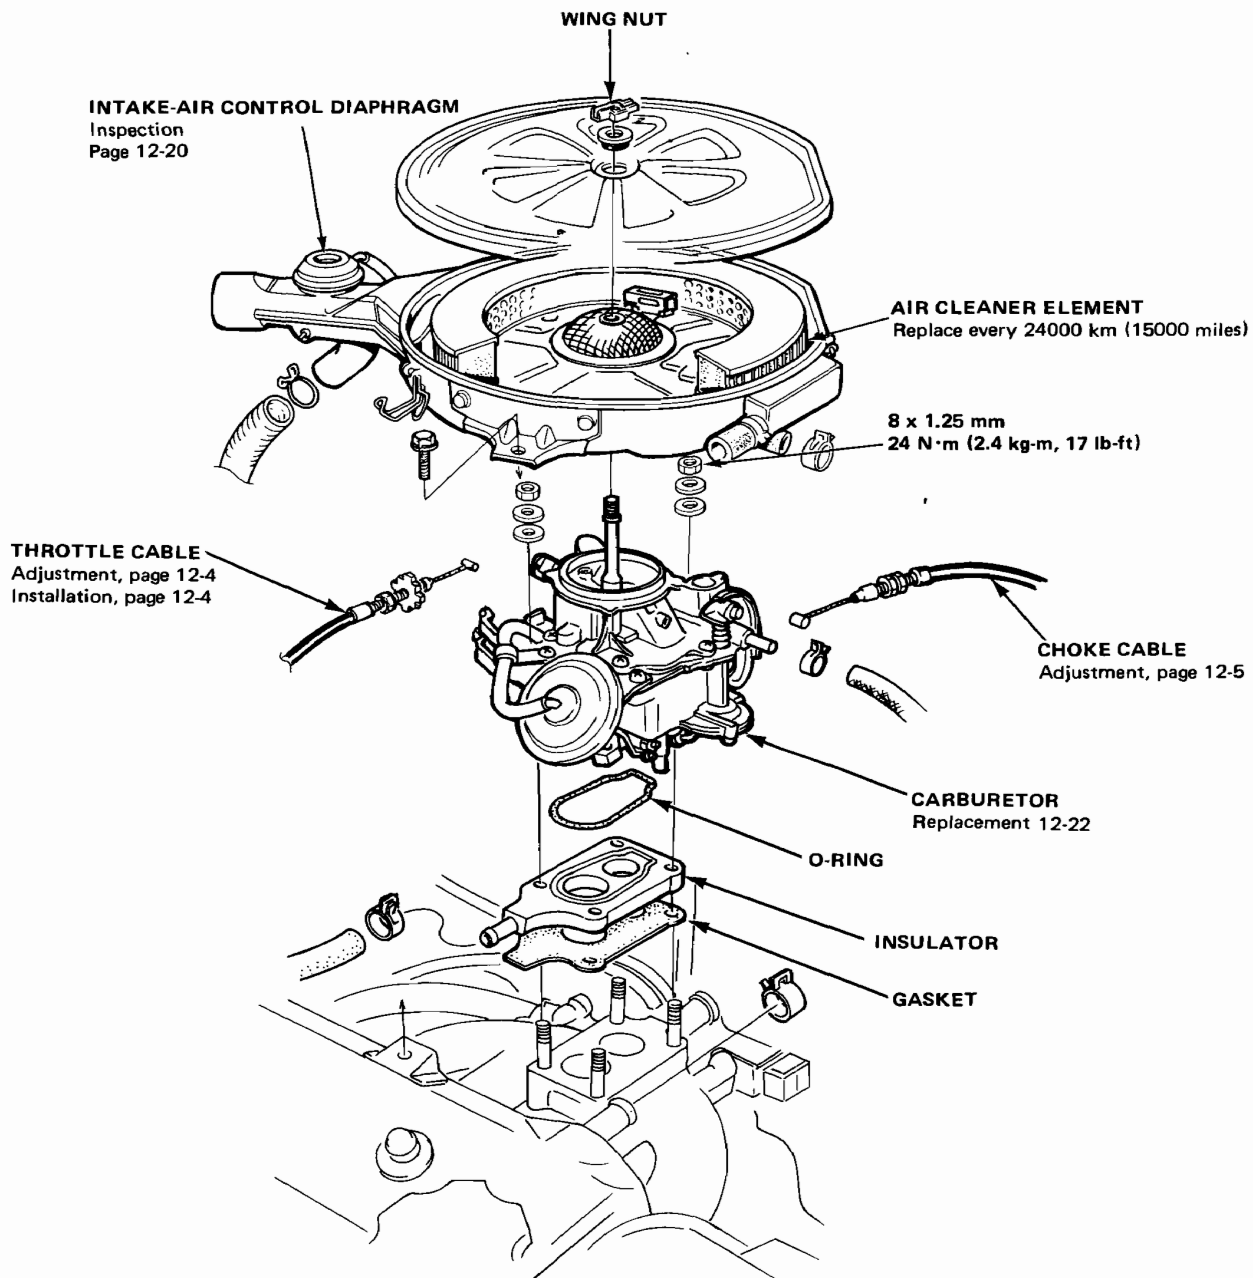

Idle Speed and Mixture



Adjustment

[Except Canadian model]

NOTE: The following inspections and adjustments should be completed before measurement.

Air cleaner element
Ignition timing and control system
Spark plugs
Idle speed
Valve clearance
Intake air control system
PCV valve


WARNING Do not smoke during this procedure. Keep any open flame away from your work area.

CO Meter Method


1. Warm-up and calibrate the NDIR CO Meter in accordance with the manufacturer's recommended procedures.
2. Insert exhaust gas sampling probe into the tail pipe at least 40 cm (16-inches).
3. Check specification for idle speed and CO with the headlights OFF (on Swedish model: on) and cooling fan OFF.

Transmission	Idle Speed
Manual Transmission	$750 \pm 50 \text{ min}^{-1} \text{ (rpm)}$
Hondamatic (in gear)	$700 \pm 50 \text{ min}^{-1} \text{ (rpm)}$

	Specified CO%
Swedish and Australian models	below 2.0 %
Swiss model	0.5–2.0 %
Other models	below 3.0%

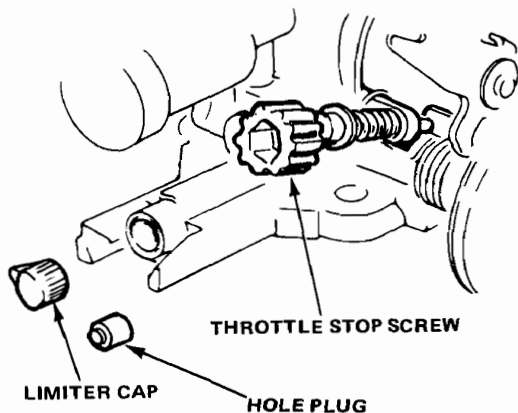

4. If unable to obtain this reading with the limiter cap in place, remove the cap. Adjust the mixture adjusting screw to obtain specified CO%, recheck the engine idle speed and reset if necessary. Finally recheck the CO reading and replace the limiter cap. If unable to obtain a CO reading of specified % by this procedure, check the engine tune-up condition.
5. If car is equipped with air conditioning, recheck idle speed with A/C on: Speed should still be within specification.
If the speed is outside the spec, remove the rubber cap on the idle boost diaphragm and adjust by turning adjusting screw.

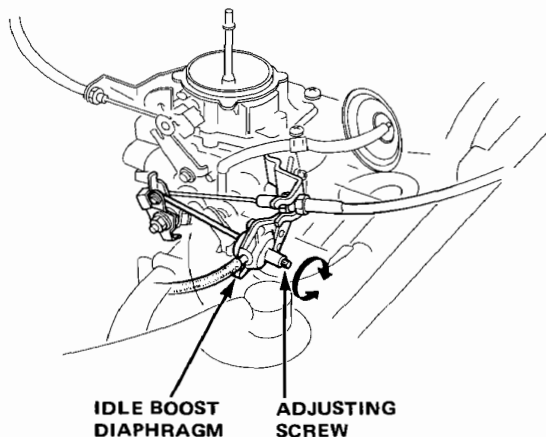

If the idle boost diaphragm does not operate with the air conditioner on, disconnect the hose from the idle boost diaphragm and check for vacuum.

- If there is vacuum, replace the idle boost diaphragm.
- If there is no vacuum, check for voltage at the idle control solenoid valve.
 - If there is no voltage, check the wiring and fuse, and repair or replace as necessary.
 - If there is voltage, disconnect the hose routed to the intake manifold at the idle control solenoid valve and check for vacuum.
 - If there is vacuum, replace the idle control solenoid valve.
 - If there is no vacuum, check the vacuum line to the intake manifold.

(cont'd)

Idle Speed and Mixture

Adjustment (cont'd)

Idle-Drop Method


1. Start the engine and warm up to the normal operating temperature.
2. Remove the limiter cap.
3. With the headlights OFF (on Swedish model: on) and the cooling fan OFF, adjust the engine speed and mixture for best idle at 820 (1500 Civic), 800 (1300 Civic) min^{-1} (rpm) (Manual Transmission in neutral) or 750 (1500 Civic), 730 (1300 Civic) min^{-1} (rpm) (Hondamatic in gear).
4. Turn the mixture adjusting screw clockwise until engine speed drops to 750 min^{-1} (rpm) (Manual Transmission in neutral) or 700 min^{-1} (rpm) (Hondamatic in gear).
5. Replace the limiter cap.

[For Canadian model]


WARNING Do not smoke during this procedure. Keep any open flame away from your work area.

CO Meter Method

1. Remove air cleaner.
2. Disconnect vacuum tubes, fuel line, throttle cable and choke cable from carburetor.
3. Remove carburetor.
4. To remove the mixture adjusting screw hole plug;

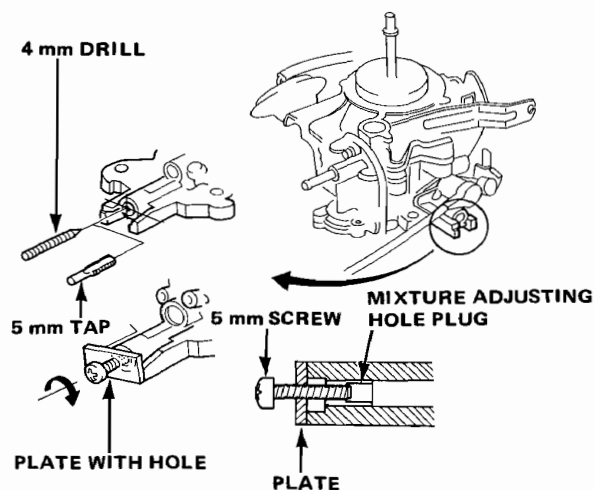


5. Replace the carburetor, vacuum tubes, fuel line throttle cable and choke cable.
6. Install air cleaner.
7. Start engine and warm up to normal operating temperature; the cooling fan will come on.
8. Connect tachometer.

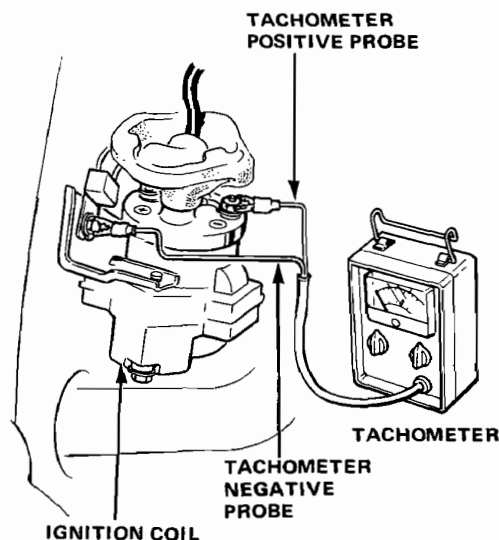

9. Warm-up and calibrate the NDIR CO Meter in accordance with the manufacturer's recommended procedures.
10. Insert exhaust gas sampling probe into the tail pipe at least 40 cm.
11. Check specification for idle speed and CO with the headlights OFF and cooling fan OFF.

Transmission	Idle Speed
Manual Transmission	750 \pm 50 min^{-1} (rpm)
Hondamatic (in gear)	700 \pm 50 min^{-1} (rpm)

Specified CO%	below 2.0%
---------------	------------

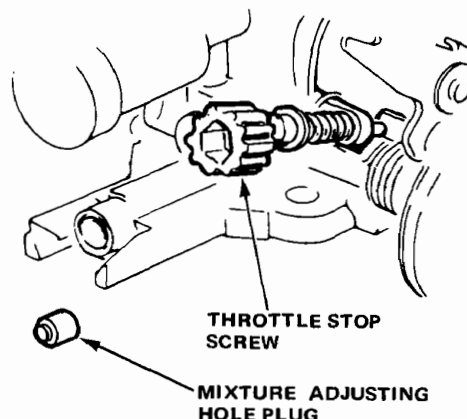


Choke Fast Idle




Adjustment

12. Adjust the mixture adjusting screw to obtain specified CO%, recheck the engine idle speed and reset if necessary. Finally recheck the CO reading and replace the mixture adjusting hole plug. If unable to obtain a CO reading of specified % by this procedure, check the engine tune-up condition.

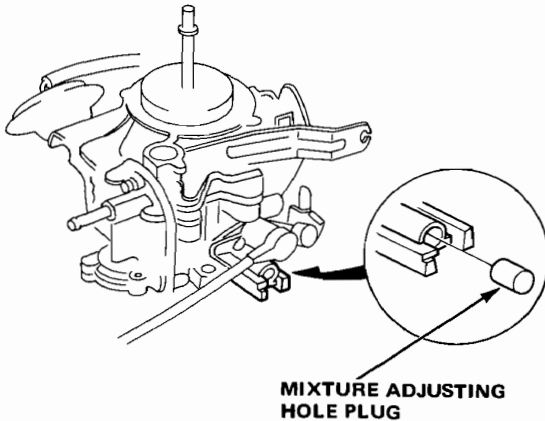


13. If car is equipped with air conditioning, recheck idle speed with A/C on: Speed should still be within specification. If the speed is outside the spec, remove the rubber cap on the idle boost diaphragm and adjust by turning adjusting screw.

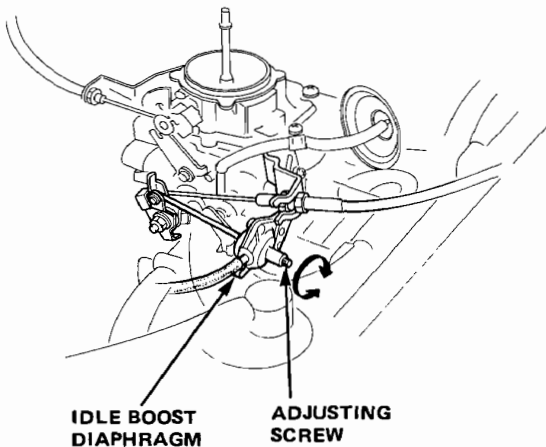


If the idle boost diaphragm does not operate with the air conditioner on, go on to idle boost diaphragm check on page 12-13.

1. Remove rubber boot from ignition coil. Connect tachometer positive probe to (-) terminal on ignition coil. Connect tachmeter negative probe to chassis ground.

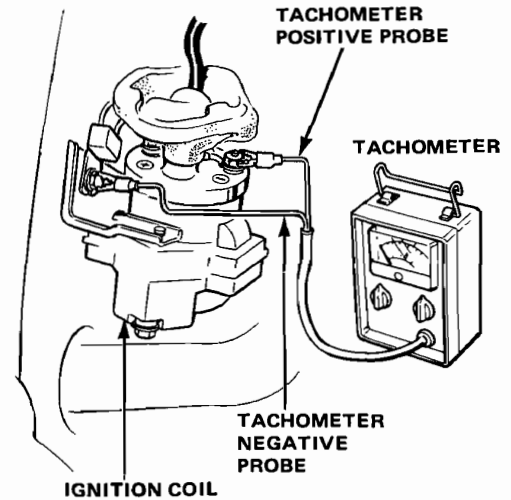

2. Start engine and allow to warm up.
3. Place choke control knob in first detent position.

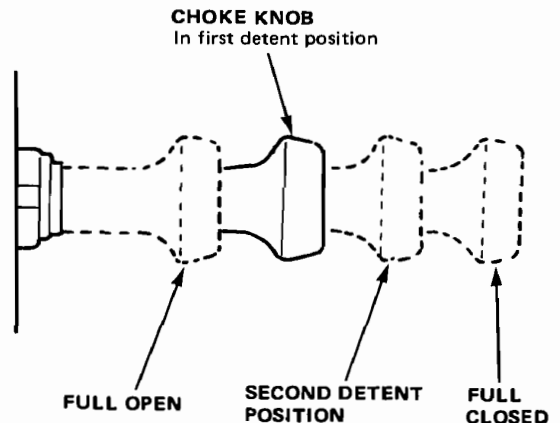


Fast idle should be: 1,500–2,500 min⁻¹ (rpm)

(cont'd)


Choke Fast Idle

Adjustment (cont'd)

- If rpm is too high, use long nose pliers to narrow the slot in the fast idle adjusting link. Make the adjustment in small increments.

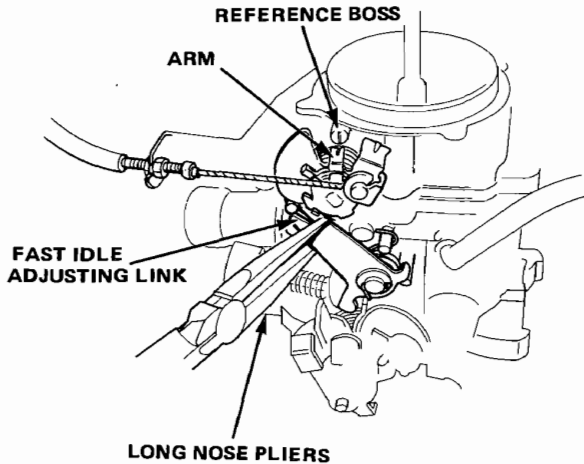

- If rpm is too low, insert a screwdriver in the fast idle adjusting link slot and widen the slot. Make adjustments in small increments.

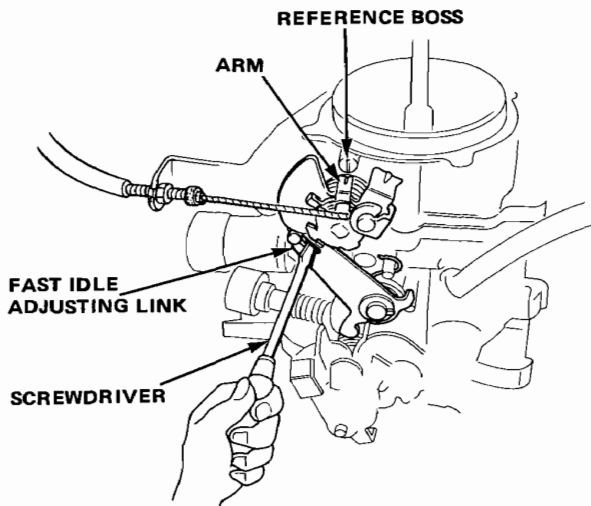


Fuel Cut-off Solenoid Valve

Inspection

1. Place a clean shop towel around the solenoid valve, to soak up any gasoline, then loosen the screws and remove the solenoid valve.

WARNING

- Wipe up any spilled gasoline before testing.
- If cut-off valve is removed for testing, be sure you ground it to prevent sparking or fire when the key is turned on.

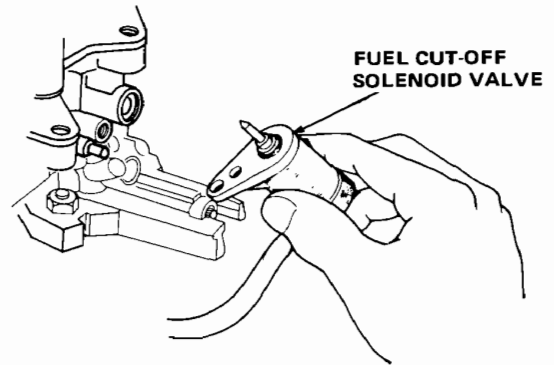

2. Ground the valve as far from the carburetor as possible and turn on the ignition while you watch the valve needle.
 - If the needle retracts, the valve is OK.
 - If the needle doesn't retract, check for voltage at the solenoid.
 - If voltage is present, check the fuse and wiring.


Dashpot




Inspection

1. Connect a tachometer, start the engine and allow it to reach normal operating temperature (cooling fan comes on).
2. Disconnect vacuum hose from the throttle opener, connect a hand vacuum pump to the opener and apply 400 mmHg (16 in.Hg) vacuum.

Engine speed should rise to 2,600–3,700 min^{-1} (rpm) within 1 minute.

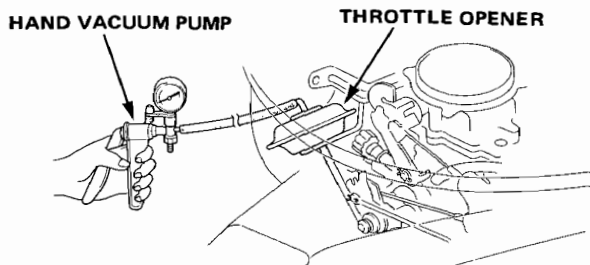

- If the engine speed rises to 2,600–3,700 min^{-1} (rpm), go on to step 3.
- If rpm is too LOW: Widen the adjusting slot in the opener lever with a screwdriver.

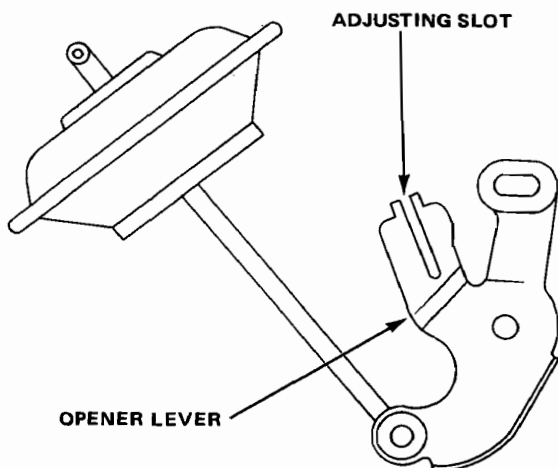

- If the rpm is too HIGH: Narrow the adjusting slot in the lever with long nose pliers.
- If the rpm cannot be adjusted, or the diaphragm will not hold vacuum, replace the throttle opener and re-test.


3. Disconnect the vacuum pump and reconnect the hose. Raise the engine speed to 3500 rpm and maintain for 2 to 3 seconds. Release the throttle suddenly, and watch how long the throttle opener arm takes to fully extend.

Return time should be 1 to 4 seconds.

- If the engine speed returns to idle in 1 to 4 seconds with the arm fully extended, go on to throttle opener check on page 12-18.
- If return to idle takes less than 1 second, go on to step 4.
- If the throttle takes longer than 4 seconds to return, go on to step 5.

4. Disconnect the hose from the throttle opener and connect a vacuum gauge to the disconnected hose. Start and run the engine at 4000 rpm.

Vacuum should be at least 30 mmHg (1.2 in.Hg) at 4000 rpm.

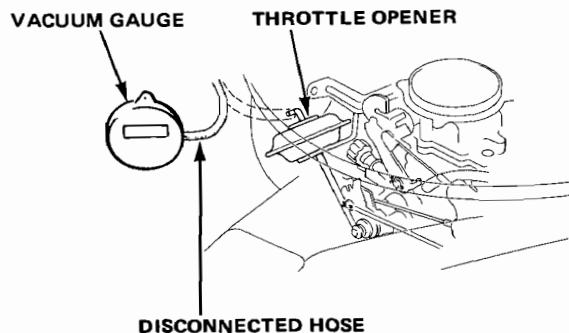

- If vacuum is at least 30 mmHg (1.2 in.Hg) at 4000 rpm, replace the control valve (Swiss, Swedish and Australian models of manual transmission and Canadian model) or dashpot check valve (other models) and re-test.
- If vacuum is below 30 mmHg (1.2 in.Hg), check for vacuum at the carburetor port.
 - If there is no vacuum, clean the carburetor port and re-test.
 - If vacuum is present, check the vacuum line for leaks, blockage or disconnected hose and re-test.


(cont'd)

Dashpot

Inspection (cont'd)

(Only Swiss, Swedish and Australian Models of Manual Transmission and Canadian Model.)

5. Pinch the hose between the throttle opener solenoid valve and control valve and repeat step 3.
 - If there is no change, replace the control valve and repeat step 3.
 - If the throttle return time is within the limits with hose pinched, check for voltage at the throttle opener solenoid valve (yellow/white wire of the control box connector)
 - If voltage is present, replace the speed sensor and re-test.
 - If there is no voltage, replace the throttle opener solenoid valve and re-test.

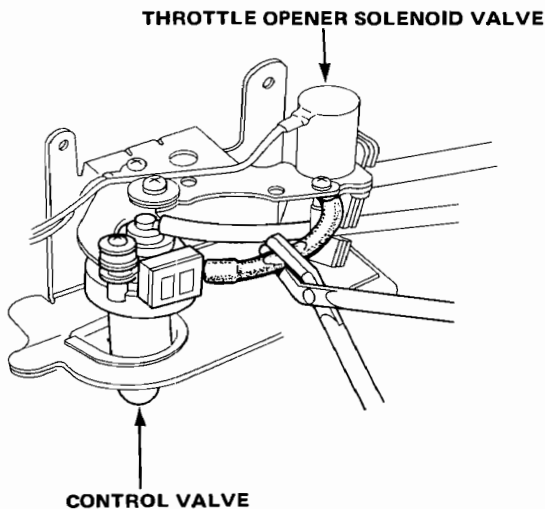


Throttle Opener

Inspection

(Only Swiss, Swedish and Australian Models of Manual Transmission and Canadian Model.)

NOTE: Dashpot check should be completed before testing.

1. Start the engine and allow it to reach normal operating temperature (cooling fan comes on).
2. Bypass the speed sensor by jumping the battery (+) voltage to the yellow/white wire at the control box connector.
3. Raise the engine speed to 3,500 min⁻¹ (rpm) and release the throttle. The return time to the idle should be longer than the dashpot check time (1–4 seconds) but not longer than 6 seconds.

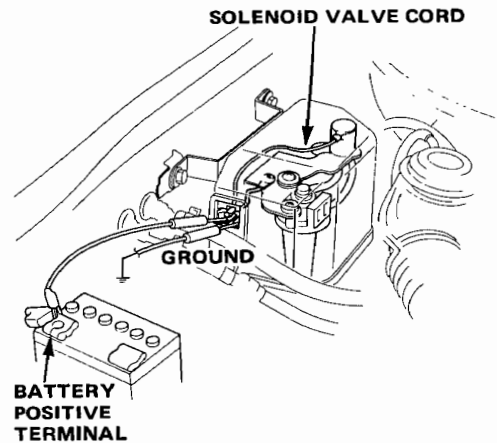

- If the return time to the idle takes longer than the time you recorded for the dashpot system, but not longer than 6 seconds, the throttle opener is OK. Go on to step 5.
 - If the return time is longer than 6 seconds, replace the throttle control valve and retest.
 - If the return time is less than the time you recorded for the dashpot system, go on to step 4.
4. Remove the vacuum line connecting the throttle opener solenoid valve to the control valve. Check for vacuum at the throttle opener solenoid valve.
 - If vacuum is present, replace the control valve and re-test.
 - If no vacuum, replace the throttle opener solenoid valve and re-test.
 5. Disconnect the battery jumper and stop the engine.

Speed Sensor




Inspection

(Only Swiss, Swedish and Australian Models of Manual Transmission and Canadian model.)

WARNING Block rear wheels before jacking up front of car.

1. Jack up front of car and place jack stands in proper locations. Set the parking brake.
2. Connect voltmeter positive probe to the yellow/white terminal of the control box connector. Connect voltmeter negative probe to chassis ground.

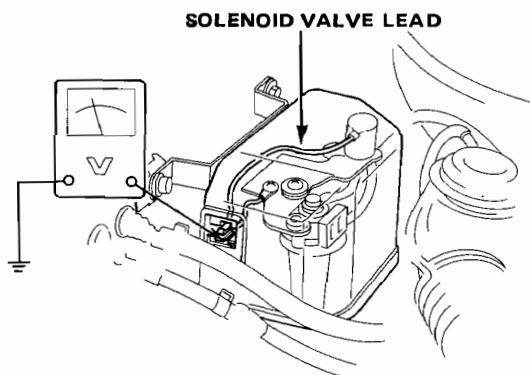

3. Start the engine. Place the shift or selector lever in second or L position and accelerate slowly, while observing the voltmeter.

The voltmeter should show battery voltage above 20 km/h, and no voltage below 10 km/h.


- If there is no voltage below approximately 10 km/h, and there is battery voltage above approximately 20 km/h, the speed sensor is OK.
 - If the voltmeter readings do not correspond to the above km/h range, replace the speed sensor and re-test.
 - If there is no voltage during speed sensor test, go on to step 4.
4. Check for loose or improper wire connections, faulty fuse or speed sensor. Replace or repair as necessary and re-test.

Intake Air Control


Inspection

Cold engine inspection

1. Remove air cleaner cover and filter element. Disconnect the air intake and hot air ducts.
2. With the engine cold, start the engine for about 5 seconds and stop. Air control valve should rise on start up and remain fully open for at least 3 seconds after stopping engine.

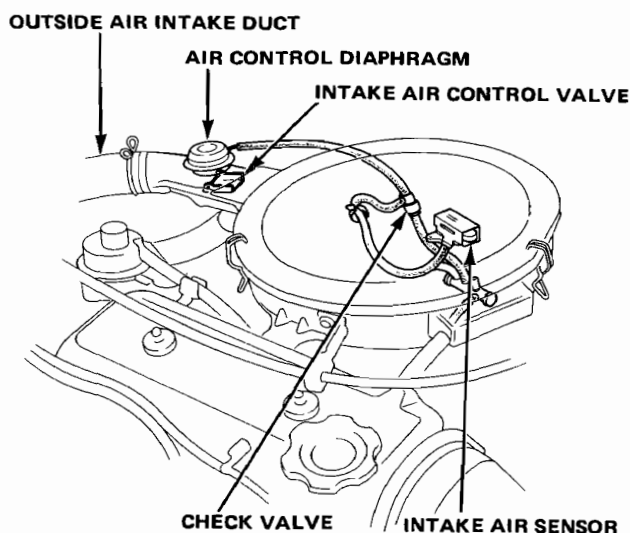

- If valve rises, intake air control is OK; reinstall filter element and air cleaner cover. Connect the air intake and hot air ducts. Go on to step 1 for hot engine inspection.
 - If valve does not rise, check to see if valve is binding. If valve still fails to rise, or fails to stay up for 3 seconds after cold engine cranking test, go on to step 3.
3. Disconnect and plug hose leading to intake air sensor.
 4. Crank starter for approximately 5 seconds.
 - If the air control valve does not rise or stay open for at least 3 seconds, proceed to Step 5.
 - If valve rises and stays up for at least 3 seconds replace the air bleed valve, and re-test (steps 2 thru 4).
 5. Disconnect vacuum hose from air control diaphragm.
 6. Raise air control valve manually and while blocking the inlet pipe, release the valve.

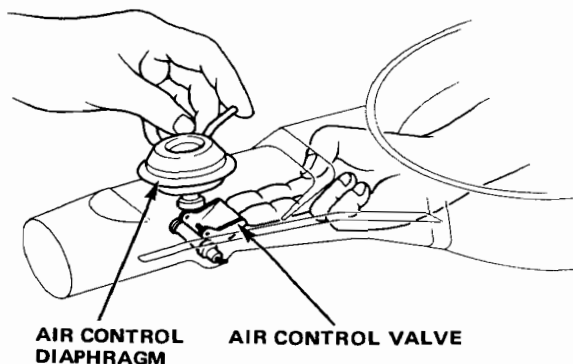

- If the valve stays up, replace check valve and re-test.
- If the valve drops to the closed position, replace the air control diaphragm and re-test.

7. Reinstall filter element and air cleaner cover.

Hot engine inspection

NOTE: As the outside air temperature drops, the bimetal spring in the intake air sensor closes, causing the air control valve to rise and allowing pre-heated air into the air cleaner; consistent intake air temperature (approximately 100°F) is maintained this way.

1. With engine running and cooling fan on, remove air cleaner cover and filter element and immediately check control valve position.

The air control valve should be down.

- If the control valve has dropped down to fully close the hot air intake duct: stop engine, reinstall filter element and air cleaner cover. Test is complete.
 - If control valve has not dropped to the fully closed position, go to step 2.
2. Disconnect the vacuum hose to the air control diaphragm.
 - If the control valve now closes, replace the intake air sensor and re-test.
 - If the control valve does not close, correct whatever is causing the valve to bind, and/or replace air control diaphragm. Re-test.
 3. Stop engine, reinstall filter element and air cleaner cover. Test is complete.

Crankcase Emission Control




Inspection


PCV Valve

NOTE: Replace the PCV valve every 48,000 km (30,000 miles).

1. Check the crankcase ventilation hoses and connections for leaks and clogging.
2. Disconnect the PCV valve from the breather chamber.
3. Start the engine and allow it to idle.
4. Place your finger over the PCV valve and listen for a clicking noise from the PCV valve.

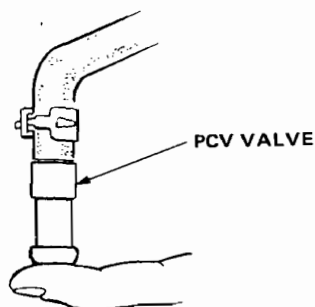


- If a clicking noise is heard, go on to step 5.
 - If no noise is heard, replace the PCV valve and re-test.
5. Install the PCV valve with the large end down.

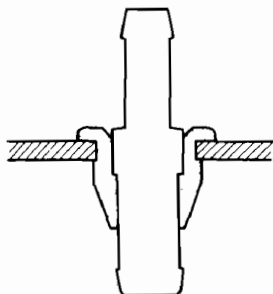

Blow-by Filter

NOTE: Replace the Blow-by Filter every 48,000 km (30,000 miles).

1. Inspect the condition of the blow-by filter.
 - Replace the filter in the following instances:
 - When the filter is stuck fast and oil is dripping or seeping through.
 - When the filter is covered with dust and dirt so that clogging is evident.

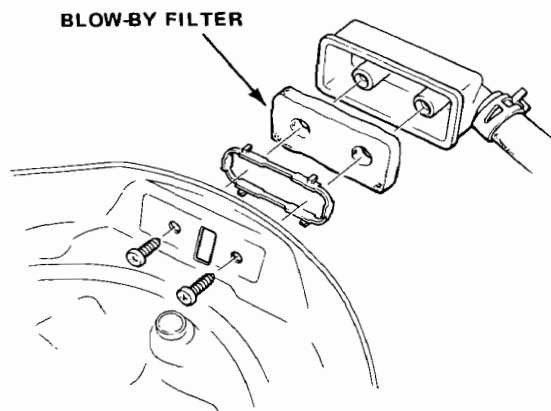


Carburetor

Replacement

CAUTION:

- As the carburetor parts are small always use hand tools that specifically correspond to the sizes of the fasteners to be removed.
- The primary and secondary parts must be set aside separately in groups. Take care not to lose them.
- The carburetor must be disassembled in a clean area and washed in gasoline.
- Use compressed air to clean jet orifices and fuel passages. Do not use a wire.
- Do not disassemble the throttle and choke valves and their shafts.
- Replace with new parts as a set if so required in the parts list.

NOTE: After cleaning the carburetor, apply a coat of silicon oil.

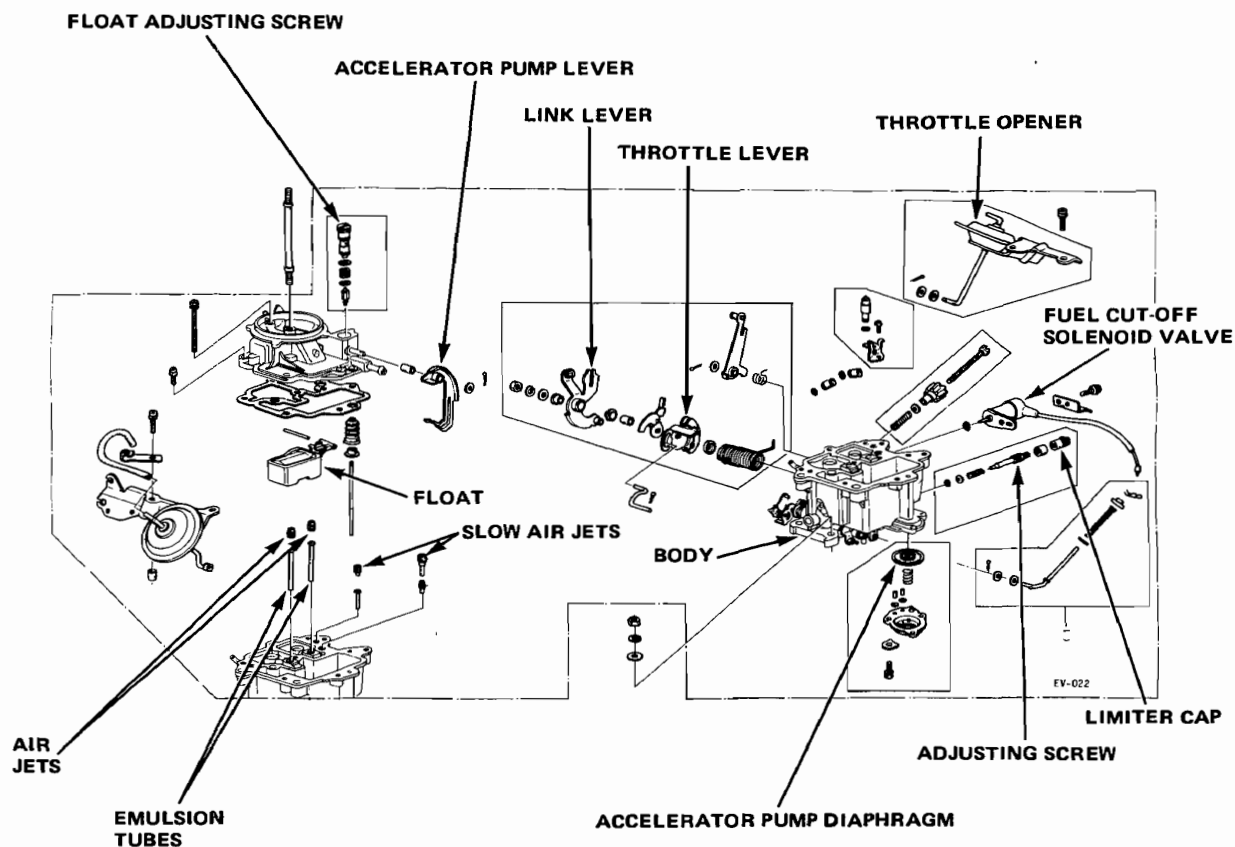


Float

Level Inspection/Adjustment


1. Remove float arm pin by lightly tapping it with a slender pin from long leg side as shown, then remove float.

NOTE: Never tap the float leg.

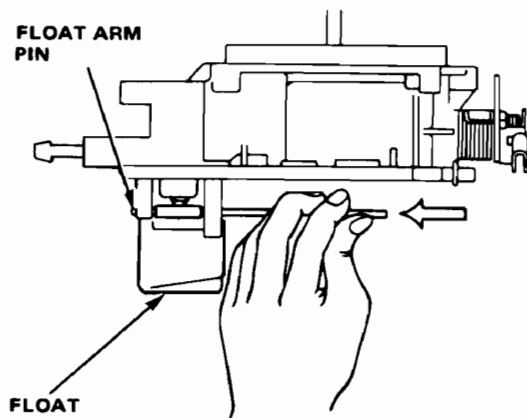

2. Reassemble float in reverse order.
3. Measure float level by attaching a float level gauge to the center of float.

Float Level (from Gasket):
35.4–37.4 mm (1.39–1.47 in.)

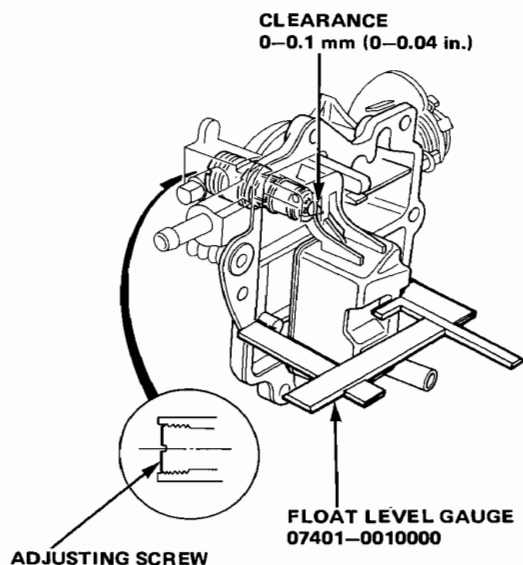

4. Adjust level by turning adjusting screw in or out if necessary.
5. Paint adjusting screw after adjustment.


Accelerator Pump Linkage/Choke Relief Valve



Travel Inspection/Adjustment

1. Measure accelerator pump lever travel between tang on accelerator lever and stop on carburetor body.


Lever Travel: 18.5–19.5 mm (0.73–0.77 in.)

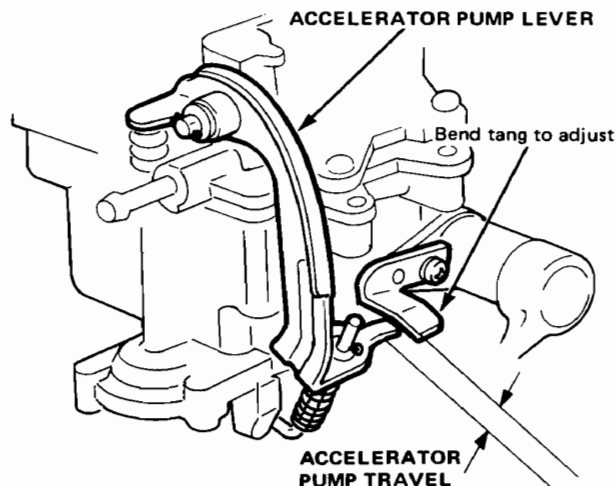

2. If out of specification, adjust travel by bending tang on lever.

Choke Relief Valve Adjustment


When engine is hard to start in cold weather, or when it is impossible to drive the car with choke operating, attach relief spring hook to the next strongest position.

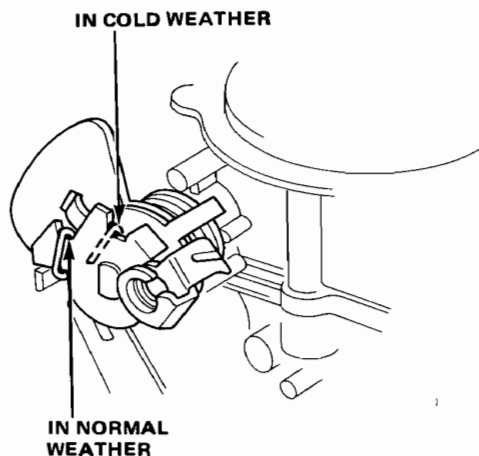

Clutch

Index


NOTE: Whenever the transmission is removed the release bearing sliding surface should be cleaned and greased.

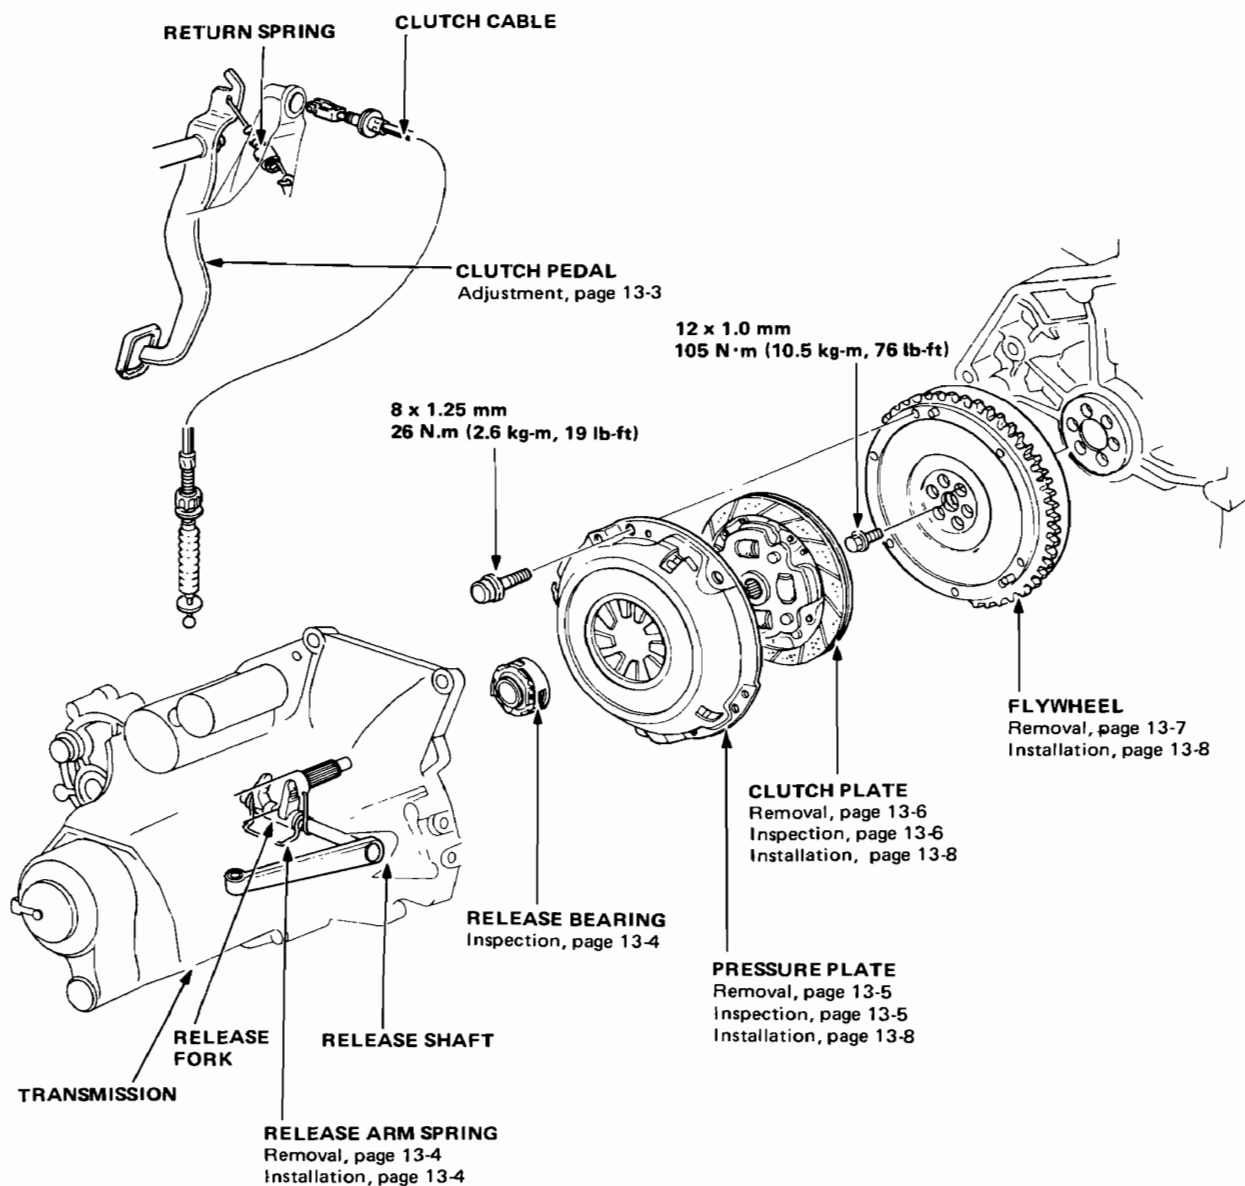



Clutch Adjustment


1. Measure the clutch pedal disengagement height.
2. Measure the clutch pedal free play.
3. Adjust the clutch free play by turning the adjusting nut.
4. Make sure that there is 4.0–5.0 mm (5/32–13/64 in) free play at the tip of release arm after the adjustment.

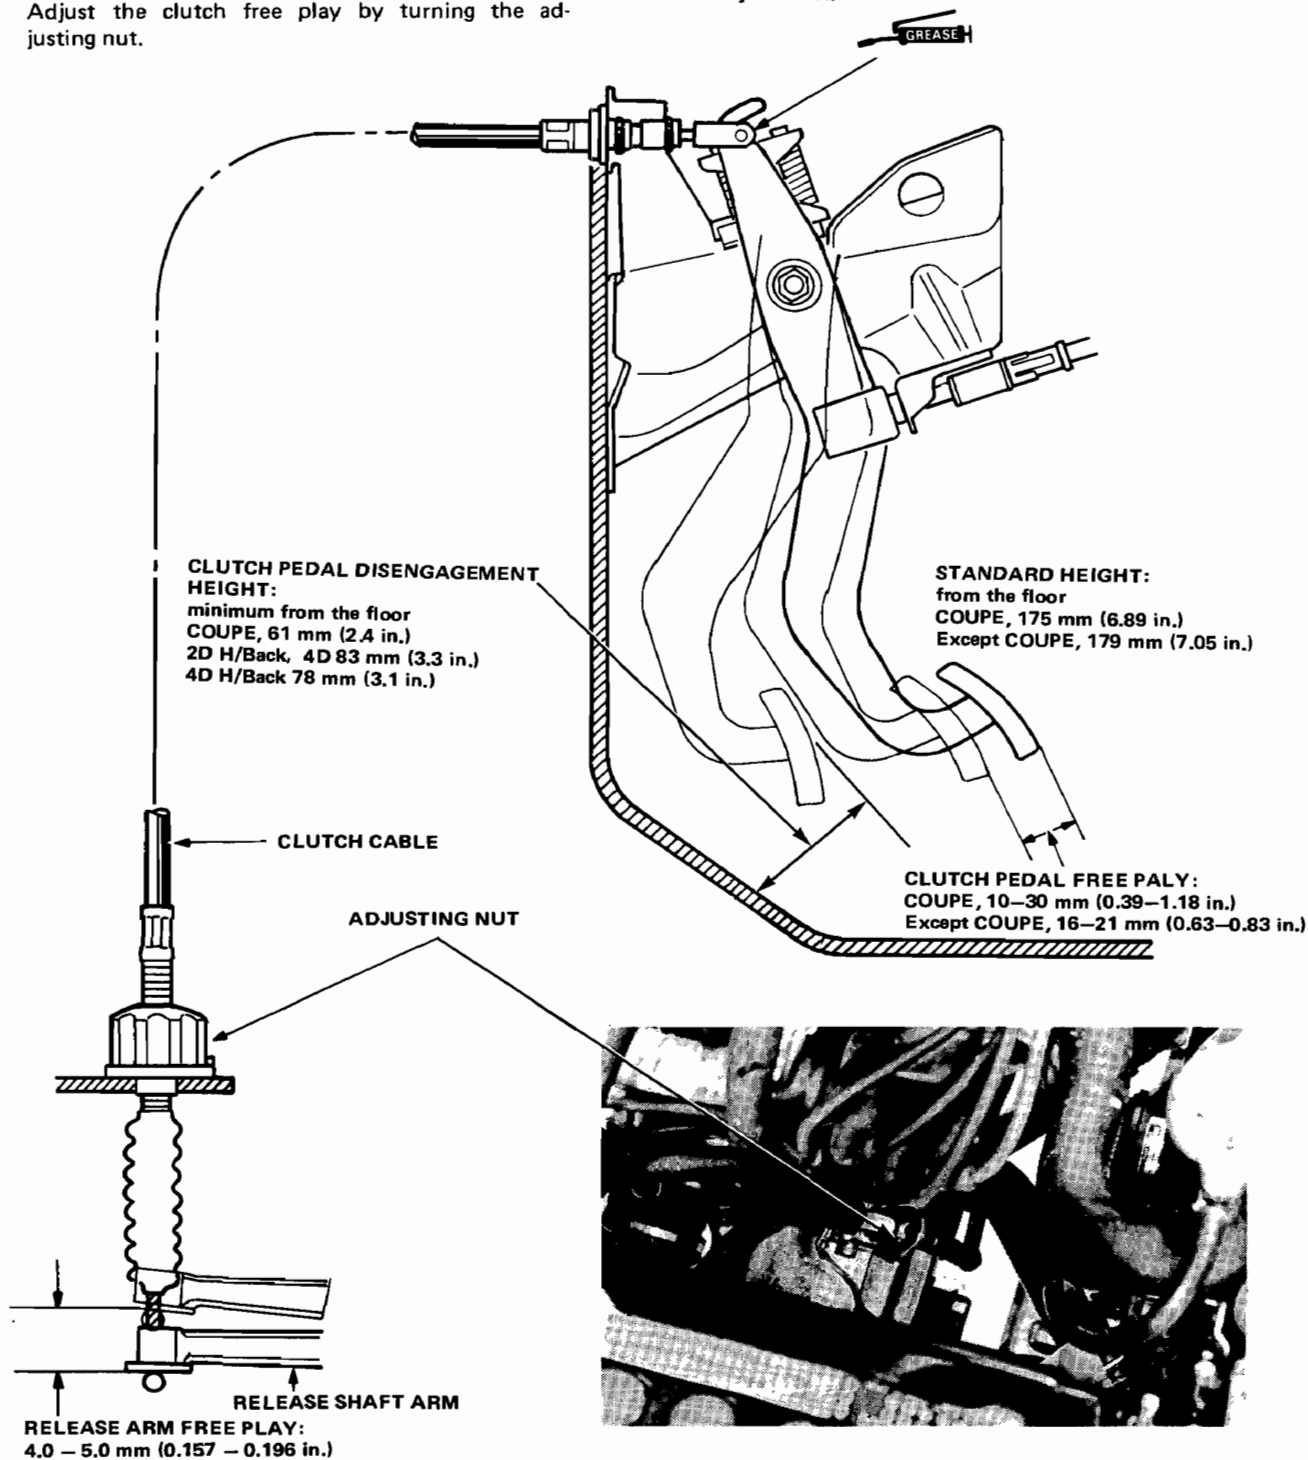


Clutch

Release Bearing Removal / Inspection

1. Remove 8 mm special bolt.

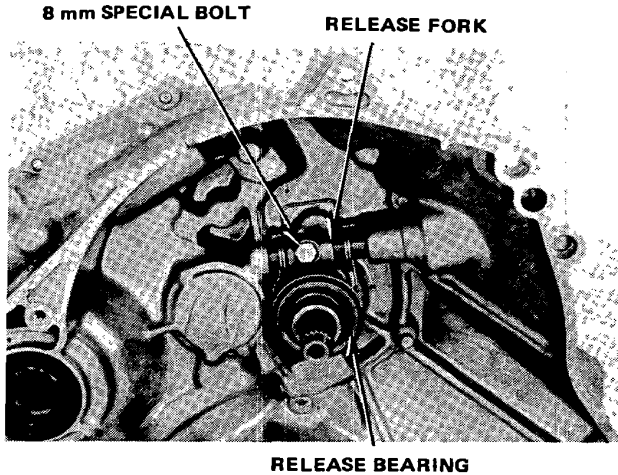

2. Remove the clutch release shaft and then remove the release bearing and release fork.
3. Separate the release bearing from the release fork.
4. Check release bearing for excessive play by spinning it by hand.

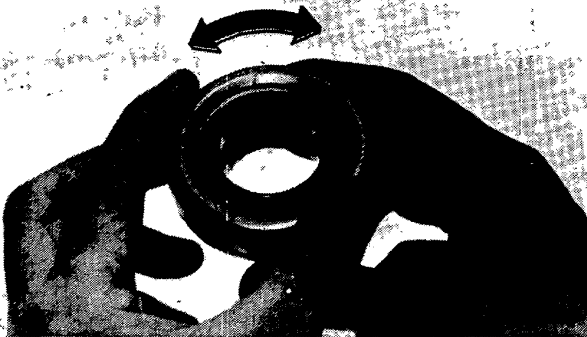


5. Replace bearing with new one if there is excessive play.


CAUTION: Bearing is packed with grease. Do not wash in solvent.

Release Bearing Installation

1. Apply grease to the grooves inside of the bearing and to the bearing contact surface with the release fork.

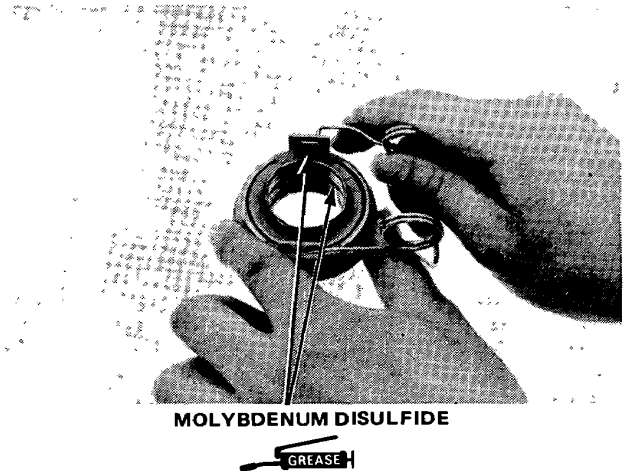


2. Install the release arm spring into the release fork tabs as shown.
3. Install the release fork onto the release bearing with its arms aligned with the tabs.

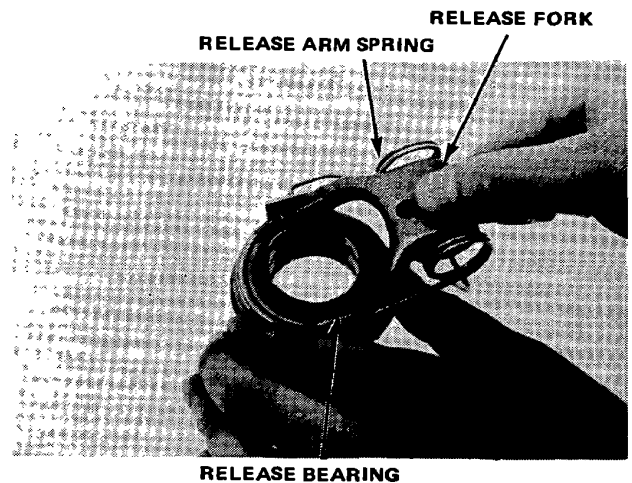




4. Slip the release bearing over the mainshaft, while holding the release arm spring as shown, then install the release shaft.

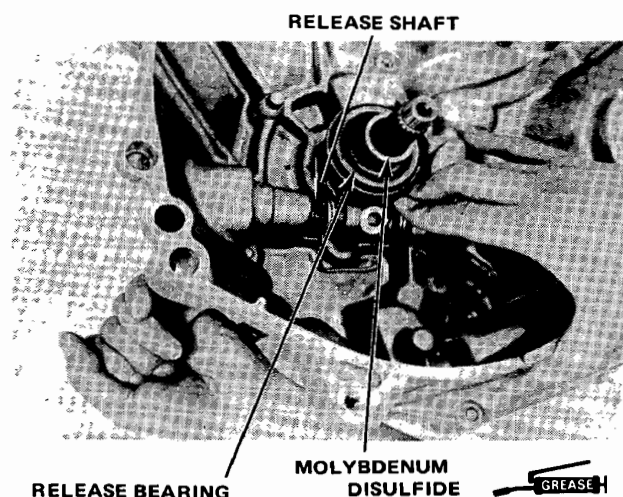

5. Align the hole on the release shaft with the one on the release fork then install the 8 mm special bolt and new spring washer.

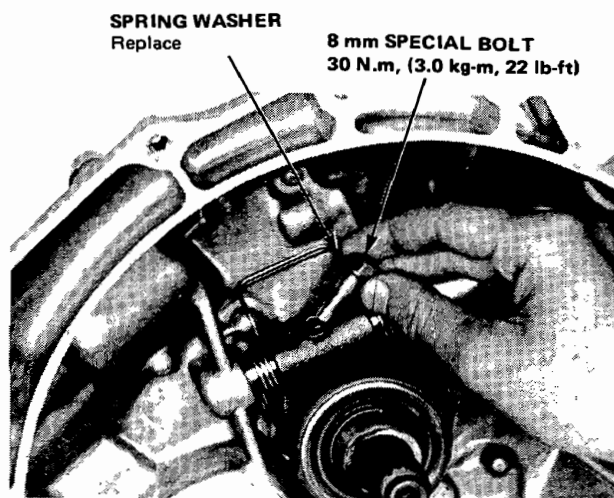

6. After installation, pull release arm up, then let it down, to be sure fork fits against bearing holder properly, and holder slides freely on sleeve.

Pressure Plate Removal/ Inspection


1. Inspect the fingers of diaphragm spring for wear at release bearing contact area.
2. Check diaphragm spring leaves for height using Clutch Disc Alignment Tool and feeler gauge.



Diaphragm spring height:


Standard: 0.6 mm (0.024 in) Max.

Service limit: 1.0 mm (0.039 in)

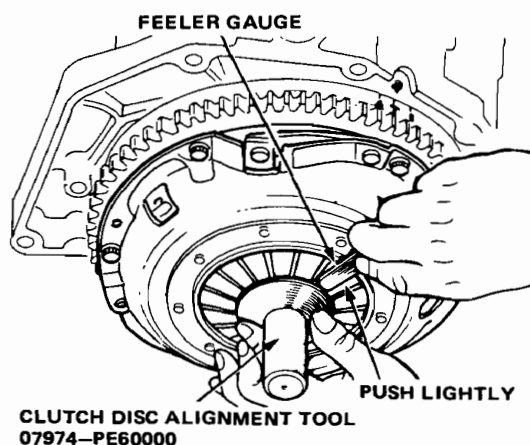

3. Install Ring Gear Holder.

RING GEAR HOLDER
07924-PE60000

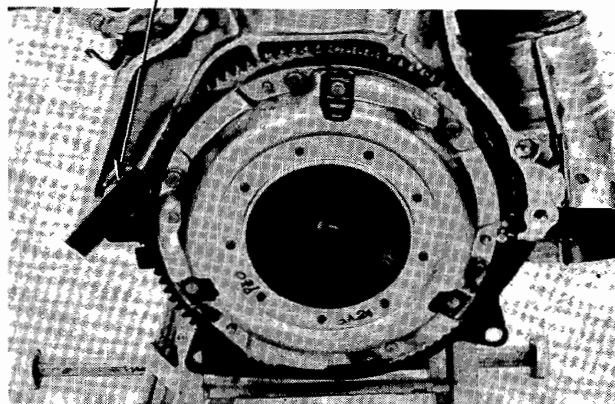


(cont'd)

Clutch

Pressure Plate Removal/Inspection (cont'd)

4. To prevent warping, unscrew pressure plate mounting bolts two turns at a time in a criss-cross pattern using a 10 mm T-wrench, then remove pressure plate and clutch plate.

RING GEAR HOLDER
07924-PE60000

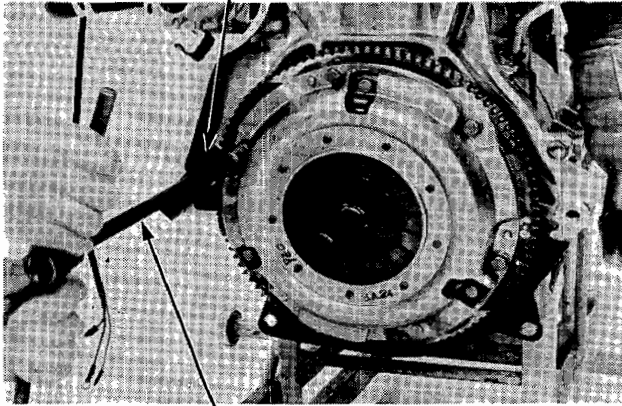


10 mm T-WRENCH
07708-0010101

5. Inspect pressure plate surface for wear, cracks, or burning.
6. Inspect for warpage using a straight edge and feeler gauge.

Standard: 0.03 mm (0.001 in.) max.
Service Limit: 0.15 mm (0.006 in.)

FEELER GAUGE

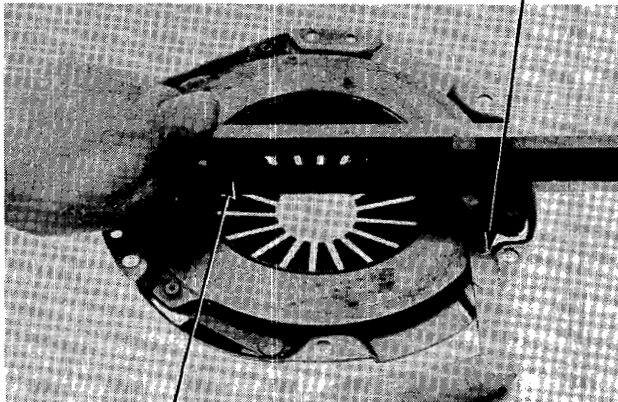


STRAIGHT EDGE

Clutch Plate Removal/Inspection -

1. Remove clutch plate.

CLUTCH PLATE

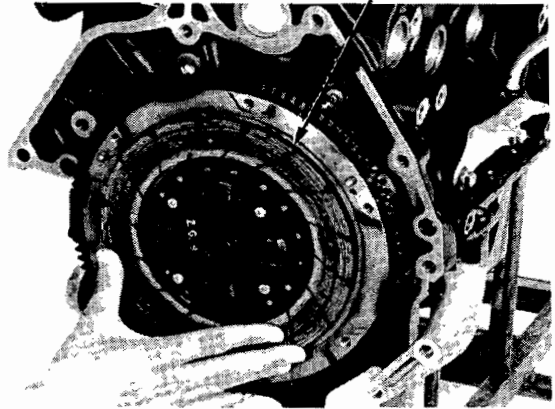

2. Inspect lining for signs of slipping or oil. Replace if burned black or oil soaked.
3. Measure clutch plate thickness.

Clutch Plate Thickness:

Standard: 8.1–8.8mm (0.32–0.35 in.)
Service Limit: 5.7 mm (0.22 in.)






4. Check for loose rubber torsion dampers. Replace clutch plate if any are loose.
5. Measure depth from lining surface to rivets, on both sides.

Rivet Depth:

Standard (New): 1.3 mm (0.051 in.) min.

Service Limit: 0.2 mm (0.008 in.)

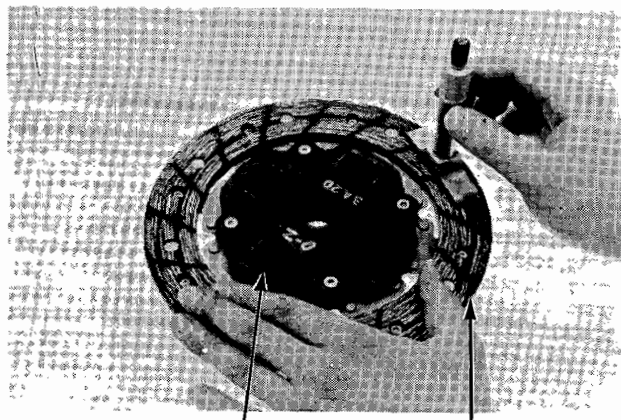

TORSION DAMPER


CLUTCH PLATE

6. Measure the clutch plate runout with the mainshaft and a dial indicator.

Clutch plate runout:

Standard: 0.8 mm (0.031 in.) max.

Service Limit: 1.0 mm (0.039 in.)

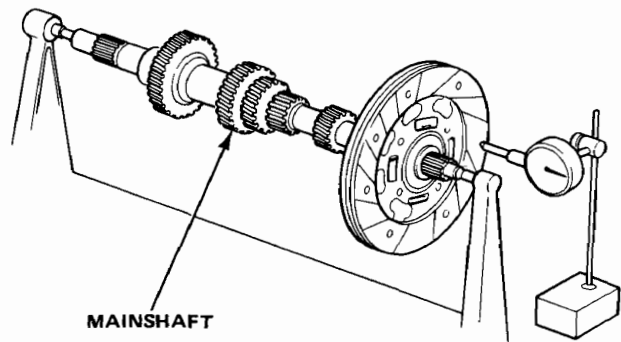

MAINSHAFT

Flywheel Inspection/Removal


1. Inspect ring gear teeth for wear or damage.
2. Inspect clutch plate mating surface on flywheel for wear, cracks or burning.
3. Measure flywheel runout using dial indicator through at least two full turns. Push against flywheel each time you turn it to take up crankshaft thrust washer clearance.

NOTE: Runout can be measured with engine installed.

Flywheel Runout:

Standard (New): 0.05 mm (0.002 in.) max.


Service Limit: 0.15 mm (0.006 in.)

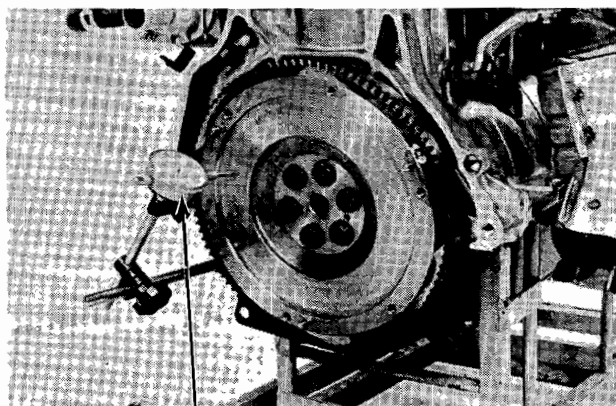

DIAL INDICATOR

4. Remove six flywheel mounting bolts and flywheel.

RING GEAR HOLDER

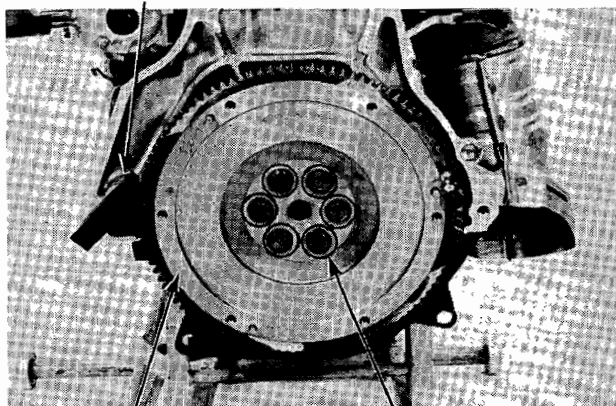

FLYWHEEL


12 mm BOLT

Clutch

Pressure Plate/Clutch Installation


1. Align hole in flywheel with crankshaft dowel pin and assemble. Install bolts only finger tight.
2. Install Ring Gear Holder, then torque flywheel bolts in a criss-cross pattern.

RING GEAR HOLDER
07924-PE60000

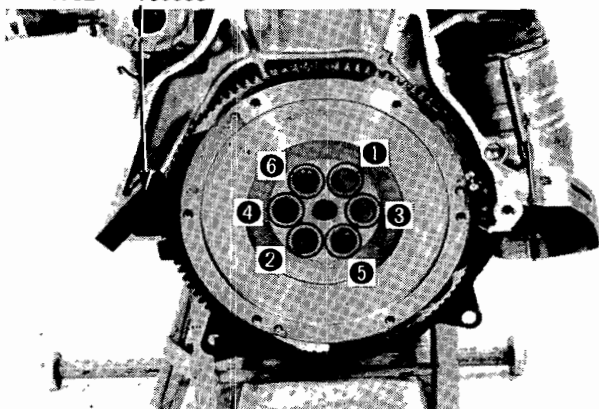

105 N.m (10.5 kg-m, 76 lb-ft)


3. Install friction disc and pressure plate by aligning flywheel dowels with dowel holes in clutch cover.

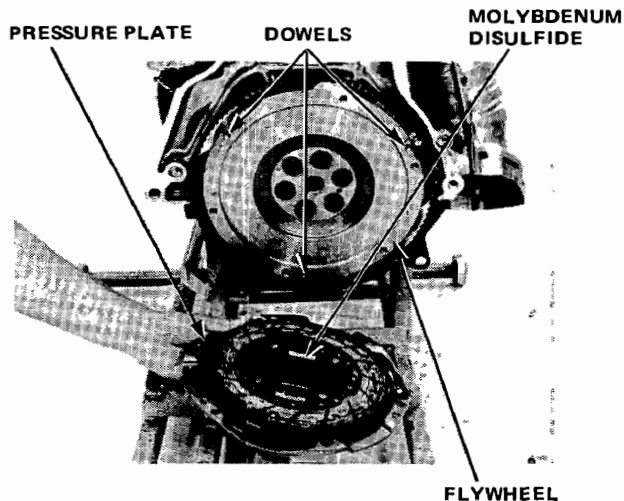


4. Install attaching bolts but do not tighten the bolts at this time.
5. Insert Clutch Alignment Tool in spline hole in friction disc.

NOTE: Place the special tool as shown.

to crankshaft ←




CLUTCH DISC ALIGNMENT TOOL
07974-PE60000

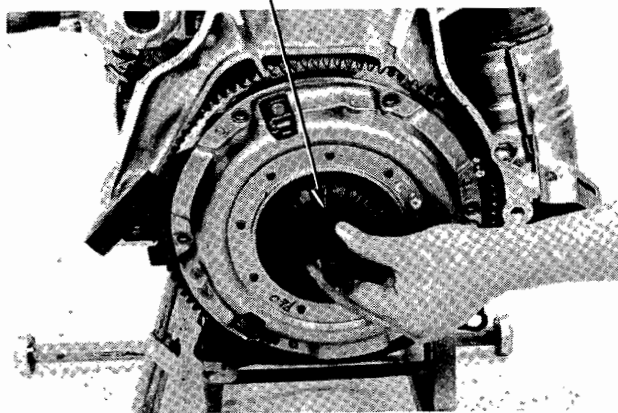

6. Torque the bolts in a criss-cross pattern. Tighten them two turns at a time to prevent warping the diaphragm spring.

26 N.m (2.6 kg-m, 19 lb-ft)

TIGHTENING SEQUENCE:

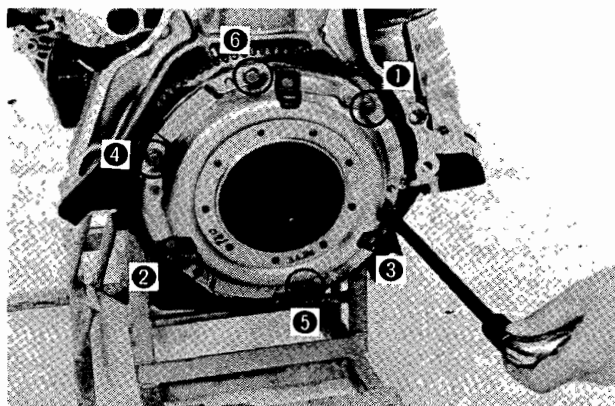


7. Remove Alignment Tool and Ring Gear Holder.

5-Speed Transmission

Maintenance

Oil Change

Change oil every 48,000 km (30,000 miles).
Use only SE or SF grade oil.
Use the proper viscosity oil for the climate.

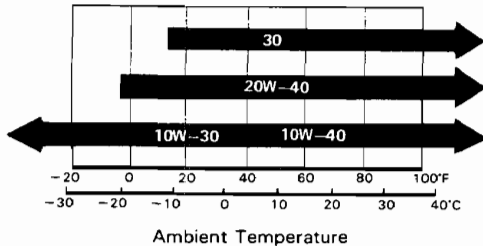


Capacity:

2.3 ℓ (2.4 US qt) after draining
2.5 ℓ (2.6 US qt) after overhaul


Oil Level Check

1. Check with oil at operating temperature, engine OFF, and car on level ground.
2. Remove oil filler bolt and check level with finger.
3. Oil level must be to fill hole. If it is below hole, add oil until it runs out, then reinstall bolt.

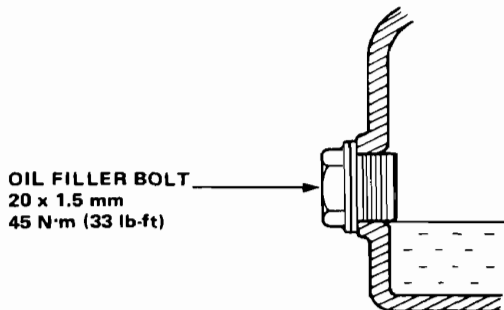

Removal

1. Disconnect the ground cable at battery and at transmission.
2. Release the steering lock and put gear shift lever in neutral.
3. Disconnect the engine compartment wiring:
 - Battery positive cable from starter.
 - Black/white wire from starter solenoid.
 - Green/black and yellow wires from back-up light switch.
 - Transmission ground cable.
4. Remove the speedometer cable by removing clip. Do not disassemble speedometer gear holder.
5. Disconnect the clutch cable at release arm.
6. Remove the transmission side starter mounting bolts and top transmission bolts.
7. Loosen the front wheel lug nuts.
8. Apply the parking brake, block the rear wheels, then raise the front end on jack stands and remove the front wheels.
9. Attach a chain hoist to the bolt shown, then raise the engine a sight amount to unload the mounts.

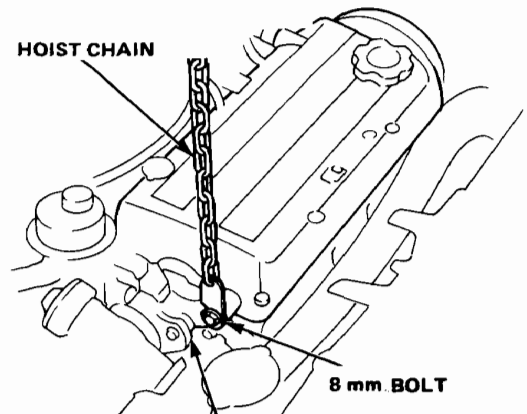


10. Drain the transmission oil. Reinstall the drain plug and washer.
11. Disconnect the right and left lower arm ball joints and tie-rod end ball joints using Ball Joint Remover Tool.


CAUTION: Make sure the floor jack is positioned securely under the lower control arm, at the ball joint. Otherwise, torsion bar tension on the lower control arm may cause the arm to "jump" suddenly away from the steering knuckle as the ball joint is being removed.




12. Remove the engine splash shield and the right side wheel well splash shield. (page 5-2).
13. Disconnect the header pipe at the exhaust manifold. (page 5-11).
14. Turn the right steering knuckle outward as far as it will go. With screwdriver against inboard CV joint, pry right axle out of transmission housing approximately 1/2 inch (to force its spring clip out of groove inside differential gear splines), then pull it out the rest of the way. Repeat on opposite side, or, with driver's side connected, pry left axle out of transmission during Step. 20.
15. Disconnect the shift lever torque rod from clutch housing.

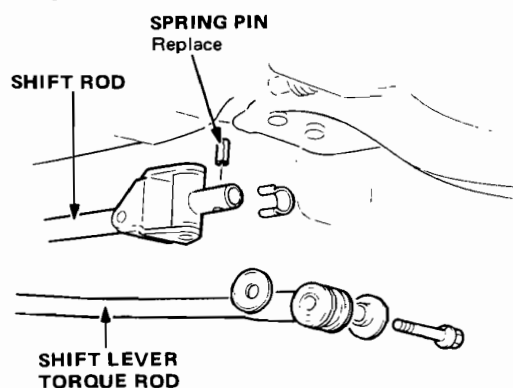


16. Slide pin retainer back, drive out spring pin using a pin punch, then disconnect shift rod.
17. Place a jack under the transmission and raise transmission just enough to take weight off mounts.
18. Remove the bolts from the front transmission mount.

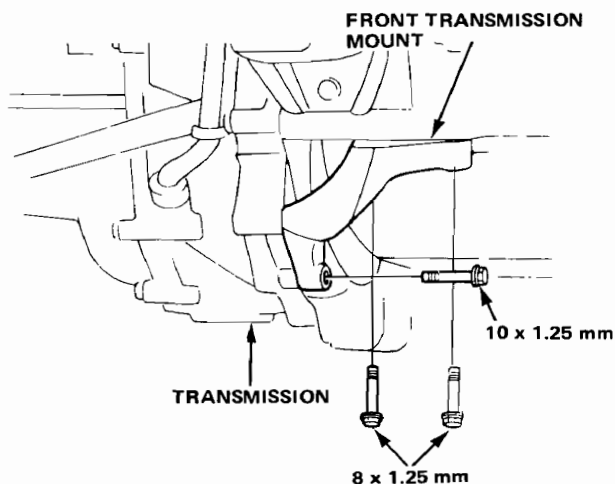

19. Remove the transmission housing bolts from the engine torque bracket.

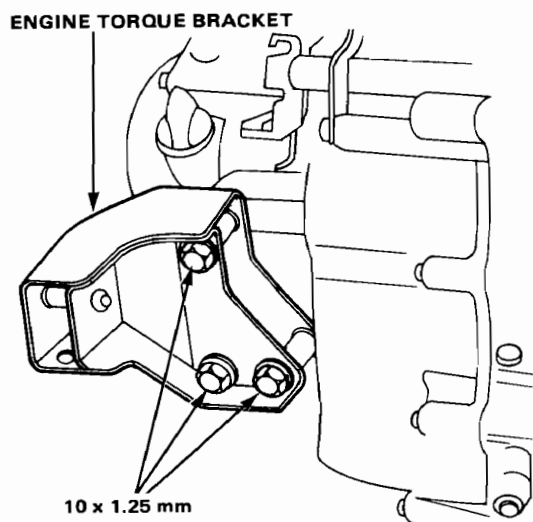

20. Remove the clutch housing bolts from the rear transmission mount.

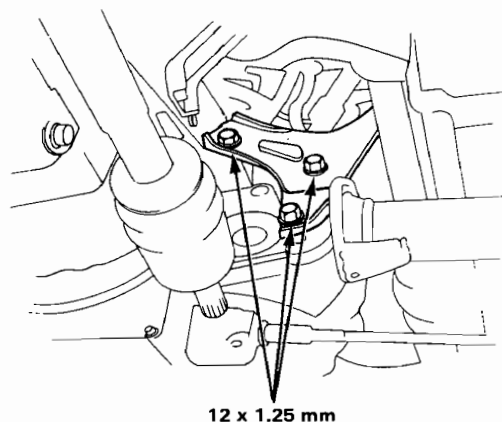

21. Remove the two transmission bolts.
22. Pull the transmission away from engine until mainshaft clears clutch pressure plate, then lower on transmission jack.

5-Speed Transmission

Index


Clean all parts thoroughly in solvent and dry with compressed air.



Lubricate all parts with oil before reassembly.

NOTE: This transmission uses no gaskets between the major housings; use Honda P/N 08740-99986 sealant. Assemble the housings within 20 minutes after applying the sealant and allow it to cure at least 30 minutes after assembly before filling the transmission with oil.

Torque Value	Bolt Size
A-12 N·m (1.2 kg-m, 9 lb-ft)	1-6x1.0 mm
B-27 N·m (2.7 kg-m, 20 lb-ft)	2-8x1.25 mm

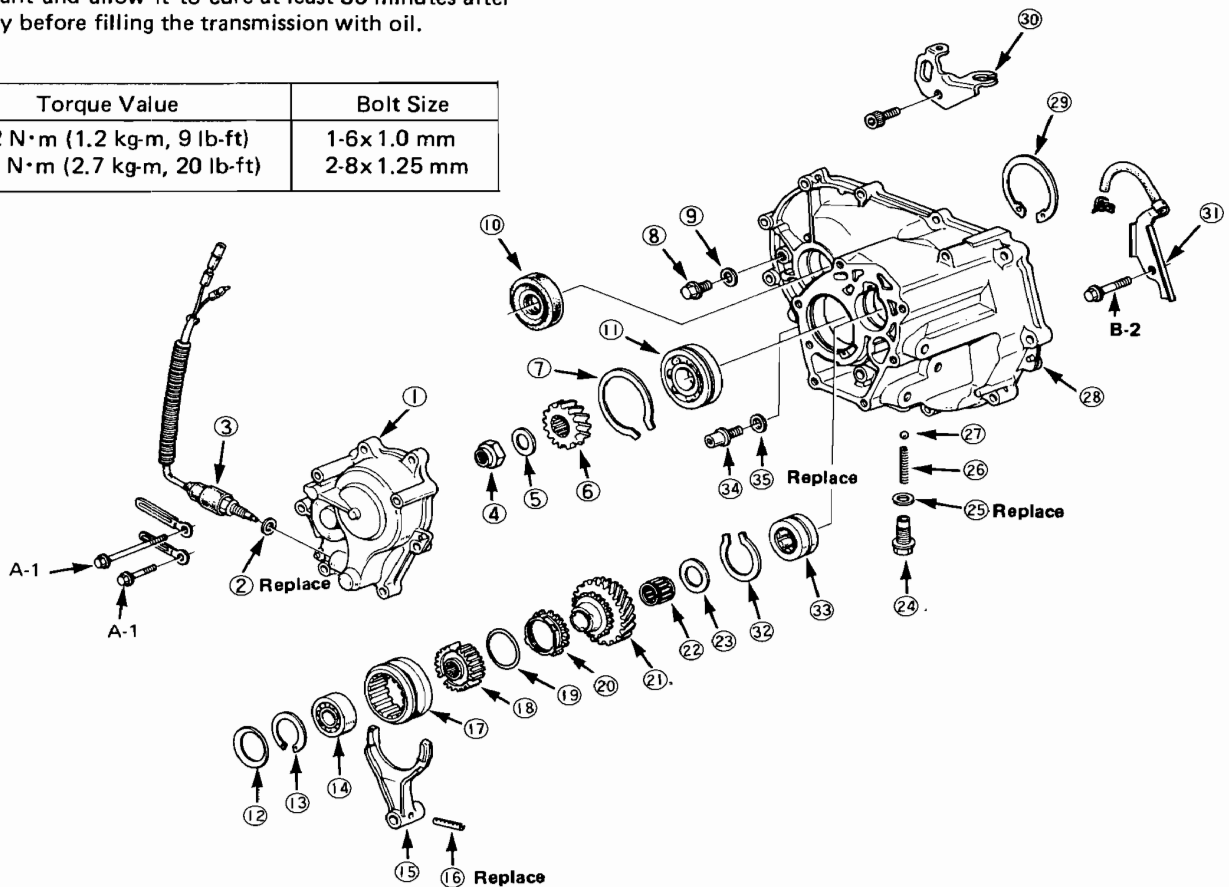

① 5th GEAR HOUSING

Removal, page 14-7

② 14 mm WASHER

③ BACK-UP LIGHT SWITCH

Inspection, page 14-38

④ COUNTERSHAFT LOCKNUT

25 N·m (2.5 kg-m, 18 lb-ft)

⑤ COUNTERSHAFT 5th GEAR

110 N·m (11.0 kg-m, 80 lb-ft)

⑥ SPRING WASHER

⑦ COUNTERSHAFT 5th GEAR

65 mm SNAP RING

⑧ OIL FILLER BOLT

45 N·m (4.5 kg-m, 33 lb-ft)

⑨ SEALING WASHER

⑩ SEAL

Removal, page 14-19

Installation, page 14-35

⑪ COUNTERSHAFT BALL BEARING

⑫ 52 mm SPRING WASHER

⑬ SNAP RING

Removal, page 14-7

Installation, page 14-7

⑭ MAINSHAFT BALL BEARING

⑮ 5th GEAR SHIFT FORK

⑯ SPRING PIN

Disassembly, page 14-6

Assembly, page 14-34

⑰ 5th GEAR SYNCHRO SLEEVE

⑱ 5th GEAR SYNCHRO HUB

⑲ SYNCHRO SPRING

⑳ 5th GEAR SYNCHRO RING

㉑ 5th GEAR

㉒ NEEDLE BEARING

㉓ THRUST WASHER

㉔ DETENT BALL RETAINER SCREW

22 N·m (2.2 kg-m, 16 lb-ft)

㉕ SEALING WASHER

㉖ DETENT SPRING

㉗ DETENT BALL

㉘ TRANSMISSION HOUSING

㉙ 72 mm SNAP RING

㉚ CLUTCH CABLE BRACKET

㉛ BREATHER TUBE ASSEMBLY

㉜ 45 mm SNAP RING

㉝ NEEDLE BEARING

㉞ OIL DRAIN PLUG


40 N·m (4.0 kg-m, 29 lb-ft)

㉟ SEALING WASHER



NOTE: Always clean the magnet (48) whenever the transmission housing is disassembled.

Torque Value	Bolt Size
A-12 N·m (1.2 kg-m, 9 lb-ft)	1-6x 1.0 mm
B-14 N·m (1.4 kg-m, 10 lb-ft)	2-8x 1.25 mm
C-24 N·m (2.4 kg-m, 17 lb-ft)	

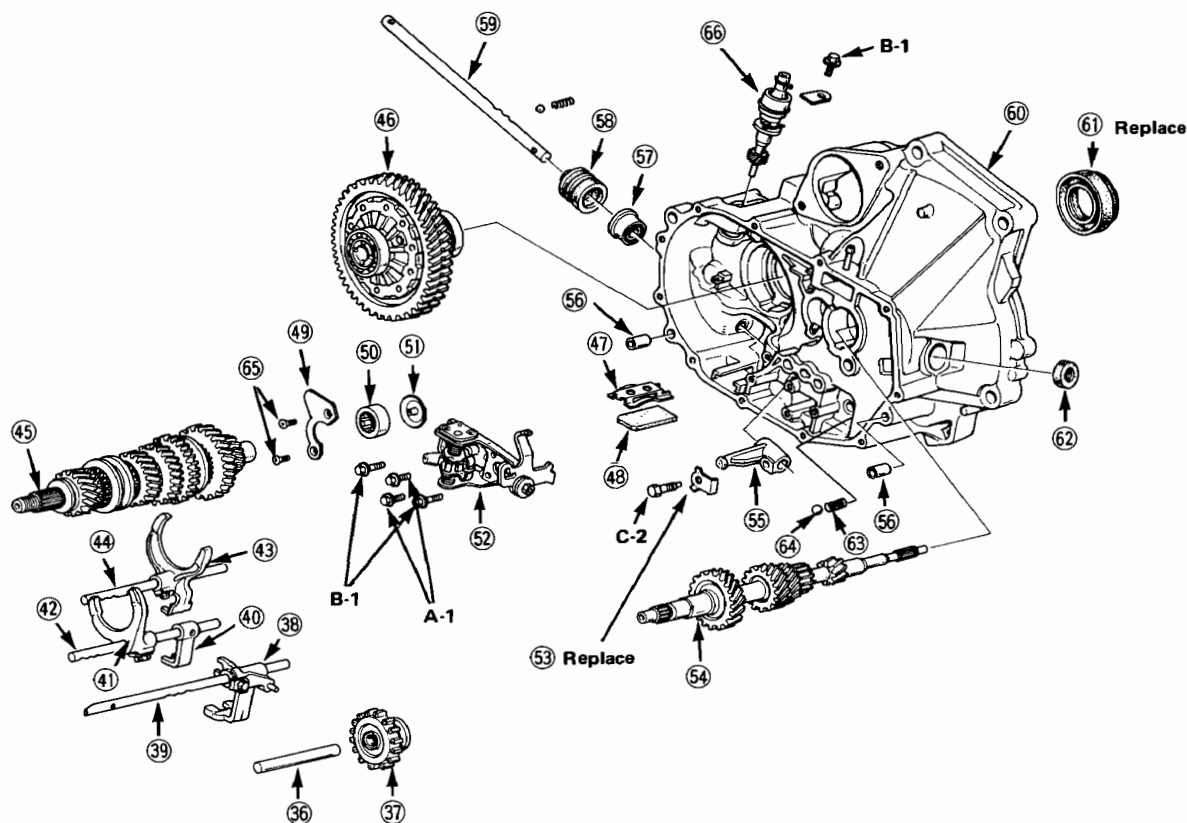

- (36) REVERSE IDLER GEAR SHAFT
- (37) REVERSE IDLER GEAR
Removal, page 14-10
Installation, page 14-31
- (38) REVERSE SHIFT GUIDE
- (39) REVERSE SHIFT SHAFT
- (40) 3rd GEAR SHAFT GUIDE
- (41) 3rd GEAR SHIFT FORK
- (42) 3rd GEAR FORK SHAFT
- (43) 1st GEAR SHIFT FORK
- (44) 1st GEAR FORK SHAFT
- (45) COUNTERSHAFT ASSEMBLY
Disassembly, page 14-11
Measurement, page 14-21
Inspection, page 14-15
- (46) DIFFERENTIAL
Removal, page 14-19
Dis/assembly, Section 17
- (47) HOLD-DOWN PLATE


- (48) MAGNET
- (49) BEARING RETAINER PLATE
- (50) NEEDLE BEARING
- (51) OIL BARRIER PLATE
- (52) SHIFT ARM HOLDER
Removal, page 14-11
Disassembly, page 14-26
Assembly, page 14-26
- (53) LOCK PLATE
- (54) MAINSHAFT
Removal, page 14-11
Measurement, page 14-18
Inspection, page 14-12
- (55) GEAR SHIFT ARM
- (56) DOWEL PIN
- (57) SEAL
- (58) BOOT
- (59) GEAR SHIFT ROD
- (60) CLUTCH HOUSING

- (61) SEAL
- (62) DUST SEAL
- (63) DETENT SPRING
- (64) DETENT BALL
- (65) DETENT FLAT SCREW
- (66) SPEEDOMETER DRIVEN GEAR


5-Speed Transmission

5th Gear Housing Snap Ring Inspection


1. Remove the six 5th gear housing mounting bolts.

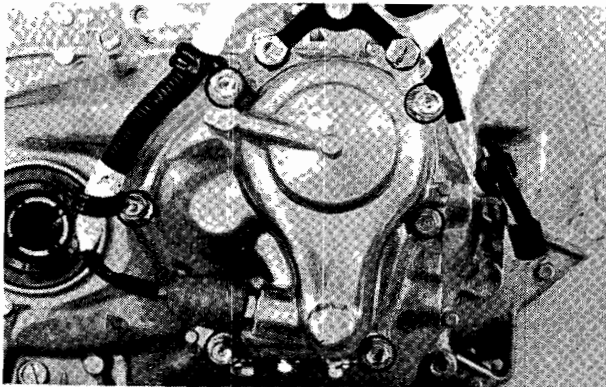


2. Remove the spring pin from the 5th gear shift fork.

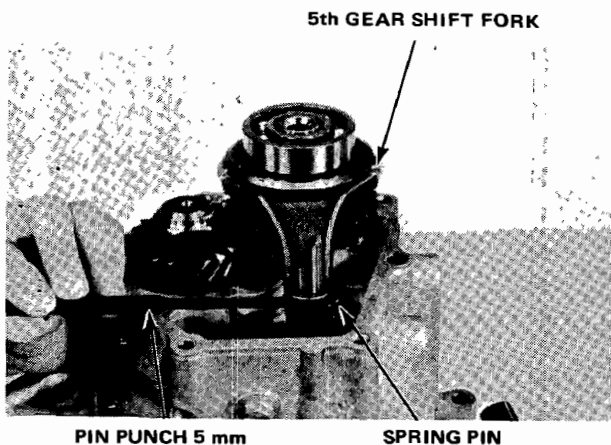

3. Remove the outside parts from the mainshaft.

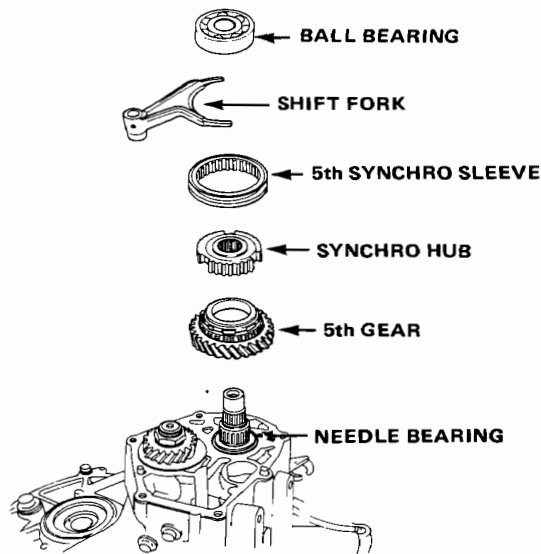


4. Reinstall the synchro hub and the ball bearing onto the mainshaft.
5. Clean all sealant residue from the transmission housing, then measure from the top of the ball bearing's outer race to the mounting flange for the 5th gear housing. Measure at two points and average the reading.

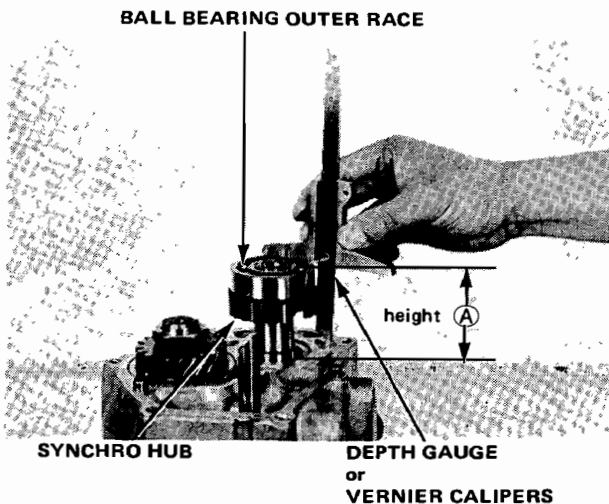




6. Remove the 52 mm spring washer and the snap ring from the 5th gear housing.

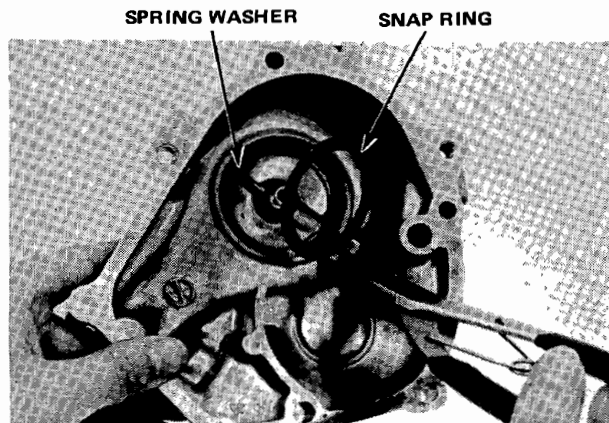

7. Place a straight edge on the 5th gear housing and measure the depth of the snap ring thrust shim installation hole. Measure at two points and average the readings. Subtract the thickness of the straight edge from the reading.

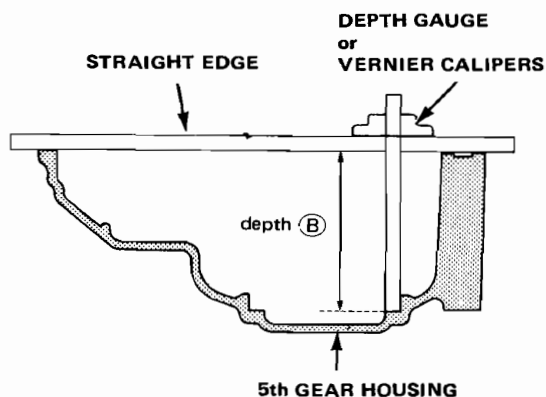

8. Select the correct thickness snap ring as follows:
- Subtract the bearing height (step 5) from the 5th gear housing depth (step 7).
 - Subtract the spring washer free height (0.85 mm / 0.033 in) from the dimension determined in step 8a.

EXAMPLE:


Housing depth:	58.05 mm (2.285 in)
Bearing height:	-56.05 mm (2.207 in)
	2.00 mm (0.078 in)
Spring washer height:	-0.85 mm (0.033 in)
Correct snap ring thickness	1.15 mm (0.045 in)

Parts Number	Thickness
23931-PE6-000	0.5 mm (0.020 in)
23932-PE6-000	1.1 mm (0.043 in)
23933-PE6-000	1.15 mm (0.045 in)
23934-PE6-000	1.20 mm (0.047 in)
23935-PE6-000	1.25 mm (0.049 in)
23936-PE6-000	1.30 mm (0.051 in)
23937-PE6-000	1.35 mm (0.053 in)
23938-PE6-000	1.40 mm (0.055 in)
23939-PE6-000	1.45 mm (0.057 in)
23940-PE6-000	1.50 mm (0.059 in)
23941-PE6-000	1.55 mm (0.061 in)


5-Speed Transmission

Housing Disassembly


1. Drive out the spring pin securing the fifth gear shift fork to the shaft.
2. Remove the ball bearing.

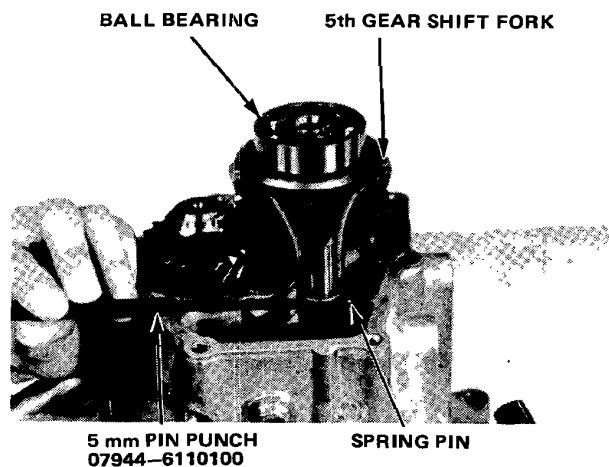

3. Remove the shift fork and synchro hub as a unit. Then remove the synchro ring and spring and the mainshaft 5th gear.

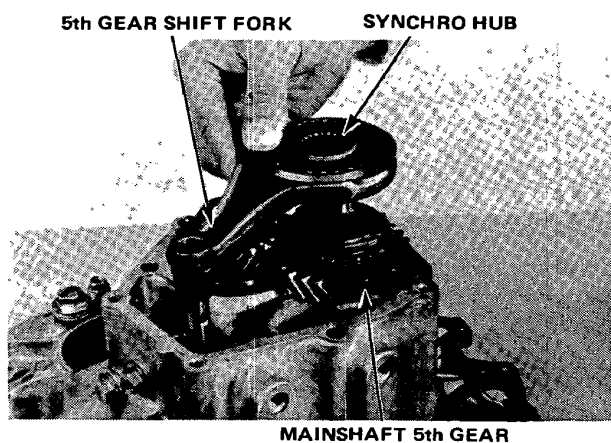


4. Remove the needle bearing and the thrust washer.

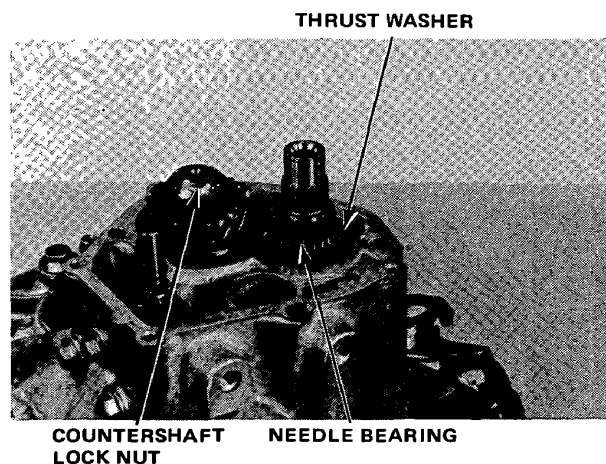


5. Raise tab on mainshaft lock nut using a hammer and prick punch.

6. Install the mainshaft holder.

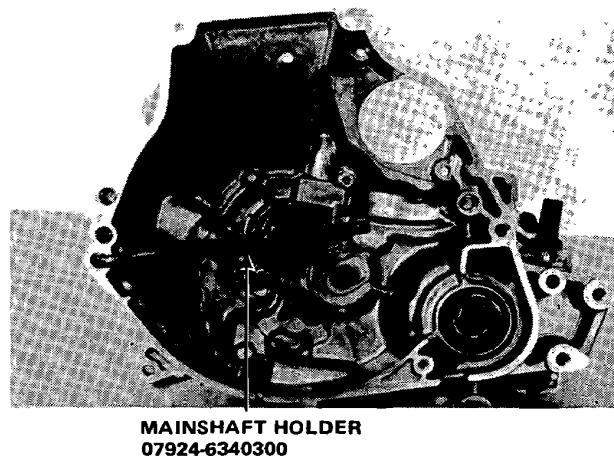




7. Remove the lock nut using a 22 mm socket wrench.

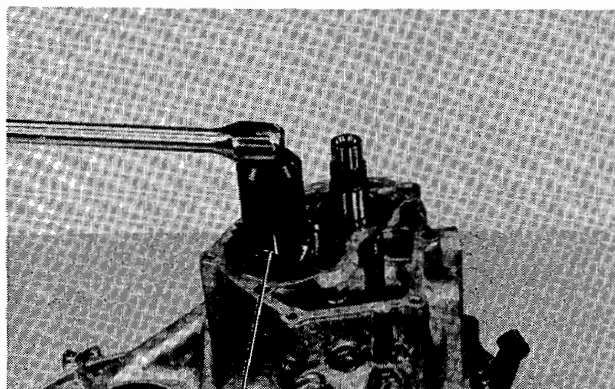

22 mm SOCKET WRENCH

8. Remove the detent ball retaining bolts, springs and balls.

DETENT BALL

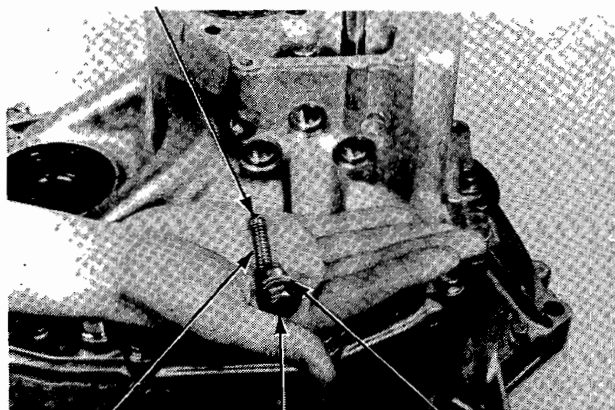


SPRING

RETAINING
BOLT

WASHER

9. Remove the 11 bolts from housing.
10. Loosen transmission housing from liquid sealant by tapping on bosses with a soft hammer. Remove the transmission housing by using puller.


TRANSMISSION HOUSING
PULLER
07933-PE60000

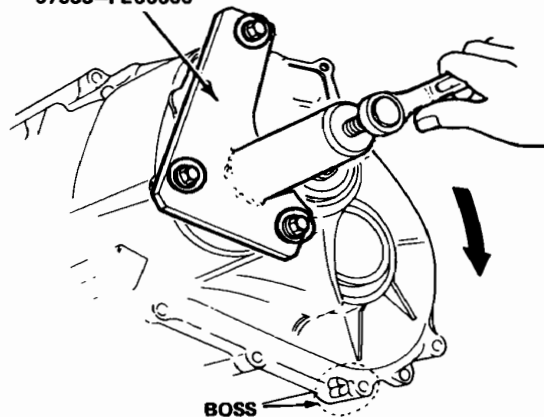


5-Speed Transmission

Shaft Removal


1. Pull out the reverse idler gear shaft and remove the gear.
2. Remove the dowel pin.

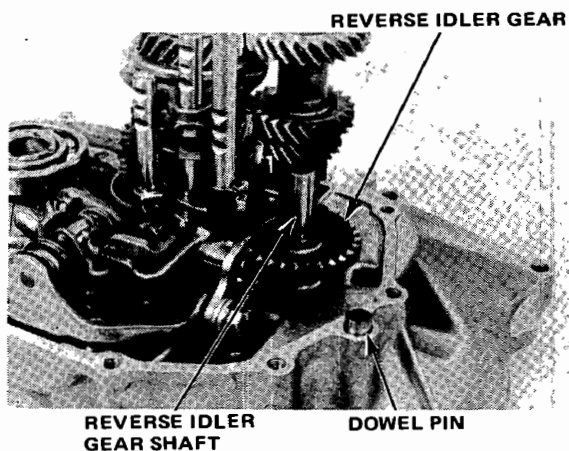


3. Remove the nut and the special spring washer on the reverse shift fork, then remove the reverse shift fork.

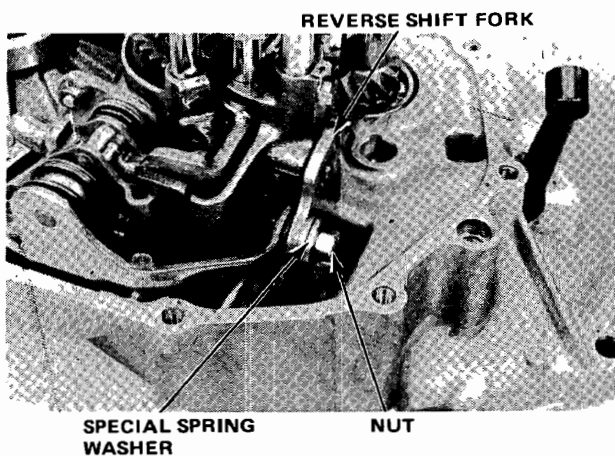

4. Remove the detent ball and spring from the reverse shift fork.

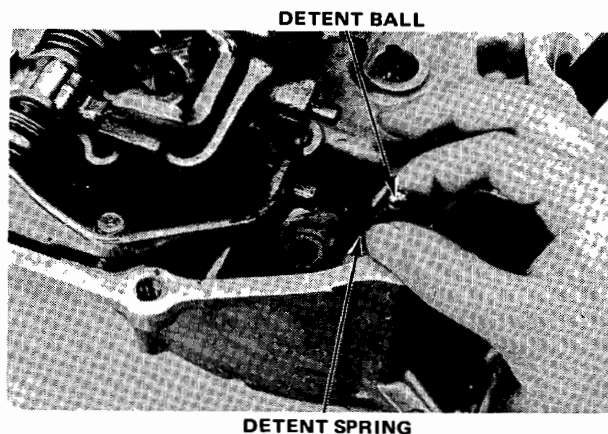

5. Bend down the tabs on the three locking plates and remove the bolts.

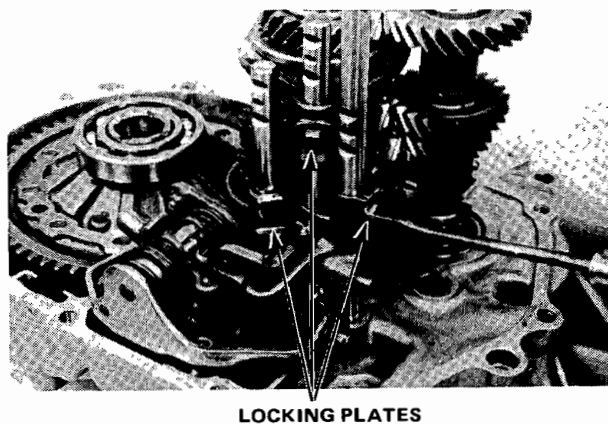




Shift arm Holder Removal

1. Remove the special bolts and the flange bolts and then remove the shift arm holder.

FLANGE BOLTS 12 N·m
(1.2 kg-m, 9 lb-ft)

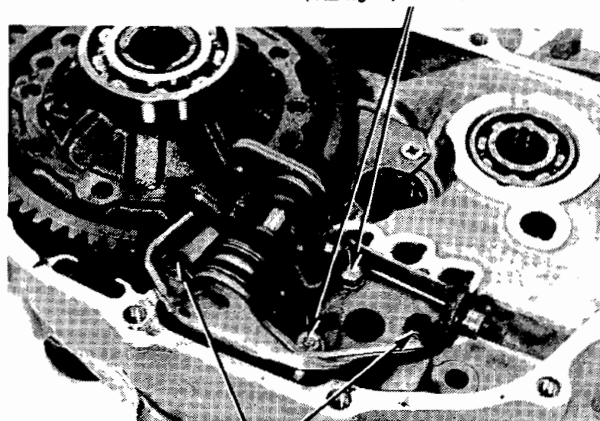


SPECIAL BOLTS 14 N·m
(1.4 kg-m, 10 lb-ft)

Shift Rod Removal

1. Bend down the tab on the locking plate, remove the special bolt, then slip out the shift rod.

SELECTOR ARM


SHIFT ROD

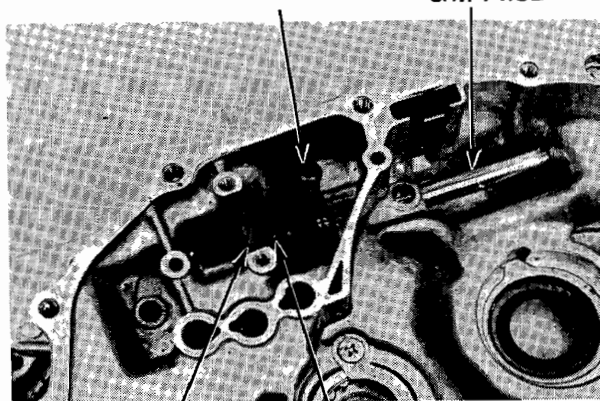


LOCKING PLATE

SPECIAL BOLT
24 N·m (2.4 kg-m,
17 lb-ft)

6. Remove the reverse shift shaft.
7. Remove the reverse shift guide.
8. Remove the 1st/2nd gear shift shaft.
9. Remove the 3rd/4th gear shift shaft and shift fork.
10. Shift the synchro into the 2nd and remove the 1st/2nd gear shift fork.

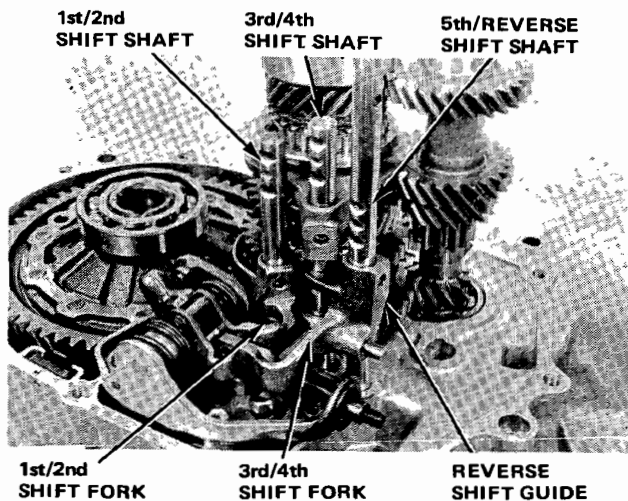

11. Remove the countershaft and the mainshaft as an assembly.

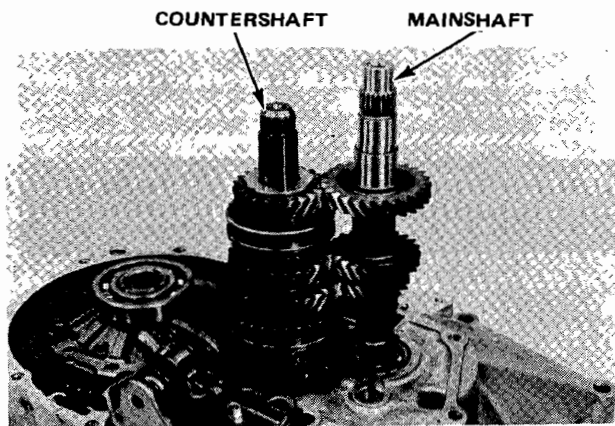

5-Speed Transmission

Mainshaft Inspection


1. Measure gear and bearing O.D.s.

Standard: A: 27.997–28.010 mm
(1.102–1.103 in)

B: 21.987–22.0 mm
(0.866–0.866 in)

Service Limit: A: 27.94 mm (1.100 in)
B: 21.93 mm (0.863 in)

Inspect oil passages for clogging.

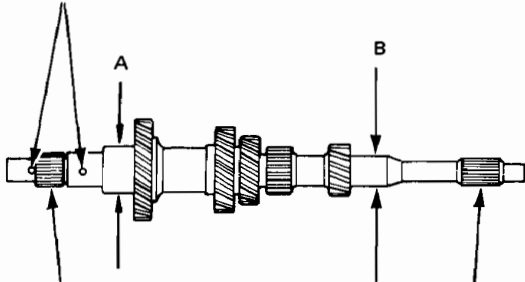

Inspect for wear or damage.

Inspect for wear or damage.

2. Replace the mainshaft if any readings are out of tolerance.


3. Inspect for runout.

Standard: 0.02 mm (0.0008 in)

Service Limit: 0.05 mm (0.0019 in)

Rotate two complete revolutions.

Support with lathe type tool or V-blocks

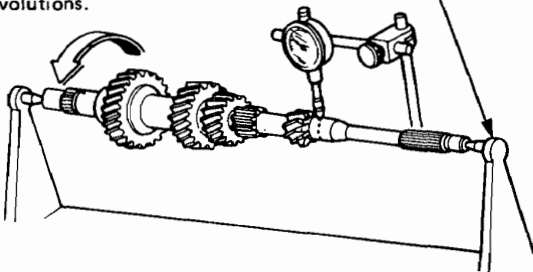

4. Replace the mainshaft if the reading is out of tolerance.

Countershaft Inspection


1. Measure gear and bearing O.D.s.

Standard: A: 30.004–30.017 mm
(1.181–1.182 in)

B: 31.984–32.000 mm
(1.259–1.260 in)

Service Limit: A: 29.94 mm (1.179 in)
B: 31.93 mm (1.257 in)

Inspect for wear or damage.

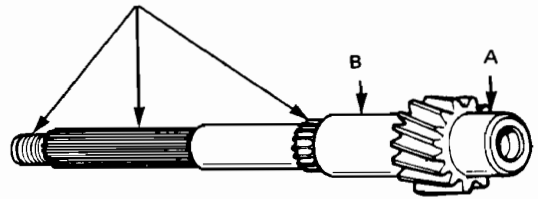


2. Replace the countershaft if any readings are out of tolerance.

3. Inspect for runout.

Standard: 0.02 mm (0.0008 in)

Service Limit: 0.05 mm (0.0019 in)

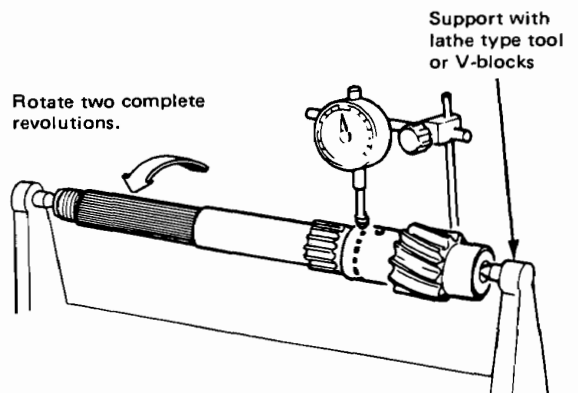

4. Replace the countershaft if the reading is out of tolerance.





Mainshaft Index

NOTE:

- Clean all parts thoroughly in solvent and dry with compressed air.



Lubricate all parts with oil before reassembly.

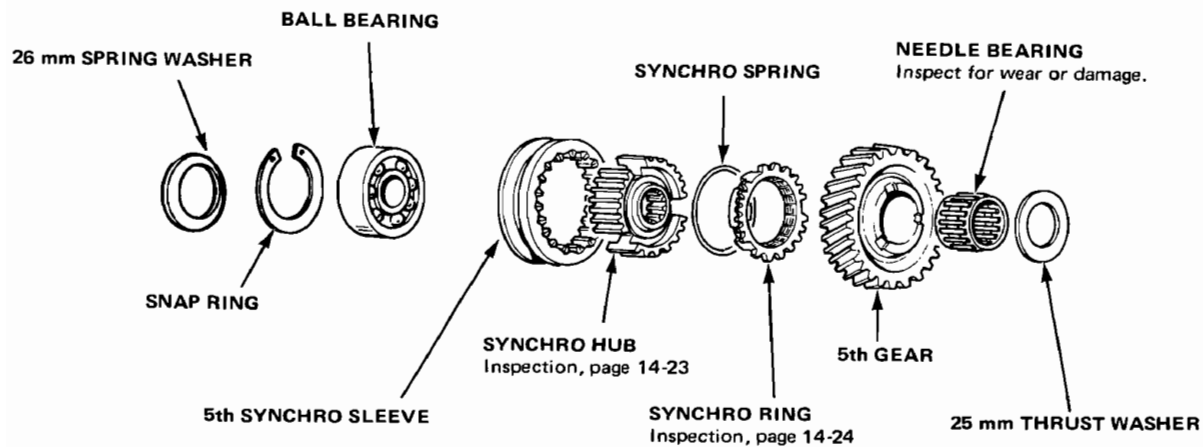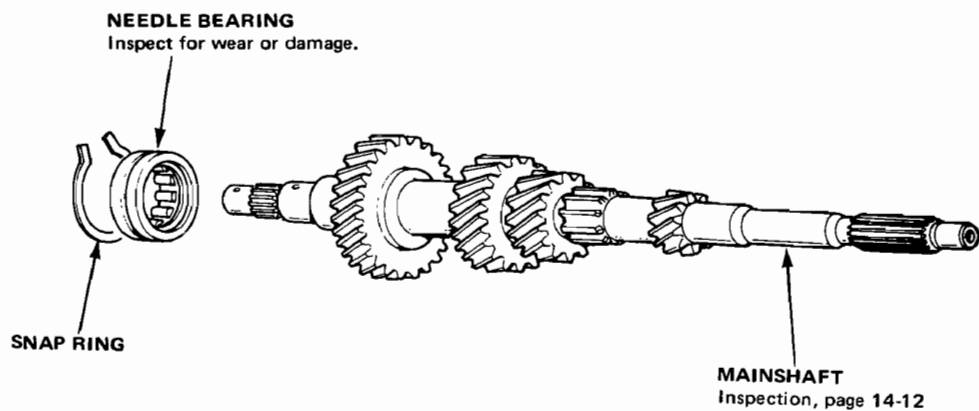

5-Speed Transmission




Countershaft Index

NOTE:

- Clean all parts thoroughly in solvent and dry with compressed air.
- The 28 mm spacers should be marked as they are removed, so that they can be reinstalled correctly.



Lubricate all parts with oil before reassembly.

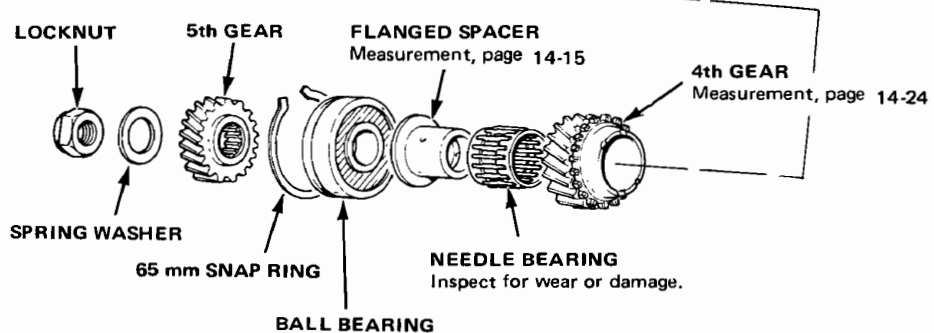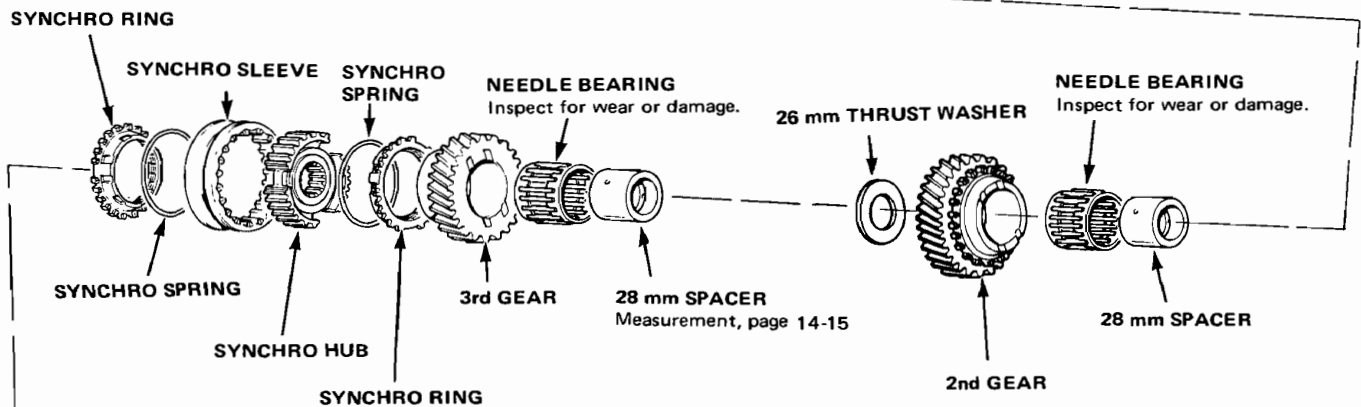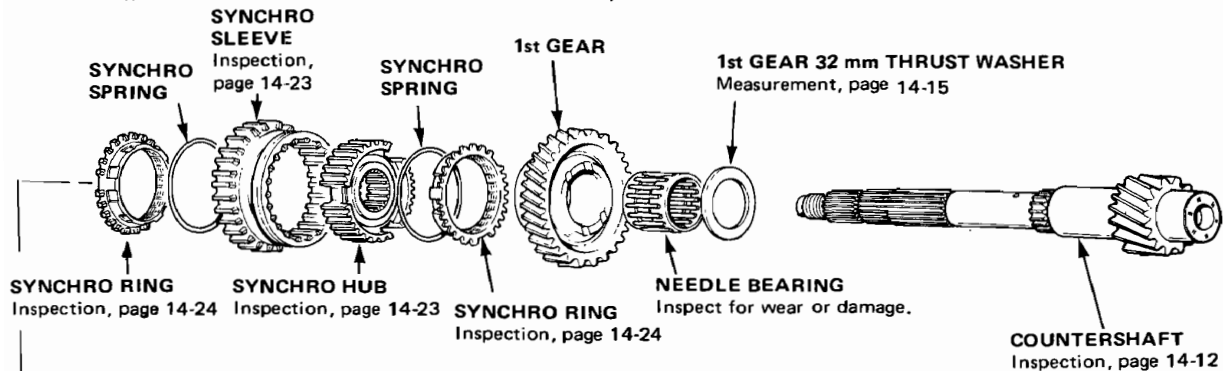



Countershaft Clearance Measurement

NOTE: On adjusting the countershaft clearance, select the correct spacer 28 mm, flanged spacer, and 1st gear thrust washer from the tables below.

1. Assemble the mainshaft and countershaft as shown below.

THRUST WASHER THICKNESS

CLASS	THICKNESS
A	1.95–1.98 mm (0.077–0.078 in)
B	1.92–1.95 mm (0.076–0.077 in)
C	1.89–1.92 mm (0.074–0.076 in)



SPACER 28 mm

LENGTH
28.01–28.04 mm (1.103–1.104 in)
28.04–28.07 mm (1.104–1.105 in)
28.07–28.10 mm (1.105–1.106 in)
28.10–28.13 mm (1.106–1.107 in)

FLANGED SPACER

LENGTH

28.01–28.04 mm (1.103–1.104 in)
28.04–28.07 mm (1.104–1.105 in)
28.07–28.10 mm (1.105–1.106 in)
28.10–28.13 mm (1.106–1.107 in)

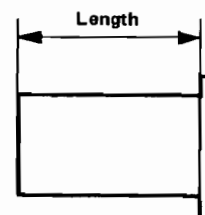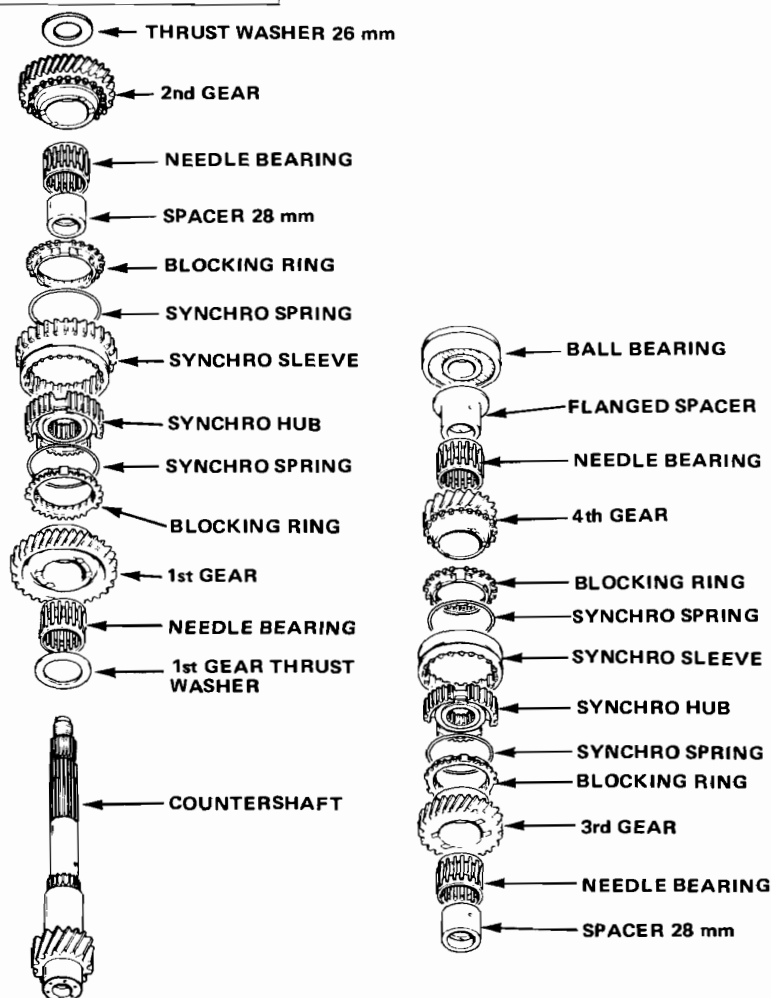


(cont'd)


5-Speed Transmission

Countershaft Clearance Measurement (cont'd)


2. Install the mainshaft and countershaft as an assembly.
3. Lift the countershaft 2nd and reverse gear to shift into 2nd gear.

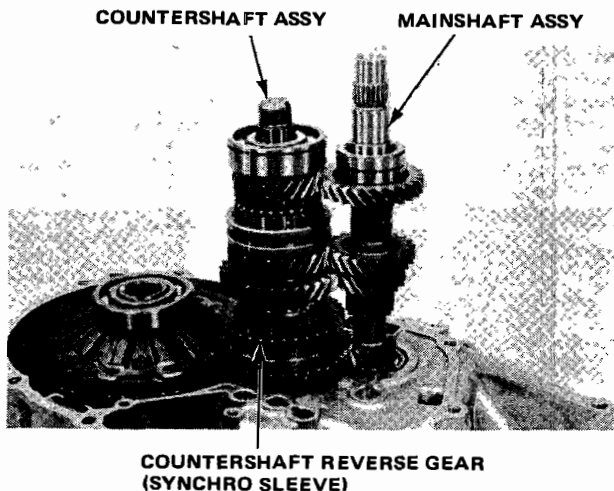


4. Install the dowel pins in clutch housing, then install transmission housing.

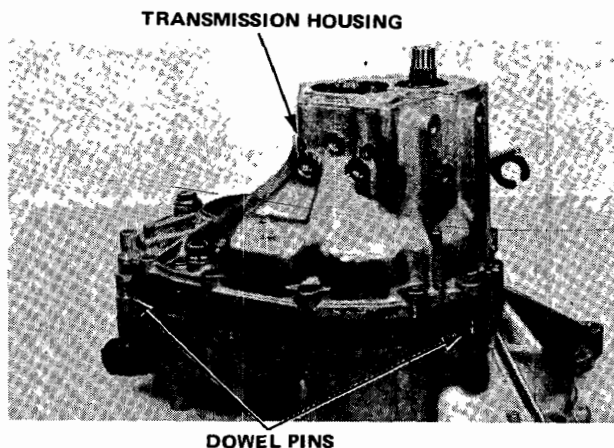

5. Install the countershaft 5th gear and spring washer.

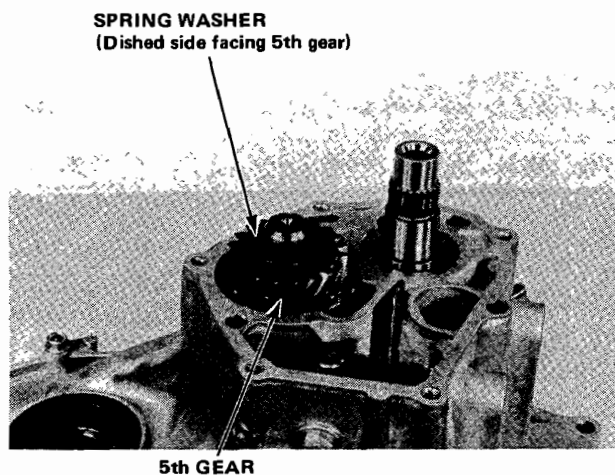

6. Install the mainshaft holder. See page 14-8.
7. Install the countershaft locknut. Tighten to 90 N·m (9.0 kg-m, 65 lb-ft).

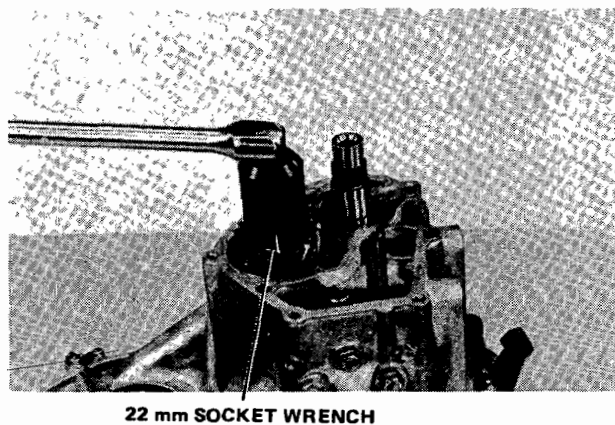

8. Remove the transmission housing by using housing puller. See page 14-9.
9. Remove the countershaft assembly and mainshaft assembly.




- If any measurement is out of tolerance, the counter-shaft assembly must be disassembled and spacer collars or the thrust washer changed (see page 14-15).

10. Measure the clearance between thrust washer and 1st gear.

1st Gear Clearance

Standard (New): 0.03–0.08 mm (0.001–0.003 in.)

Service Limit: 0.18 mm (0.007 in.)

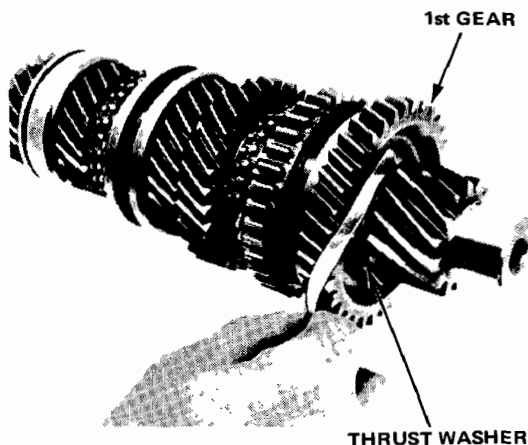


11. Measure the clearance between the 28 mm spacer and 2nd gear.

2nd Gear Clearance:

Standard (New): 0.05–0.12 mm (0.002–0.005 in.)

Service Limit: 0.18 mm (0.007 in.)

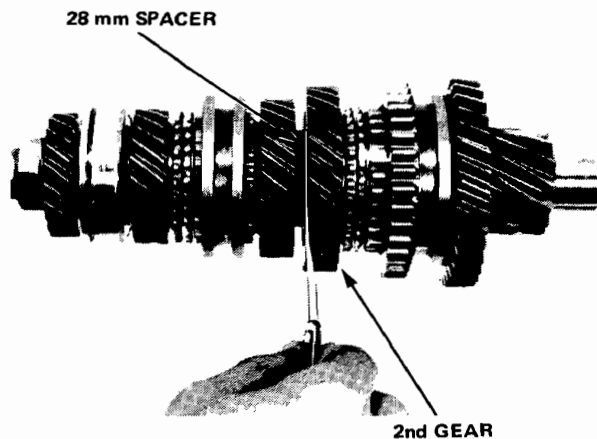


12. Measure the clearance between the 26 mm thrust washer and 3rd gear.

3rd Gear

Standard: 0.05–0.12 mm
(0.002–0.005 in.)

Service Limit: (0.007 in.)

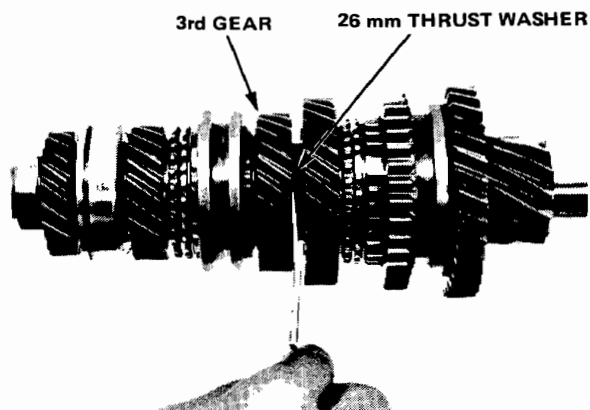


13. Measure the clearance between 4th gear and its spacer.

4th Gear

Standard: 0.05–0.12 mm
(0.002–0.005 in.)


Service Limit: 0.18 mm (0.007 in.)

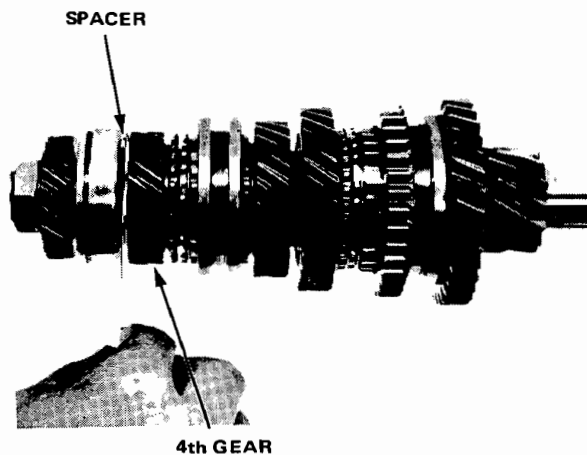

5-Speed Transmission


Mainshaft Assembly Clearance

1. Install the parts below onto the mainshaft.

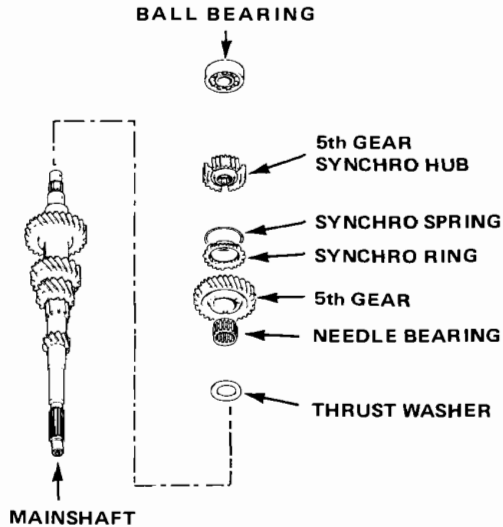

2. Hold the ball bearing outer race with a socket and compress it to 30 kg (66 lb).
3. Measure clearance between 5th gear and its thrust washer.

Standard: 0.05–0.38 mm
(0.0020–0.0150 in.)
Service Limit: 0.4 mm (0.016 in.)

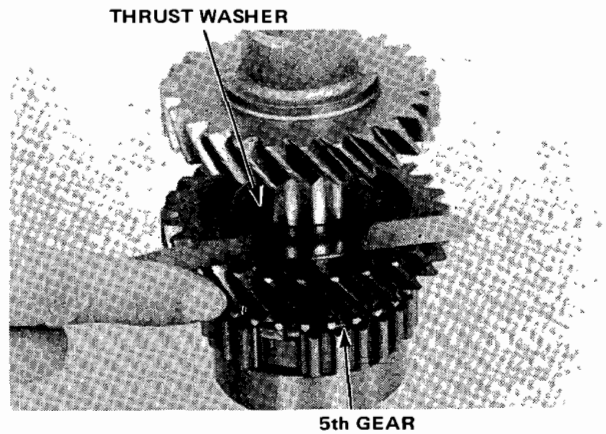


4. Replace the thrust washer if the clearance exceeds the service limit.
Recheck the clearance with the new thrust washer.
If the clearance is still over the service limit, replace 5th gear and recheck.




Differential Oil Seal Removal

1. If seals are to be replaced, or if the differential needs repair, remove the differential assembly. Refer to section 17 for differential repair.

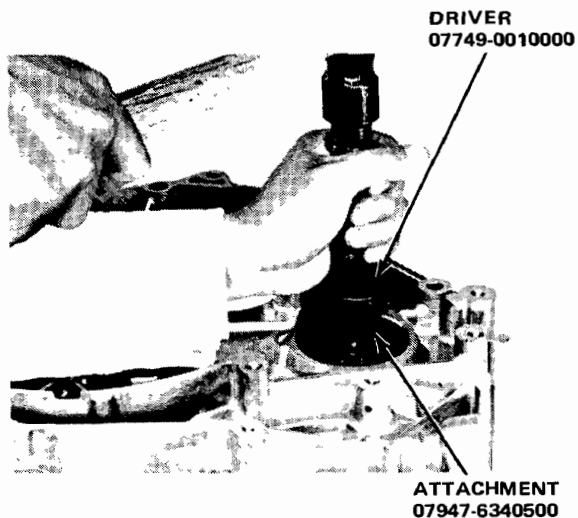


2. Remove the 72 mm snap ring in the transmission housing.

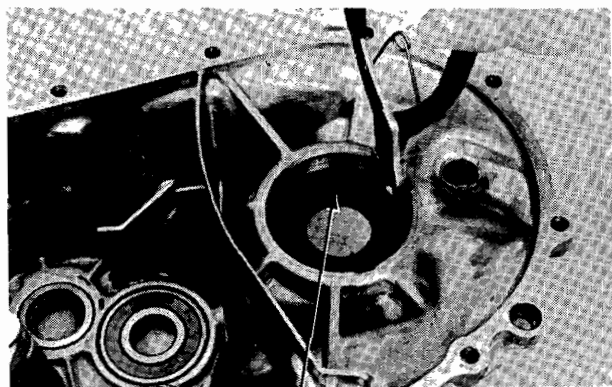


72 mm SNAP RING

3. Drive out the seal from the clutch housing.

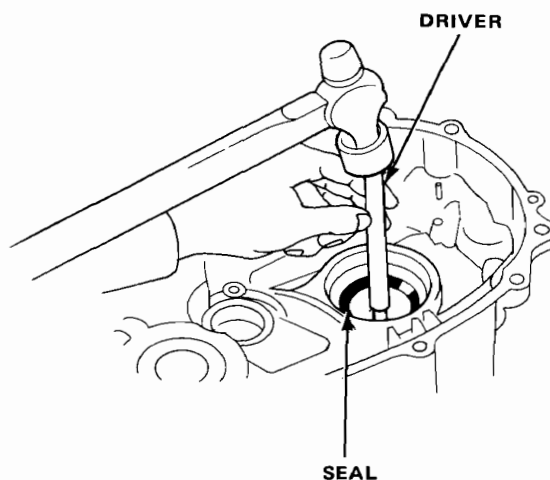

4. Drive out the seal from the transmission housing.

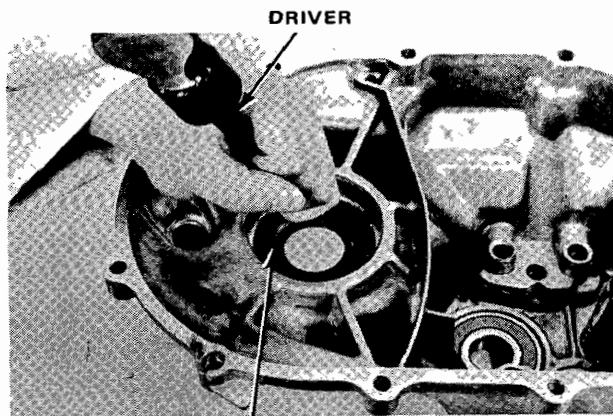


SEAL

5-Speed Transmission

Countershaft Bearing Replacement


1. Remove the bearing retainer plate.

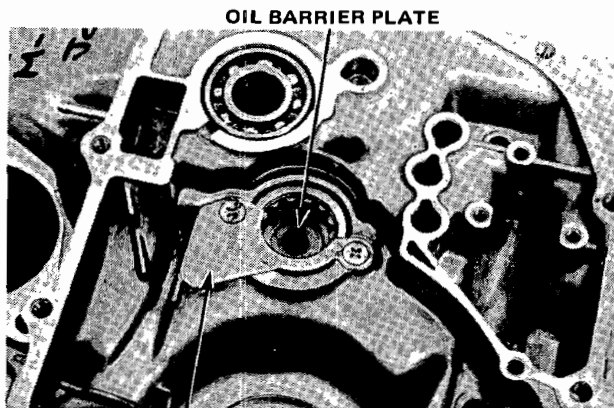

BEARING RETAINER PLATE

2. Insert Bearing Remover with attachment into countershaft bearing.
3. Raise slide hammer rapidly and strike against handle. Repeat several times to remove bearing.


**BEARING REMOVER
07936-6340000**

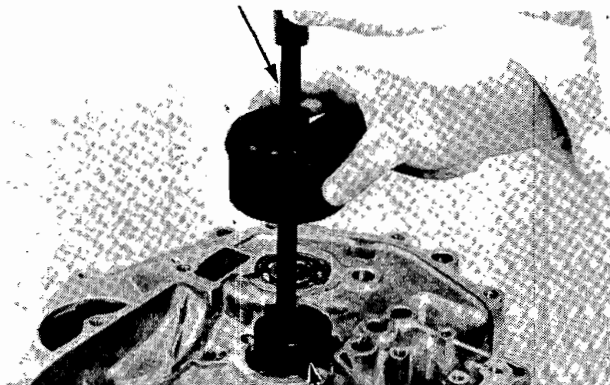

**REMOVER ATTACHMENT
07936-6340100**

4. Remove the oil barrier plate, wash thoroughly, then reinstall it.


5. Drive in the countershaft needle bearing with the special tools.

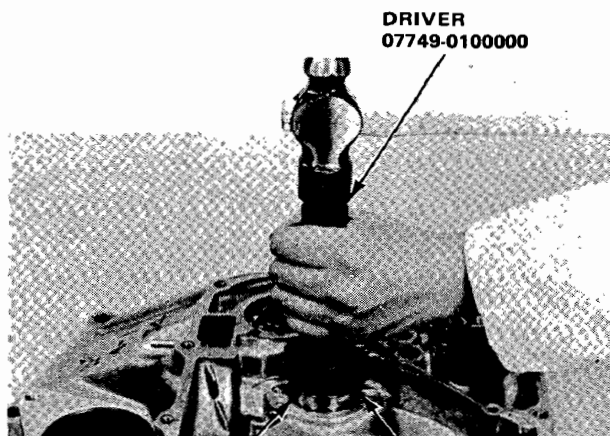

**COUNTERSHAFT
NEEDLE BEARING**

**ATTACHMENT
07746-0010300**

6. Reinstall the bearing retainer plate. Tighten the screws with an impact driver, then stake the screw heads.

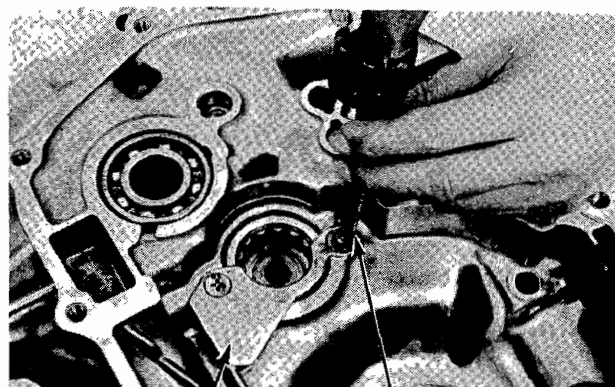


**BEARING
RETAINER PLATE**



Mainshaft Bearing Replacement

1. Remove the mainshaft bearing and seal from the clutch housing by driving out with a drift.


NOTE: Always install a new bearing and seal. Do not reinstall old ones.

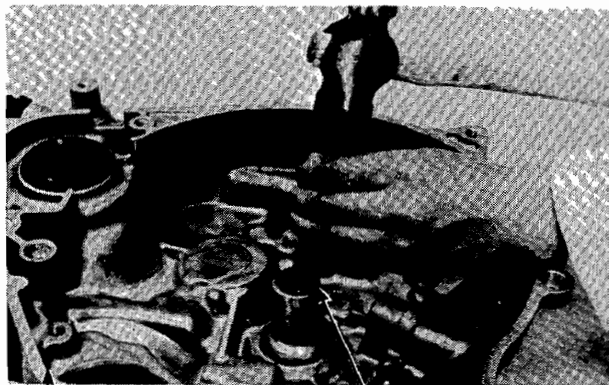


CLUTCH HOUSING

DRIIFT

2. Drive in the mainshaft oil seal.

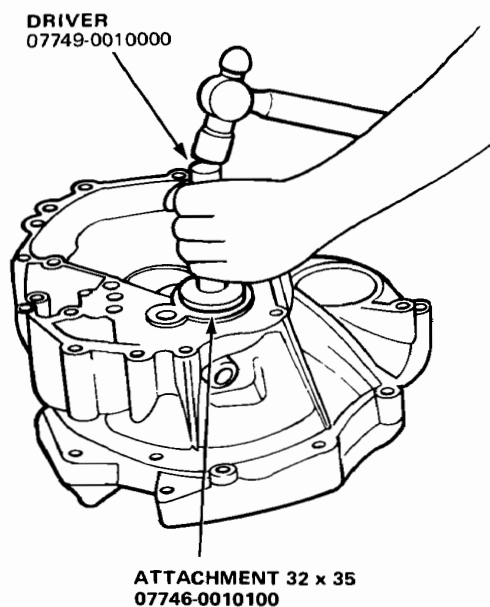

3. Drive in the mainshaft bearing with a support block placed under the case to support the bearing boss.

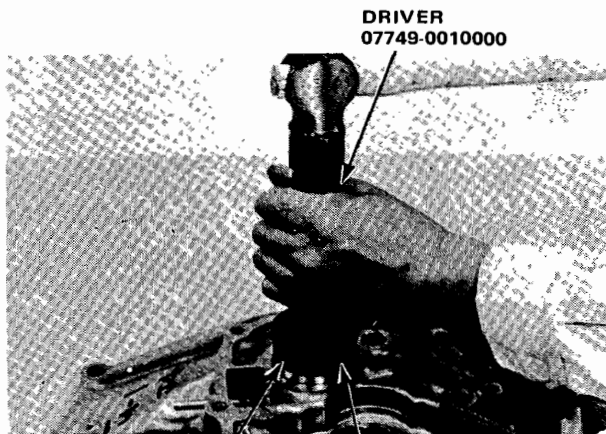

5-Speed Transmission

Mainshaft/Countershaft Bearing Replacement (Transmission Housing)


1. Remove the mainshaft and countershaft bearings from transmission housing; expand each snap ring with snap ring pliers, then push bearing out by hand.

CAUTION: To avoid damaging the housing, fully expand each snap ring before pushing out the bearing.

NOTE: Do not remove the snap rings unless it is necessary to clean the grooves in the housing.


3. Check that the snap ring is securely seated in both the grooves of the bearing and the case.

NOTE: To confirm proper snap ring seating and condition, measure snap ring gap A as installed:

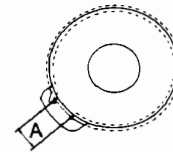


Bearing	Dimension A as installed
Mainshaft	3.5–4.7 mm (0.14–0.19 in.)
Countershaft	5.7–8.8 mm (0.22–0.35 in.)

Reseat or carefully replace the snap ring if the gap is outside the specification.

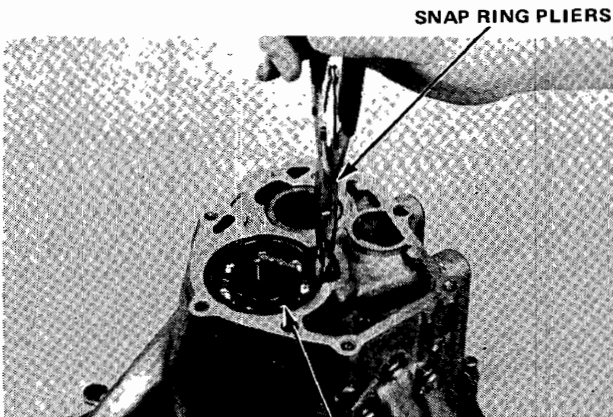

COUNTERSHAFT BEARING

2. Expanding each snap ring with snap ring pliers, insert the new bearing partway into it (part number facing out), then release pliers. Push the bearing down into the transmission until ring snaps in place around it.

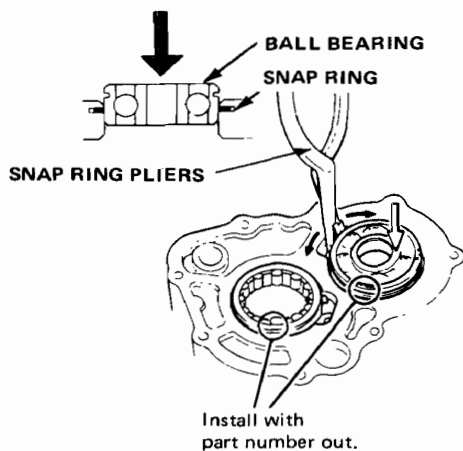




Shift Fork to Synchro Sleeve Clearance


1. Check clearance between each shift fork and its matching synchro sleeve.

Standard: 0.45–0.65 mm
(0.018–0.026 in)
Service Limit: 1.0 mm (0.039 in)

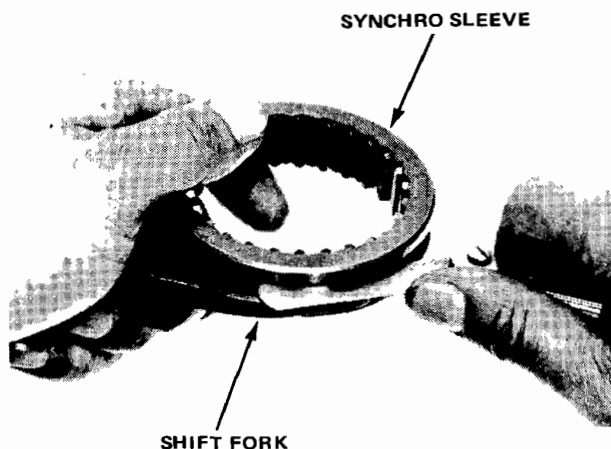

2. If the clearance exceeds the service limit, measure the thickness of the shift fork fingers.


Finger Thickness:
(All shift forks)
Standard: 6.4–6.5 mm (0.252–0.256 in)
Service Limit: 6.0 mm (0.236 in)

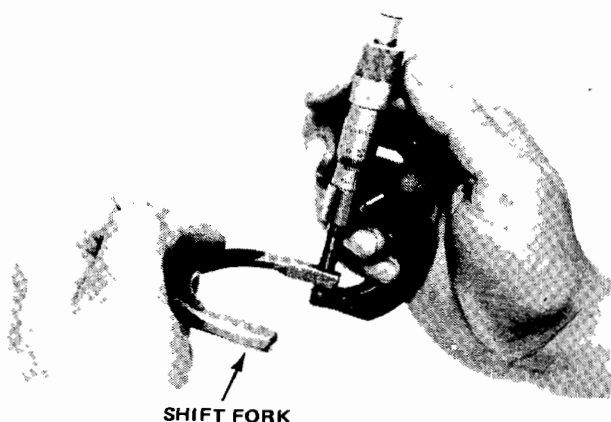

3. If any shift forks are replaced, recheck fork-to-sleeve clearance. If still out of tolerance, replace the synchro sleeve and recheck.

Installing Synchro Hubs in Sleeves


Each synchro sleeve has three sets of longer teeth (120 degrees apart) that must be matched with the three sets of deeper grooves in the hub when assembled.

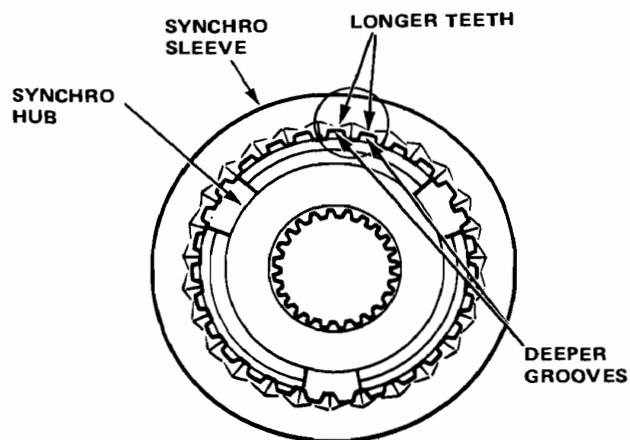

Synchro Sleeve and Hub Inspection

1. Inspect the gear teeth on all synchro hubs and sleeves for rounded off corners, indicating wear.
2. Install each hub in its mating sleeve and check for freedom of movement.

NOTE: If replacement is required, always replace the synchro sleeve and hub as a unit.

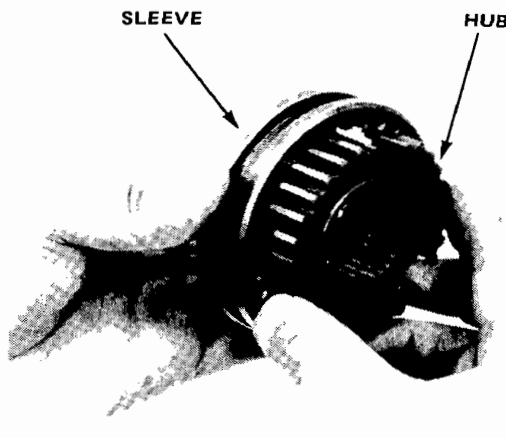

5-Speed Transmission

Gear and Synchro Ring Inspections

SYNCHRO SPRING
Replace

1. Inspect the inside of synchro ring for wear.

SYNCHRO RING

2. Inspect the synchro ring teeth and matching teeth on gear for wear (rounded off).

Wear

3. Inspect the gear hub thrust surface for wear.

4. Inspect the cone surface for wear on 1st, 2nd, 3rd and 4th countershaft gears; 5th mainshaft gear.

5. Inspect the teeth on all gears for uneven wear, scoring, galling, cracks.


6. Place the synchro ring on matching gear cone and rotate until it stops (approx. 10 to 20 degrees), then measure the clearance between ring and gear.

Ring-to-Gear Clearance:

Standard (New): 0.85–1.1 mm (0.033–0.043 in.)

Service Limit: 0.4 mm (0.016 in.)


7. Separate the synchro ring and gear, and coat them with oil.
8. Install the synchro spring on synchro ring.
9. Put the synchro ring on gear cone again, rotate until it stops, then set it aside for later reassembly.

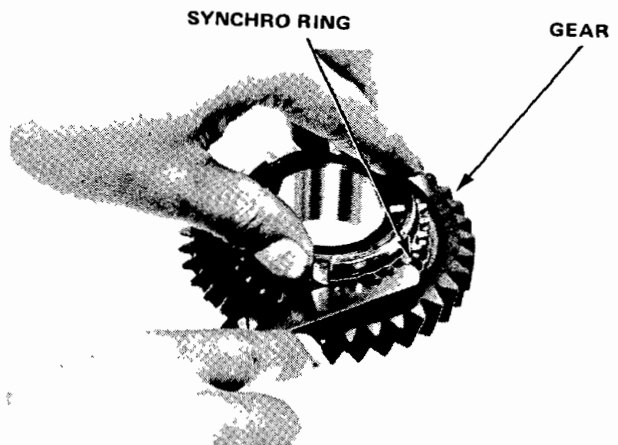




Shift Shaft Inspection

1. Remove the 3rd gear shift shaft guide from its shaft with a spring pin driver.

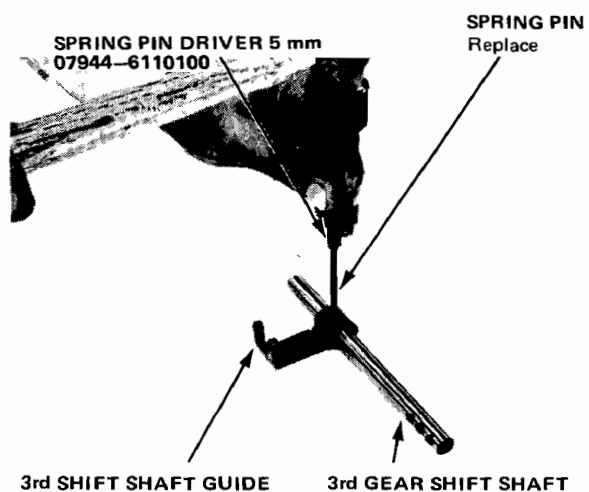


2. Inspect the shift shaft for wear or damage.

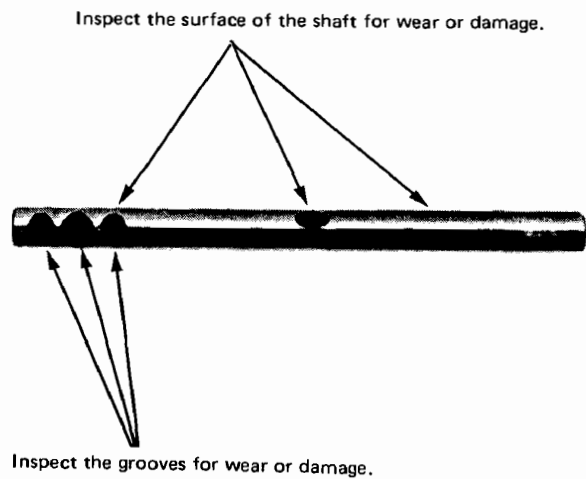

5-Speed Transmission


Shift Arm Holder Disassembly

1. Use an impact driver to remove the retainer plate screws, then remove the retainer plate.
2. Pull out the shift arm shaft and interlock shaft.
3. Remove the detent ball and spring.
4. Remove the shift arm, shift springs, and spring retainers.

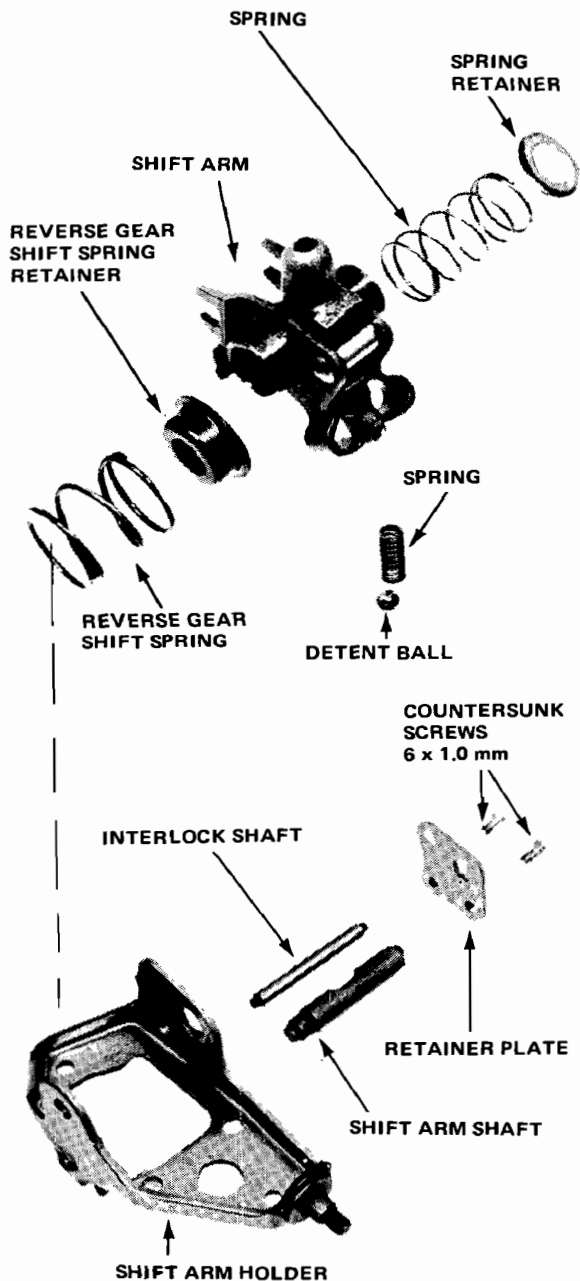


Shift Arm Holder Reassembly

1. Install the shift arm, shift springs, and spring retainers in shift arm holder.

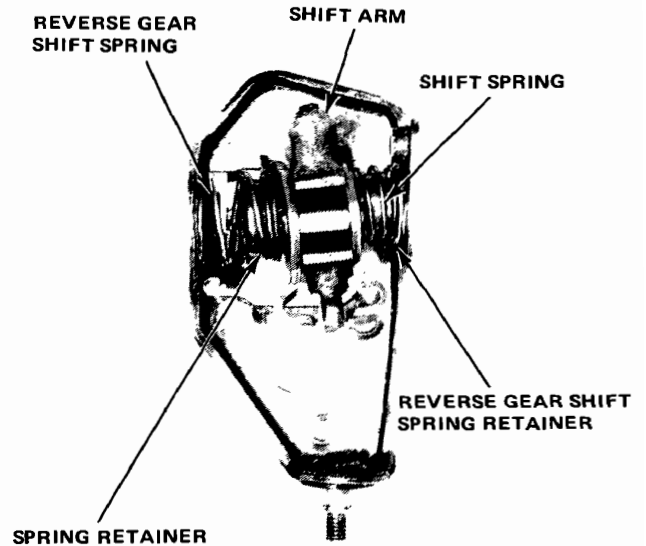


2. Turn the shift arm holder upside down and place the detent ball and spring in the shift arm.

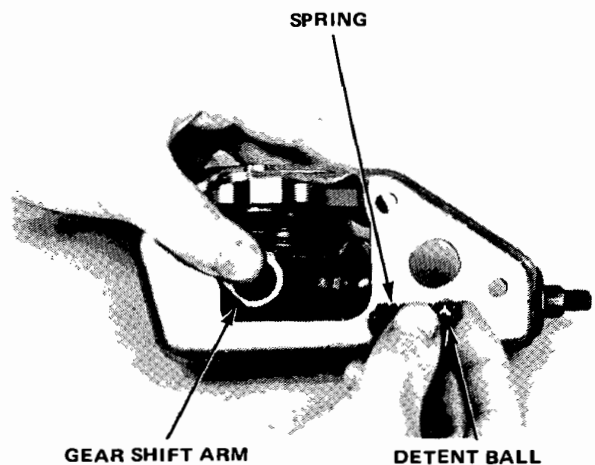





3. Hold the detent ball in place with a small screwdriver, align groove in shift arm shaft with detent ball, then insert the shaft through shift arm holder and shift arm.

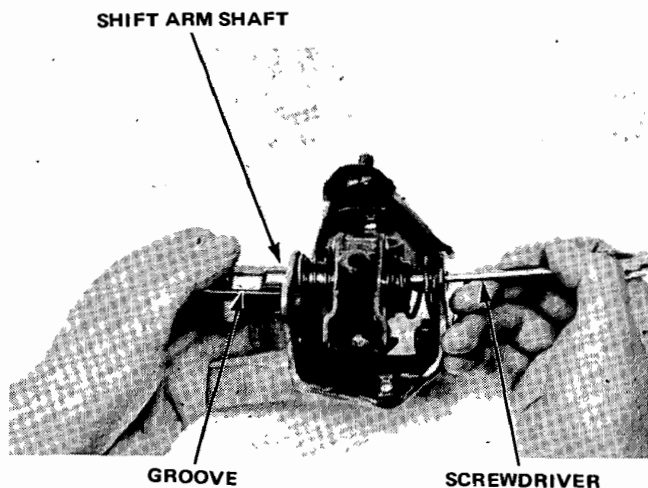


4. Insert the interlock shaft.

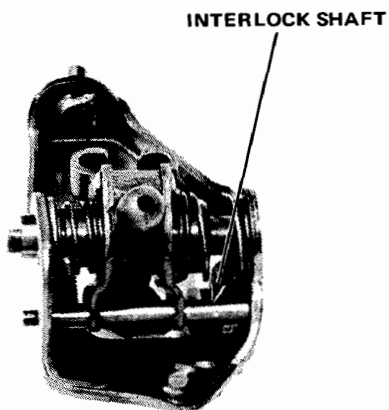

5. Install the retainer plate.

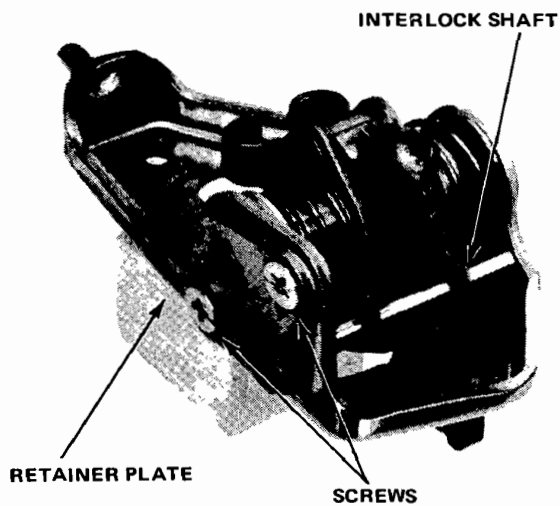

6. Tighten the retainer plate screws with impact driver, then stake the screw heads.

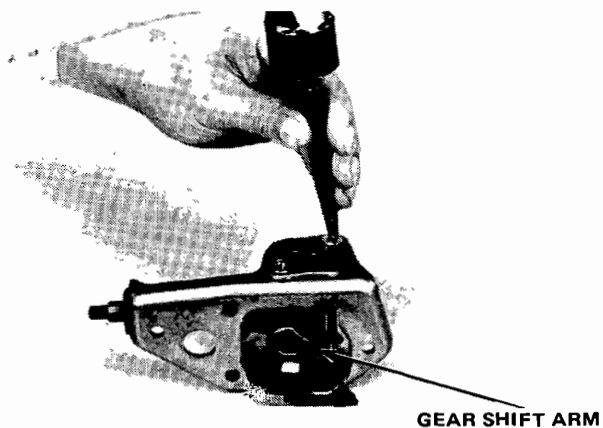


NOTE: After reassembly, check the gear shift arm for free movement.


5-Speed Transmission

Transmission Reassembly


1. Clean all liquid gasket residue from the mating surfaces of transmission and clutch housings.
2. Install the shift rod, selector arm, new lock plate and bolt. Bend the lock tab on lock plate over against bolt head.

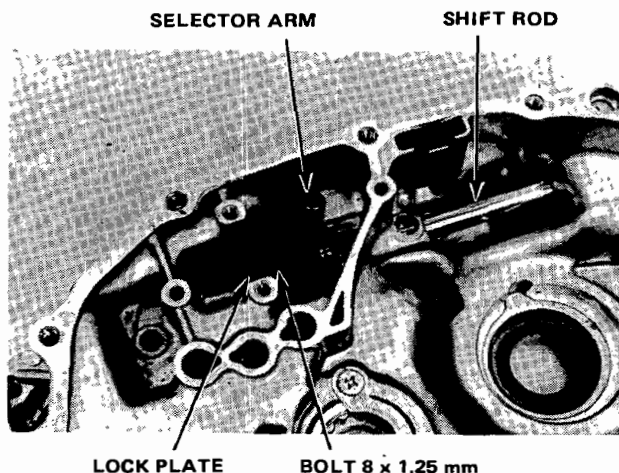


3. Install the 72 mm snap ring in the clutch housing, then install the differential (Section 17).

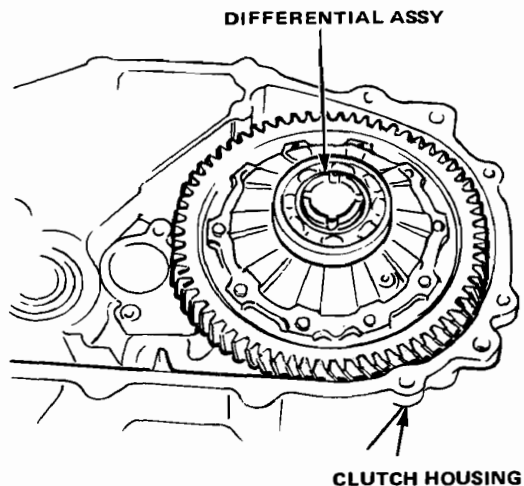

4. Align the shift arm with selector arm and install the shift arm holder. Install the bolts, using the correct bolt in each hole, and torque as shown.

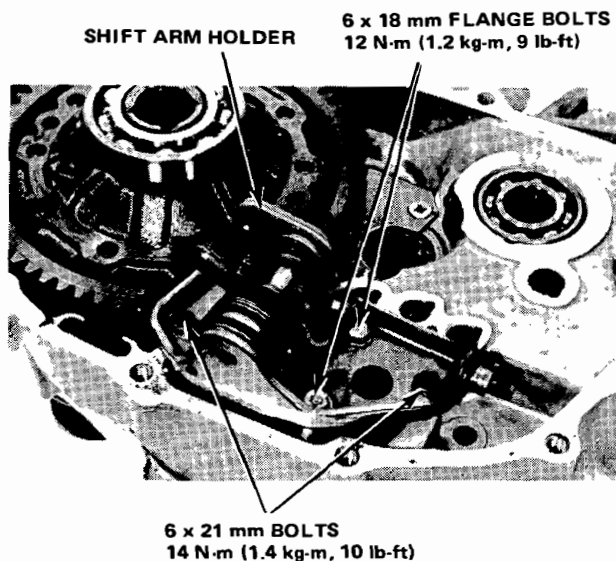

5. Install the mainshaft and countershaft as an assembly.

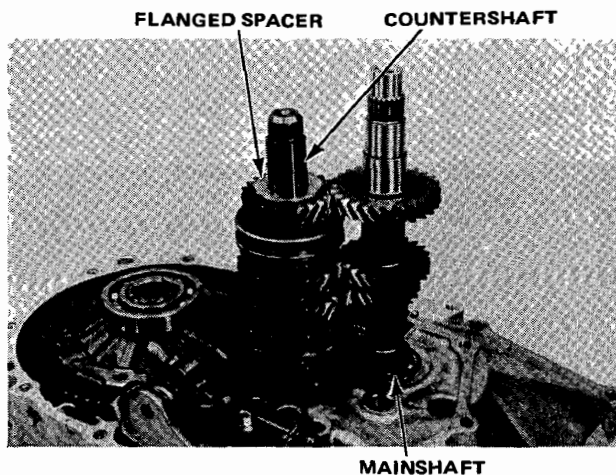




6. Lift the countershaft 1st and 2nd synchro sleeve to shift into 2nd gear.




COUNTER REVERSE GEAR


7. Install the 1st/2nd gear shift fork on synchro sleeve, then rotate into place so that lugs on back of fork fit over shift arm.

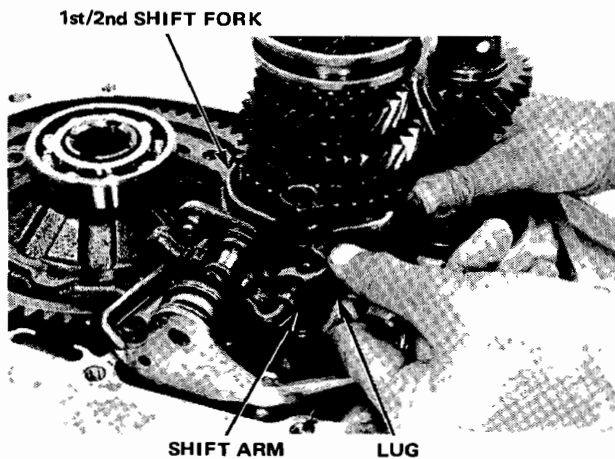

8. Insert the 3rd/4th shift fork shaft into 3rd/4th shift guide, and install the 5 mm spring pin as shown.

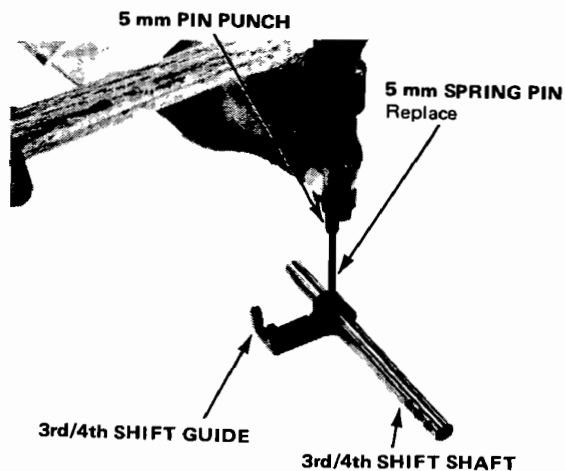

9. Insert the 3rd/4th shift fork shaft into 3rd/4th shift fork, then install the shift fork and hook shift guide to shift arm.

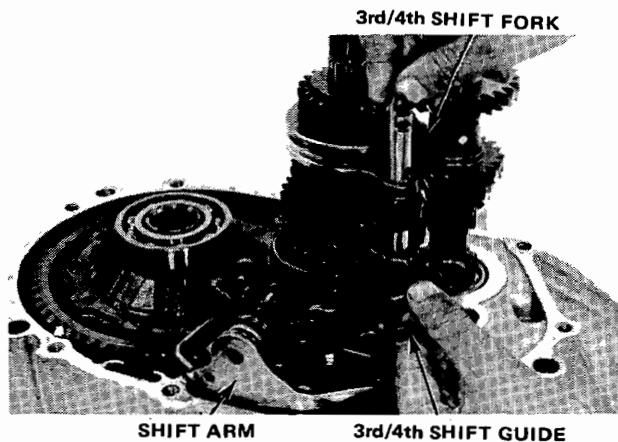


(cont'd)

5-Speed Transmission

Transmission Reassembly(cont'd)


10. Install the 1st/2nd shift shaft.

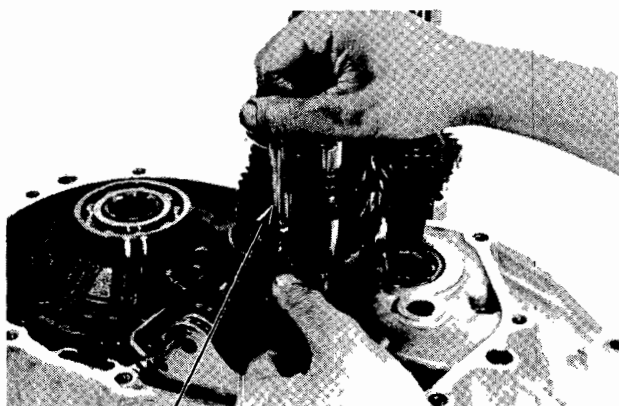

1st/2nd SHIFT SHAFT


11. Hook the 5th/reverse shift guide to shift arm, then install the shift shaft.

5th/REVERSE SHIFT SHAFT

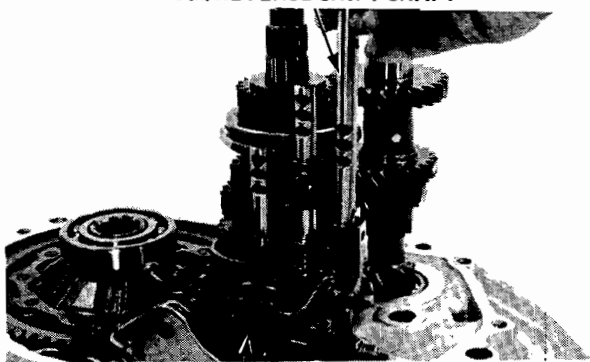

REVERSE SHIFT GUIDE

12. Install the spring and detent ball in hole in clutch housing.

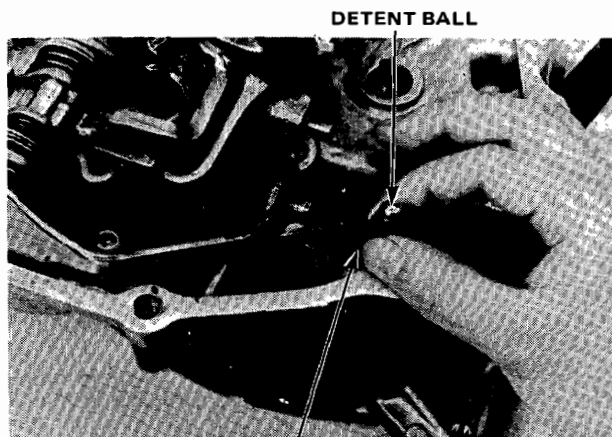


DETENT BALL


SPRING

13. Install the reverse shift fork with special washer and nut.

REVERSE SHIFT FORK

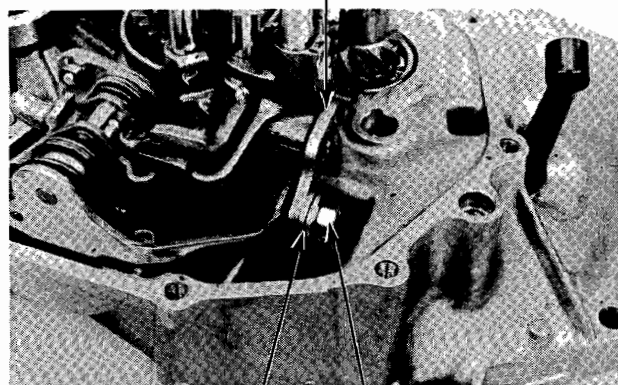


SPECIAL WASHER NUT 24 N·m (2.4 kg-m, 17 lb-ft)

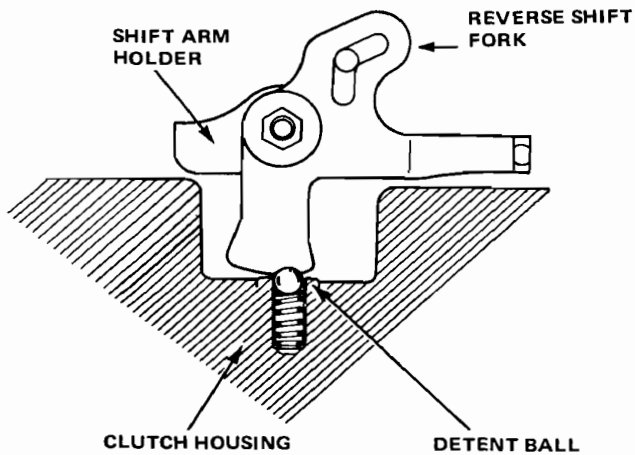


NOTE: Make sure that reverse shift fork is aligned with detent ball.

14. Install the reverse idler gear and shaft.

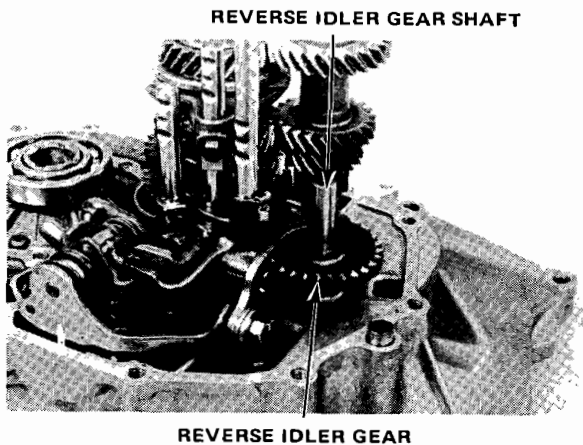


15. Install the three special bolts and lock plates on shift shafts then bend tab on each lock plate against bolt head.

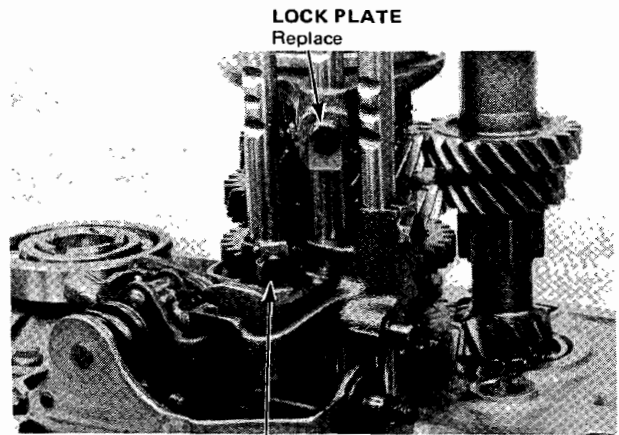

NOTE: To ease reassembly, lightly oil the shift shafts, transmission shafts, and differential bearings.

16. Apply liquid gasket to the clutch housing as shown below.

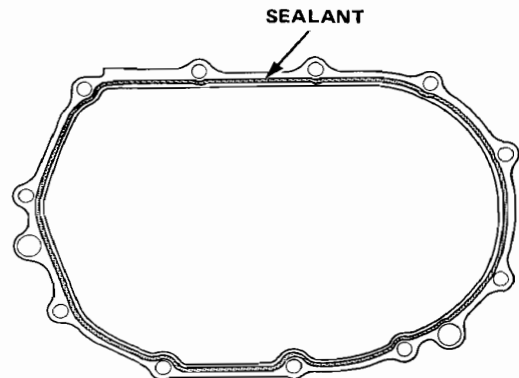


NOTE: This transmission uses no gasket between the major housings; use Honda P/N 08740-99986 sealant. Assemble the housings within 20 minutes after applying the sealant and allow it to cure at least 30 minutes after assembly before filling it with oil.

(cont'd)

5-Speed Transmission

Transmission Reassembly (cont'd)

17. Install the dowel pins on the clutch housing.
18. Install the transmission housing being careful to line up shafts. Expand countershaft bearing snap ring so that transmission housing can fall into place.

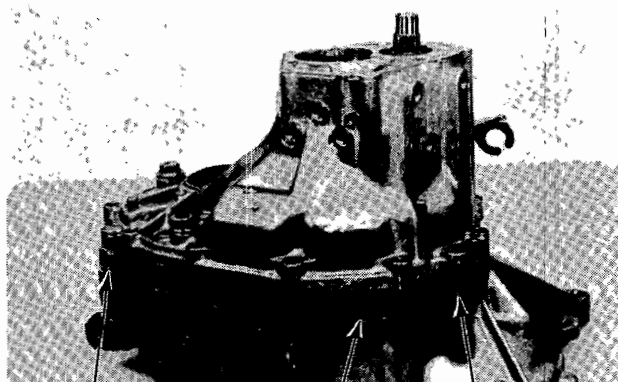


DOWEL PIN

SEALANT


DOWEL PIN

CAUTION: Do not force installation — check for and correct any misalignment.

19. Torque bolts (8 x 1.25 mm) in sequence shown, 27 N·m (2.7 kg-m, 20 lb.ft).

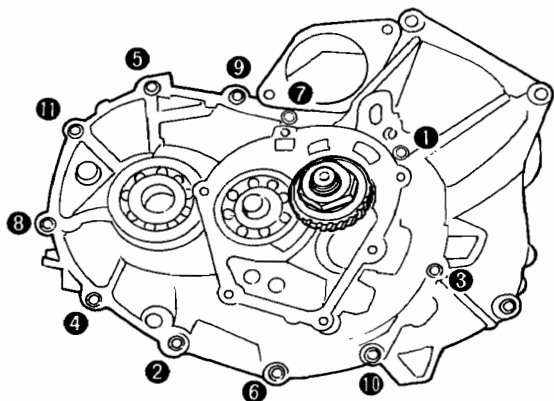

20. Install the three detent balls, washers, springs, and retaining screws.

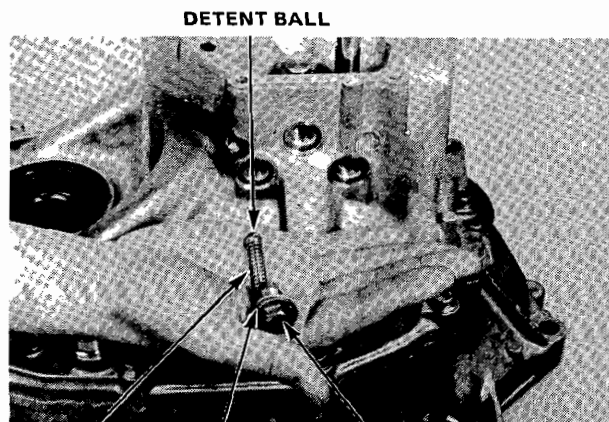


SPRING

WASHER
Replace


RETAINING SCREW
22 N·m (2.2 kg-m, 16 lb-ft)

21. Install the counter 5th gear and spring washer.

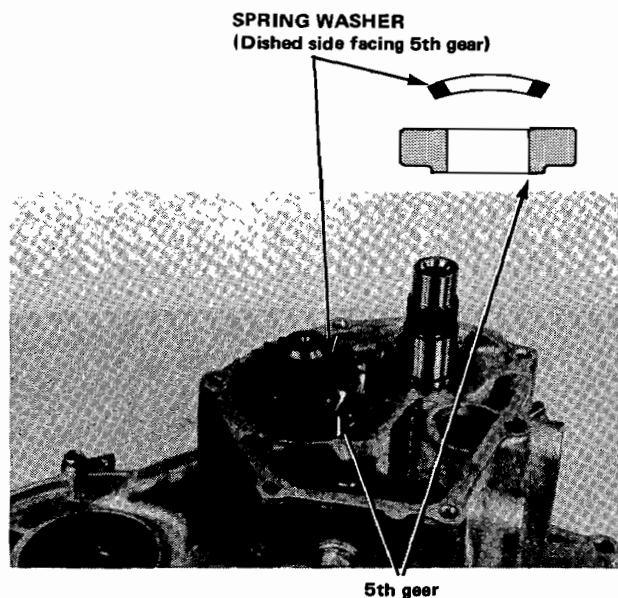




22. Install the mainshaft holder, then shift transmission into reverse.
Torque countershaft lock nut to 120 N·m (12 kg·m, 86 lb·ft), loosen, and retighten to same torque.

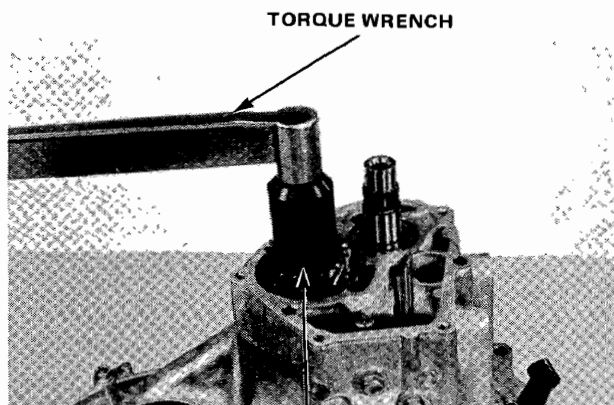


22 mm SOCKET WRENCH

23. Stake shoulder on lock nut in to slot in countershaft.

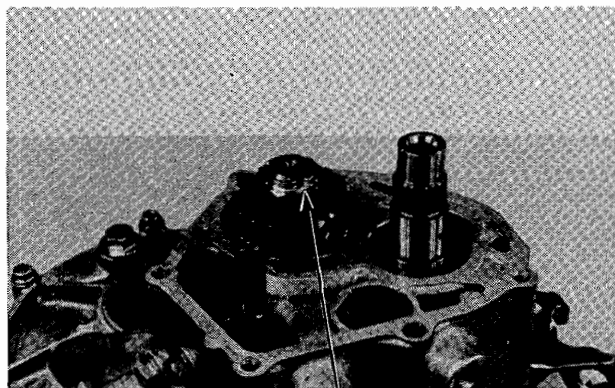

COUNTERSHAFT LOCK NUT

24. Install the needle bearing and thrust washer.

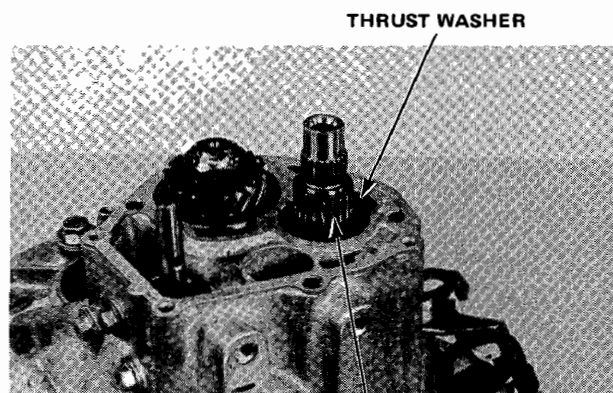


NEEDLE BEARING

25. Install the mainshaft 5th gear synchro ring and the synchro spring.
26. Install the synchro hub and the synchro sleeve onto the shift fork. Install them onto the mainshaft.


NOTE: Install the synchro hub with its raised inner shoulder facing down.

Shoulder faces down.


Chamfer faces up.

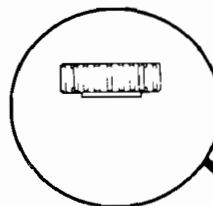

5th GEAR SHIFT FORK

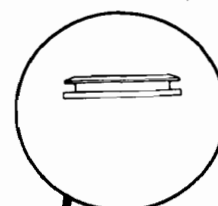

SYNCHRO HUB

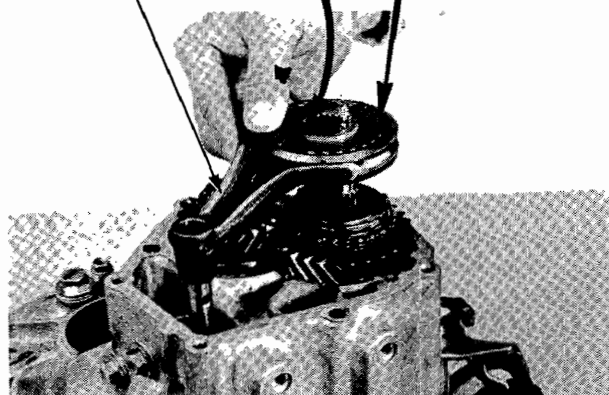


(cont'd)

5-Speed Transmission


Transmission Reassembly (cont'd)

27. Install the bearing.

28. Drive the spring pin into the shift fork.

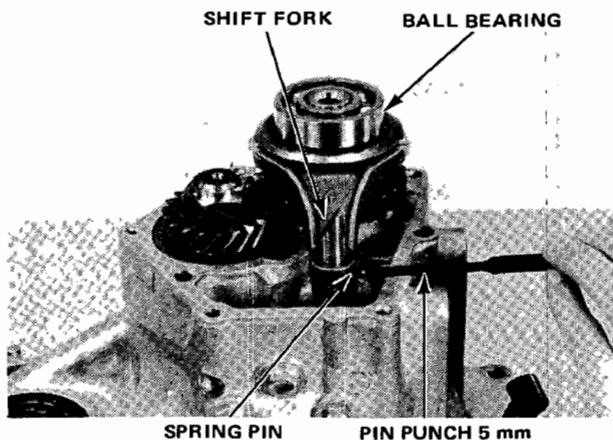


29. Apply sealant on the sealing surface of the transmission housing as shown.

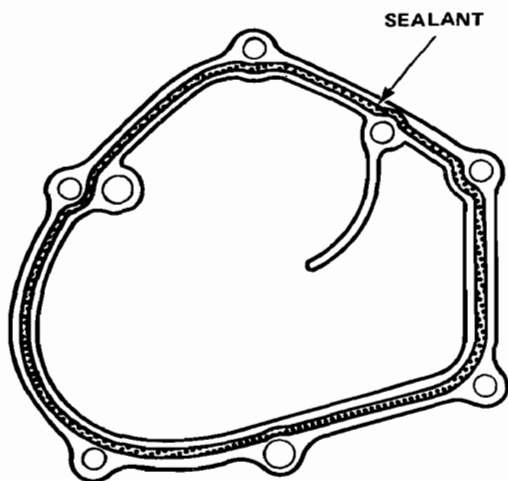

NOTE: This transmission uses no gaskets between the major housings; use Honda sealant, P/N 08740-99986. Assemble the housings within 20 minutes after applying the sealant and allow it to cure for at least 30 minutes after assembly before filling it with oil.

30. Install the 5th gear housing, and torque its bolts to 12 N·m (1.2 kg-m, 9 lb-ft).

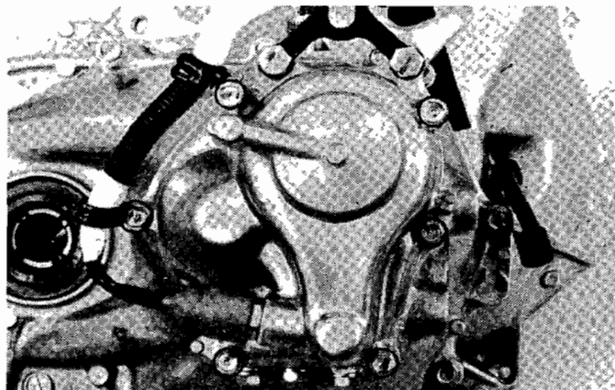




Differential Seal Installation

1. Measure the clearance between the snap ring and the bearing outer race.


SIDE CLEARANCE; 0–0.15 mm
(0–0.006 in.)

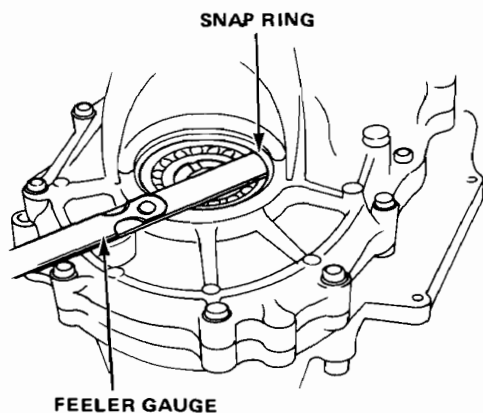


Select a snap ring of the correct thickness from the table below if the clearance is out of tolerance.

PART NUMBER	THICKNESS
90414-634-000	2.45 mm (0.096 in.)
90415-634-000	2.55 mm (0.100 in.)
90416-634-000	2.65 mm (0.104 in.)
90417-634-000	2.75 mm (0.108 in.)
90418-634-000	2.85 mm (0.112 in.)
90419-634-000	2.95 mm (0.116 in.)

2. Apply grease to the seal, and then drive it into the clutch housing with the special tools.

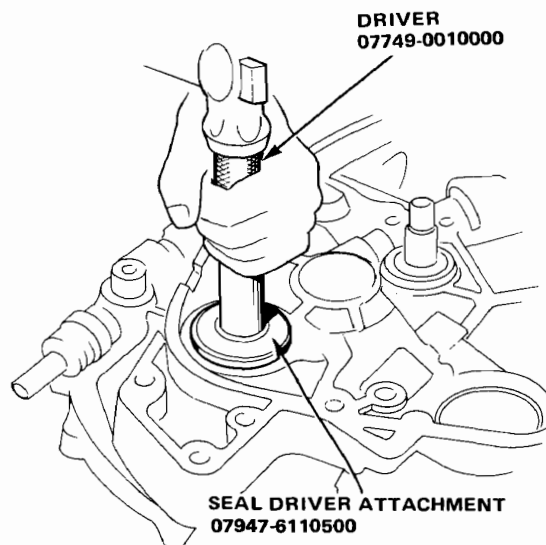

3. Apply grease to the seal, and then drive it into the transmission housing with the special tools.

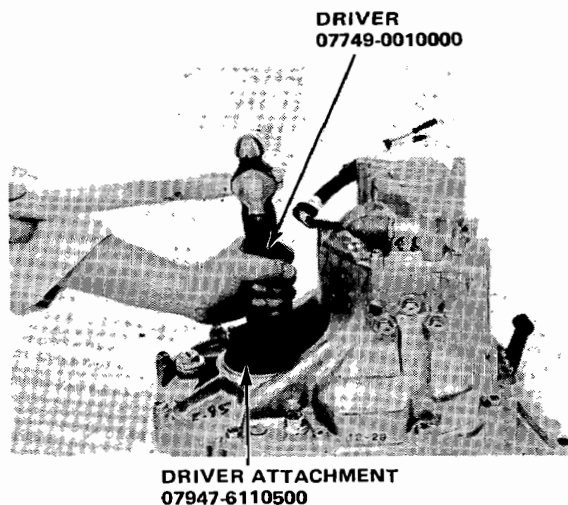

5-Speed Transmission

Installation

1. Place the transmission on transmission jack.


NOTE: Clean and grease release bearing sliding surfaces.

2. Check that two 14 mm dowel pins are installed in the clutch housing.
3. Raise the transmission far enough to align dowel pins with matching holes in block.
4. Roll the transmission toward engine and fit main-shaft into clutch disc splines. If driver's side suspension was left in place, install new spring clips on both axles, then carefully insert left axle into differential as you install transmission.

NOTE: New 26 mm spring clips must be used on both axles.


CAUTION: Make sure that axles fully bottom. Slide axle in until you feel spring clips engage differential.

5. Push and wiggle the transmission until it fits flush with engine flange.
6. Secure transmission to engine with mounting bolts from the engine side (12 x 1.25 x 70 mm). Torque to 68 N·m (6.8 kg-m, 50 lb-ft).
7. Install the rear transmission mount on the transmission housing. Torque its bolts to 65 N·m (6.5 kg-m, 47 lb-ft).

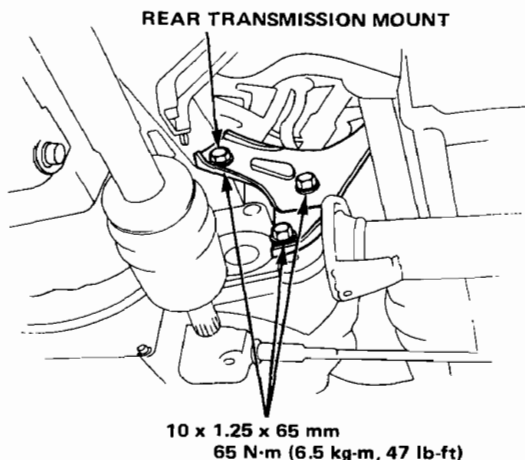

8. Install the engine torque bracket on the transmission housing. Torque its bolts to 45 N·m (4.5 kg-m, 33 lb-ft).

9. Loosely install the bolts for the front transmission mount, then torque them torque to in the sequence shown.

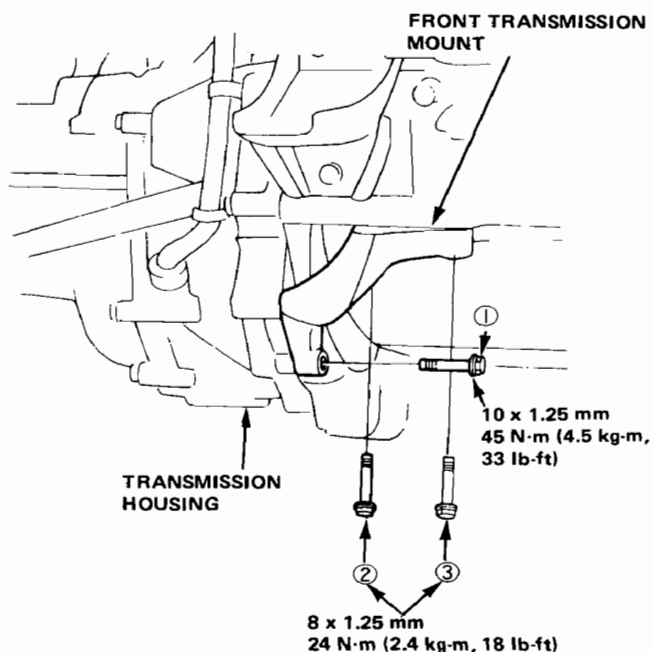

10. Turn right steering knuckle/axle assembly outward far enough to insert free end of axle into transmission. Repeat on opposite side.

CAUTION: Make sure that axles fully bottom. Slide axle in until you feel spring clips engage differential.

11. Reconnect the shift rod and shift lever torque rod.
12. Reconnect the lower arm ball joints and torque to 45 N·m (4.5 kg-m, 33 lb-ft).
13. Reconnect the tie-rod end ball joints and torque to 45 N·m (4.5 kg-m, 33 lb-ft).
14. Install the engine and wheel well splash shields.
15. Reconnect the exhaust header pipe.
16. Install the front wheels, lower car to ground, and torque lug nuts to 110 N·m (11 kg-m, 80 lb-ft).




17. Remove chain hoist from the 8 mm bolt on the cylinder head.
18. Install the speedometer cable into the gear holder, then secure cable with clip and install boot.
19. Install the top transmission mounting bolts and torque to 45 N·m (4.5 kg-m, 33 lb-ft).
20. Connect the clutch cable to release arm, then attach cable housing end to transmission bracket.
21. Connect the engine compartment wiring:
 - Battery positive cable to starter.
 - Black/white wire to starter solenoid.
 - Green/black and yellow wires to back-up light switch.
 - Transmission ground cable.
22. With ignition key OFF, connect ground cable to battery and transmission.
23. Refill the transmission and adjust clutch free play. (Page 13-2)
24. Check the transmission for smooth operation.

5-Speed Transmission

Back-up Light Switch Testing

1. Test the back-up light switch by placing the gear shift lever in reverse and turning the ignition switch to ON.

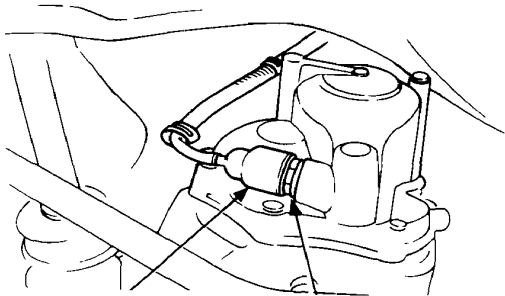


BACK-UP LIGHT SWITCH
25 N·m (2.5 kg·m, 18 lb·ft)

ALUMINUM WASHER
Replace


3. Using an ohmmeter, check the switch for continuity while pushing in on the switch plunger.

SWITCH PLUNGER

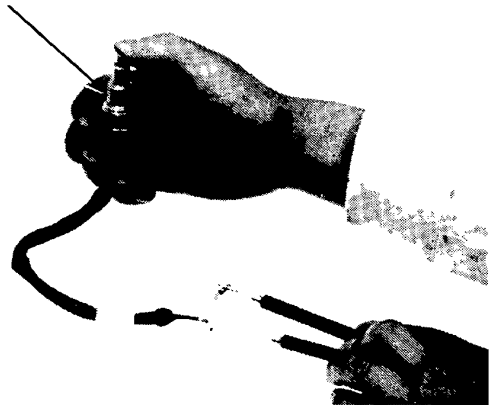

2. If back-up lights do not go on, remove the back-up light switch.


Back-up Light Switch Circuit

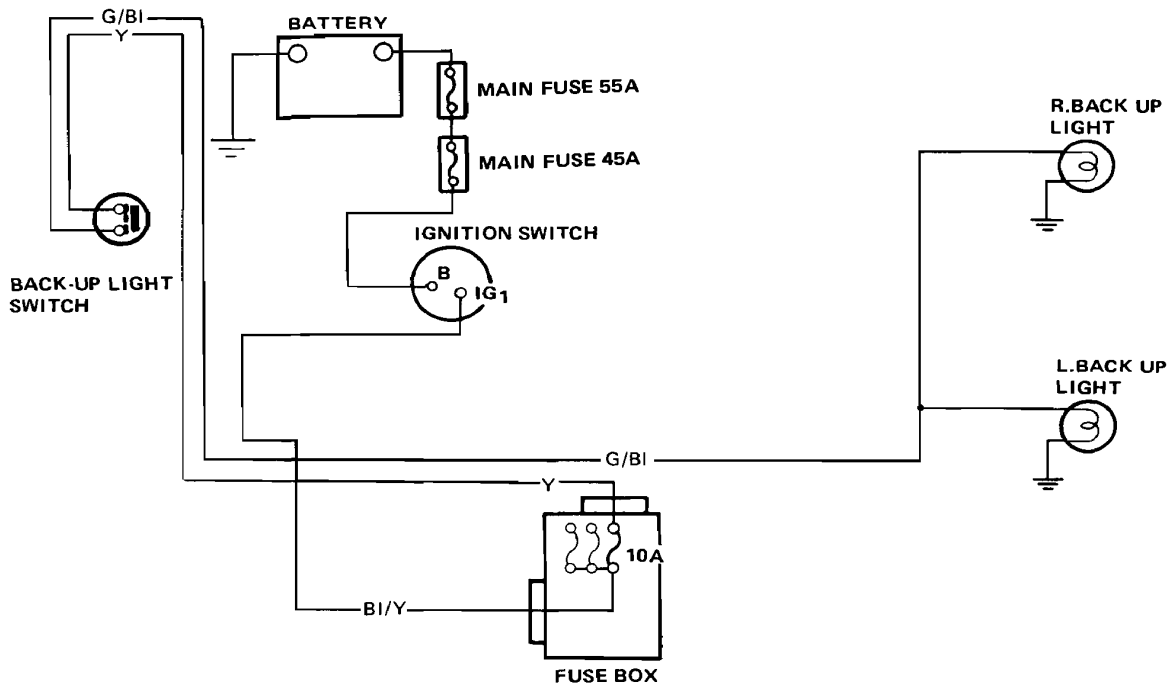



Gearshift Mechanism Overhaul

NOTE: Inspect rubber parts for wear or damage when disassembling.

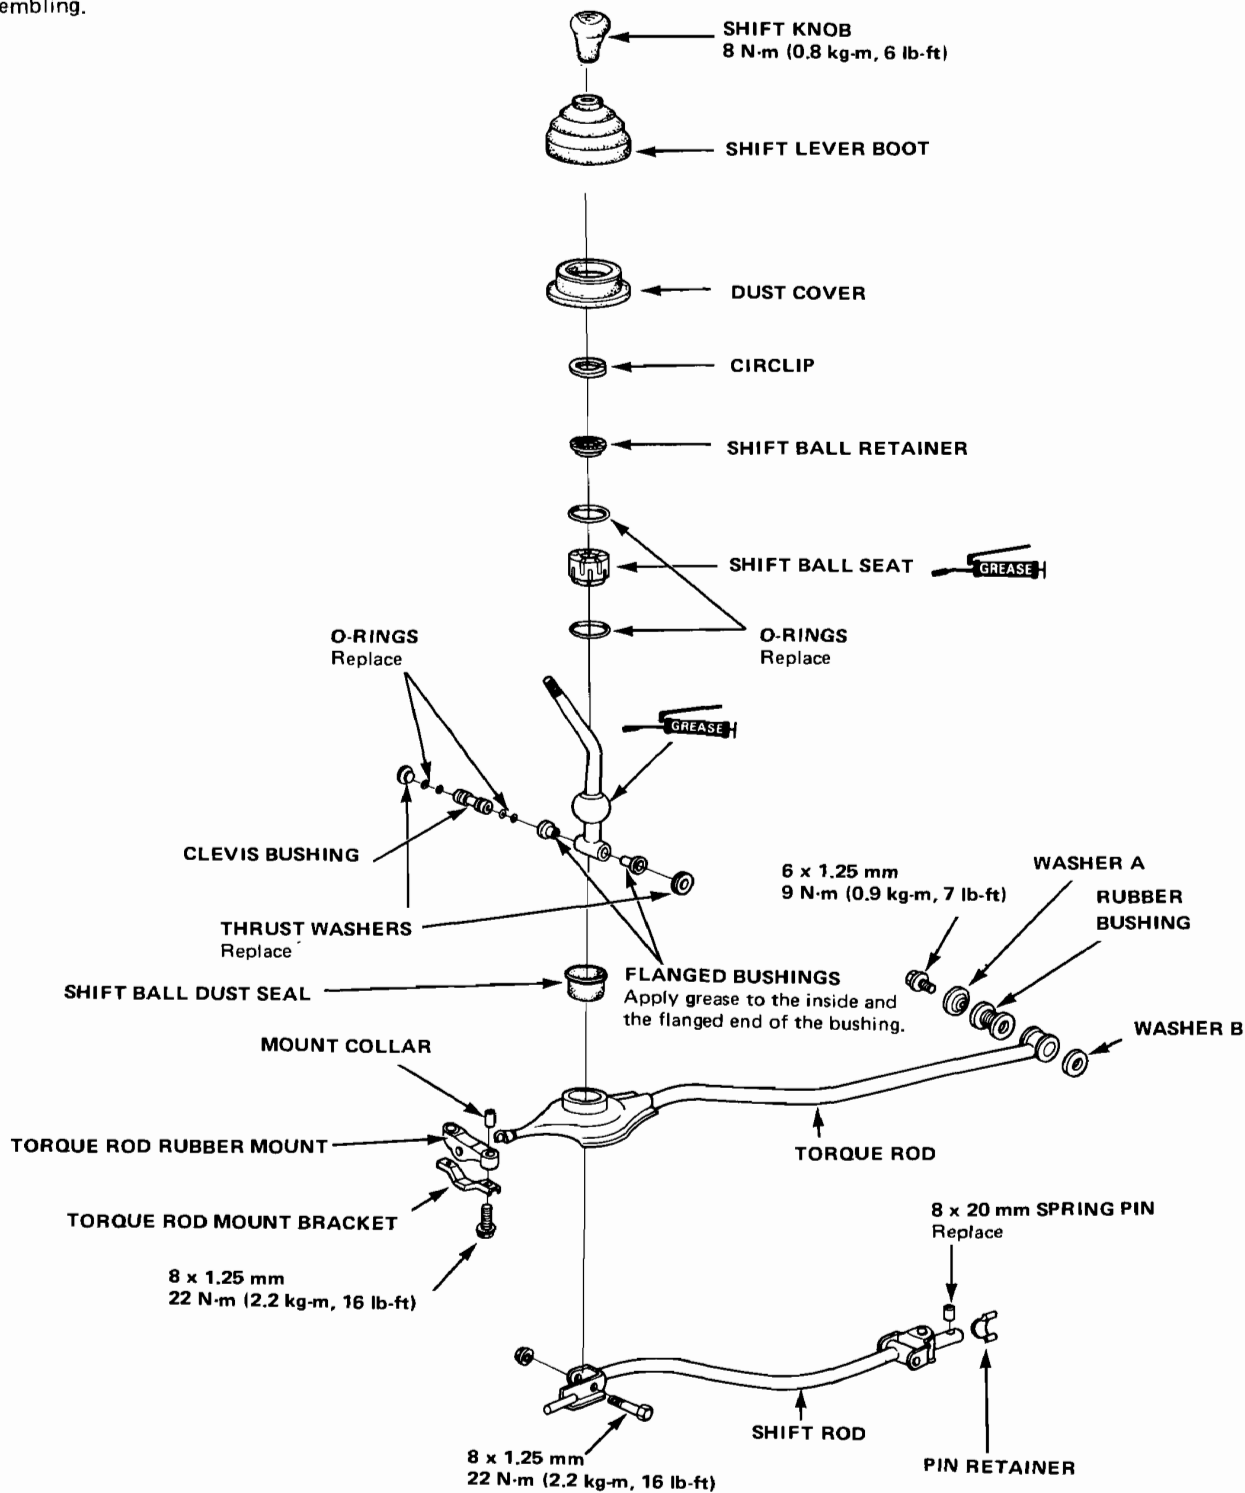

4-Speed Transmission

Index


Clean all parts thoroughly in solvent and dry with compressed air.



Lubricate all parts with oil before reassembly.

NOTE: This transmission uses no gaskets between the major housings; use Honda P/N 08740-99986 sealant. Assemble the housings within 20 minutes after applying the sealant and allow it to cure at least 30 minutes before filling it with oil.

Torque value	Bolt size
A—12 N·m (1.2 kg·m, 9 lb-ft)	1—6 x 1.0 mm
B—27 N·m (2.7 kg·m, 20 lb-ft)	2—8 x 1.25 mm

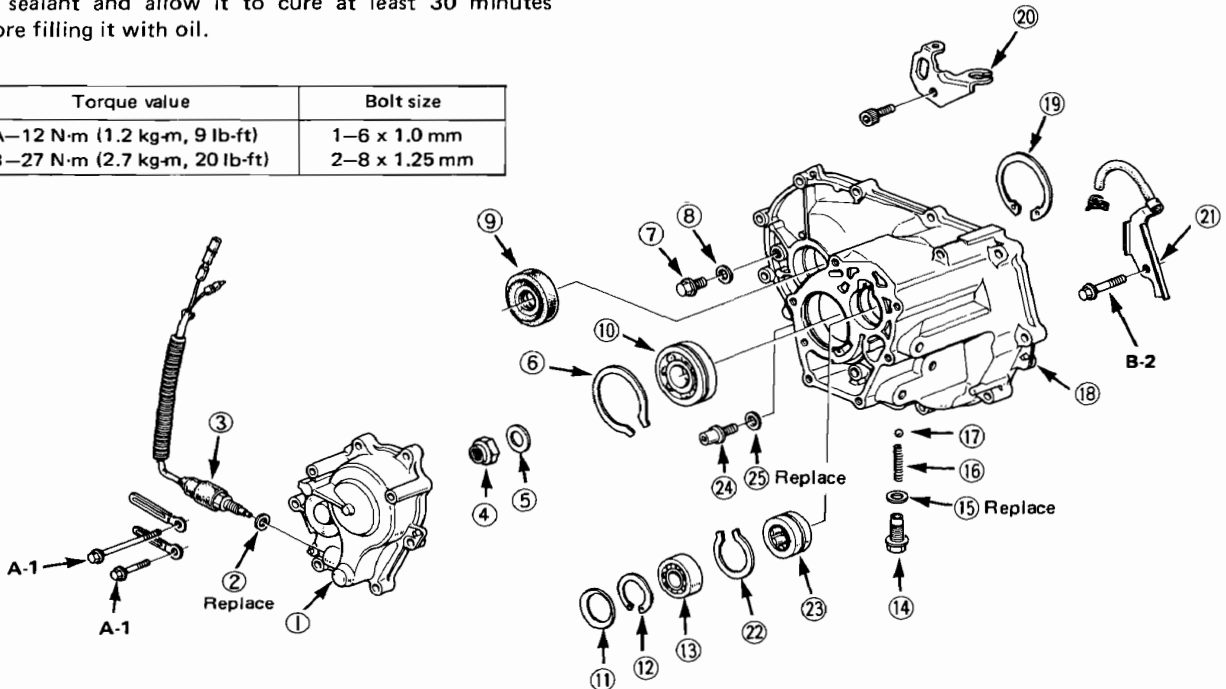


- ① **END COVER**
Removal, page 14-7
- ② **14 mm WASHER**
- ③ **BACK-UP LIGHT SWITCH**
Inspection, page 14-38
- ④ **COUNTERSHAFT LOCKNUT**
- ⑤ **SPRING WASHER**
- ⑥ **SNAP RING 65 mm**
- ⑦ **OIL FILLER BOLT**
- ⑧ **WASHER**
- ⑨ **SEAL**
Removal, page 14-19
Installation, page 14-35
- ⑩ **BALL BEARING**
- ⑪ **SPRING WASHER 52 mm**
- ⑫ **SNAP RING**
Removal, page 14-7
Installation, page 14-7
- ⑬ **BALL BEARING**

- ⑭ **DETENT BALL RETAINER SCREW**
- ⑮ **WASHER**
- ⑯ **DETENT SPRING**
- ⑰ **DETENT BALL**
- ⑱ **TRANSMISSION HOUSING**
- ⑲ **SNAP RING 72 mm**
- ⑳ **CLUTCH CABLE BRACKET**
- ㉑ **BREATHER TUBE ASSEMBLY**
- ㉒ **SNAP RING 45 mm**
- ㉓ **NEEDLE BEARING**
- ㉔ **OIL DRAIN PLUG**
- ㉕ **WASHER**



NOTE: Always clean the magnet (38) whenever the transmission housing is disassembled.

Torque value	Bolt size
A—12 N·m (1.2 kg·m, 9 lb·ft)	1—6 x 1.0 mm
B—14 N·m (1.4 kg·m, 10 lb·ft)	2—8 x 1.25 mm
C—24 N·m (2.4 kg·m, 17 lb·ft)	

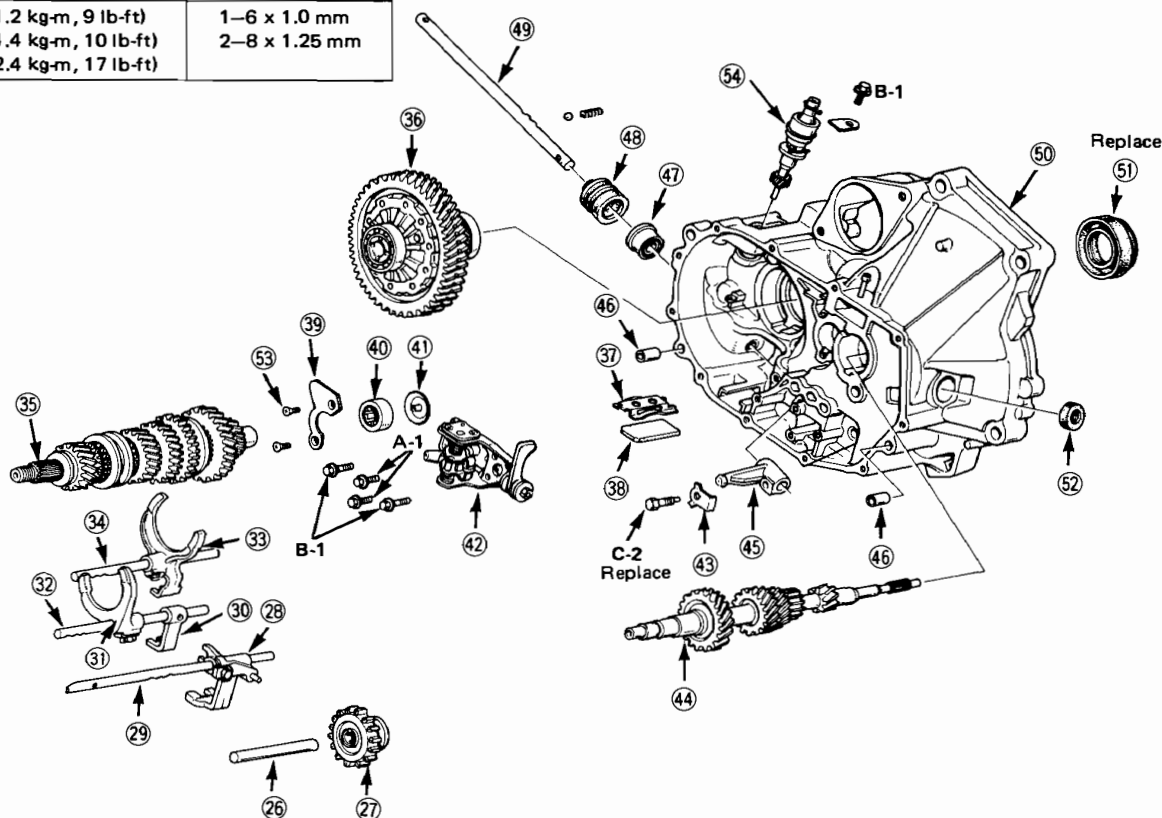


- 26 REVERSE IDLER GEAR SHAFT
- 27 REVERSE IDLER GEAR
Removal, page 14-10
Installation, page 14-31
- 28 REVERSE SHIFT GUIDE
- 29 REVERSE SHIFT SHAFT
- 30 3rd SHIFT SHAFT GUIDE
- 31 3rd/4th GEAR SHIFT FORK
- 32 3rd/4th GEAR FORK SHAFT
- 33 1st/2nd GEAR SHIFT FORK
- 34 1st/2nd GEAR FORK SHAFT
- 35 COUNTERSHAFT ASSEMBLY
Measurement, page 15-8
- 36 DIFFERENTIAL
Removal, page 14-19
Disassembly, Section 17
- 37 HOLD-DOWN PLATE
- 38 MAGNET
- 39 BEARING RETAINER PLATE
- 40 NEEDLE BEARING
- 41 OIL BARRIER PLATE
- 42 SHIFT ARM HOLDER
- 43 LOCK PLATE

- 44 MAINSHAFT
- 45 GEAR SHIFT ARM
- 46 DOWEL PIN
- 47 SEAL
- 48 BOOT
- 49 GEAR SHIFT ROD
- 50 CLUTCH HOUSING
- 51 SEAL
- 52 DUST SEAL
- 53 FLAT SCREW
- 54 SPEEDOMETER DRIVEN GEAR


4-Speed Transmission

End Cover Snap Ring Inspection

1. Remove the bolts from the end cover, then remove it.

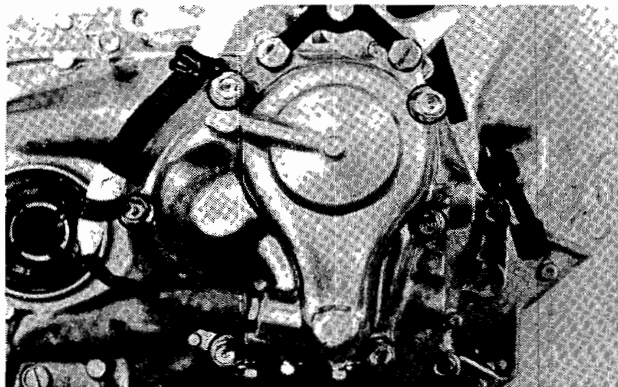


2. Remove the bearing and gears from the mainshaft.

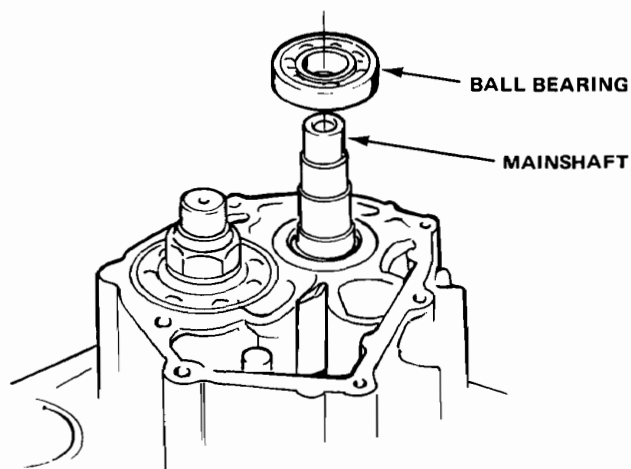


3. Reinstall the ball bearing onto the mainshaft.

4. Clean all sealant residue from the transmission housing, then measure from the top of the ball bearing's outer race to the mounting flange for the end cover. Measure at two points and average the readings.

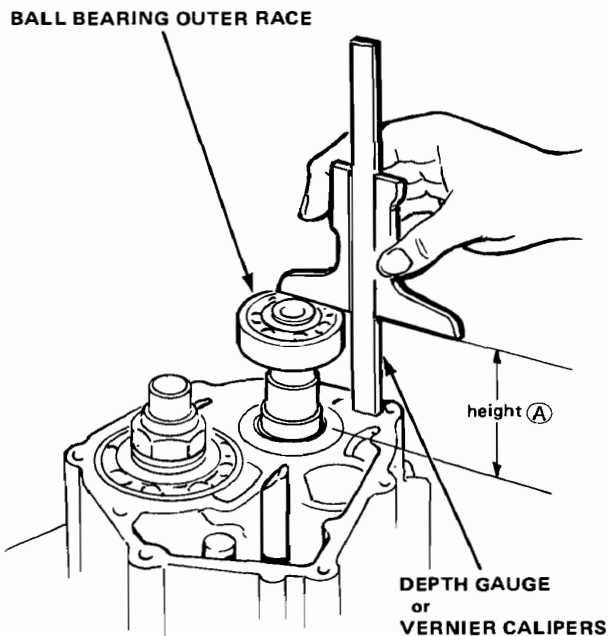


5. Remove the 52 mm spring washer and the snap ring from the end cover.

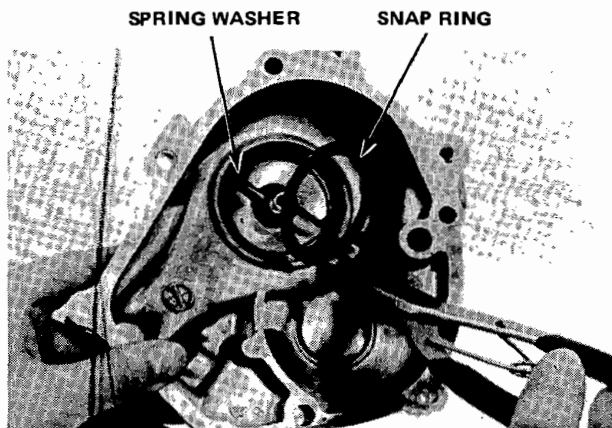



6. Place a straight edge on the end cover and measure the depth on the snap ring installation hole. Measure at two points and average the readings. Subtract the thickness of the straight edge from the reading.

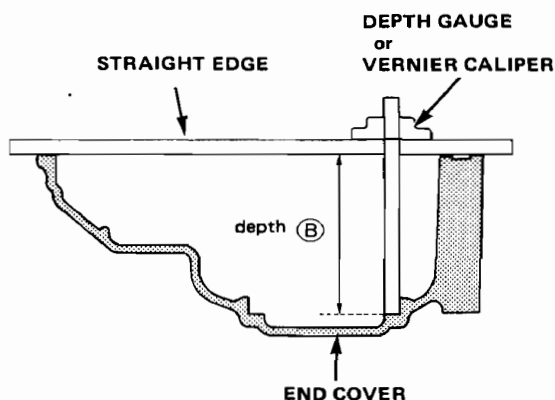

7. Select the correct thickness snap ring as follows:

- (a) Subtract the bearing height (step 4) from the depth of the end cover (step 6).
(b) Subtract the spring washer free height (0.85 mm/0.033 in.) from the dimension determined in step 7a.

EXAMPLE:

Housing depth:	58.05 mm (2.285 in.)
Bearing height:	-56.05 mm (2.207 in.)
Spring washer height:	- 0.85 mm (0.033 in.)
Correct snap ring thickness:	1.15 mm (0.045 in.)


Parts Number	Thickness
23931-PE6-0000	0.5 mm (0.020 in.)
23932-PE6-0000	1.1 mm (0.043 in.)
23933-PE6-0000	1.15 mm (0.045 in.)
23934-PE6-0000	1.20 mm (0.047 in.)
23935-PE6-0000	1.25 mm (0.049 in.)
23936-PE6-0000	1.30 mm (0.051 in.)
23937-PE6-0000	1.35 mm (0.053 in.)
23938-PE6-0000	1.40 mm (0.055 in.)
23939-PE6-0000	1.45 mm (0.057 in.)
23940-PE6-0000	1.50 mm (0.059 in.)
23941-PE6-0000	1.55 mm (0.061 in.)


4-Speed Transmission

Mainshaft Index

NOTE:

- Clean all parts thoroughly in solvent and dry with compressed air.

 Lubricate all parts with oil before assembly.

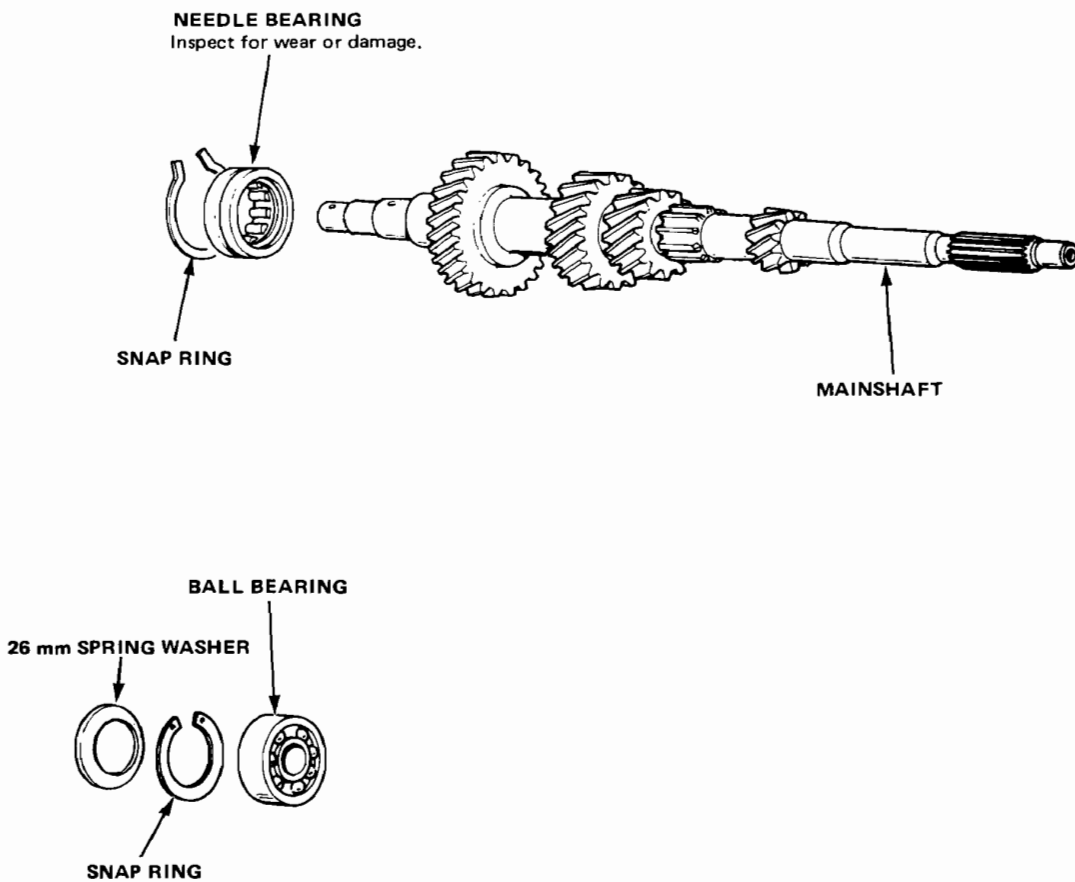




Countershaft Index

NOTE:

- Clean all parts thoroughly in solvent and dry with compressed air.
- The 28 mm spacers should be marked as they are removed, so that can be reinstalled correctly.



Lubricate all parts with oil before reassembly.

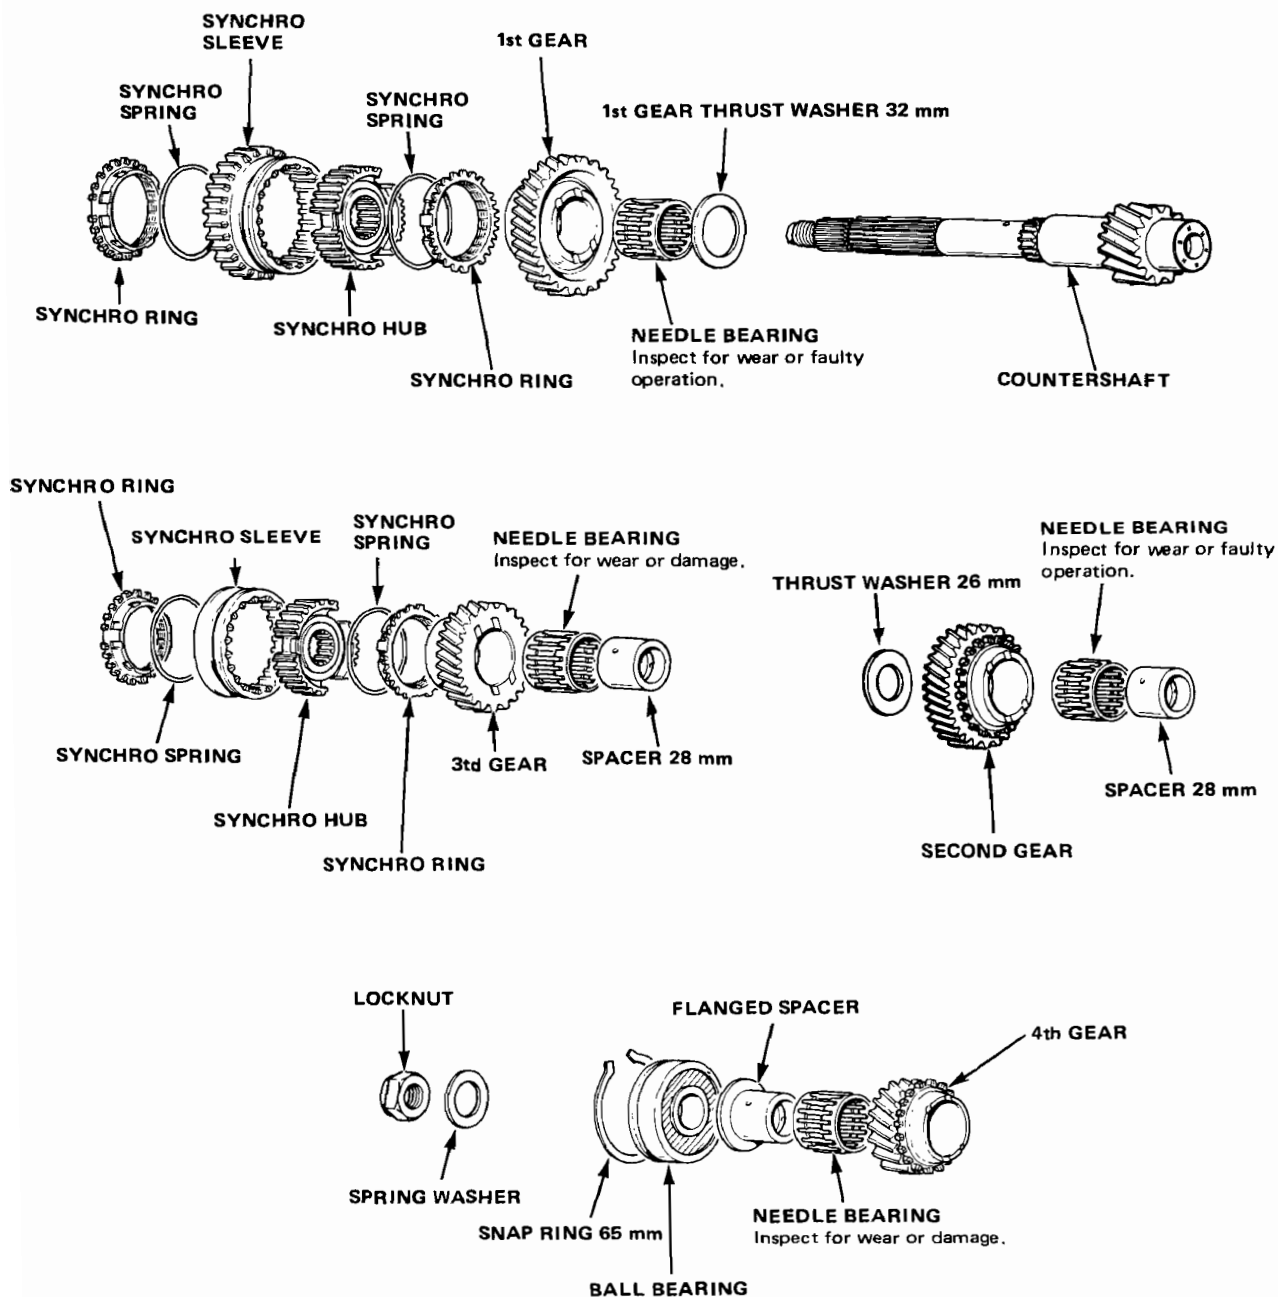

4-Speed Transmission

Countershaft Clearance Measurement

NOTE: On adjusting the countershaft clearance, select the correct spacer 28 mm, flanged spacer, and 1st gear thrust washer from the tables below.

1. Assemble the mainshaft and countershaft as shown below.

THRUST WASHER THICKNESS

CLASS THICKNESS

A	1.95–1.98 mm (0.077–0.078 in)
B	1.92–1.95 mm (0.076–0.077 in)
C	1.89–1.92 mm (0.074–0.076 in)

SPACER 28 mm


LENGTH

28.01–28.04 mm (1.103–1.104 in)
28.04–28.07 mm (1.104–1.105 in)
28.07–28.10 mm (1.105–1.106 in)
28.10–28.13 mm (1.106–1.107 in)

FLANGED SPACER


LENGTH

28.01–28.04 mm (1.103–1.104 in)
28.04–28.07 mm (1.104–1.105 in)
28.07–28.10 mm (1.105–1.106 in)
28.10–28.13 mm (1.106–1.107 in)

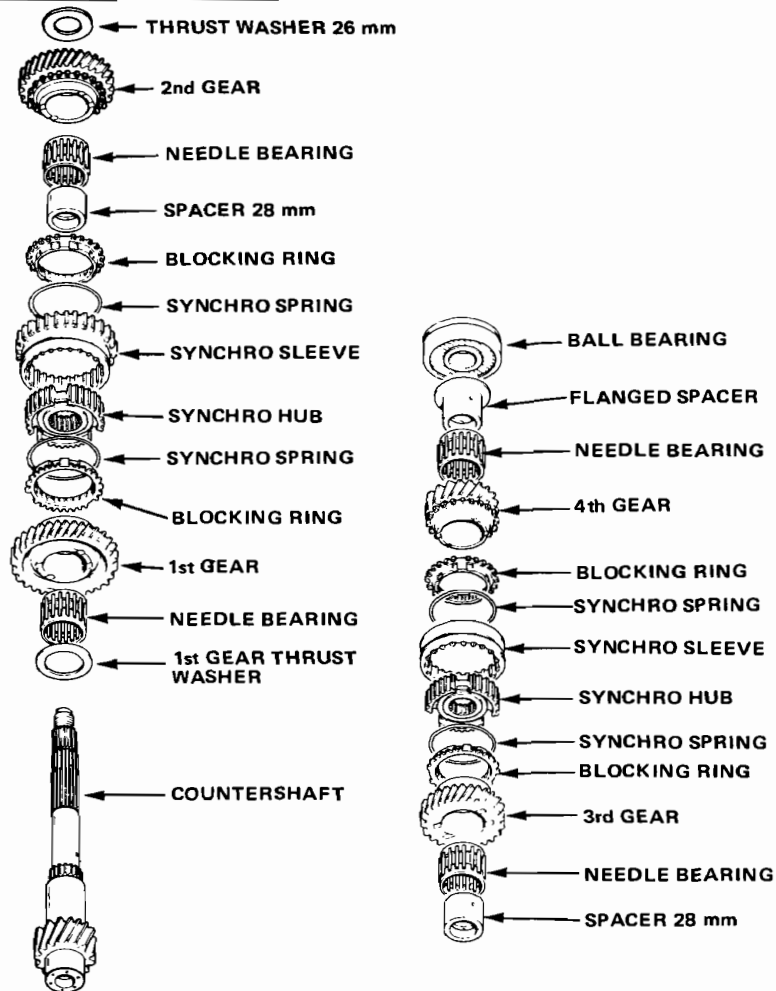





2. Install the mainshaft and countershaft as an assembly.

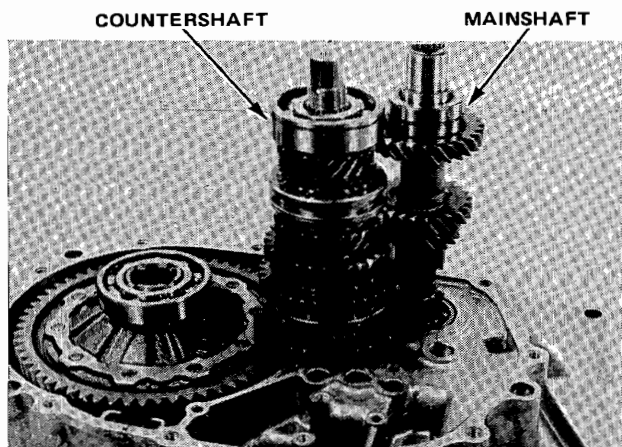


3. Lift the countershaft 2nd and reverse gear to shift in to 2nd gear.
4. Install the transmission housing and dowel pins as shown.

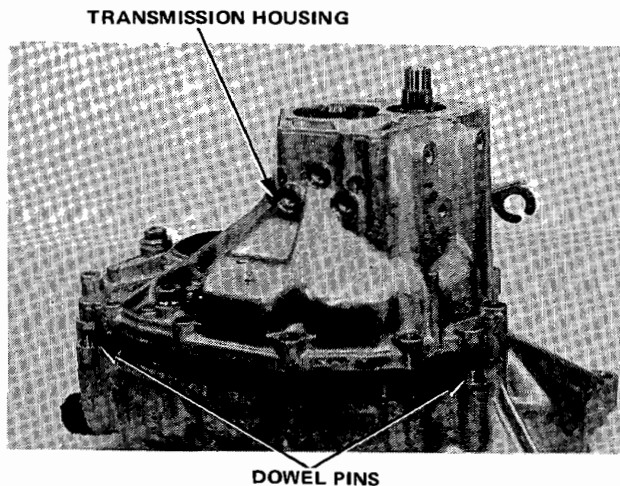

5. Install the spring washer and countershaft lock nut on the countershaft.

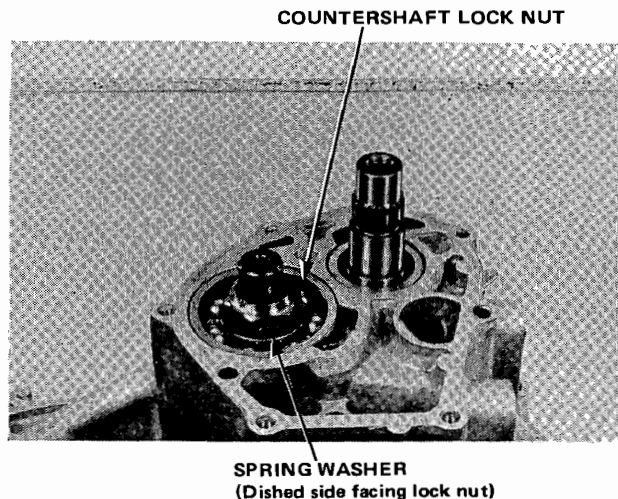

6. Install the mainshaft holder. See page 14-8.
7. Install the countershaft lock nut and tighten to 90 N·m (9.0 kg-m, 65 lb-ft).

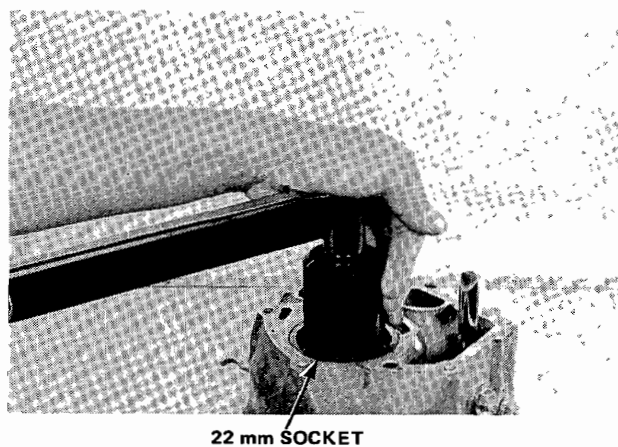

8. Remove the transmission housing by using housing puller. See page 14-8.
9. Remove the countershaft and mainshaft.

(cont'd)

4-Speed Transmission

Countershaft Assembly Clearance (cont'd)


- If any measurement is out of tolerance, the countershaft assembly must be disassembled and spacer collars or the thrust washer changed (see page 15-12).

1. Measure clearance between the thrust washer and the 1st gear.

1st Gear Clearance

Standard (New): 0.03–0.08 mm (0.001–0.003 in.)

Service Limit: 0.18 mm (0.007 in.)

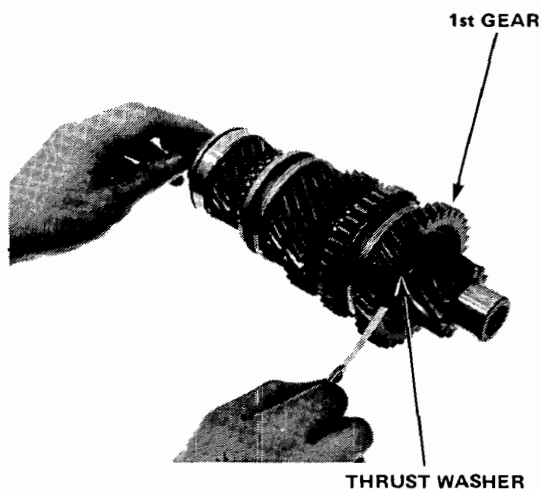


2. Measure clearance between the 28 mm spacer and 2nd gear.

2nd Gear Clearance:

Standard (New): 0.05–0.12 mm (0.002–0.005 in.)

Service Limit: 0.18 mm (0.007 in.)

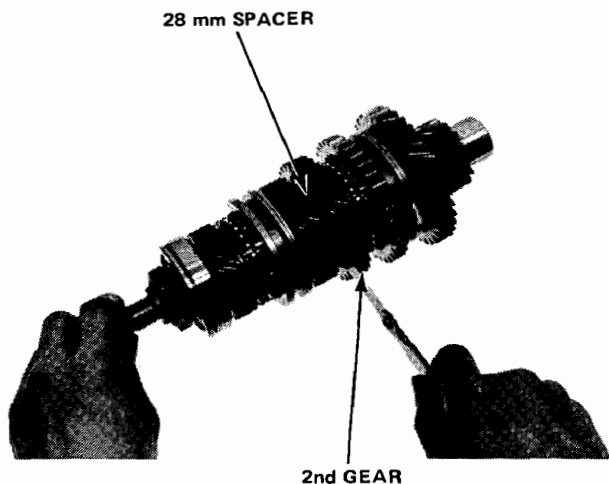


3. Measure the clearance between the 26 mm thrust washer and the 3rd gear.

3rd Gear

Standard: 0.05–0.12 mm
(0.0020–0.0047 in.)

Service Limit: 0.18 mm (0.0071 in.)

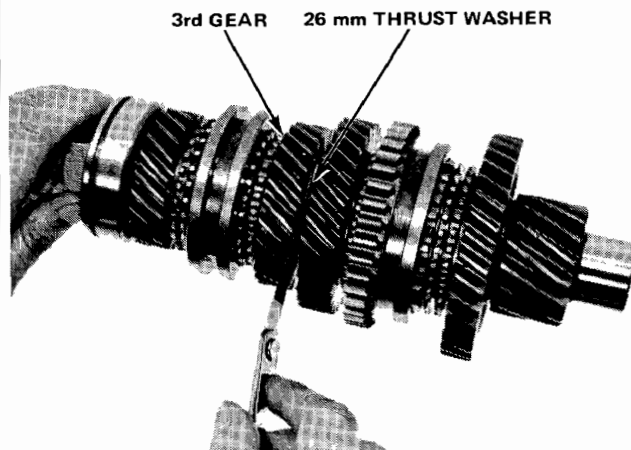


4. Measure clearance between 4th gear and the flanged spacer.

4th Gear

Standard: 0.05–0.12 mm
(0.0020–0.0047 in.)

Service Limit: 0.18 mm (0.0071 in.)

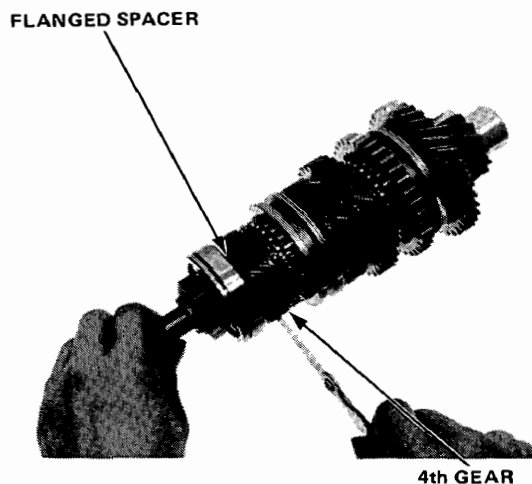

Hondamatic

Stall Speed Test

1. Engage parking brake and block front wheels.
2. Connect tachometer, and start engine.
3. After engine has warmed up to normal operating temperature, shift into **[☆]**.
4. Fully depress brake pedal and accelerator for 6 to 8 seconds, and note engine speed.
5. Allow 2 minutes for cooling, then repeat same test in **[L]** and **[R]**.

Stall speed in **[☆]**, **[L]**, and **[R]** must be the same, and must also be within limits:

Stall Speed RPM:

Specification: 2700 rpm

Service Limit: 2300–2900 rpm

CAUTION: Do not test stall speed for more than 10 seconds at a time.

TROUBLE	PROBABLE CAUSE
Stall rpm high in [OD] , [☆] , [L] , [R]	Low fluid level or oil pump output, clogged oil strainer, pressure regulator, slipping one-way clutch in torque converter.
Stall rpm high in [OD] , [R]	Slipping [OD] clutch.
Stall rpm high in [L]	Slipping [L] clutch.
Stall rpm high in [☆]	Slipping [☆] clutch.
Stall rpm low in [OD] , [☆] , [L] , [R]	<ul style="list-style-type: none">• Engine output low, throttle cable misadjusted at carburetor.• Oil pump seized, torque converter thrust washer seized.

Maintenance

Checking

With car on level ground unscrew transmission dipstick and check level of fluid immediately after (within one minute) engine is shut off. Fluid level should be between full and low marks. If level is at, or below, low mark, add DEXRON-type automatic transmission fluid. Do not screw dipstick in to check fluid level.


Changing

1. Bring transmission up to operating temperature by driving car. Park car on level ground, turn engine off, then remove drain plug.
2. Reinstall drain plug with new washer, then refill transmission to the full mark on the dipstick.

Automatic transmission Capacity:

2.8ℓ (2.9 U.S. qts.) at change

5.4ℓ (5.6 U.S. qts.) at assembly

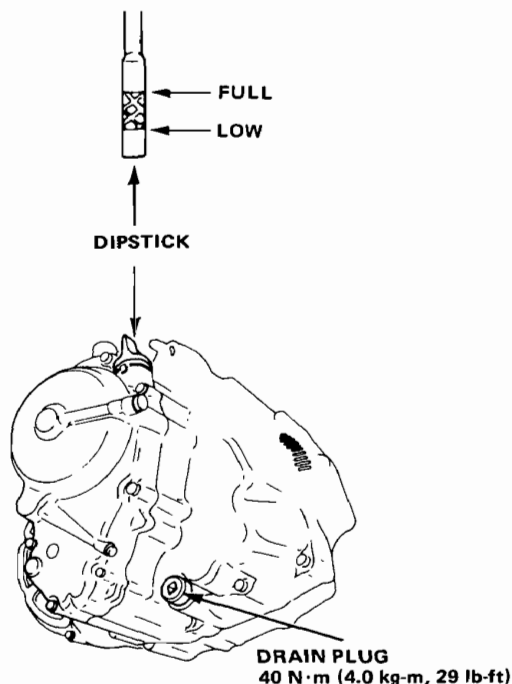





Pressure Test

NOTE:

- Stop engine when attaching hoses for pressure tests.
Torque hose fittings to 18 N·m (1.8 kg·m, 12 lb·ft).
- Do not reuse aluminum washers.

GAUGE SET

07406-0020003 (includes pressure hose set 07406-0020201)

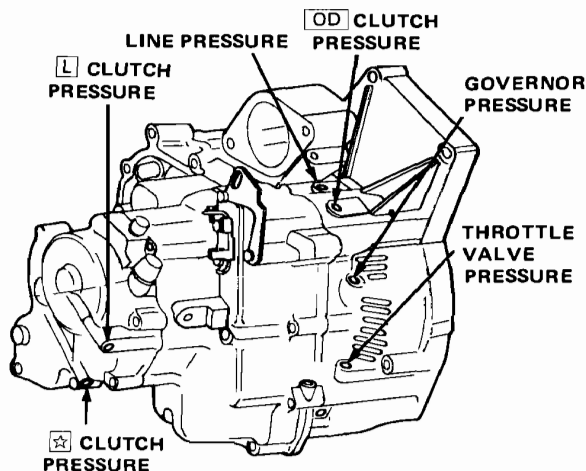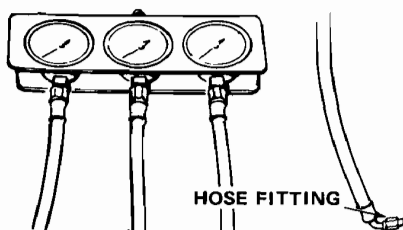

CAUTION: Before checking, be sure transmission is filled to proper level.

PRESSURE	SELECTOR POSITION	MEASUREMENT	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE	
					SPECIFICATION	SERVICE LIMIT
LINE	N or P	MEASUREMENTS <ul style="list-style-type: none"> • With parking brake applied, run engine at 2000 min⁻¹ (rpm). 	No (or low) LINE pressure	Torque converter, oil pump pressure regulator, torque converter check valve.	1500 736-785 kpa (7.5-8.0 kg/cm ² , 106.7-113.7 psi) 1300/1200 637-687 kpa (6.5-7.0 kg/cm ² , 91.8-98.9 psi)	1500 687 kpa (7.0 kg/cm ² , 99.5 psi) 1300/1200 588 kpa (6.0 kg/cm ² , 85.2 psi)
L CLUTCH	L	MEASUREMENTS <ul style="list-style-type: none"> • With parking brake applied, raise front wheels off ground and support with safety stands. • Run engine at 2000 min⁻¹ (rpm). 	No (or low) L clutch pressure	L clutch	1500 687-785 kpa (7.0-8.0 kg/cm ² , 99.5-113.7 psi) 1300/1200 588-687 kpa (6.0-7.0 kg/cm ² , 85.2-99.5 psi)	1500 638 kpa (6.5 kg/cm ² , 92.4 psi) 1300/1200 539 kpa (5.5 kg/cm ² , 78.2 psi)
☆ CLUTCH	☆		No (or low) ☆ clutch pressure	☆ clutch		
OD	OD		No (or low) OD clutch pressure	OD clutch		
THROTTLE	☆ or OD	<ul style="list-style-type: none"> • With parking brake applied, run engine at 1000 min⁻¹ (rpm). • Disconnect throttle cable at throttle lever. • Read pressure with lever released. • Manually push lever up simulating full throttle. • Read pressure with lever in full throttle position. 	No (or low) THROTTLE pressure	Throttle valve Throttle modulator valve	With lever in full throttle position. 1500 736-785 kpa (7.5-8.0 kg/cm ² , 106.7-113.7 psi) 1300/1200 637-687 kpa (6.5-7.0 kg/cm ² , 91.8-98.9 psi)	1500 686 kpa (7.0 kg/cm ² , 100 psi) 1300/1200 588 kpa (6.0 kg/cm ² , 85.2 psi)
GOVERNOR	☆ or OD	<ul style="list-style-type: none"> • Place vehicle on chassis dynamometer, or jack up front of car, support with safety stands, block rear wheels, and set hand brake. • Run vehicle at 60 km/h (38 mph). 	No (or low) Governor pressure	Governor valve	221-230 kpa (2.25-2.35 kg/cm ² , 31.9-33.3 psi)	98.0 kpa (2.2 kg/cm ² , 31.2 psi)

Hondamatic

Troubleshooting


PROBLEM	REFER TO:
Engine runs but car does not move	7, 9, 10, 11, 12, 13, 14, 25
Car does not move in L (OK in ☆ and OD)	1, 2, 3
Car does not move in ☆ (OK in L and OD)	3, 4, 13
Car does not move in R (OK in L , OD and ☆)	11, 13, 16
(Car does not move in OD (OK in ☆ and L))	5, 6, 13
Poor acceleration.	
— Stall rpm high in L and ☆ , OD	7, 9, 10, 13
— Stall rpm high in L	2, 13
— Stall rpm high in ☆	4, 13
— Stall rpm high in OD	5, 6, 13
— Stall rpm OK	8, 18
— Stall rpm low	18, 19, 21
Engine races in shift from L → ☆ (Shift point OK)	4, 24
Engine races in shift from ☆ → OD (Shift point OK)	6, 24
Car creeps forward in N (Shift cable adjusted correctly)	2, 4, 6, 8, 22, 23, 24
Lock-up clutch does not engage.	
— In ☆ and OD	15, 17, 26, 27, 28, 29
— Only in ☆ (engages in OD)	26
— Only in OD (engages in ☆)	26
Lock-up clutch does not disengage.	
— In L	26, 27
Harshness in lock-up mode.	
— When accelerator pedal is returned	15, 20, 28
— When lock-up clutch is on	30
Vibration in lock-up mode	
— Vibration disappears when lock-up clutch is off	15, 17, 20, 30
Lock-up point too high in cruise: (Check if lock-up speed is normal by gradually accelerating on flat surface)	15, 20
Lock-up clutch does not disengage.	
— When accelerator pedal is returned (Disengaged in L).	15, 20

1. Damaged low gear
2. Faulty low clutch
 - a. Stuck clutch piston
 - b. Damaged clutch O-ring
 - c. Damaged clutch feed pipe or O-ring
 - d. Foreign matter stuck in check valve
 - e. Worm or burnt clutch disc
3. Damaged 2nd gear
4. Faulty **☆** clutch
 - a. Stuck clutch piston
 - b. Damaged clutch O-ring
 - c. Damaged clutch feed pipe or O-ring
 - d. Foreign matter stuck in check valve
 - e. Worm or burnt clutch disc
5. Damaged 3rd gear
6. Defective **OD** clutch
 - a. Stuck clutch piston
 - b. Damaged clutch O-ring
 - c. Foreign matter stuck in clutch check valve
 - d. Damaged clutch feed pipe or O-ring
 - e. Worm or burnt clutch disc
7. ATF level too low
8. ATF level too high
9. Faulty ATF pump
10. Stuck regulator valve or damage spring
11. Stuck servo shaft
12. Damaged mainshaft
13. Manual shift out of adjustment
(broken cable, loose end pin)
14. Damaged final gear
15. Improperly adjusted throttle control cable at transmission
16. Damaged reverse gear
17. Faulty governor valve
18. Burnt or seized torque converter one-way clutch
19. Improperly adjusted throttle cable at carburetor
20. Defective throttle valve
21. Lack of engine power
22. Burnt needle bearing
23. Burnt thrust washer
24. Improper clutch clearance
25. Broken or warped drive plate, torque converter not fully seated
26. Foreign matter stuck in lock-up timing valve
27. Foreign matter stuck in lock-up shift valve
28. Foreign matter stuck in governor cut-off valve
29. Foreign matter stuck in torque converter check valve
30. Foreign matter stuck in lock-up control valve




Removal

1. Disconnect the ground cable at battery and transmission.
2. Release the steering lock, and shift gear selector to N.
3. Disconnect the wiring:
 - Battery positive cable from starter.
 - Black/white wire from starter solenoid.
 - Transmission ground cable.
4. Disconnect the cooler hoses, and wire them up next to radiator so ATF won't drain out.
5. Remove the two starter mounting bolts, and top three transmission mounting bolts.

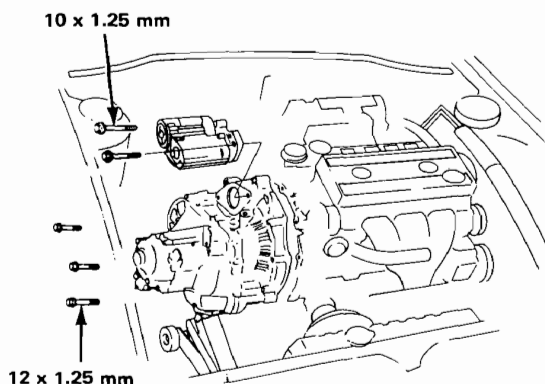

6. Loosen the front wheel nuts.
7. Apply the parking brake, block rear wheels, then raise the front end on jack stands and remove the front wheels.
8. Drain the transmission. Reinstall drain plug and washer.
9. Remove the throttle control cable.
 - Remove cable end.
 - Loosen lock nut B only.
 - Remove cable from bracket.

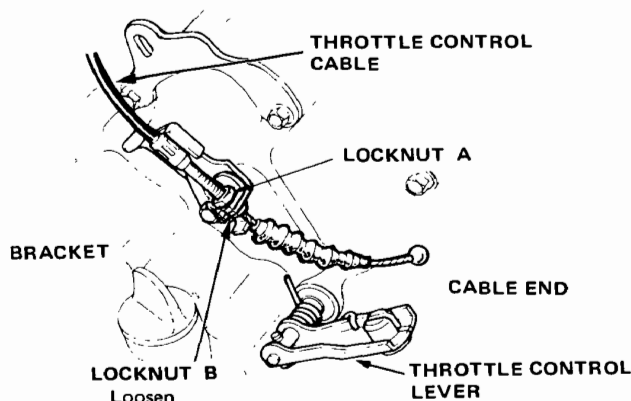

NOTE: For cable adjustment see page 16-60.


10. Remove the cable clip, then pull the speedometer cable out of holder.

CAUTION: Do not remove holder because speedometer gear may fall into transmission housing.

11. Remove the engine and wheelwell splash shields from the front end of the frame. (see page 5-2)
12. Remove the exhaust header pipe. (see page 5-2)
13. Disconnect the right and left lower arm ball joints and tie-rod end ball joints using the ball Joint Remover.

CAUTION: Make sure the floor jack is positioned securely under the lower control arm, at the ball joint. Otherwise, torsion bar tension on the lower control arm may cause the arm to "jump" suddenly away from the steering knuckle as the ball joint is being removed.

14. Turn right the steering knuckle outward as far as it will go. With screwdriver against the inboard CV joint, pry right axle out of transmission housing approximately 1/2 inch (to force its spring clip out of groove inside differential gear splines), then pull it out the rest of the way. Repeat on opposite side, or, with driver's side connected, pry left axle out of transmission during Step 26.
15. Attach a chain hoist to the 8 mm bolt near the distributor, then lift the engine slightly to unload the mounts.

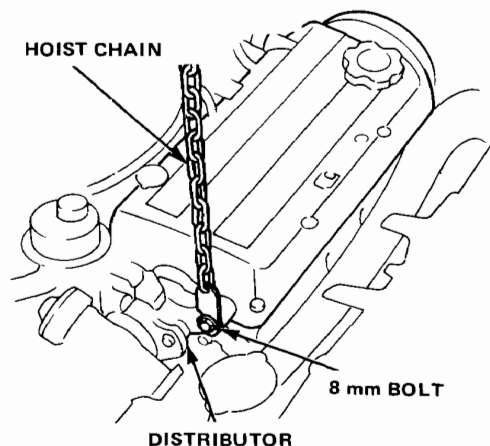


(cont'd)

Hondamatic


Removal(cont'd)

16. Raise transmission jack securely against transmission.


17. Remove the bolts from the front transmission mount.

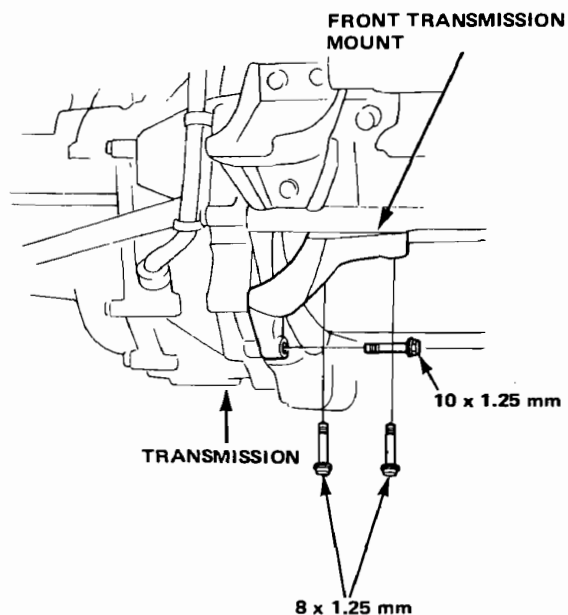

18. Remove the transmission housing bolts from the engine torque bracket.

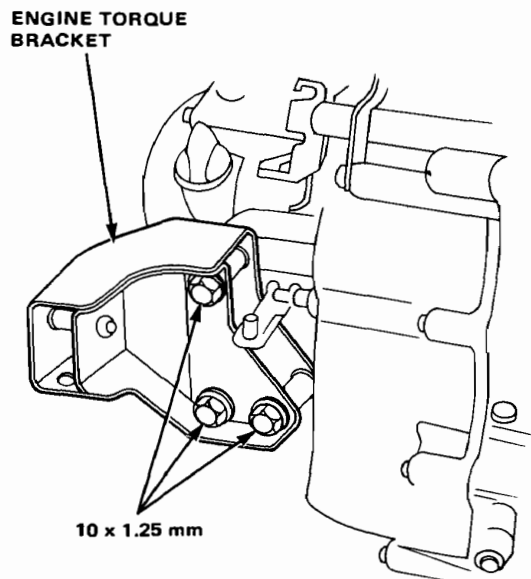


19. Remove the torque converter housing bolts from the rear transmission mount.

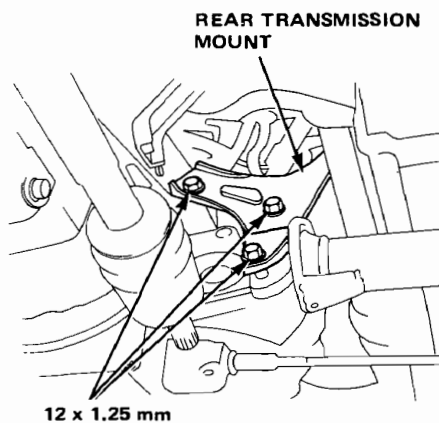




20. Remove the torque converter cover plate.

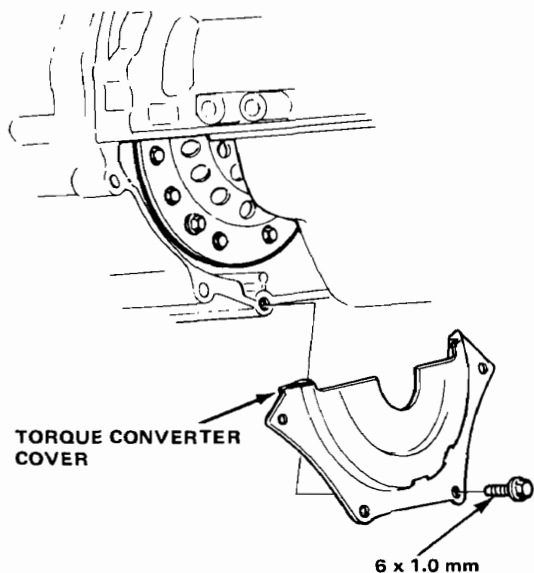

21. Remove the drive plate tightening bolts.

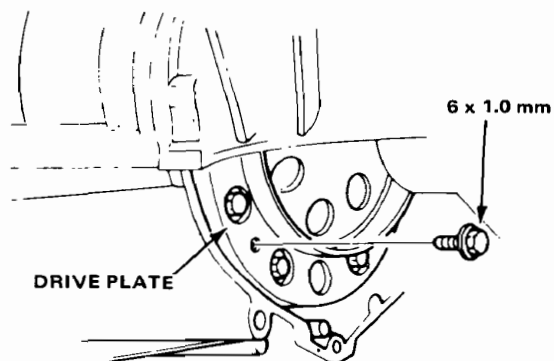

22. Remove the cotter pin from the shift cable control pin, then pull out the control pin.
23. Remove the cable holder and carefully remove the shift cable.


CAUTION: Be careful not to lose the shift cable bushing.

24. Remove the one remaining transmission mounting bolt from the engine side.
25. Pull transmission away from engine to clear the two 14 mm dowel pins, then lower the jack.
26. Remove torque converter from transmission.

Hondamatic

Index


- NOTE:**
- Clean all parts thoroughly in solvent and dry with compressed air.
 - Check that the oil passages are not clogged.
 - Lubricate all parts with ATF before reassembly.

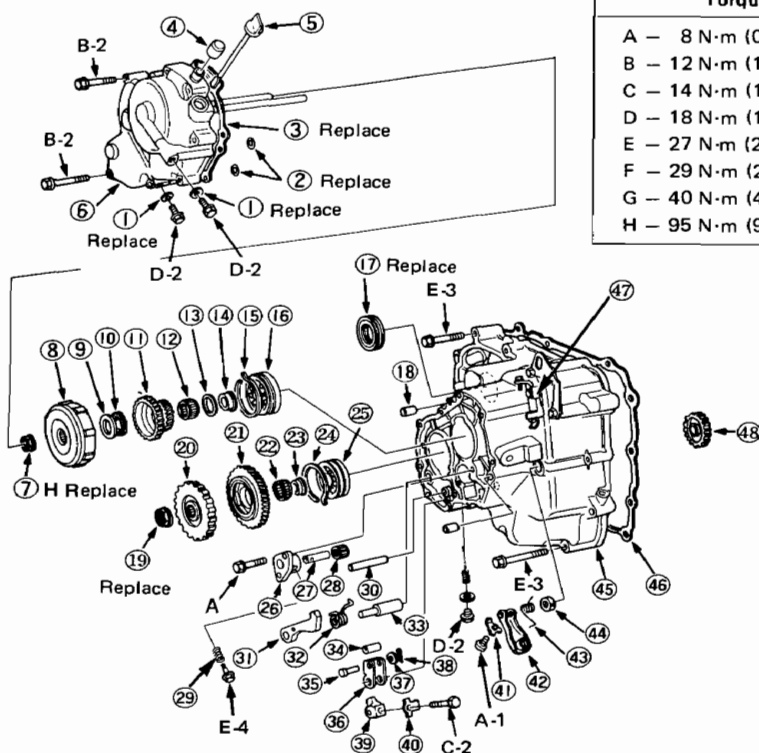

Torque	Bolt size
A — 8 N·m (0.8 kg-m, 6 lb-ft)	1. 5 x 0.8 mm
B — 12 N·m (1.2 kg-m, 9 lb-ft)	2. 6 x 1.0 mm
C — 14 N·m (1.4 kg-m, 10 lb-ft)	3. 8 x 1.25 mm
D — 18 N·m (1.8 kg-m, 12 lb-ft)	4. 10 x 1.25 mm
E — 27 N·m (2.7 kg-m, 20 lb-ft)	
F — 29 N·m (2.9 kg-m, 21 lb-ft)	
G — 40 N·m (4.0 kg-m, 29 lb-ft)	
H — 95 N·m (9.5 kg-m, 70 lb-ft)	

- ① WASHER 8 mm
- ② O-RING 7.7 x 1.9 mm
- ③ END COVER GASKET
- ④ BREATHER CAP
- ⑤ DIPSTICK
- ⑥ END COVER
Removal, page 16-13
Disassembly, page
- ⑦ LOCKNUT 22 mm
- ⑧ LOW CLUTCH
Removal, page 16-13
Disassembly, page 16-33
Assembly, page 16-36
- ⑨ THRUST WASHER 26 mm
- ⑩ THRUST NEEDLE BEARING 31 x 47 x 2 mm
- ⑪ 1st GEAR
- ⑫ NEEDLE BEARING 31 x 36 x 18.5 mm
- ⑬ THRUST NEEDLE BEARING 31 x 47 x 2 mm
- ⑭ COLLAR 26 mm
- ⑮ SNAP RING 68 mm
- ⑯ MAINSHAFT BALL BEARING
Replacement, page 16-42
- ⑰ OIL SEAL
Replacement, page 16-50
- ⑱ DOWEL PIN 8 x 14 mm
- ⑲ LOCKNUT 30 mm
- ⑳ PARKING GEAR
- ㉑ COUNTERSHAFT 1st GEAR
- ㉒ NEEDLE BEARING 30 x 35 x 11 mm
- ㉓ 1st GEAR COLLAR
- ㉔ SNAP RING 62 mm

- ㉕ COUNTERSHAFT BALL BEARING
Replacement, page 16-41
- ㉖ REVERSE IDLER SHAFT HOLDER
- ㉗ REVERSE IDLER SHAFT
- ㉘ NEEDLE BEARING 14 x 18 x 15 mm
- ㉙ SPRING
- ㉚ STOP PIN
- ㉛ PARKING BRAKE PAWL
- ㉜ PARKING PAWL SPRING
- ㉝ PARKING BRAKE SHAFT
Removal, page 16-12
- ㉞ PARKING PAWL ROLLER
- ㉟ ROLLER PIN
- ㊱ PARKING SHIFT ARM
- ㊲ WASHER 5 mm
- ㊳ LOCKPIN
- ㊴ PARKING BRAKE LEVER
- ㊵ LOCK WASHER 6 mm
- ㊶ LOCK WASHER
- ㊷ THROTTLE CONTROL LEVER
- ㊸ THROTTLE CONTROL SHAFT SPRING
Removal, page 16-14
Installation, page 16-49
- ㊹ THROTTLE CONTROL SHAFT SEAL
- ㊺ TRANSMISSION HOUSING
- ㊻ TRANSMISSION HOUSING GASKET
- ㊼ THROTTLE CONTROL CABLE BRACKET
Adjustment, page 16-60
- ㊽ REVERSE IDLER GEAR
Removal, page 16-13
Installation, page 16-49 and 50

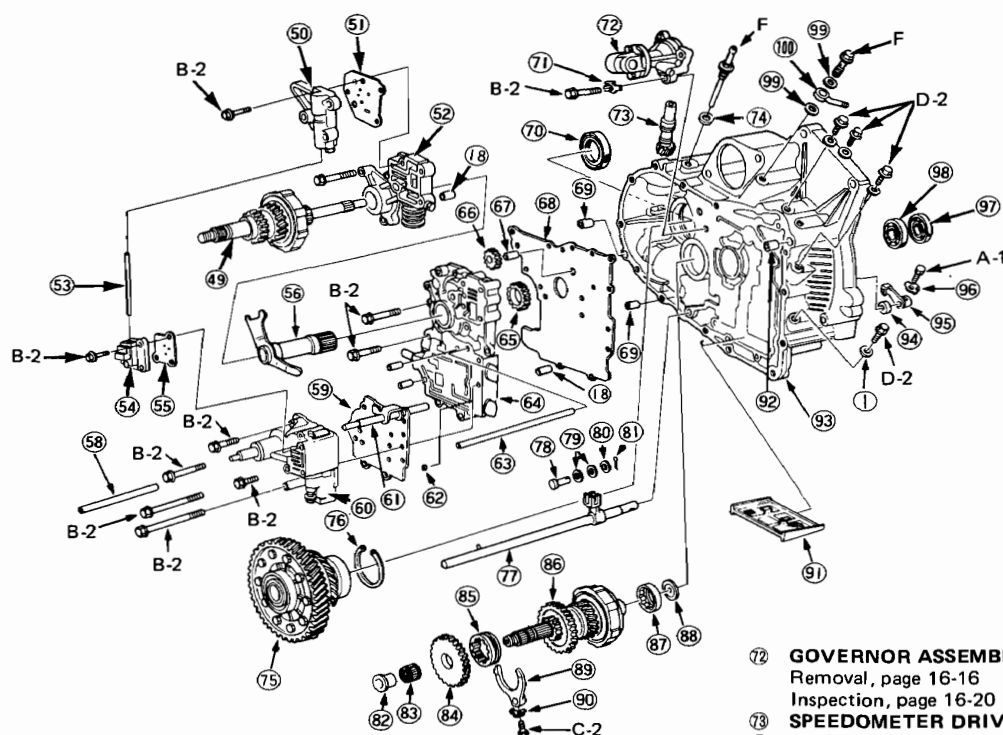

49 MAINSHAFT ASSEMBLY

Removal, page 16-16

Inspection, page 16-28

Assembly, page 16-47

50 LOCK-UP VALVE BODY

Removal, page 16-17

Inspection, page 16-24

51 LOCK-UP VALVE SEPARATOR PLATE

52 REGULATOR ASSEMBLY

53 OIL FEED PIPE

54 CLUTCH PRESSURE CONTROL VALVE BODY

55 CLUTCH PRESSURE CONTROL SEPARATOR PLATE

56 STATOR SHAFT ARM

Removal, page 16-18

57 ☆ CLUTCH

58 OD CLUTCH PIPE

59 SERVO VALVE SEPARATOR PLATE

60 SERVO VALVE ASSEMBLY

Removal, page 16-17

Inspection, page 16-25

61 THROTTLE VALVE SHAFT

62 STEEL BALL

63 1st CLUTCH PIPE

64 MAIN VALVE BODY ASSEMBLY

Inspection, page 16-21

Assembly, page 16-43

65 PUMP DRIVE GEAR

66 PUMP DRIVEN GEAR

67 OIL PUMP GEAR SHAFT

68 MAIN VALVE SEPARATOR PLATE

69 DOWEL PIN 14 x 20 mm

70 OIL SEAL 35 x 68 x 9 mm

71 LOCK WASHER 6 mm

72 GOVERNOR ASSEMBLY

Removal, page 16-16

Inspection, page 16-20

73 SPEEDOMETER DRIVE GEAR

74 WASHER 12 mm

75 DIFFERENTIAL

76 SNAP RING 72 mm

77 CONTROL SHAFT

78 MANUAL VALVE PIN

79 ROLLER

80 WASHER 5 mm

81 COTTER PIN

82 REVERSE GEAR COLLAR

83 NEEDLE BEARING

84 REVERSE COUNTER GEAR

85 REVERSE SELECTOR GEAR

86 COUNTERSHAFT

Removal, page 16-16

Dis/assembly/Inspection, page 16-29

87 COUNTERSHAFT NEEDLE BEARING

Replacement, page 16-41

88 OIL GUIDE PLATE

89 REVERSE SHIFT FORK

Removal, page 16-15

Installation, page 16-48

90 LOCK WASHER 6 mm

91 OIL SCREEN

92 DOWEL PIN 14 x 25 mm

93 TORQUE CONVERTOR HOUSING

94 CONTROL SHAFT OIL SEAL

95 CONTROL LEVER

Removal, page 16-20

Installation, page 16-45

96 LOCK PLATE

97 MAINSHAFT OIL SEAL

Replacement, page 16-41

98 MAINSHAFT BALL BEARING

Replacement, page 16-41


99 WASHER 12 mm

100 HOSE JOINT




Torque Converter Disassembly

O-RING 32 x 1.9 mm
Replace

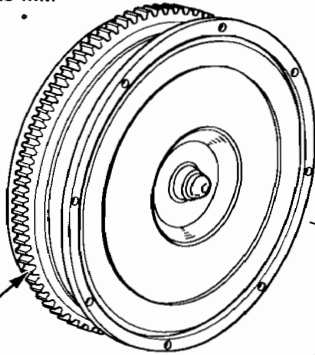


RING GEAR

75 N·m (7.5 kg-m, 54 lb-ft)
1.2 x 1.0 mm
Torque in criss-cross pattern.



WASHER

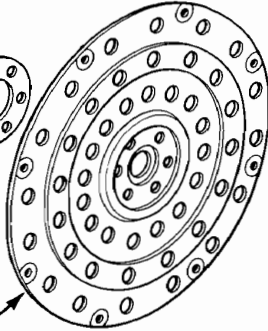

DRIVE PLATE
Inspect for cracks.



6 x 1.0 mm 12 N·m
(1.2 kg-m, 9 lb-ft)

Hondamatic


Installation

1. Slide the torque converter onto mainshaft.
2. Place the transmission on transmission jack, and raise to engine level.
3. Check that the two 14 mm dowel pins are installed in torque converter housing.
4. Align dowel pins with holes in block; align torque converter bolt heads with holes in drive plate.
5. If you left the front end connected on driver's side, insert left axle (with new spring clip on the end) into differential as you roll transmission up to the engine.

NOTE: New 26 mm spring clips must be used on both axles.


6. Secure transmission to engine with engine side mounting bolt (12 x 1.25 x 70 mm) and torque to 68 N·m (6.8 kg-m, 50 lb-ft).
7. Attach torque converter to drive plate with eight (6 x 10 x 12 mm) bolts, and torque to 12 N·m (9 lb-ft). Rotate crank as necessary to tighten bolts to 1/2 torque, then final torque, in a criss-cross pattern. Check for free rotation after tightening last bolt.
8. Install the shift cable. (page 16-20)
9. Remove the transmission jack.
10. Install the torque converter cover plate.
11. Install the rear transmission mount and torque its bolts to 65 N·m (6.5 kg-m, 47 lb-ft).

REAR TRANSMISSION MOUNT

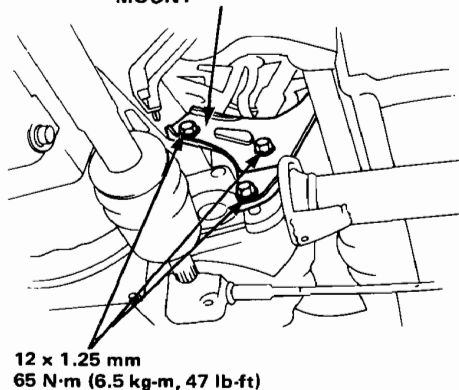


12. Install the engine torque bracket and torque its bolts to 45 N·m (4.5 kg-m, 33 lb-ft).

FRONT ENGINE TORQUE BRACKET

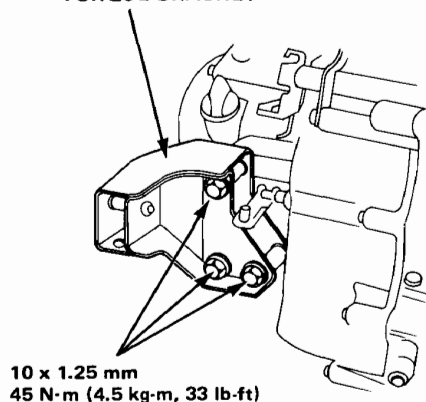

13. Loosely install the front transmission mount bolts, then torque to the sequence shown.

FRONT TRANSMISSION MOUNT

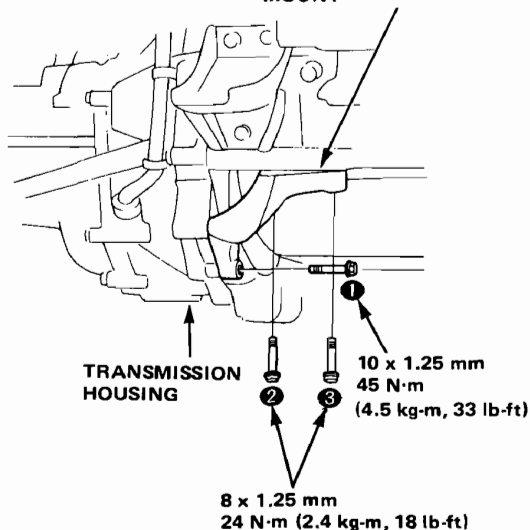




14. Install the starter mounting bolts and torque to 45 N·m (4.5 kg-m, 33 lb-ft).
15. Install a new 26 mm spring clip on end of each axle.
16. Turn right steering knuckle fully outward, and slide axle into differential until you feel its spring clip engage side gear. Repeat on left side or, if left axle is already in (step 5), check to be sure spring clip has engaged side gear.
17. Reconnect the lower arm ball joints and torque to 45 N·m (4.5 kg-m, 33 lb-ft).
18. Reconnect the tie-rod end ball joints and torque to 45 N·m (4.5 kg-m, 33 lb-ft).
19. Install the splash shields and exhaust header pipe.
20. Install the front wheels, lower car to ground, and torque lug nuts to 110 N·m (11.0 kg-m, 80 lb-ft).
21. Remove the chain hoist from the 8 mm bolt on the cylinder head.
22. Insert the speedometer cable into gear holder, then secure cable with clip and install boot.
23. Install the top three transmission mounting bolts (12 x 1.25 x 60 mm) and torque to 58 N·m (5.8 kg-m, 42 lb-ft).
24. Connect cooler hoses, and torque banjo bolts to 29 N·m (21 lb-ft).
25. Attach shift control cable to shift lever with pin and clip. (page 16-63)
26. Reinstall the center console.
27. Connecting wiring:
 - Battery positive cable to starter.
 - Black/white wire to starter solenoid.
 - Transmission ground cable.
28. With ignition key OFF, connect ground cable to battery and transmission.
29. Unscrew dipstick from top of transmission end cover and add 2.9 quarts Dexron® ATF through the hole. Reinstall dipstick.

NOTE: If the transmission was disassembled, the ATF fill quantity is 5.6 quarts.
30. Start engine, set parking brake, and shift transmission through all gears three times. Check for proper control cable adjustment.
31. Let engine reach operating temperature with transmission in Neutral or Park, then turn it off and check fluid level.
32. Install throttle control cable and adjust (page 16-60).
33. Road test as described on page 16-62.

Hondamatic

Neutral/Back-up Switch Check and Installation


Move selector lever to Park, Reverse, and Neutral to check continuity of combined neutral safety (inhibitor) and back-up light switch. Replace the switch if there is no continuity between terminals shown on the chart.

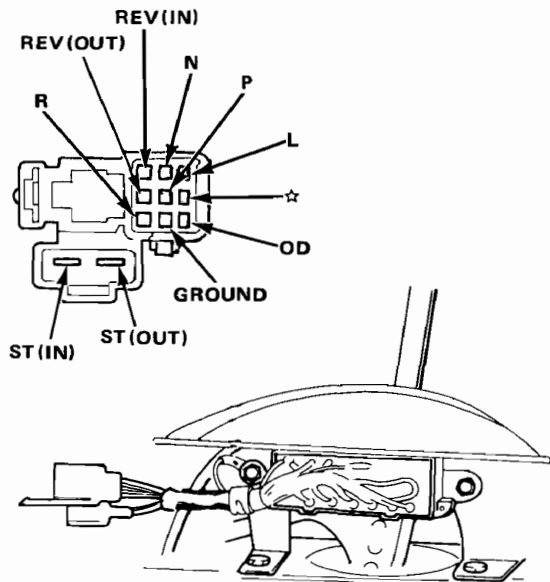

	BI	G/Y	G/Bu	G/BI	G	G/R	G/W
L							
☆							
OD							
N							
R							
P							
	E	L	☆	OD	N	R	P

	BI/W	Y	BI/W	G/BI
N				
R				
P				
	ST (IN)	REV (IN)	ST (OUT)	REV (OUT)

1. Position the switch slider to neutral, as shown.
2. Shift selector lever to neutral.
3. Align the switch lug with the actuator rod.

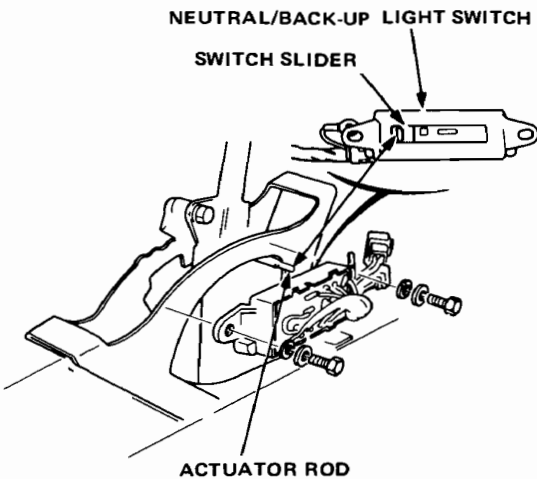


4. Tighten the bolts.




Shift Indicator Light Check and Installation

Check for continuity between indicator light connector terminals as shown. If there is no continuity, check for a burned out bulb or open circuit.

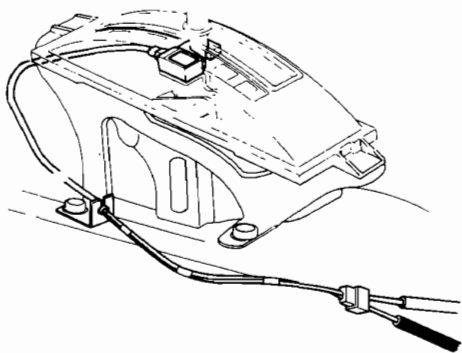


1. Install indicator light bulb in housing, and plug the connector into the wire harness.
2. Insert foot on light housing into slot in selector guide, then turn housing 90° so arm hooks around lever as shown.

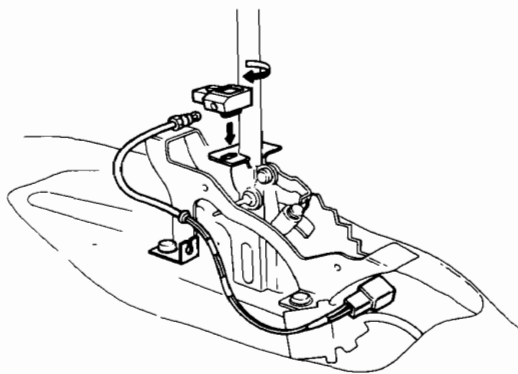

Shift Indicator Panel Position Adjustment


1. Check that the index mark of the indicator aligns with the N mark of the shift indicator panel when the transmission is in NEUTRAL.
2. If not aligned, remove panel mounting screws and adjust by moving panel.

NOTE: Whenever escutcheon is removed for indicator bulb replacement etc., reinstall the panel as described above.

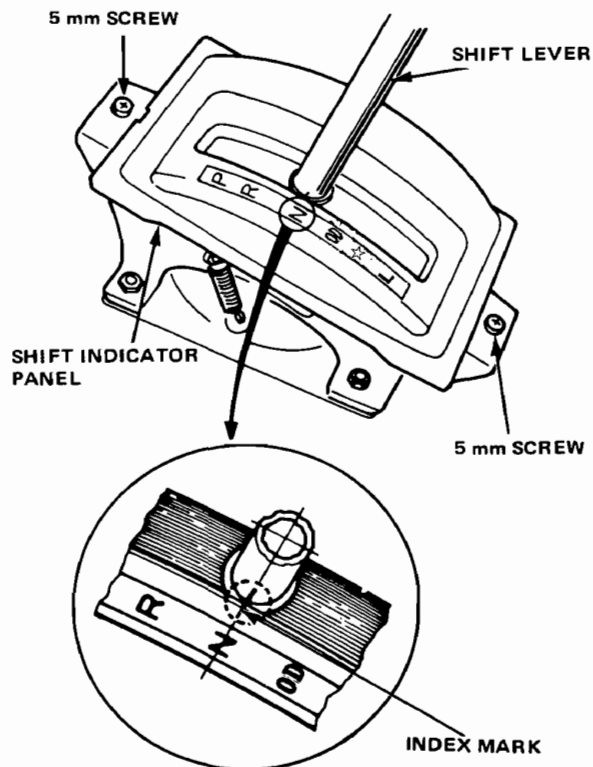

Hondamatic



Gear Shift Selector

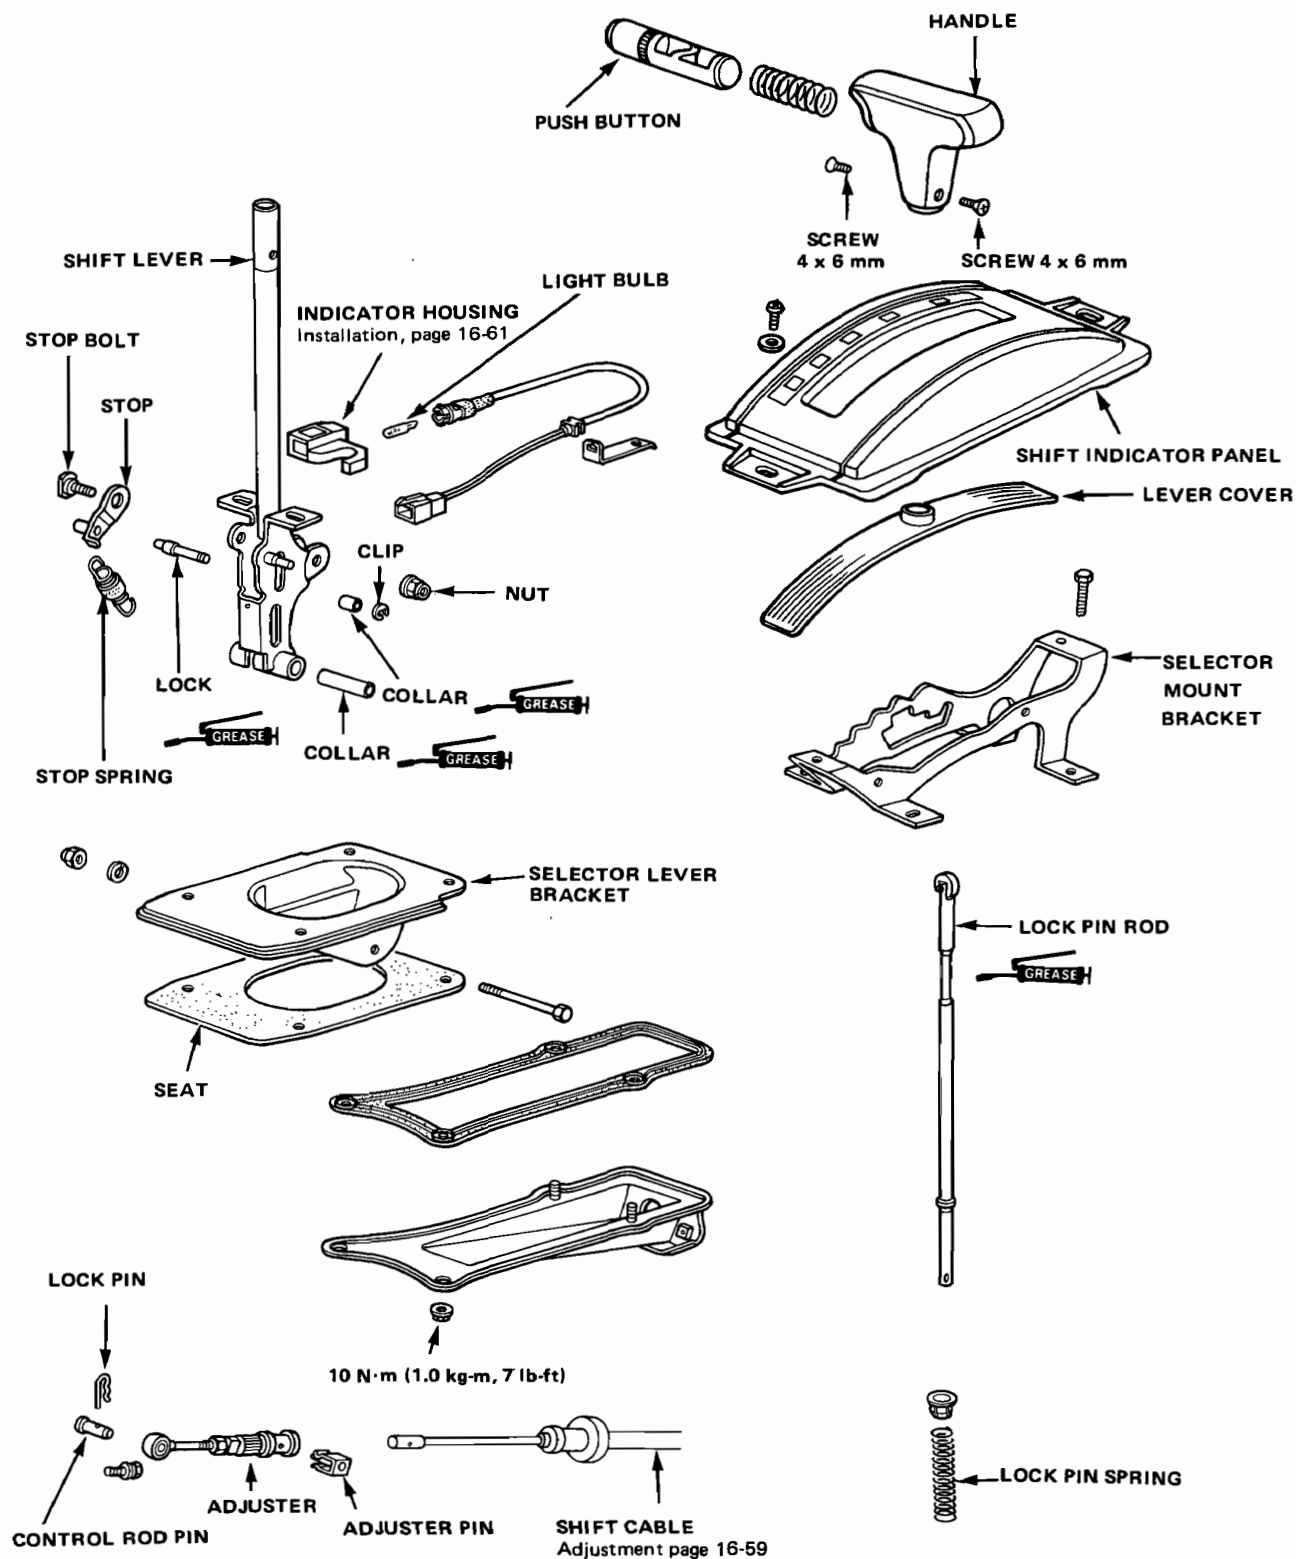




Shift Cable Adjustment

1. Start engine. Shift to reverse to see if reverse gear engages. If not, refer to troubleshooting on page 16-4.
2. With engine off, remove console.
3. Shift to Drive, then remove lock pin from cable adjuster.

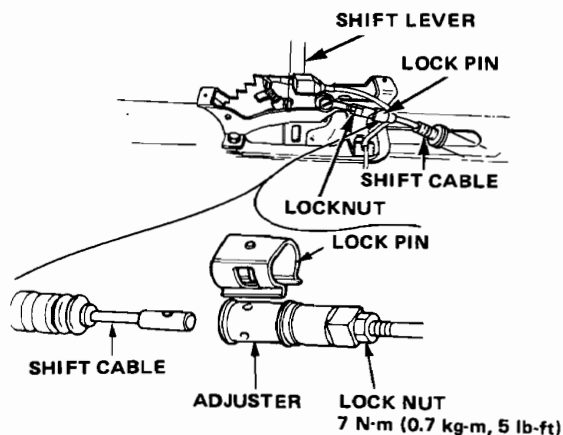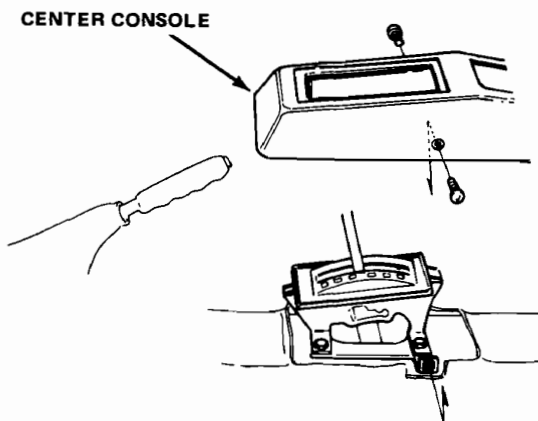

4. Check that the hole in the adjuster is perfectly aligned with the hole in the shift cable.

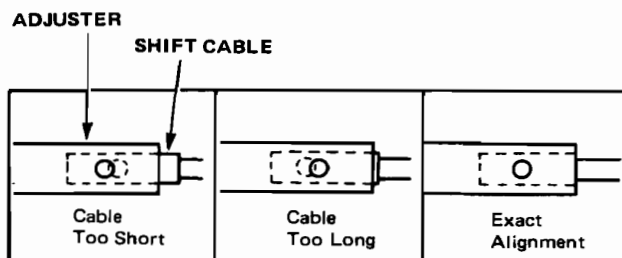

NOTE: There are two holes in end of the shift cable. They are positioned 90° apart to allow cable adjustments in 1/4 turn increments.

5. If not perfectly aligned, loosen locknut on shift cable and adjust as required.
6. Tighten the locknuts.
7. Install lock pin on adjuster.

NOTE: If you feel the lock pin binding as you reinstall it, the cable is still out of adjustment and must be readjusted again.

8. Start engine and check shift lever in all gears. If any gear does not work properly, refer to troubleshooting on page 16-4.

Hondamatic


Throttle Control Cable Bracket Adjustment

1. Disconnect the throttle control cable from the throttle control lever.
2. Bend down the lock tabs of the lock plate and remove the two 6 mm bolts to free the bracket.
3. Loosely install a new lock plate.
4. Position the special tool between the throttle control lever and the bracket as shown.

NOTE: The special tool is designed so that the distance between the lever and the bracket is 83.5 mm (3.287 in.) when it is installed.

5. Position the bracket so that there is no binding between the bracket and the special tool (tolerance 0 to +0.3 mm). Then tighten the two 6 mm bolts, bend up the lock plate tabs against the bolts heads.

CAUTION: Make sure the control lever doesn't get pulled toward the bracket side as you tighten the bolts.

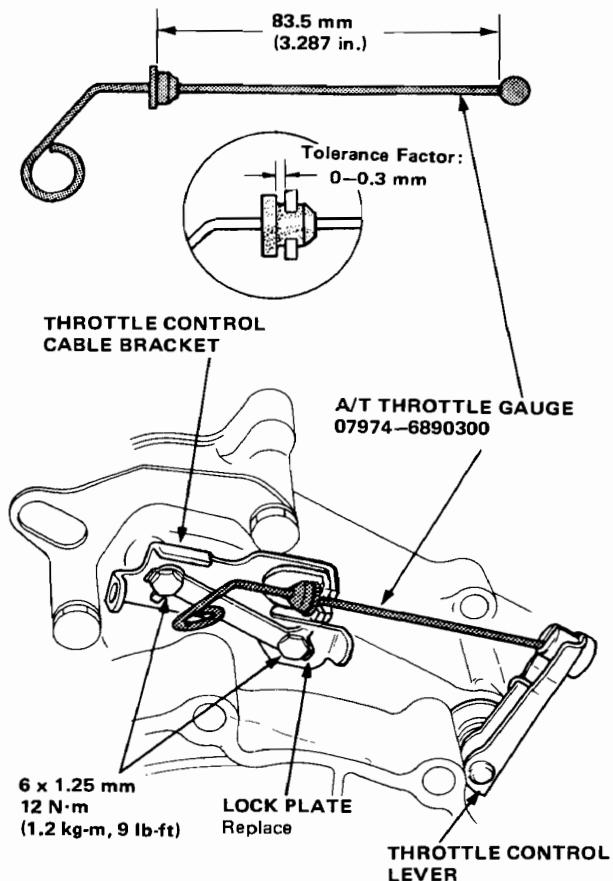

Throttle Control Cable Adjustment/Inspection


NOTE: Perform the following inspections before adjusting the throttle control cable.

- The carburetor throttle cable play is correct. See page 12-4.
- The engine is warmed-up to operating temperature.

NOTE: The cooling fan should come on twice or more.

- The idle speed is correct. See page 12-13.
- The distance between the throttle control lever and the throttle control bracket is correct as shown in left column.


1. With the engine off, disconnect the throttle control cable from the throttle control lever.
2. Attach a weight of about 1.3 kg (2.6 lbs) to the accelerator pedal. Raise the pedal, then release it, this will allow the weight to remove the normal free play from the throttle cable.

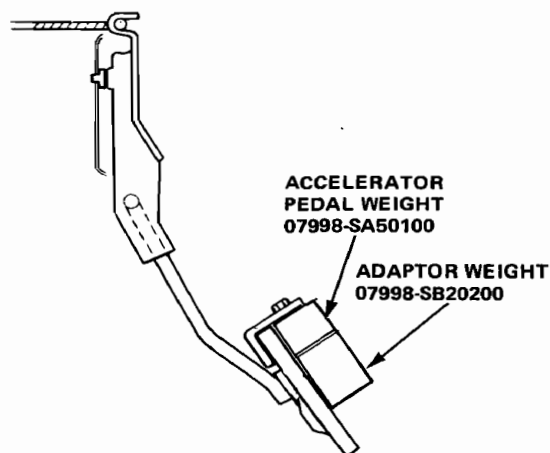





3. Secure the throttle control cable with clamps as shown.


L/H

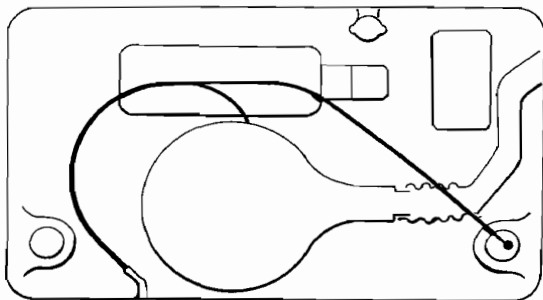

R/H

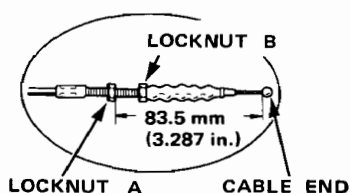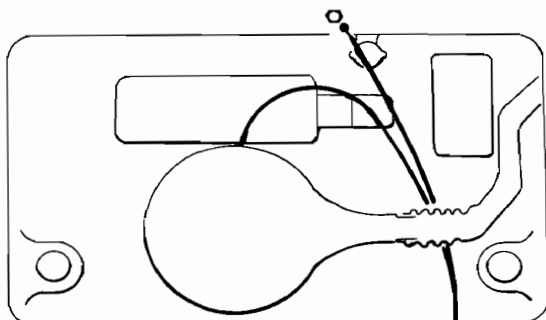


4. L/H: Lay the end of the throttle control cable on the R damper shock tower.
R/H: Lay the end of the throttle control cable on the radiator cap.
5. Adjust the distance between the throttle control cable end and nut (A) to 84.0 mm (3.306 in.)
6. Insert the end of throttle control cable in the groove of the throttle control lever.

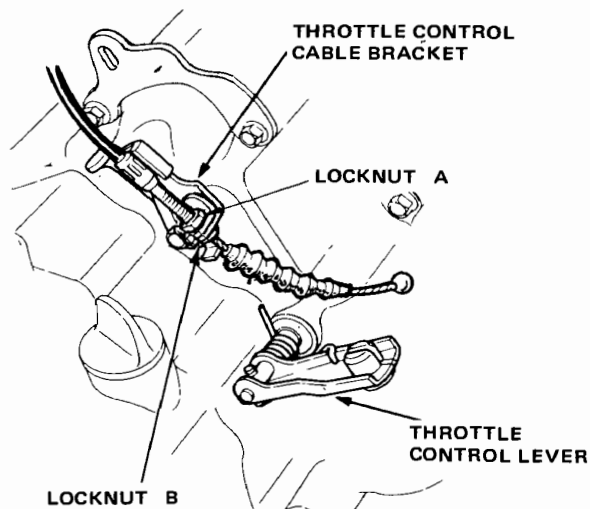

7. Insert the throttle control cable in the bracket and secure with lock nut (B).

NOTE: Make sure the cable is not kinked or twisted.

8. Check that the cable moves freely by depressing the accelerator.
9. Remove the weight on the accelerator pedal and push the pedal to make sure that there is the specified play at the throttle control lever.

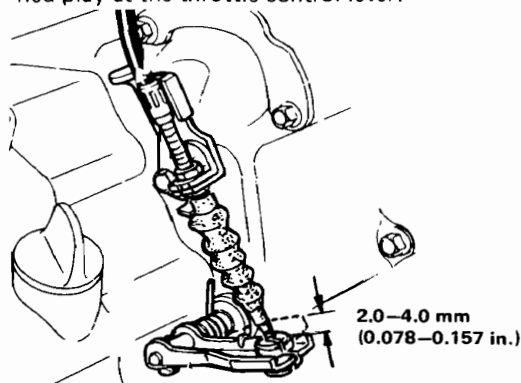

10. Start the engine and check the synchronization between the carburetor and the throttle control cable.






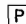
NOTE: The throttle control lever should start to move as engine speed increases.

- If the throttle control lever moves before engine speed increases, turn the cable lock nut A counter clockwise and re-tighten lock nut B.
- If the throttle control lever moves after engine speed increases, turn lock nut A clockwise and re-tighten the lock nut B.

Hondamatic

Road Test


After transmission is installed:

1. Make sure the floor mat does not interfere with accelerator pedal travel. Fully depress accelerator pedal and check carburetor to make sure throttle level is fully opened.
2. Release accelerator pedal and check cable to be sure it has slight play or slack.
3. Apply parking brake and check wheels. Move shift selector to  while depressing brake pedal. Start engine, depress accelerator pedal, and release it suddenly. Engine should not stall.
4. Move selector lever to  () and  positions, and check to be sure car moves normally in each gear. Check under acceleration, cruise and coast.
5. Move selector lever to  , and check to be sure lock-up clutch is on at 34–39 km/h with throttle 1/8 open.
6. On upgrade and downgrade, apply brakes to stop car. Move selector lever to  , then release brake pedal and see if park position will hold car.

NOTE: Always apply parking brake or brake pedal before shifting out of Park to another gear.

Differential (Manual Transmission)


Index

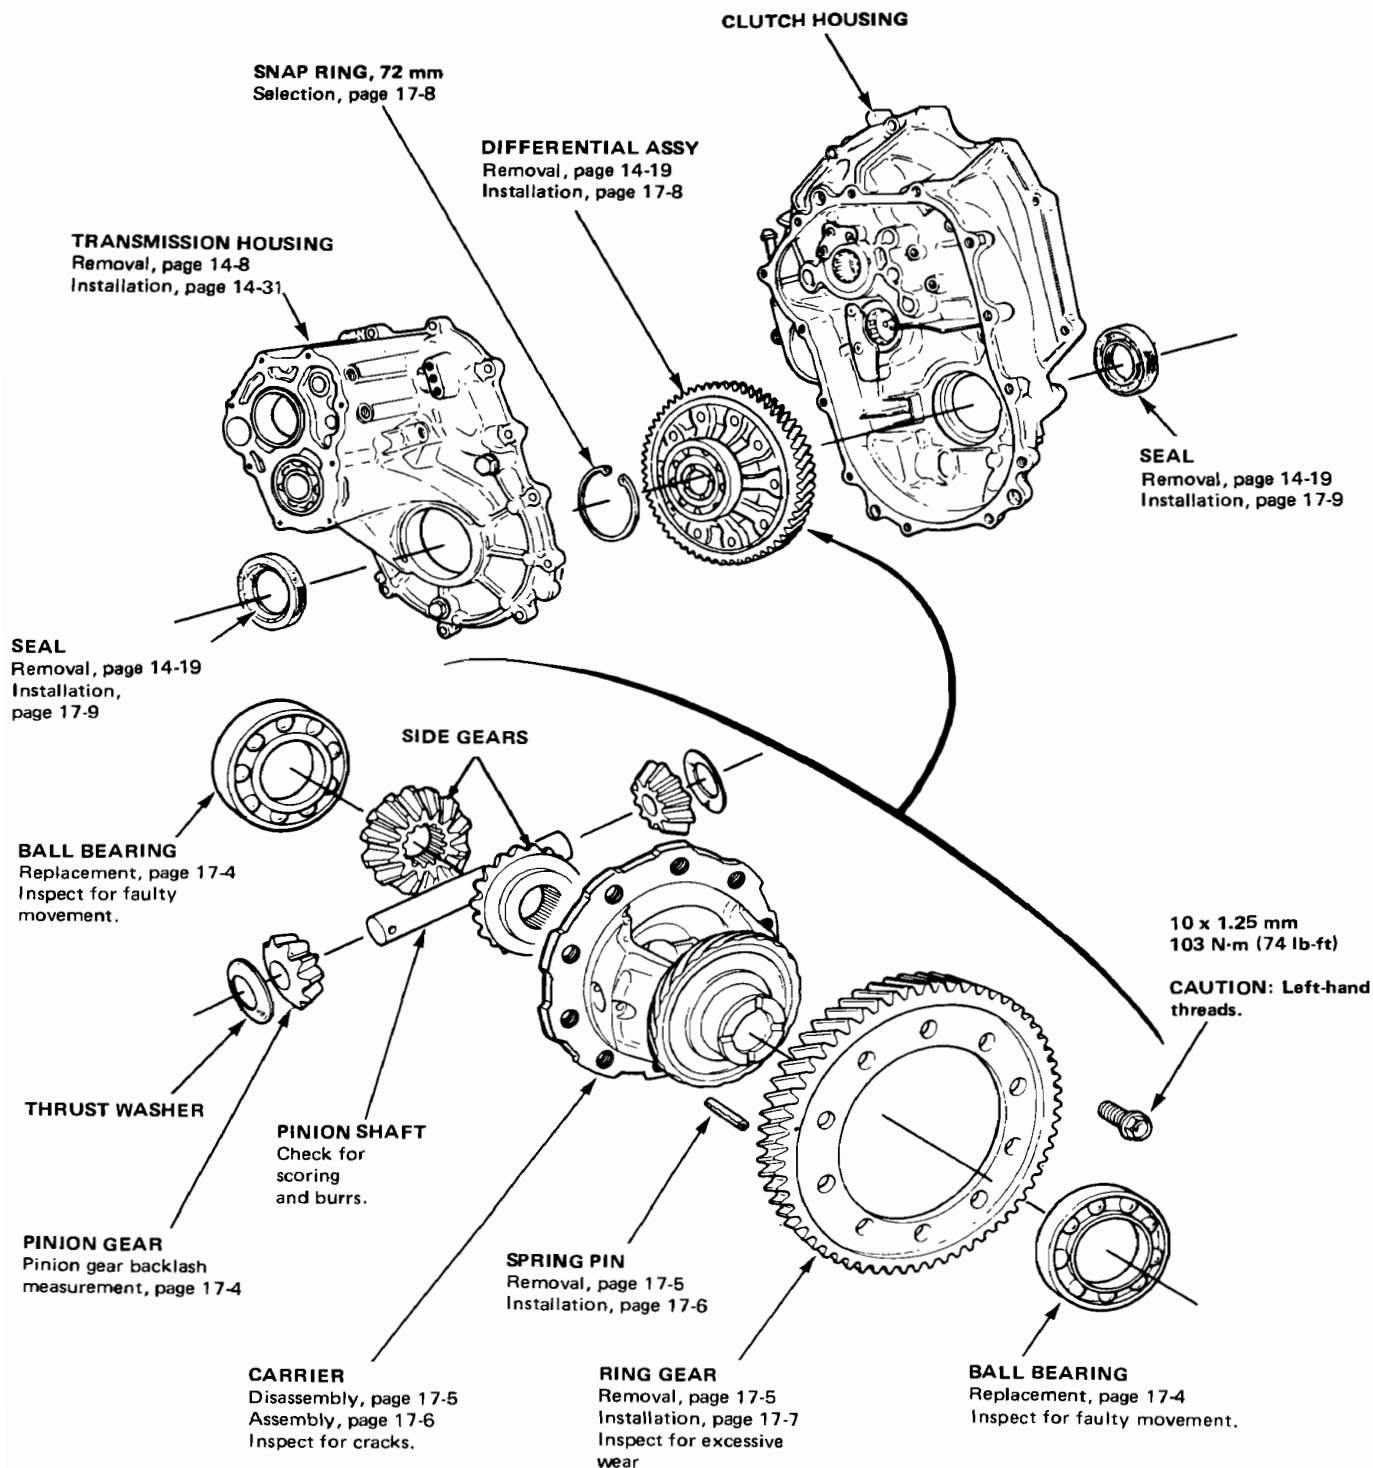

Differential (Automatic Transmission)



Index

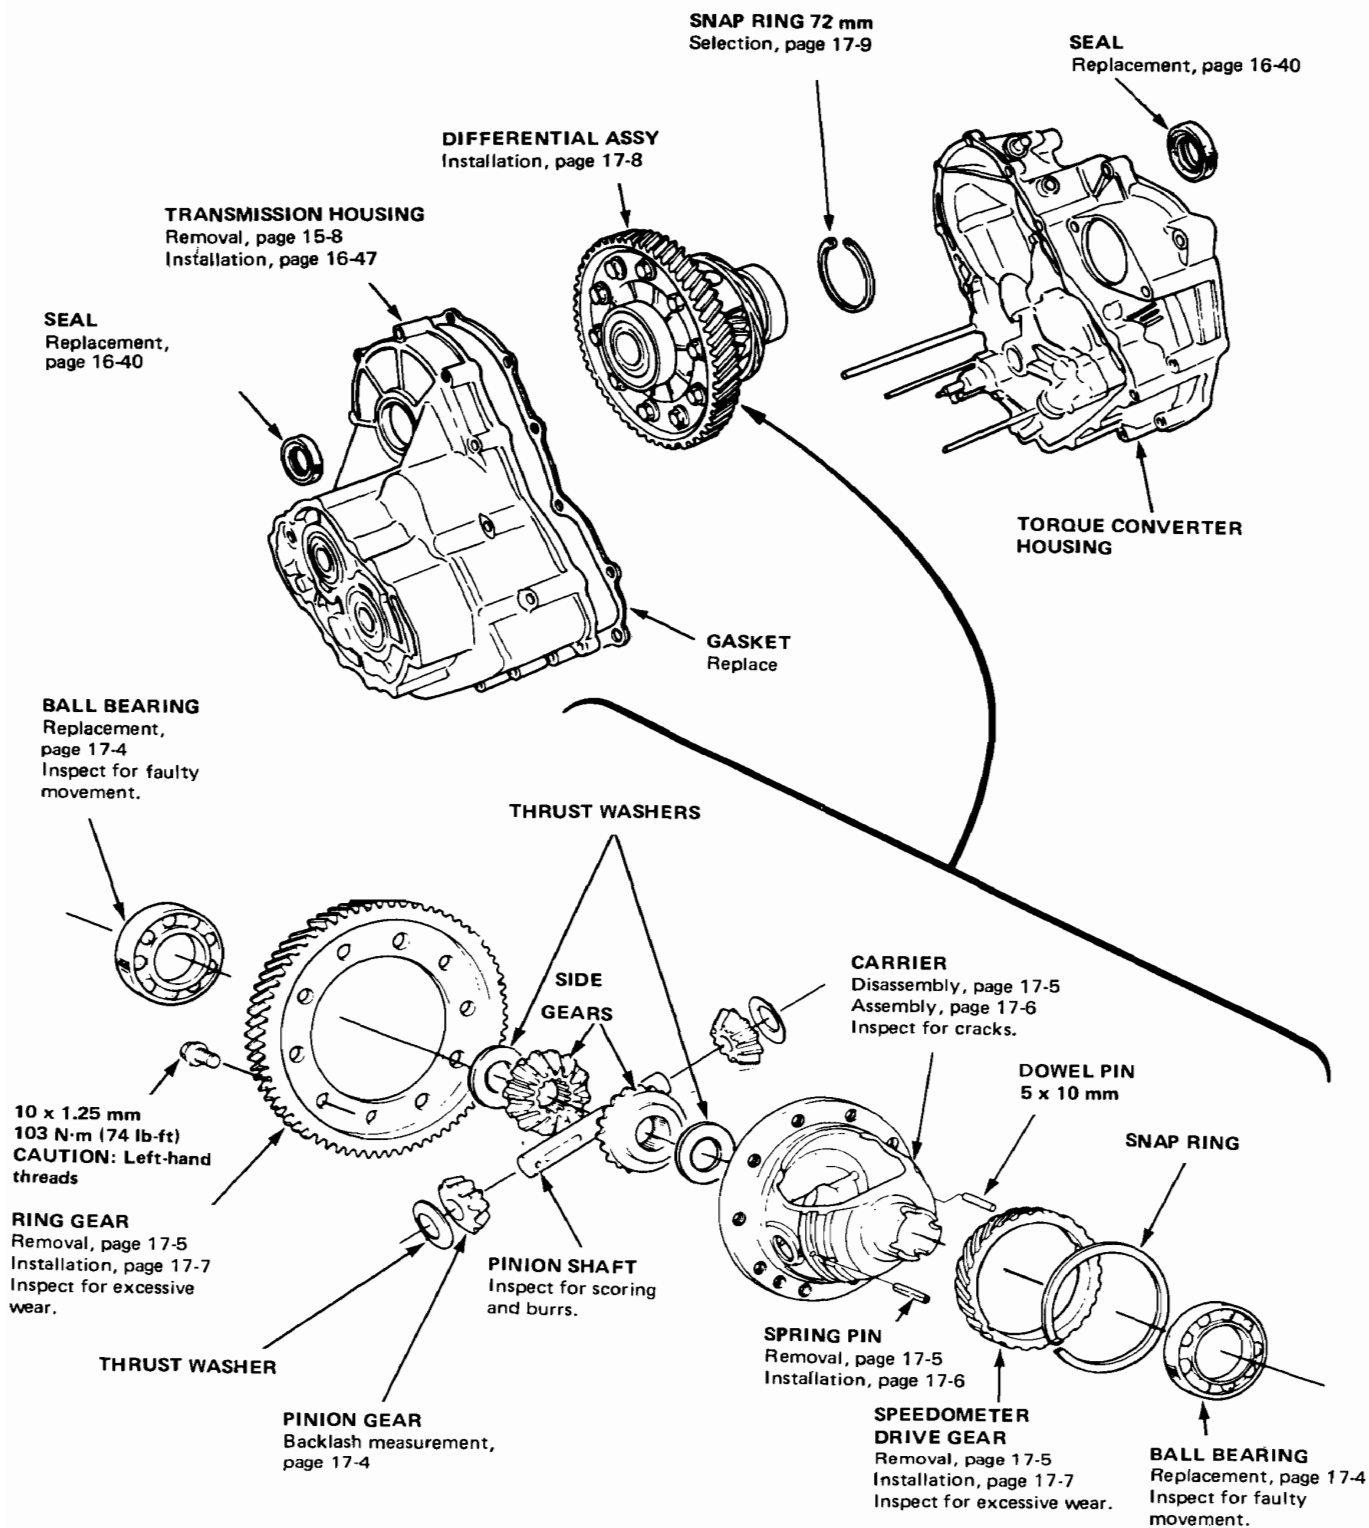


Differential

Backlash Inspection

1. Place differential assembly on V-blocks and install both axles.
2. Check backlash of both pinion gears.

Standard (New): 0.05–0.15 mm (0.002–0.006 in.)

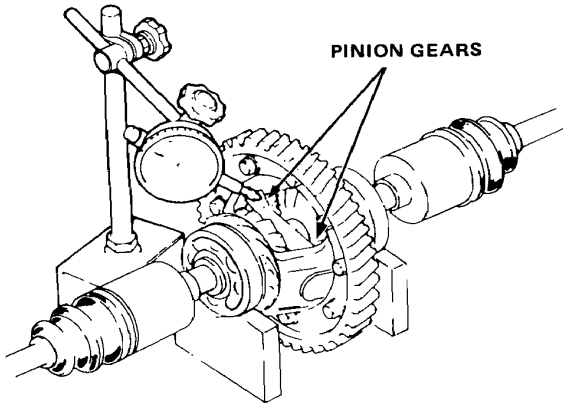


3. If out of tolerance, disassemble the differential and select new thrust washers according to the chart on page 17-6.


Bearing Replacement

NOTE: Check bearings for wear and rough rotation. If bearings are OK, removal is not necessary.

1. Remove bearings using a standard bearing puller.

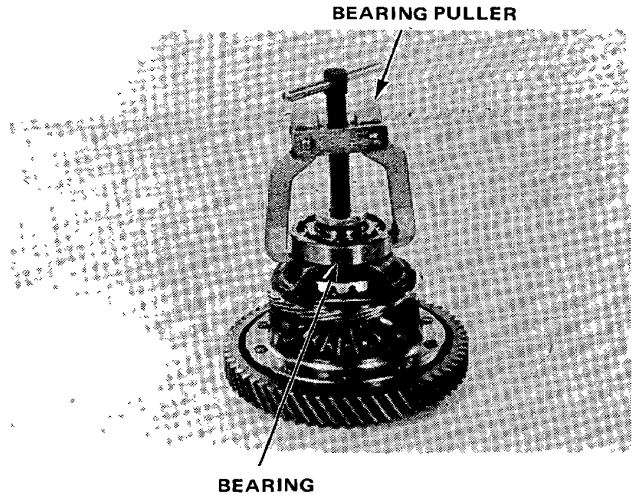

2. Install new bearings.

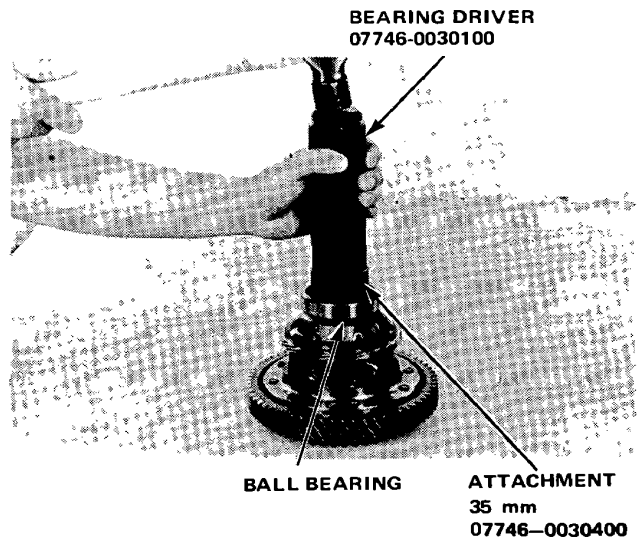




Inspection/Disassembly


1. Remove ring gear and inspect teeth for excessive wear.

CAUTION: The ring gear bolts have left-hand threads.

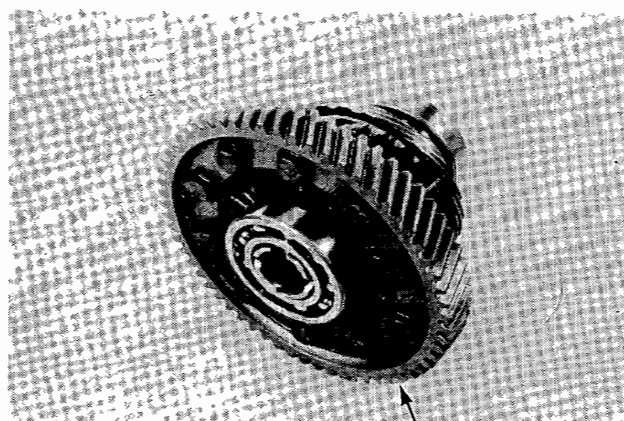

RING GEAR


2. Automatic Only:
Pry snap ring off carrier, then remove speedometer gear and dowel pin.

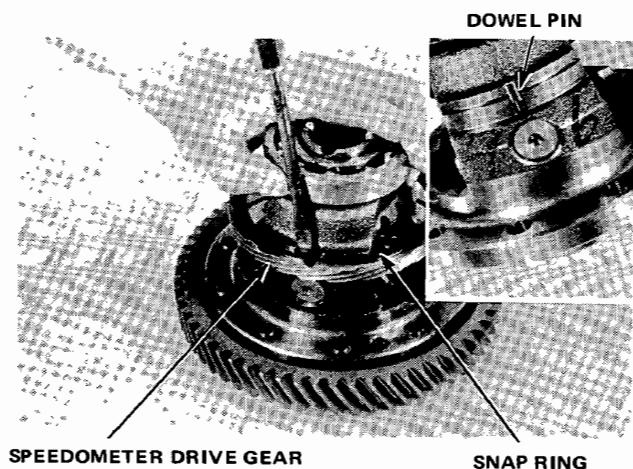

SPEEDOMETER DRIVE GEAR

SNAP RING

3. Drive out spring pin with pin punch.

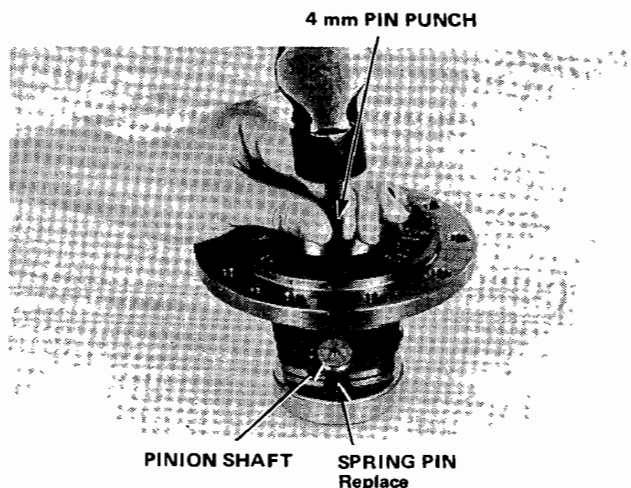


4 mm PIN PUNCH

PINION SHAFT

**SPRING PIN
Replace**

4. Remove pinion shaft, pinion gears and thrust washers.

PINION SHAFT
Inspect for scoring
and burrs.

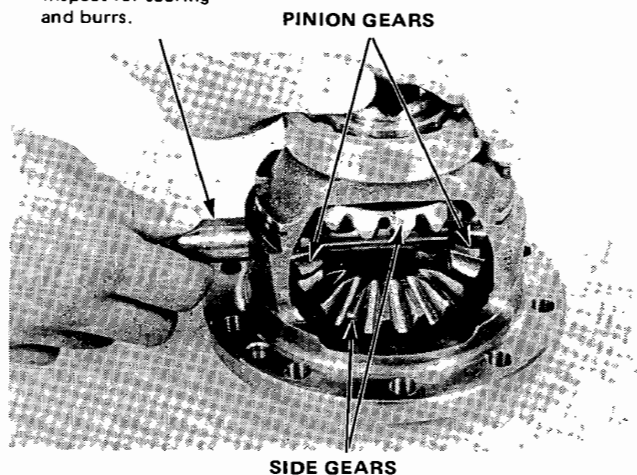

PINION GEARS

SIDE GEARS

5. Wash parts thoroughly in solvent and dry with compressed air. Inspect all parts for wear or damage and replace any that are defective.


Differential

Reassembly

1. Install the side gears in differential carrier.

NOTE: On cars equipped with the Automatic transmission, install a thrust washer between each side gear and carrier.


CAUTION: Coat all gears with molybdenum disulfide grease on all sides.

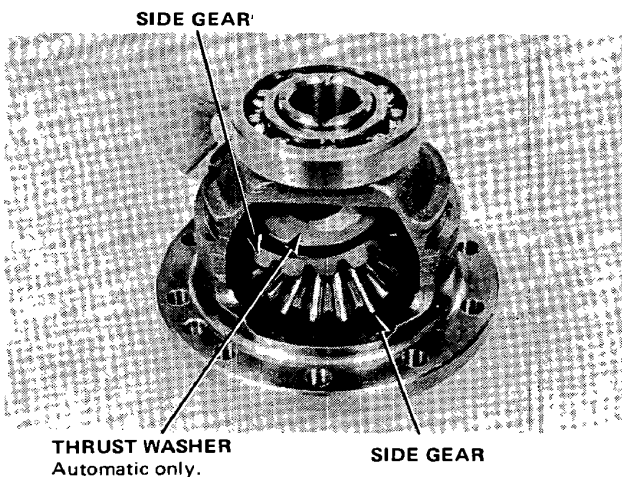


2. Set pinion gears in place exactly opposite each other in mesh with side gears, then install a thrust washer behind each one. Washers must be of equal thickness.

Thrust Washers


PART NUMBER	THICKNESS
41351-689-000	0.7 mm (0.028 in.)
41352-689-000	0.8 mm (0.031 in.)
41353-689-000	0.9 mm (0.035 in.)
41354-689-000	1.0 mm (0.039 in.)

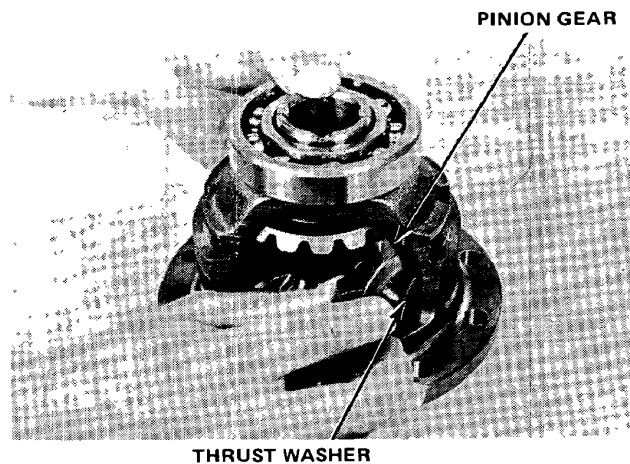

3. Rotate gears as shown until shaft holes in pinion gears line up with shaft holes in carrier.
4. Insert pinion shaft and align spring pin holes in one end with matching hole in carrier.

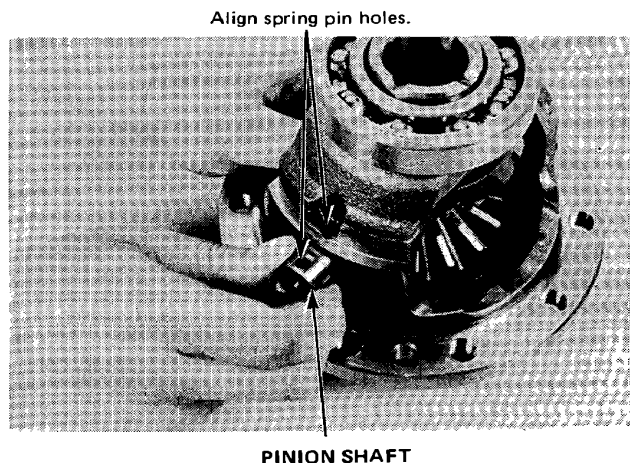

5. Drive in a new spring pin with pin punch.

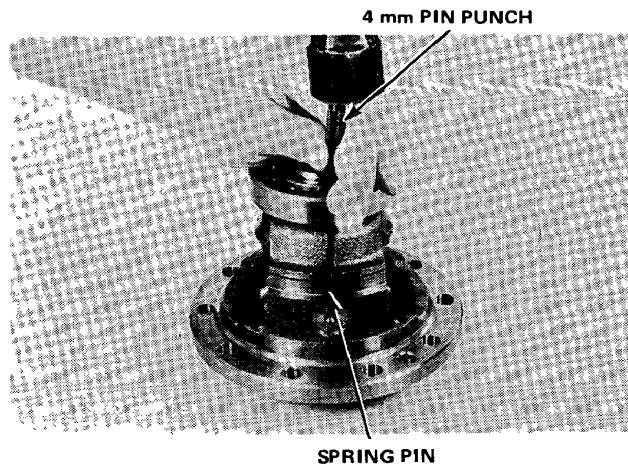


6. Check backlash of both pinion gears again.

Standard (New): 0.05–0.15 mm (0.002–0.006 in.)


- If still out of tolerance, replace both pinion gears, then recheck backlash.
- If still out of tolerance, replace side gears, and re-check backlash.
- If still out of tolerance, replace carrier assembly.



7. Automatic Only:
Install the dowel pin and then the speedometer drive gear with its chamfer (on inside diameter) facing carrier. Secure with snap ring.

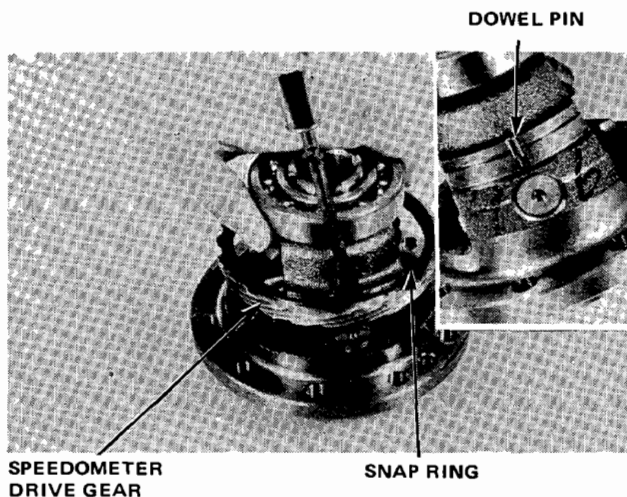


8. Automatic Only:
Align snap ring on carrier as shown.

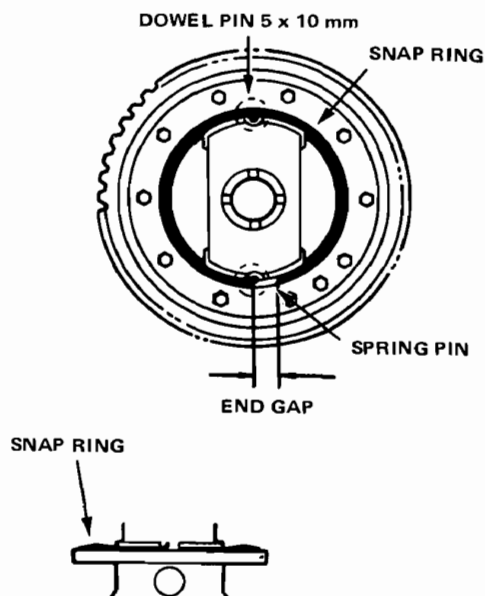


9. Install the ring gear with the chamfer on inside diameter facing the carrier.

Manual Transmission

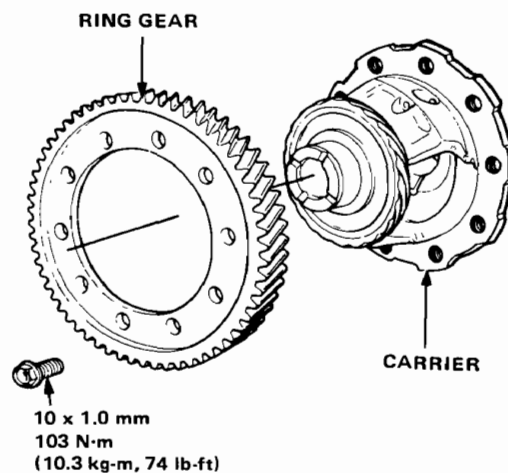

CAUTION: Ring gear bolts have left-hand threads.

Automatic Transmission

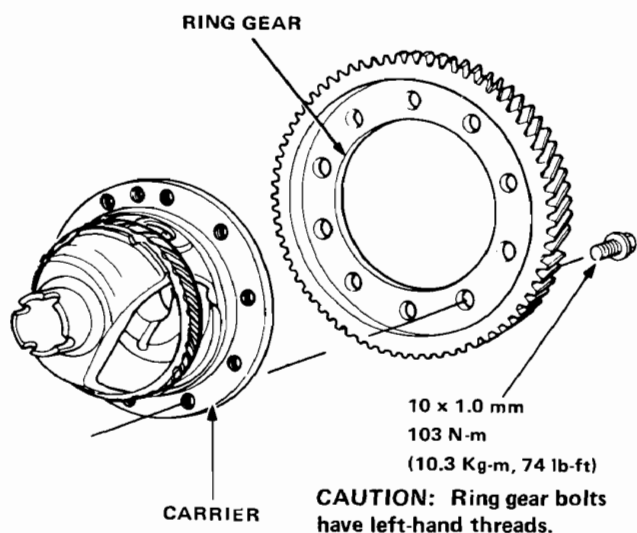


CAUTION: Ring gear bolts have left-hand threads.

Differential

Installation


1. Automatic Only:
Install 72 mm snap ring in torque converter housing.
Do not install oil seal yet.

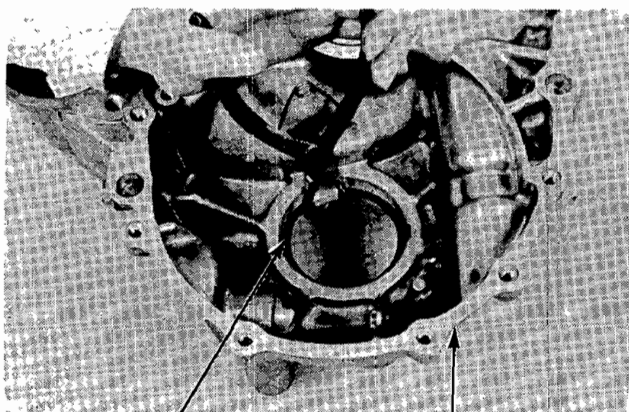

72 mm SNAP RING

TORQUE CONVERTER HOUSING

4. Manual Only:
Install 72 mm snap ring in transmission housing.

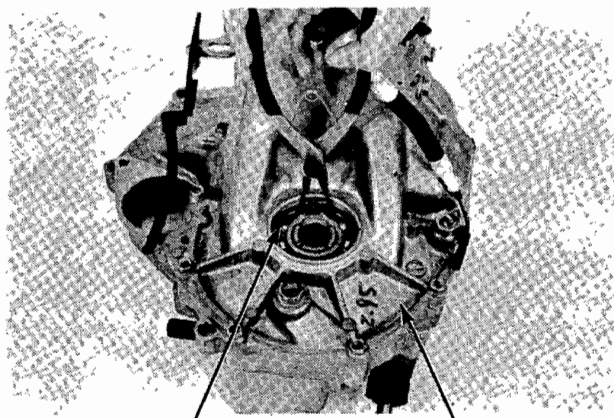

72 mm SNAP RING

TRANSMISSION HOUSING


Side Clearance Measurement

NOTE: If clutch/torque converter housing, transmission housing, differential carrier, or differential bearings were replaced, the differential side clearance must be measured.

5. Seat the snap ring.
Automatic: Tap on transmission housing side of differential assembly with driver and attachment to seat 72 mm snap ring in torque converter housing.

Manual: Tap on clutch housing side of differential assembly with driver and attachment to seat 72 mm snap ring in transmission housing.

DRIVER
07749-0010000

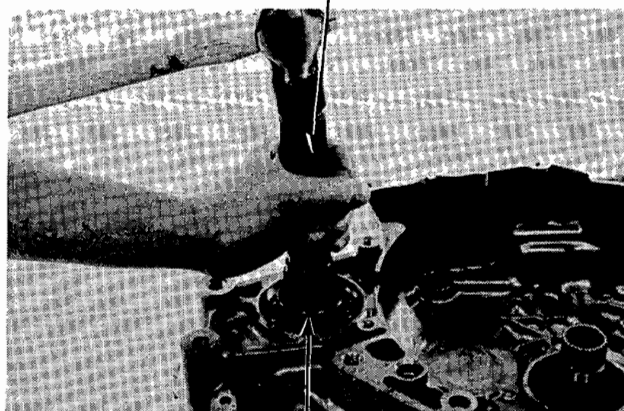


ATTACHMENT 07947-6340500

2. Install differential assembly and all transmission gear assemblies in clutch/torque converter housing. Refer to page 14-28 or page 16-43 (Automatic).
3. Install dowel pins in clutch/torque converter housing then carefully lower the transmission housing into place.

NOTE: (Automatic only) Place a new gasket on torque converter housing before installing transmission housing.

TRANSMISSION HOUSING

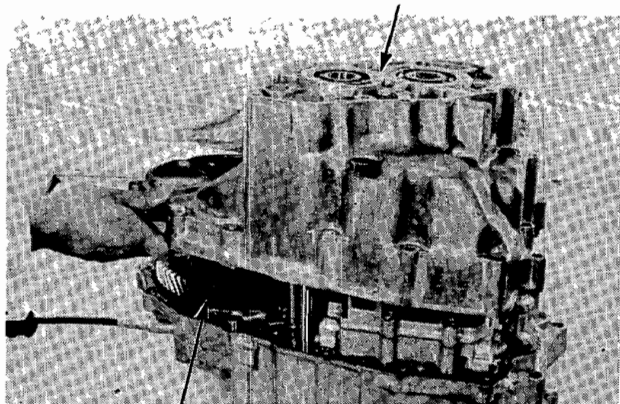

DIFFERENTIAL ASSY




6. Turn the transmission over and seat the differential assembly.

Automatic: Tap on torque converter housing side of differential assembly with driver and attachment to seat the assembly in transmission housing.

Manual: Tap on transmission housing side of differential assembly with driver and attachment to seat the assembly in the clutch housing.

7. Measure clearance between snap ring and outer race of bearing in transmission housing (Manual), or torque converter housing (Automatic).


Side Clearance: 0.15 mm (0.006 in.) Max.

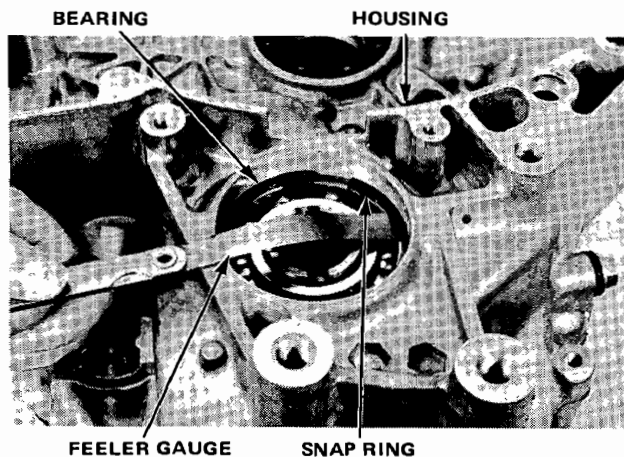

8. If out of limits, select new snap ring from following table and install. Repeat Steps 6-8.

Part Number	Thickness
90414-634-000	2.45 mm (0.096 in.)
90415-634-000	2.55 mm (0.100 in.)
90416-634-000	2.65 mm (0.104 in.)
90417-634-000	2.75 mm (0.108 in.)
90418-634-000	2.85 mm (0.112 in.)
90419-634-000	2.95 mm (0.116 in.)

9. Apply oil to new differential seals and install them in clutch/torque converter housing and transmission housing with special tools as shown.

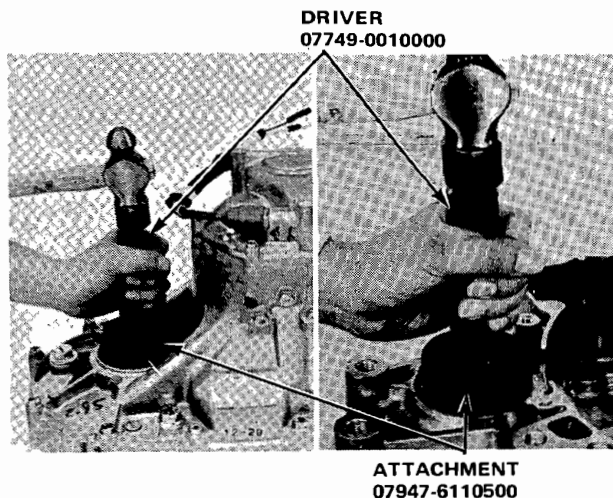


Driveshafts

Removal

1. Loosen the front wheel spindle nut with a 32 mm socket wrench.
2. Raise the front end of the car and support it with safety stands (see page 1-7 for the proper locations for the stands).
3. Drain the transmission oil. (Page 5-3)
4. Remove the front wheel and the spindle nut.
5. Use a floor jack to support the lower control arm, then remove the ball joint cotter pin and nut.


CAUTION: Make sure that the floor jack is positioned securely under the lower control arm, at the ball joint. Otherwise, torsion bar tension on the lower control arm will cause the arm to jump or spring suddenly away from the hub as the ball joint puller is being used.

6. Separate the ball joint from the front hub with the ball joint puller.
7. Slowly, lower the floor jack to lower the control arm.

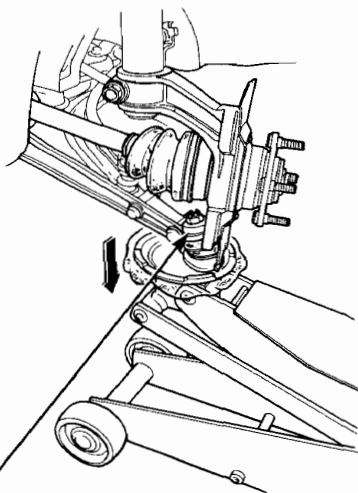

LOWER ARM BALL JOINT

8. Pull the front hub outward, all the way off the driveshaft.


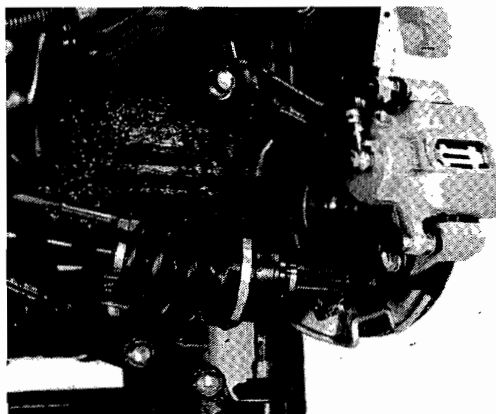


9. Using a tool like the one described below, pry out the inboard CV joint approximately 12 mm (1/2 in) in order to force the spring clip out of the groove in the differential side gears.

CAUTION:

- Pry carefully to avoid damaging the oil seal.
- Do not pull on the inboard CV joint; it may come apart.

10. Pull the driveshaft out of the transmission case.

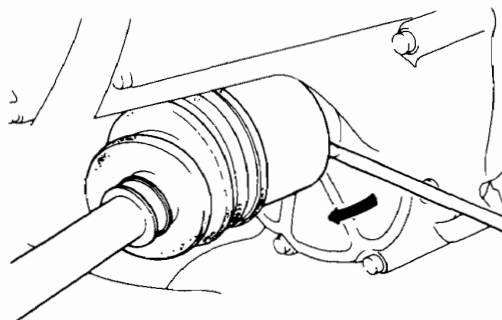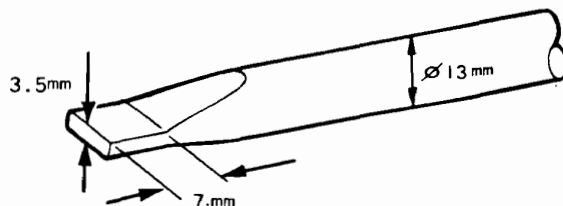




Disassembly/Inspection: Roller type joint

Disassemble in numbered sequence.


NOTE: Mark the rollers and roller grooves during disassembly to ensure proper positioning during reassembly.

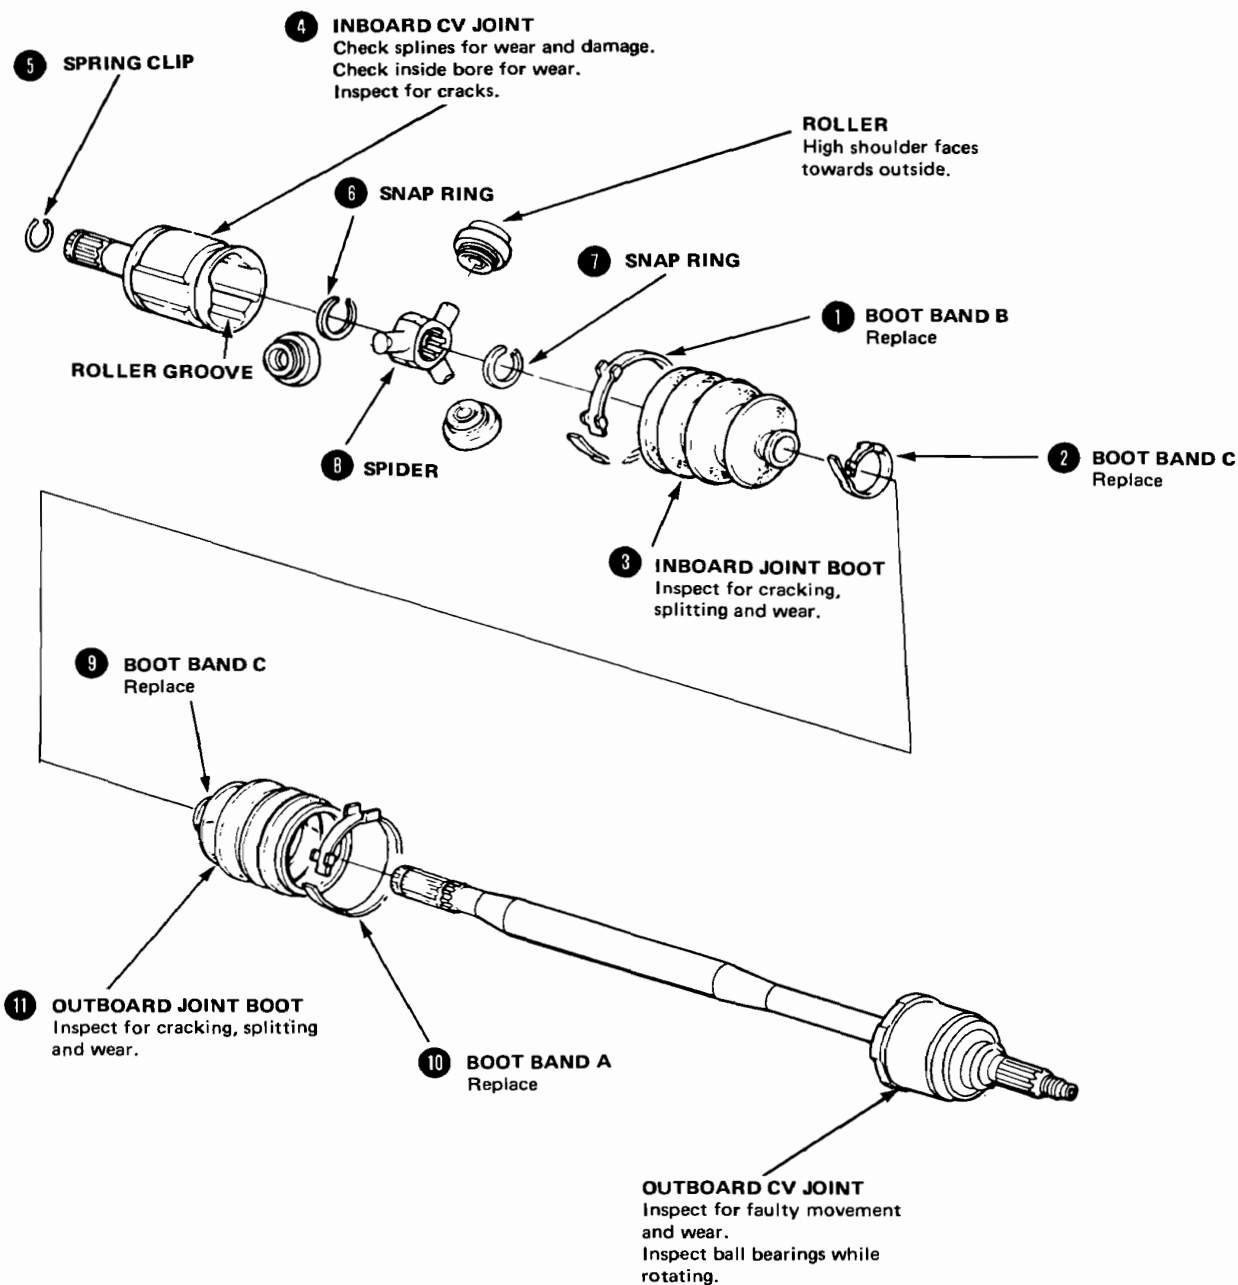

Driveshafts


Reassembly : Roller type joint

1. Reassemble the driveshafts in reverse order of disassembly.

 Thoroughly pack the bearings and both the inboard and outboard CV joints with high quality molybdenum disulfide grease when reassembling the driveshaft.

2. Install the rollers and bearing races on the spider shafts, then slide the spider assembly into the inboard shaft joint.
CAUTION: Avoid getting oil or grease on the rubber parts.


3. Slide the boots into place and install new boot bands C on the small ends.
Position the bands so they are centered between the locating humps at each end of the driveshaft. Expand and compress the boots until they return to their normal shape and length.

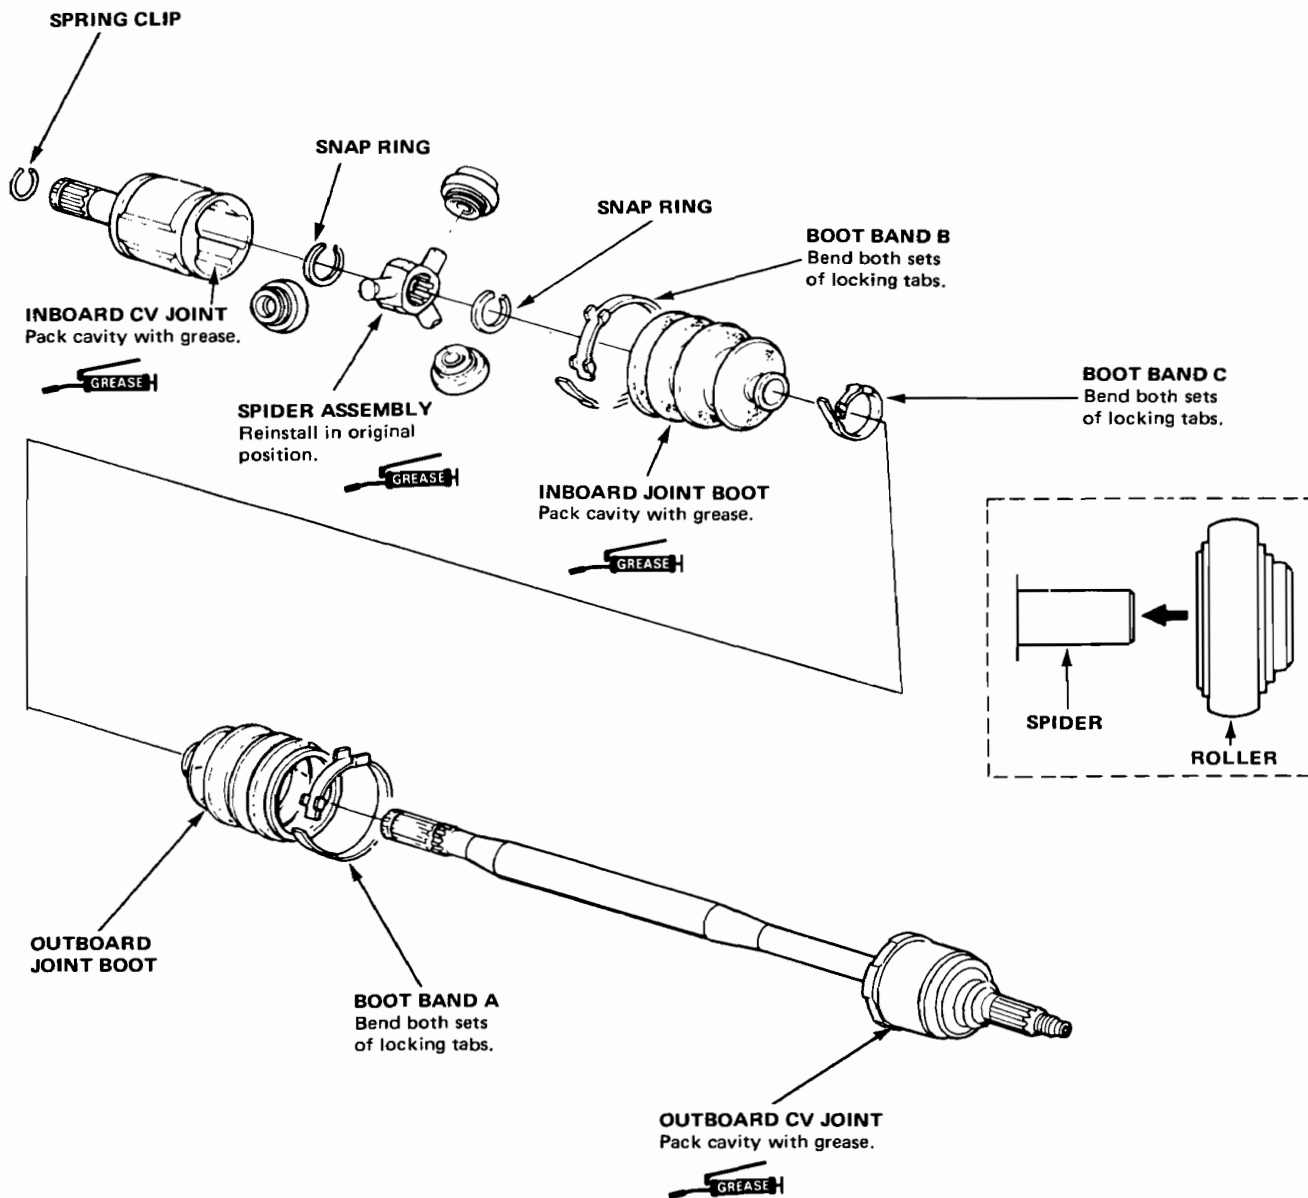



Disassembly/Inspection: Ball type joint

Disassemble in numbered sequence.

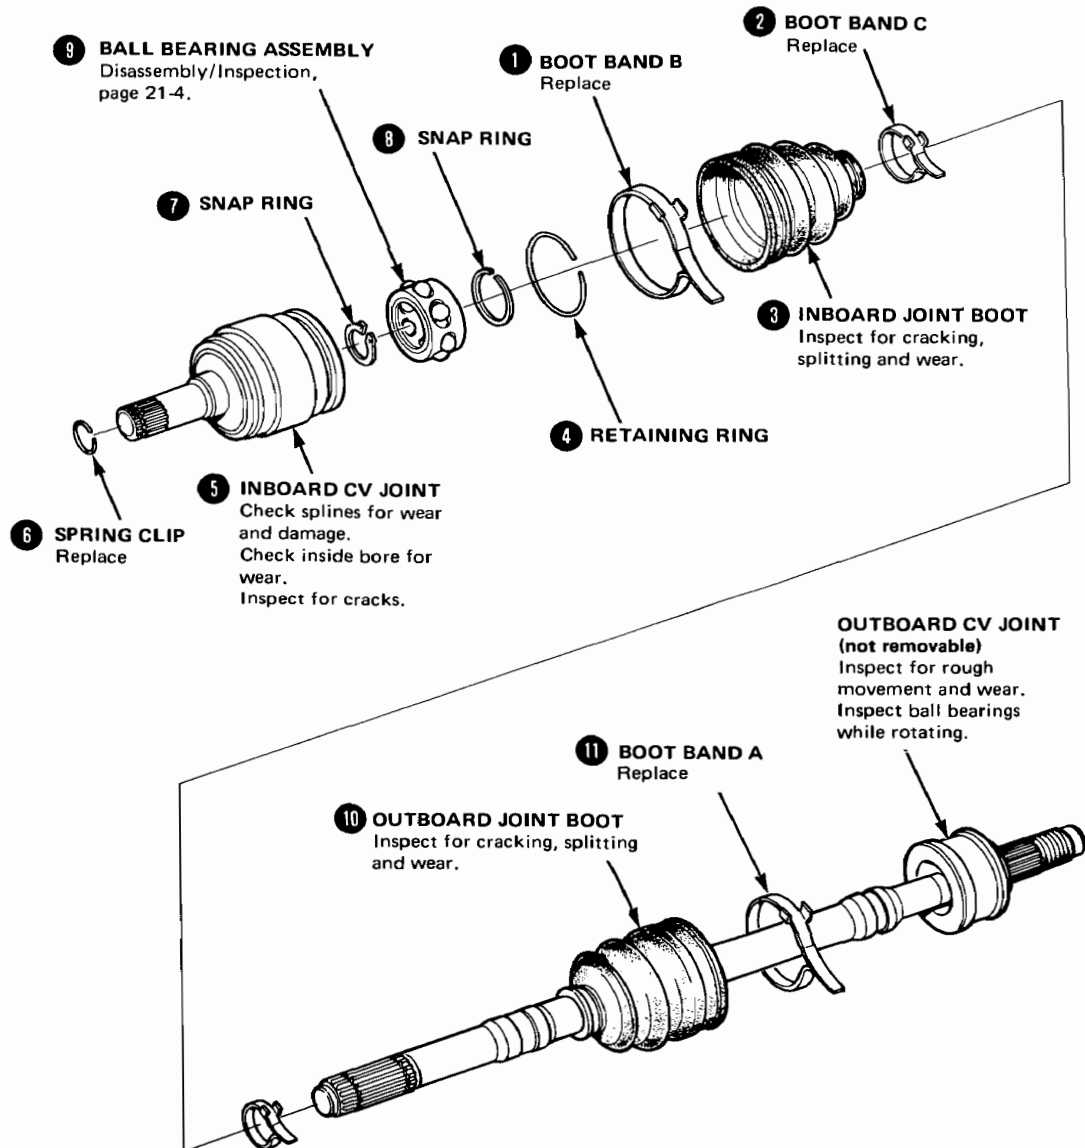


Driveshafts


Bearing Disassembly

1. To inspect the inboard CV joint bearing, put it on a bench and disassemble it by gently prying each ball out of the cage with a dull screwdriver.

NOTE: Individual parts for CV joints are not available. The inboard joint is available as a complete assembly; the outboard joint is available only as part of the complete axle assembly.

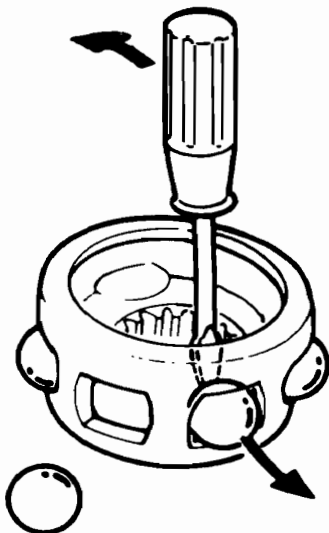

BALL BEARING RACE
Inspect for wear and scoring.
Inspect splines for wear and damage.

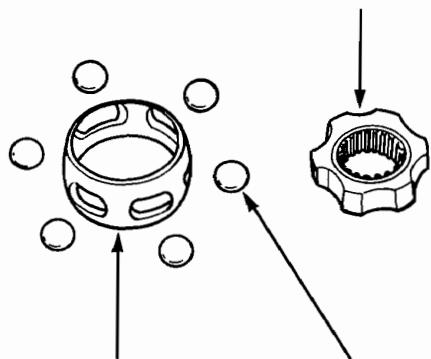


BALL BEARING CAGE
Inspect for wear

BALL BEARING
Inspect for wear and pitting.


Bearing Reassembly

1. Install ball bearing race with chamfered end towards small end of cage.

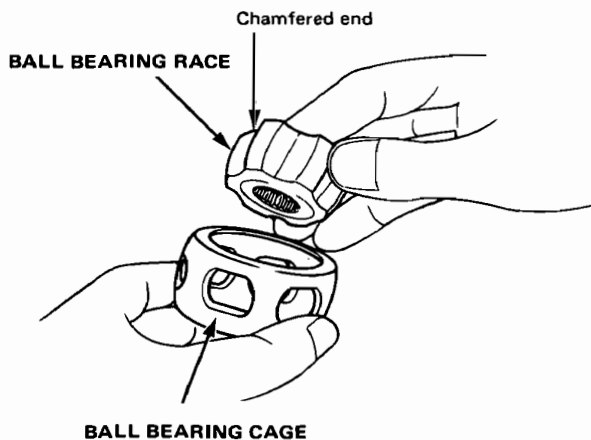

2. Press balls in until firmly seated.

BALL BEARING

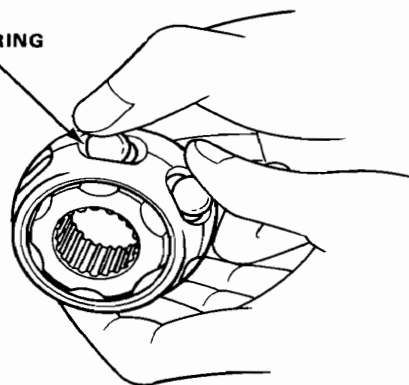




Reassembly : Ball type joint

1. Reassemble the driveshafts in reverse order of disassembly.

 Thoroughly pack bearings and both inboard and outboard CV joints with high quality molybdenum disulfide grease when reassembling driveshaft.

2. Slide boots into place and install new bands on the small ends.
Position bands so they are centered between locating humps at each end of driveshaft. Expand and compress boots until they return to their normal shape and length.

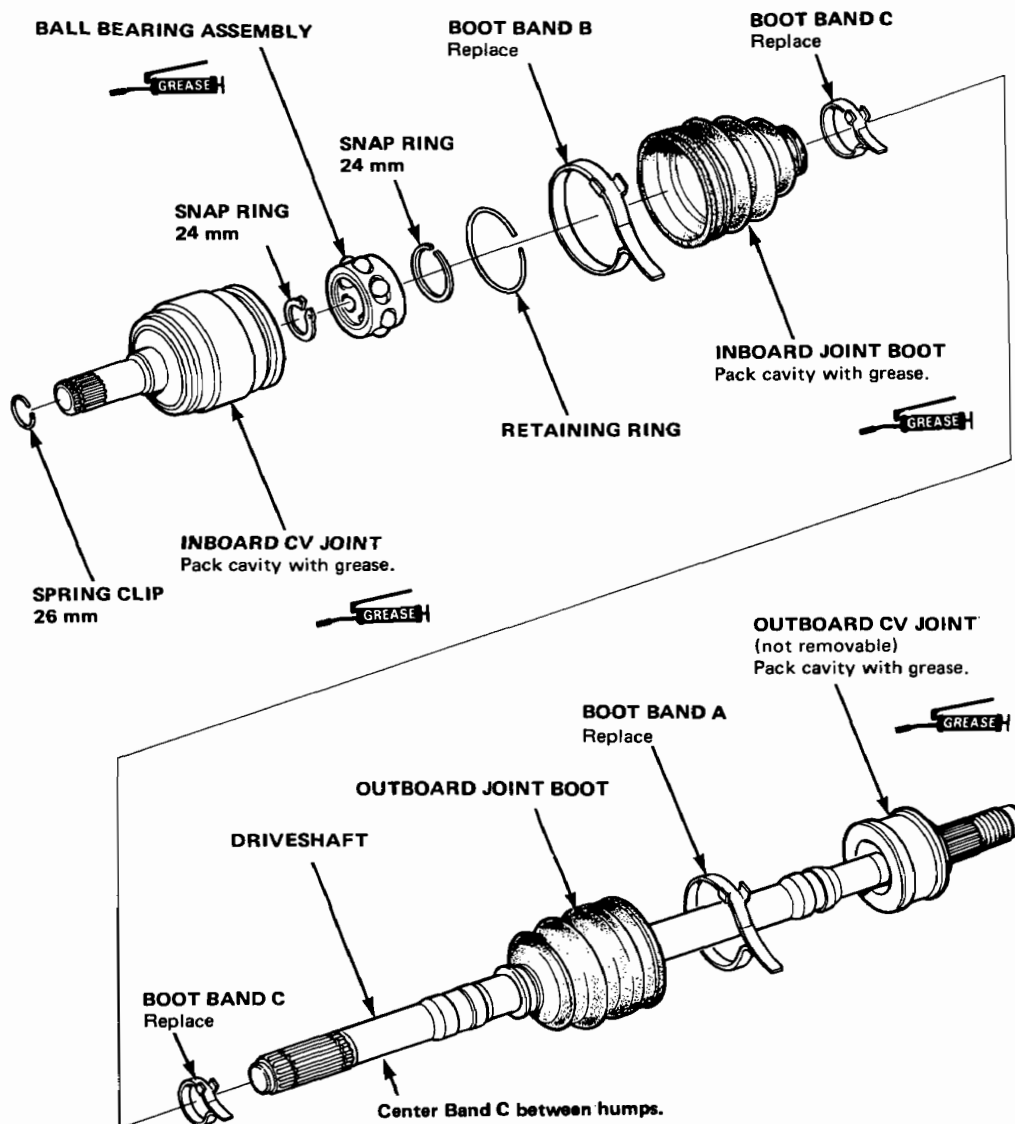


(cont'd)

Driveshafts

Reassembly : Ball type joint

3. Adjust the length of the driveshafts to the figures given below.

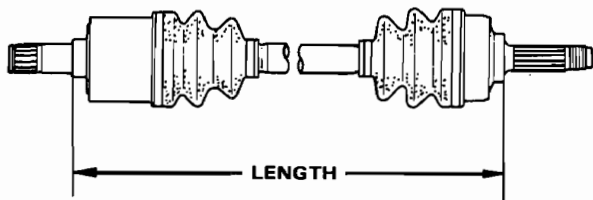

LEFT DRIVESHAFT:

771.0–776.0 mm (30.354–30.551 in)

RIGHT DRIVESHAFT:


471.0–476.0 mm (18.543–18.740 in)

4. Install the new boot bands A and B on the boots.

NOTE:

- Be sure to bend both sets of the locking tabs.
- Lightly tap on the doubled-over portions to reduce their height.


CAUTION: Do not strike the boot.

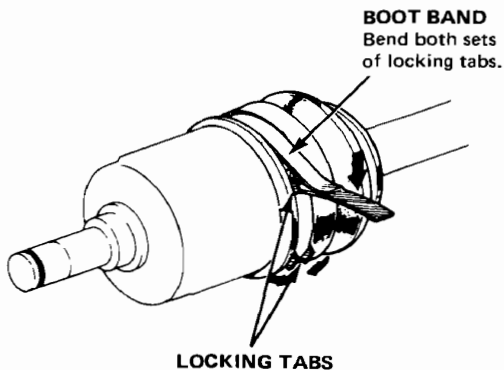

5. Installation inboard end of the driveshaft.

CAUTION:

- When reinstalling, make sure that the CV joint subaxle bottoms in the differential and that the spring clip locks in differential side gear groove.
- Replace the spring clip with a new one whenever the driveshaft is disassembled.

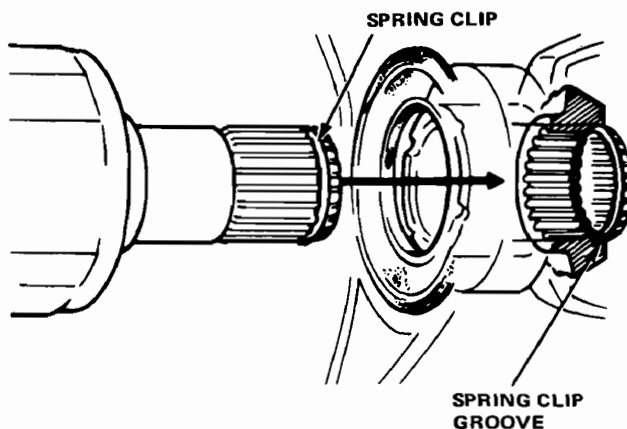


6. Add the transmission oil.
Use only SAE30, 10W-30, 10W-40 or 20W-40 weight oil, grade SE or SF. (Page 14-2)

Steering

Index

NOTE: The tilt steering column is shown; the conventional steering column is similar except for the tilt mechanism.

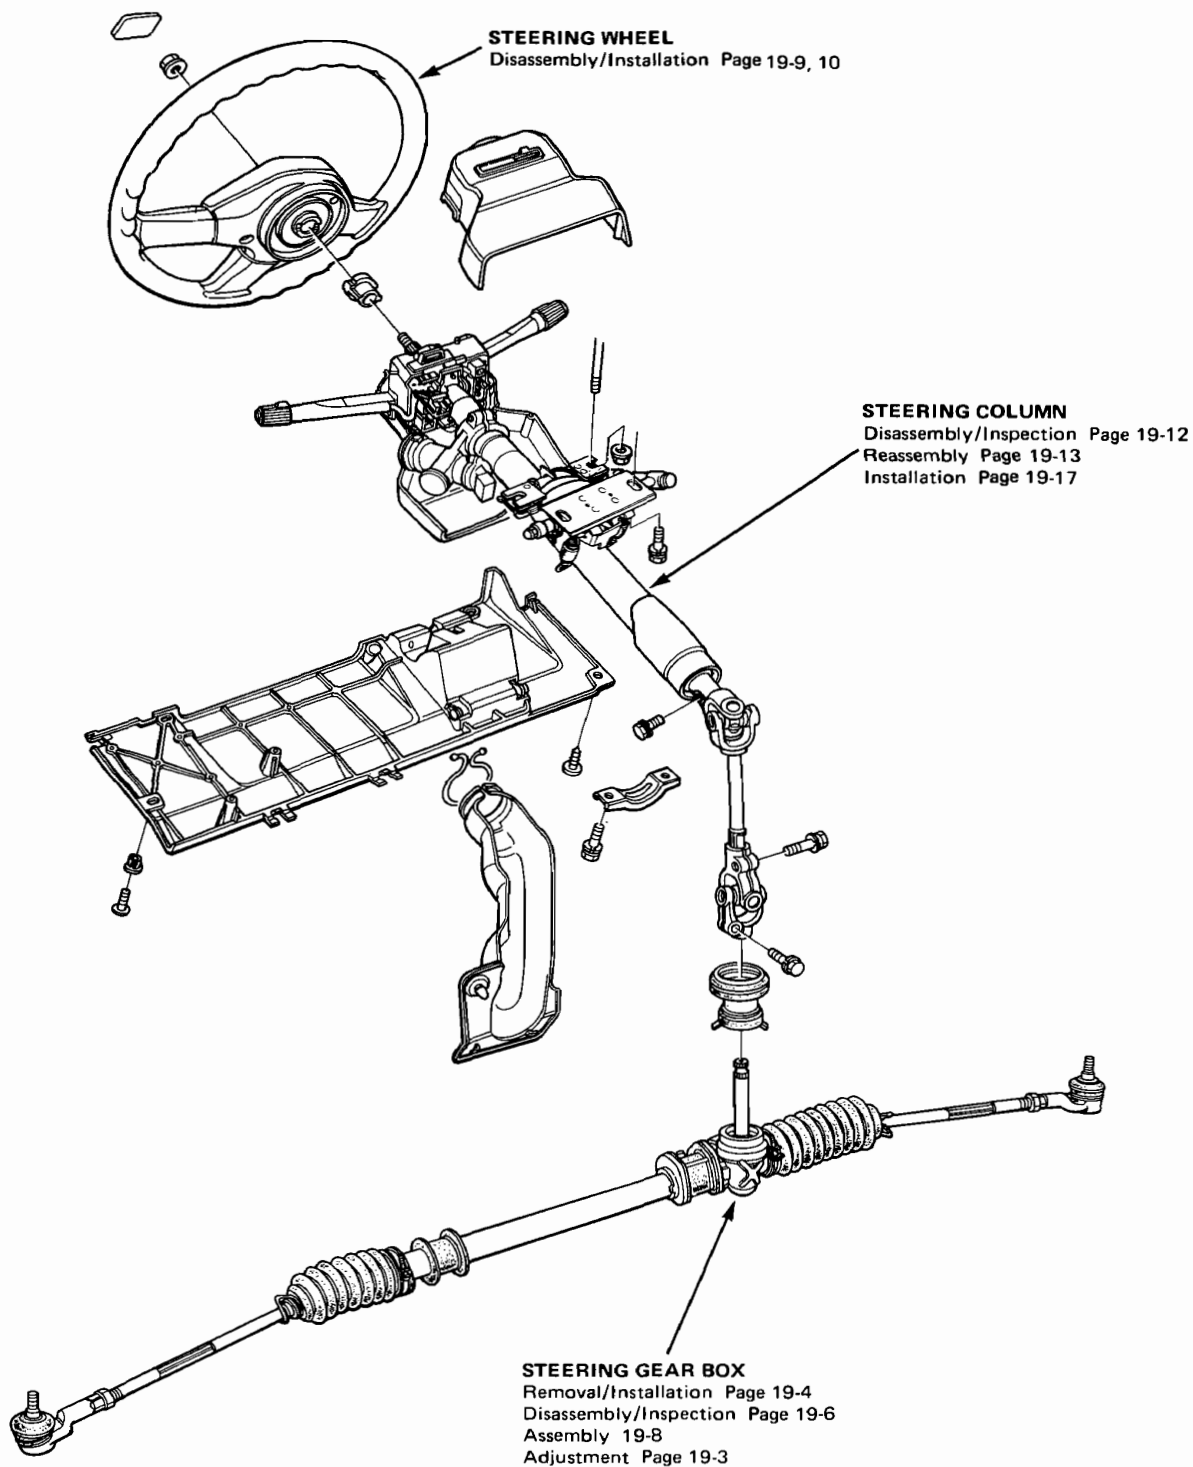


Inspection



Steering Wheel Rotational Play

1. Place the front wheels in a straight ahead position and measure the distance the steering wheel can be turned without moving the front wheels.
2. If the play exceeds the service limit, check all steering components.


Service Limit: 10 mm (0.4 in.)

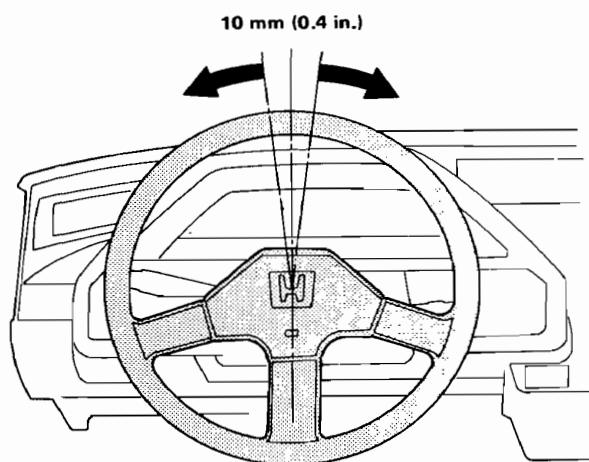

Steering Effort Check


1. Raise the front wheels off the ground.
2. Turn the steering wheel with a spring gauge and check its reading.
3. If the reading exceeds the service limit, adjust the steering gearbox as shown below.

Service Limit: 15 N (1.5 kg, 3.3 lbs)

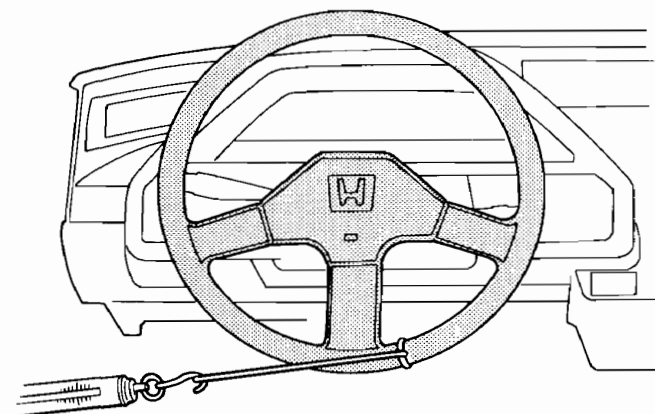

Steering Gearbox Adjustment

1. Loosen the rack screw locknut.
2. Torque the rack guide screw to 4 N·m (0.4 kg·m, 3 lb·ft).
3. Back off the screw approximately 1/10 of a turn from the bottomed (torqued) position and tighten the lock nut to 25 N·m (2.5 kg·m, 18 lb·ft).
4. Check for tight or loose steering through the complete turning travel.
5. Recheck steering effort as shown above.

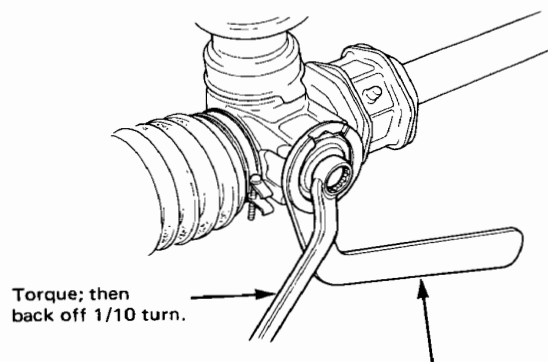


**STEERING GEARBOX LOCK NUT WRENCH
07916-6920100 or 07916-SA50001**


Gearbox

Removal/Installation

1. Remove the bottom bolt in the steering shaft connector, and pull the connector up off the pinion shaft.

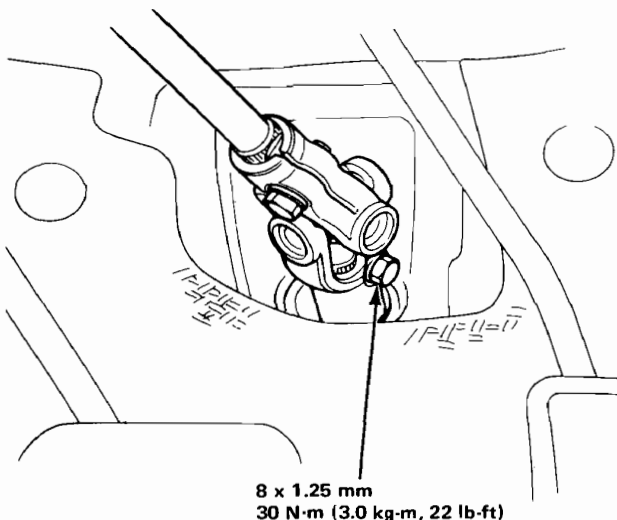


2. Raise the front of car on jack stands and remove the front wheels.
3. Remove the cotter pins, and unscrew the tie-rod end ball joint nuts halfway.
4. Break the ball joints loose using the Ball Joint Remover.
5. Then remove the nuts, and lift the tie-rod ends out of the steering knuckles.

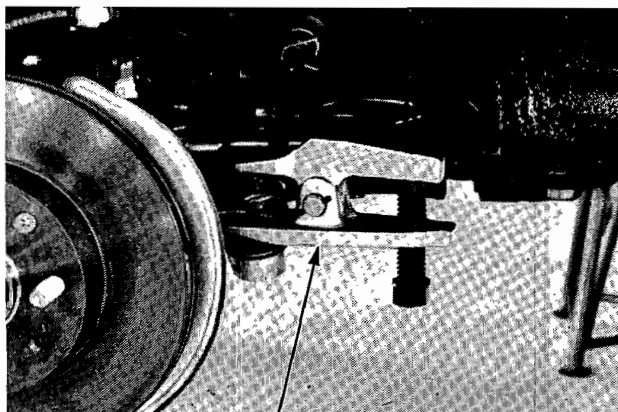


6. Manual Transmission Only:

- Disconnect the shift lever torque rod from the clutch housing.

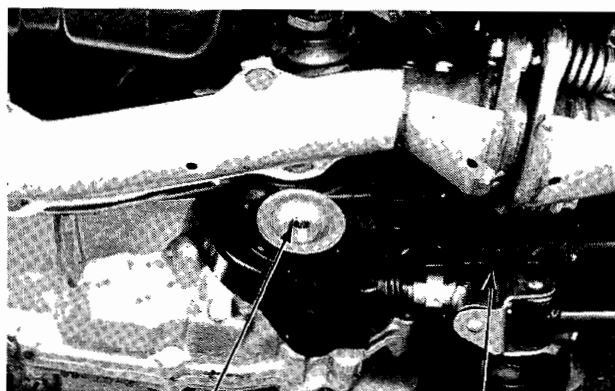

- Slide pin retainer out of way, drive out spring pin with punch, then disconnect shift rod.

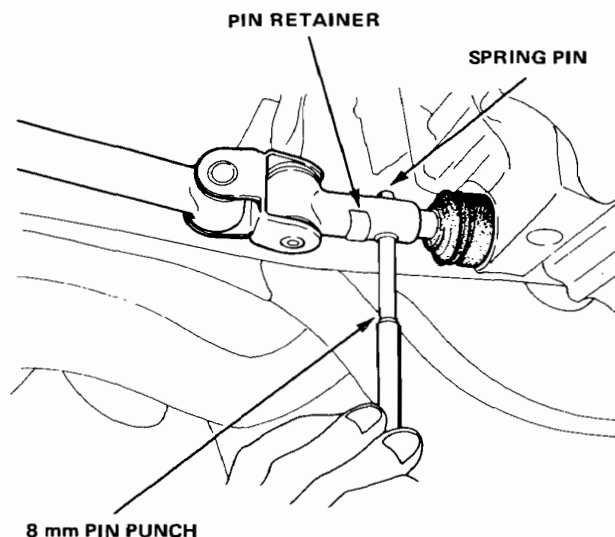


NOTE: On reassembly, slide retainer back into place after driving in spring pin.

7. Automatic Transmission Only:
Remove the shift cable guide from the floor and pull the shift cable down by hand.




8. Remove the self-locking nuts (two) connecting the exhaust header pipe to exhaust pipe B, then pull exhaust pipe B down by hand.

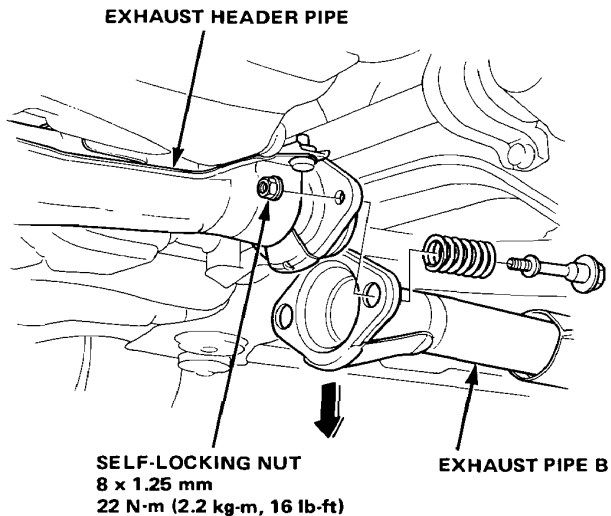

9. Push the rack all the way to the right (simulate a left turn), then remove the gearbox brackets.

Drop the gearbox far enough so the end of the pinion shaft comes out of its hole in the frame channel, then rotate it forward until the shaft is pointing to the rear.

Slide the gearbox to the right until the left tie-rod clears the exhaust pipe, then drop it down and out of the car to the left.


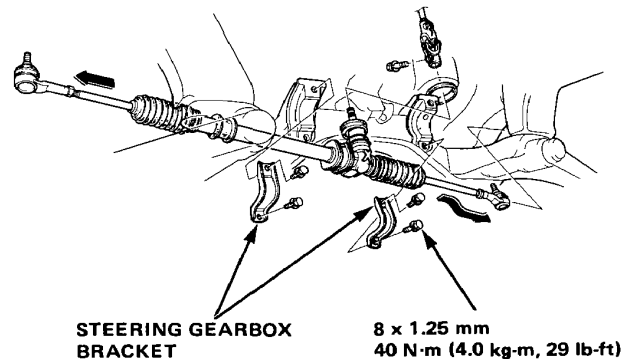


10. Gearbox installation is in the reverse order of removal.

Gearbox

Disassembly/Inspection

1. Carefully clamp the gearbox in a vise.
2. Loosen the bands, then pull the boots away from the ends of the gearbox and unbend the tie-rod lockwashers.
3. Hold the rack with a 21 mm wrench and unscrew the tie-rods with a 17 mm wrench.
4. Remove the rack guide components from the gearbox.

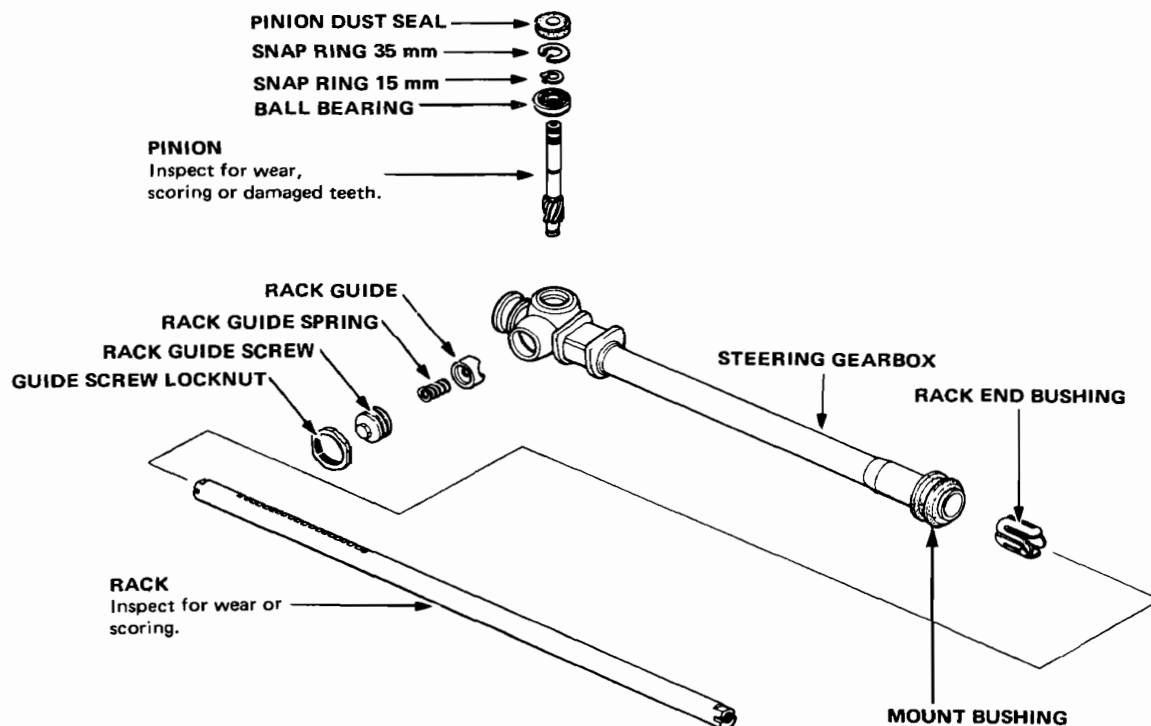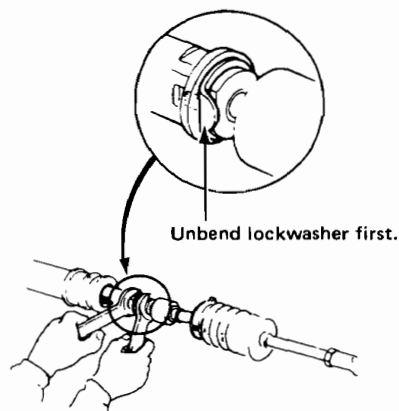


5. Remove the pinion boot, pinion dust seal, and 35 mm snap ring, then pull the pinion out of the gearbox.
6. Slide the rack out of the gearbox.




Rack End Bushing Installation

1. Apply a thin coat of grease to the inside surface of the rack end bushing.


CAUTION: Do not fill the slots with grease; they must remain open to serve as air passages.

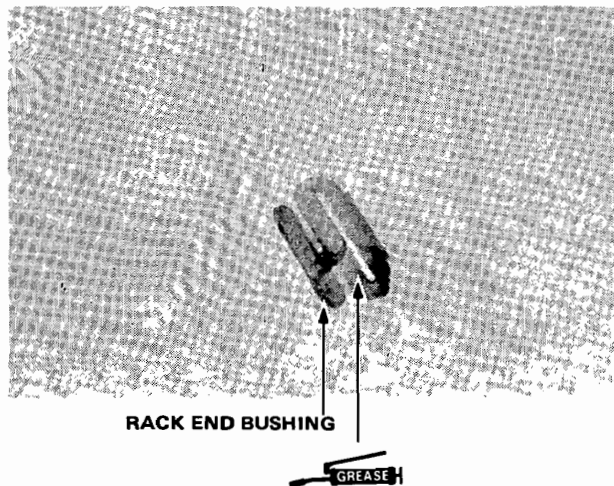

2. Install the rack end bushing by aligning the round projections on the bushing with the holes in the gearbox.

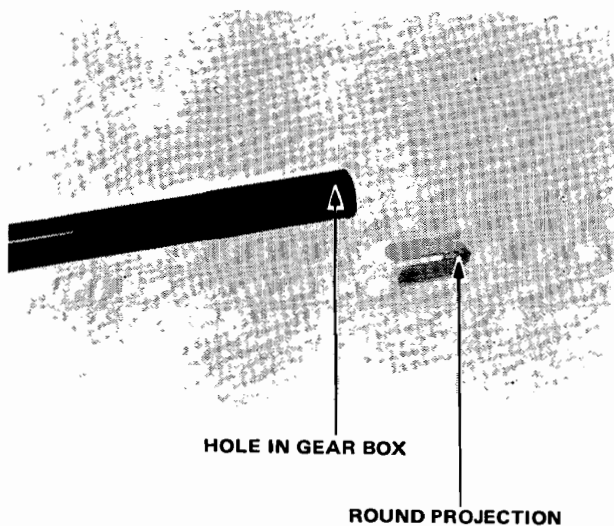

3. Slide the mount bushing onto the gearbox as shown.

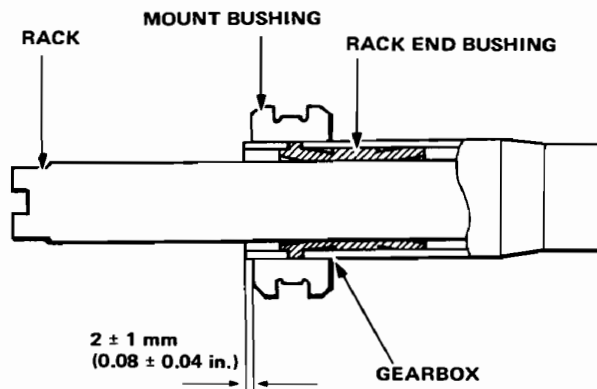


Gearbox

Reassembly

Reassemble the gearbox in the reverse order of disassembly, then:

1. Put a new lockwasher and stop washer on both tie-rod.
2. Screw each tie-rod into the rack while holding the stop washer so the tabs are in the slots in the rack end. Tighten the tie-rod securely, then bend a lockwasher back against the flat on the flange as shown.
3. Install the boots and secure with the bands.
4. Pack the tie-rod ends with grease, then install on the tie-rod. Do not tighten the locknuts until after tie-rod adjustment (page 20-3).
5. Fill the tie-rod end boots with grease and install as shown; replace boots that are cut or split.
6. Bleed air from the boots by gently squeezing them from the bottom up.
7. Reinstall the gearbox (page 19-4).
8. Adjust the gearbox (page 19-3).

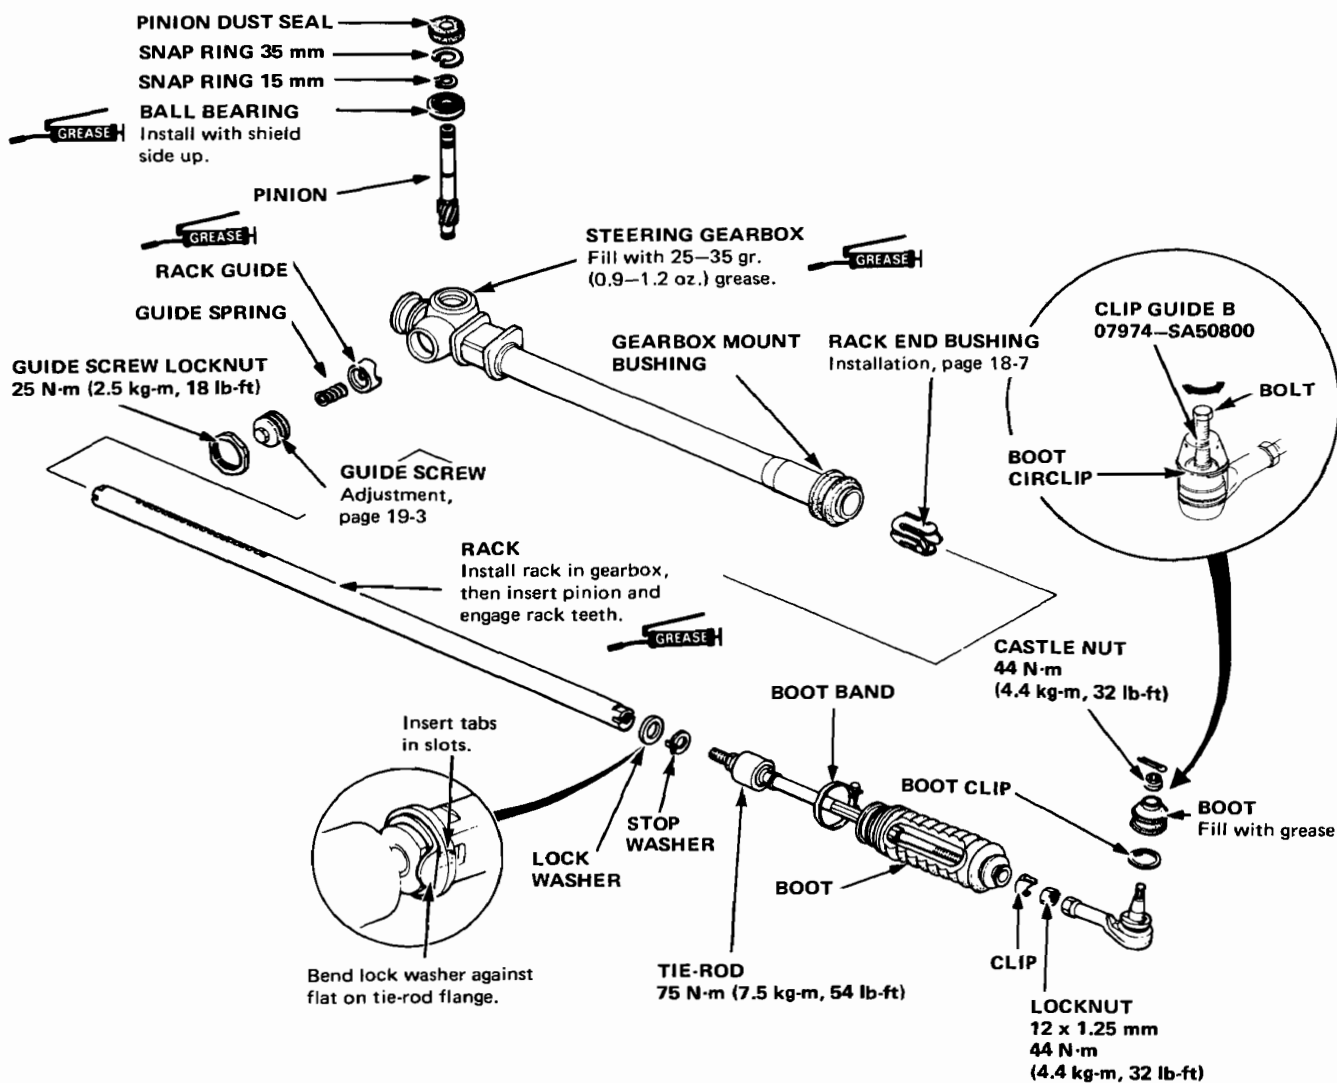

Steering Wheel



Disassembly/Reassembly

Removal


1. Remove the center pad.
2. Remove the steering shaft nut.
3. Remove the steering wheel by rocking it slightly side-to-side as you pull steadily with both hands.

Disassembly

1. Remove the upper and lower covers.
2. Remove the contact plate. Check the contact points and repair if necessary.



Reassembly

1. Adjust the clearance between the coil springs and the contact face to 1.0-1.5 mm (0.04-0.06 in.)
2. Clean the contact plate points.
3. Install the upper and lower covers.
4. Turn the front wheels to a straight ahead position.
5. Install the steering wheel in a straight ahead position.
6. Tighten the steering wheel mount nut and torque to 50 N·m (5.0 kg-m, 36 lb-ft).
7. Check that the horn works properly, then install the center pad.

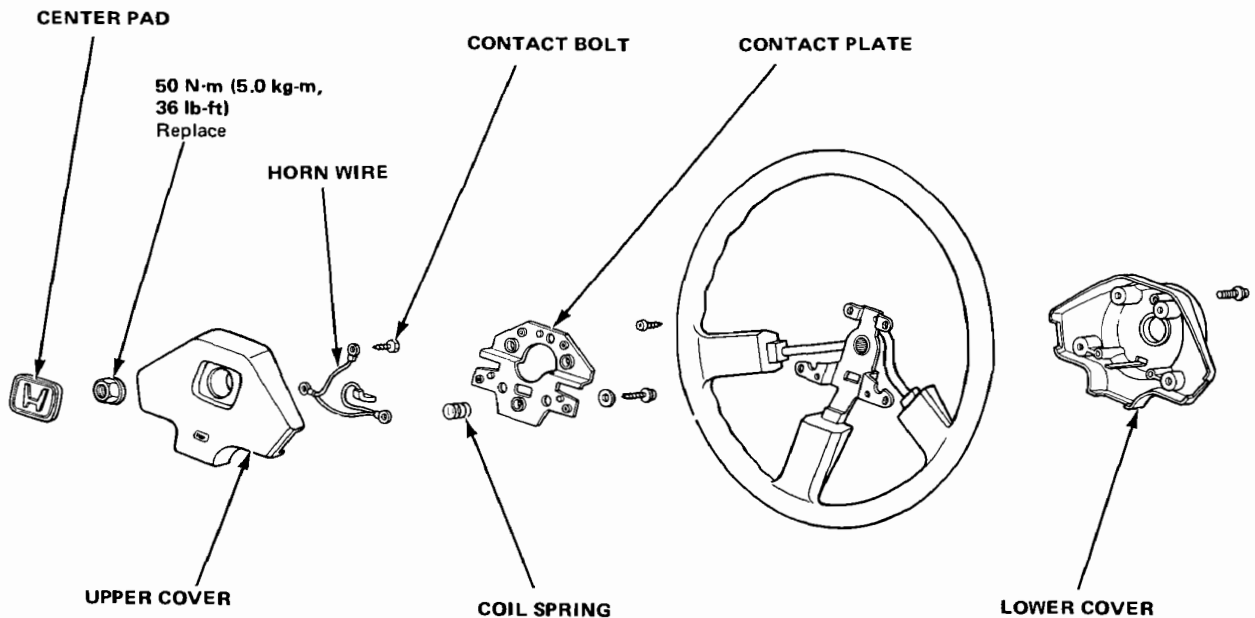

Steering Wheel

Disassembly/Reassembly

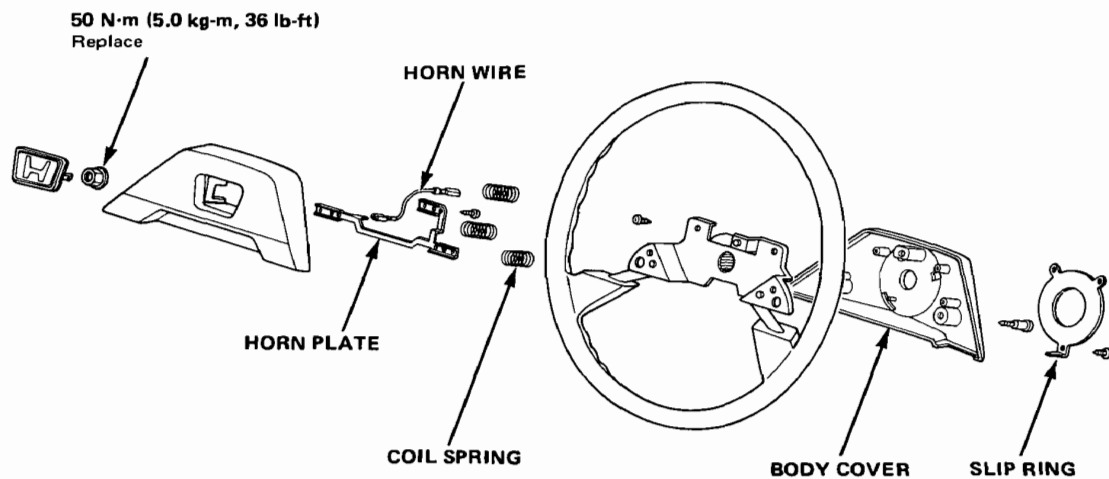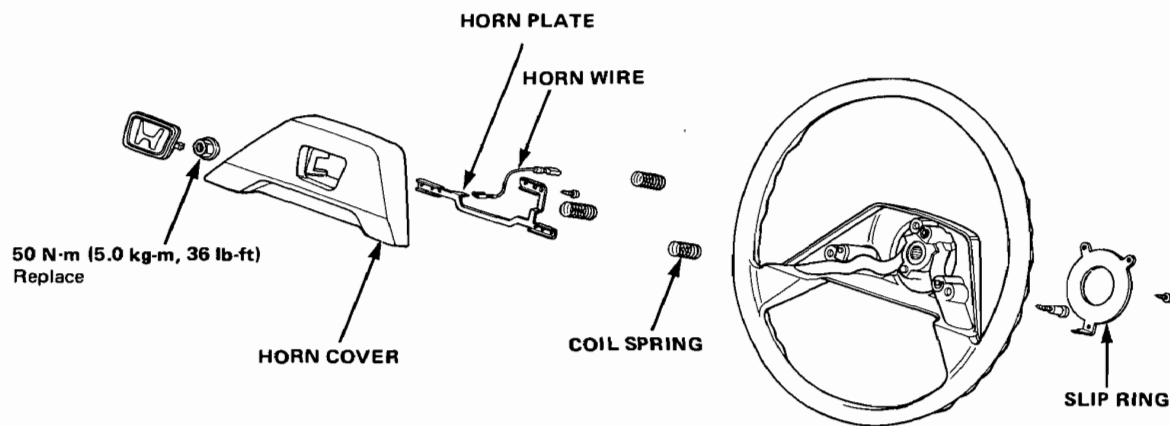




Column

Removal

1. Remove the steering wheel.
2. Remove the cover panel.
3. Remove the steering joint cover.
4. Remove the lower steering joint bolt.
5. Remove the lower column bracket.
6. Remove the nuts attaching the bending plate guide and bending plate.
7. Remove the upper column cover and disconnect each wire coupler.
8. Remove the steering column assembly.


NOTE: The tilt steering column is shown; the conventional steering column is similar except for the tilt mechanism.

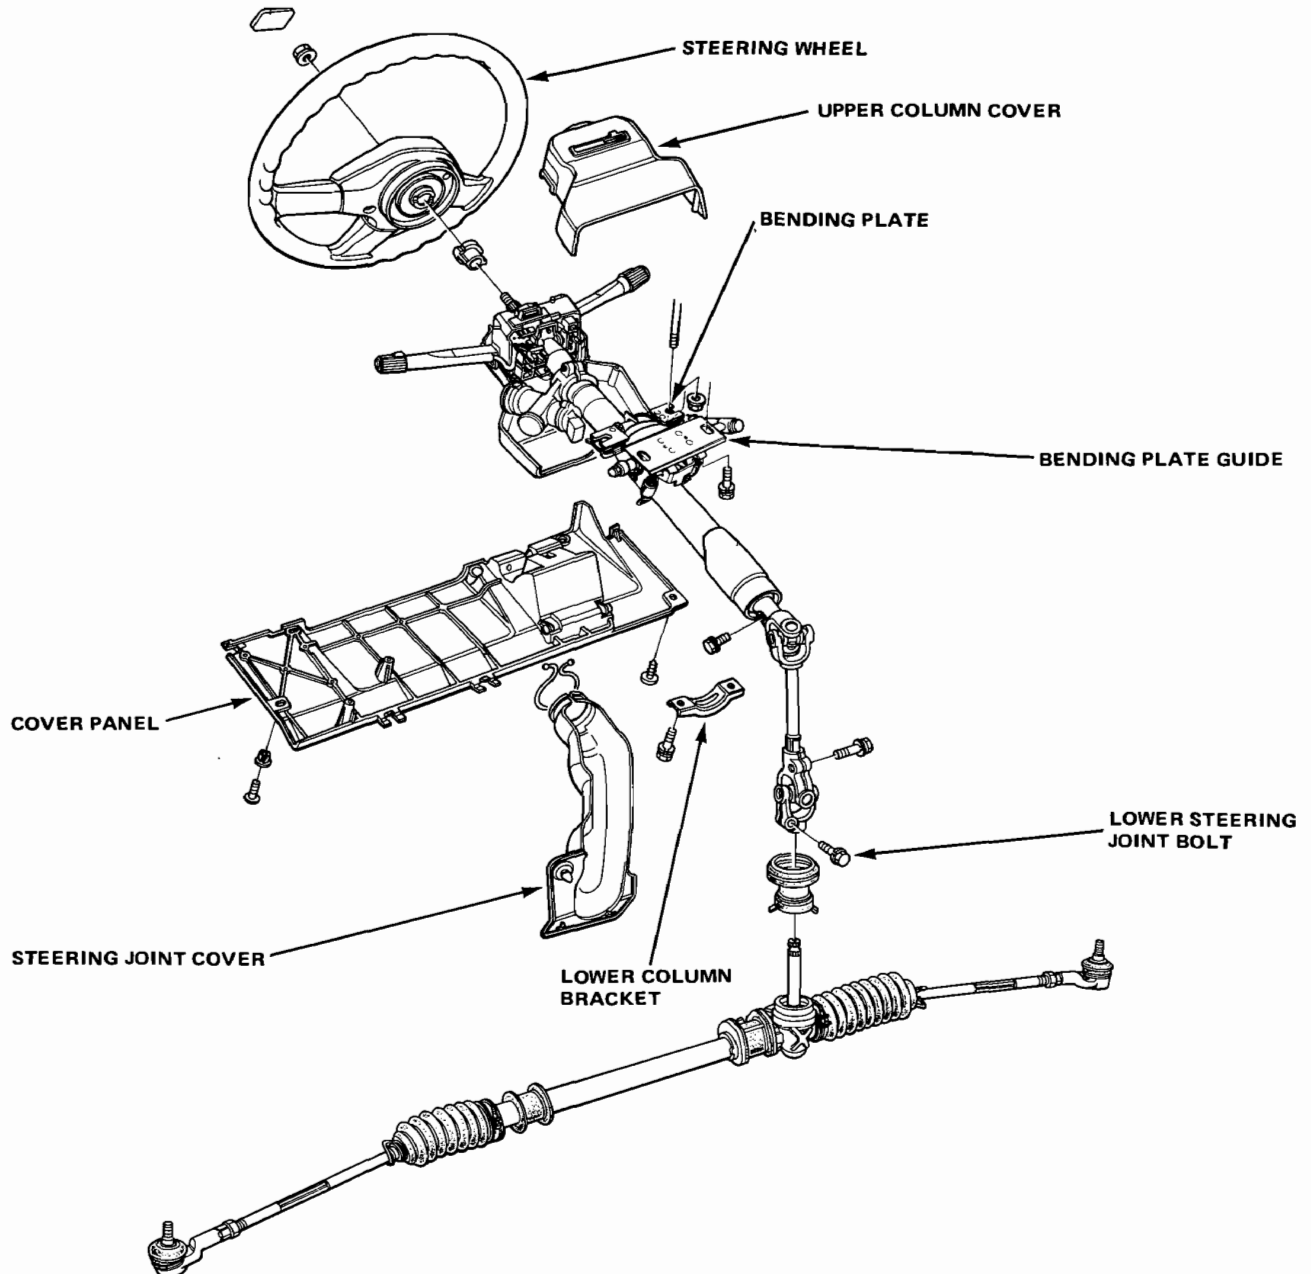

Column

Disassembly/Inspection


1. Remove the turn signal cancelling sleeve.
2. Remove the rubber band, then remove the upper column holder and bending plate.
3. Remove the bending plate guide.
4. Remove the combination switch.
5. Turn the ignition switch to the "I" position.
6. Remove the horn contact.
7. Pry off the circlip and pull down on the steering shaft.

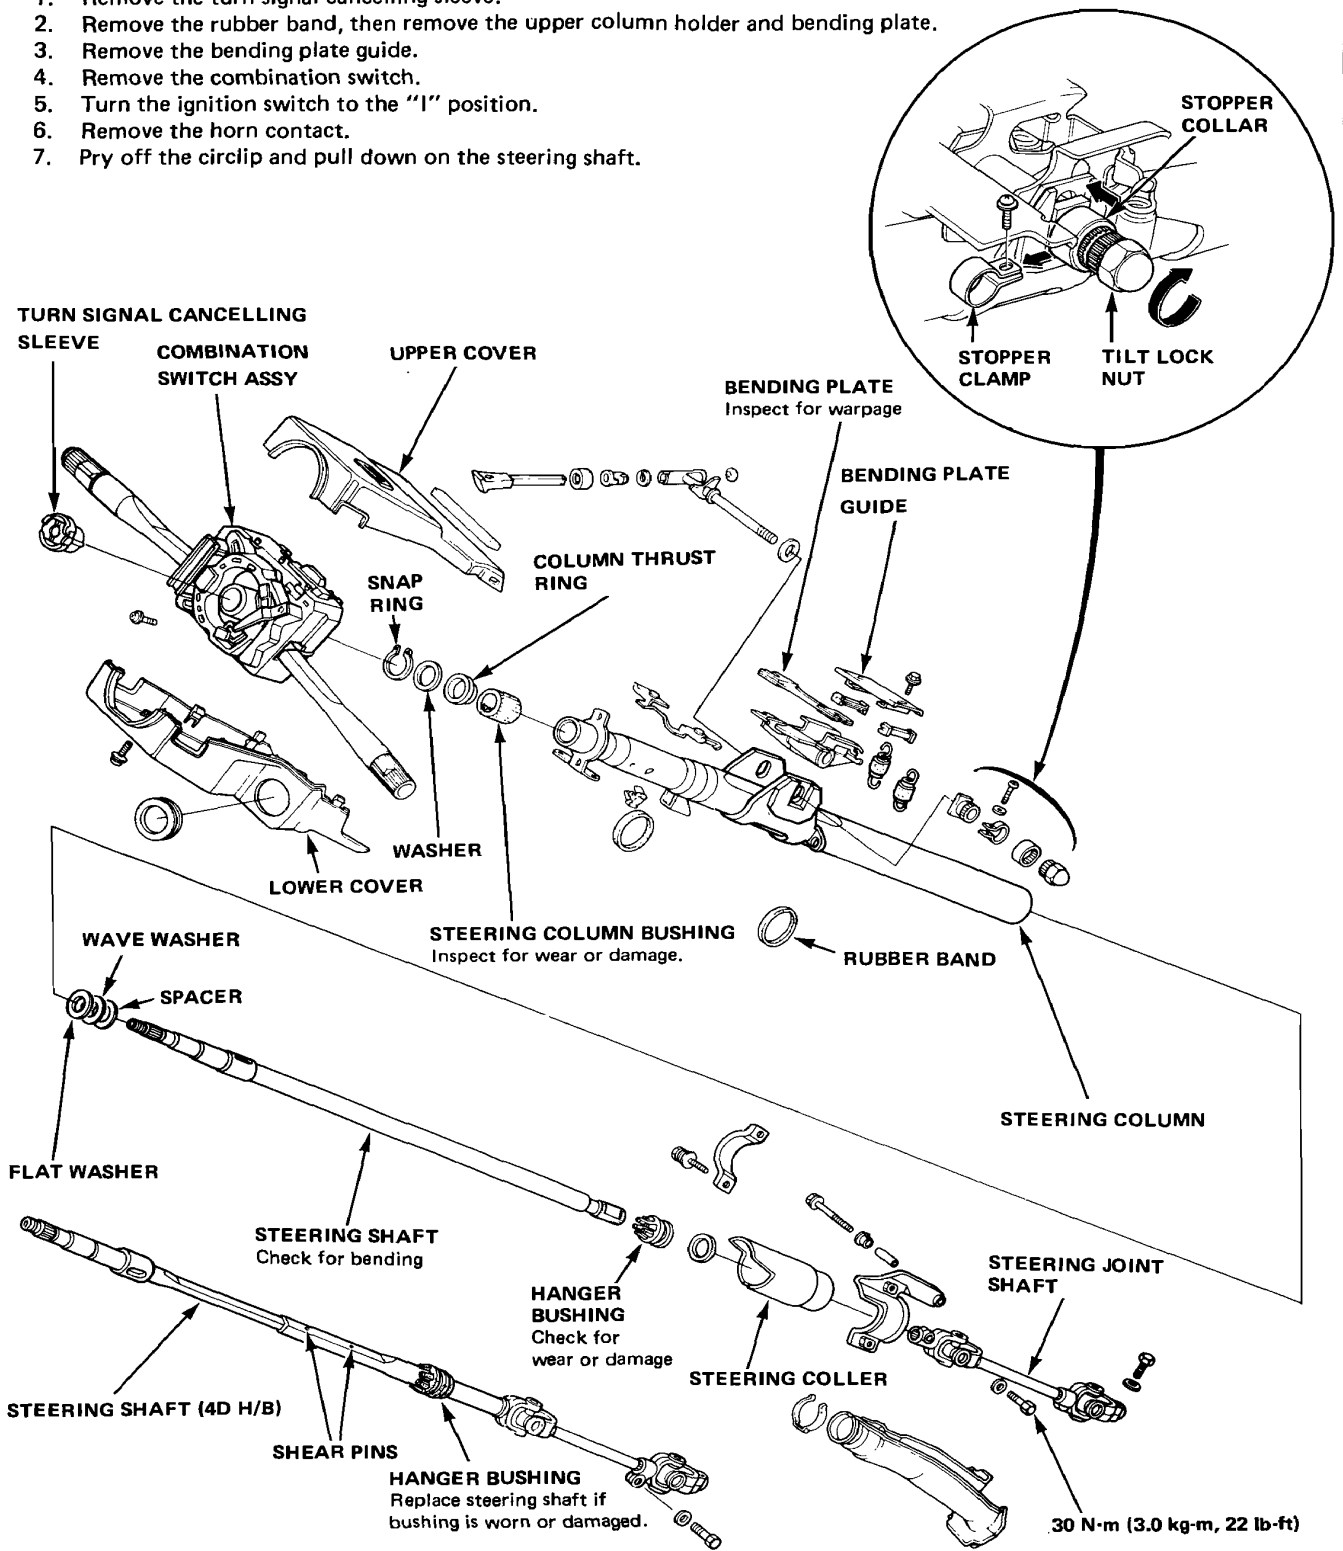




Reassembly

1. Insert the column bushing.
2. Set the steering thrust ring in position.

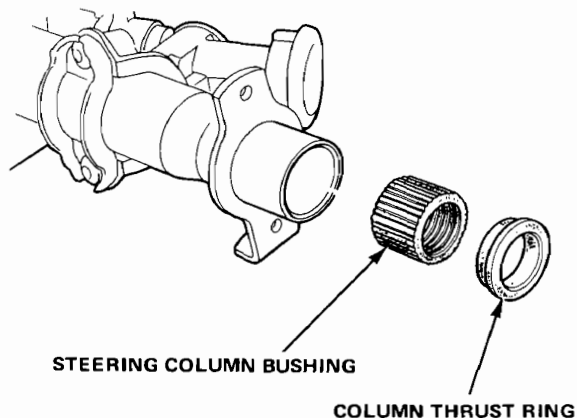


3. Apply grease to the column bushing and its thrust ring.
4. Coat the steering shaft with rest-preventive oil.
5. Install the spacer, spring washer, and flat washer on the end of the steering shaft.

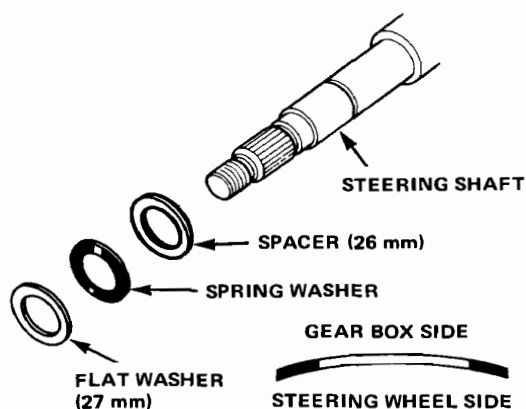


6. Carefully insert the steering shaft in the steering column from the bottom.
7. Install the retaining washer and snap ring on the steering shaft.

8. Install the horn contact.

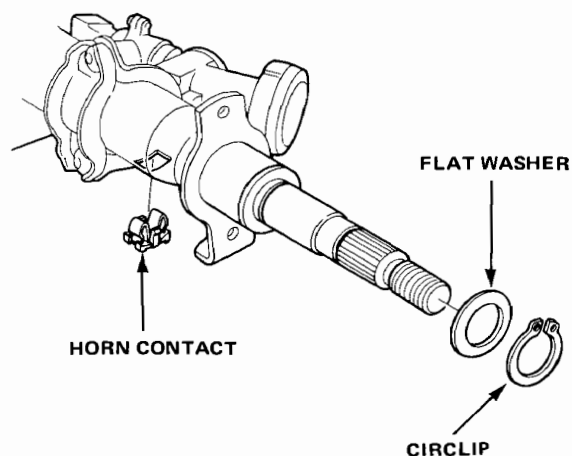

9. Apply grease to the lower end of the steering shaft and inside of the column.
10. Push the hanger bushing into the bottom end of the column as far as it will go.

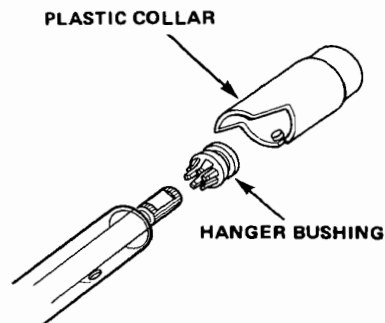


11. Install the plastic collar over the bottom end of the steering column by aligning the round projection inside the collar with the hole in the column.

(cont'd)

Column


Reassembly (cont'd)

12. Install the combination switch assembly.

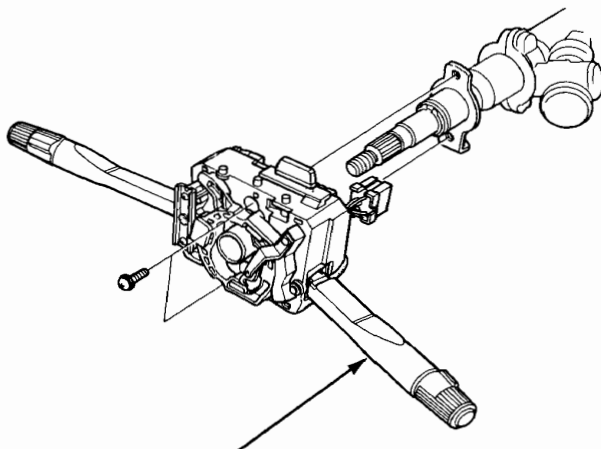

COMBINATION SWITCH ASSEMBLY


13. Install the turn signal switch (4 screws) and turn signal cancelling sleeve.

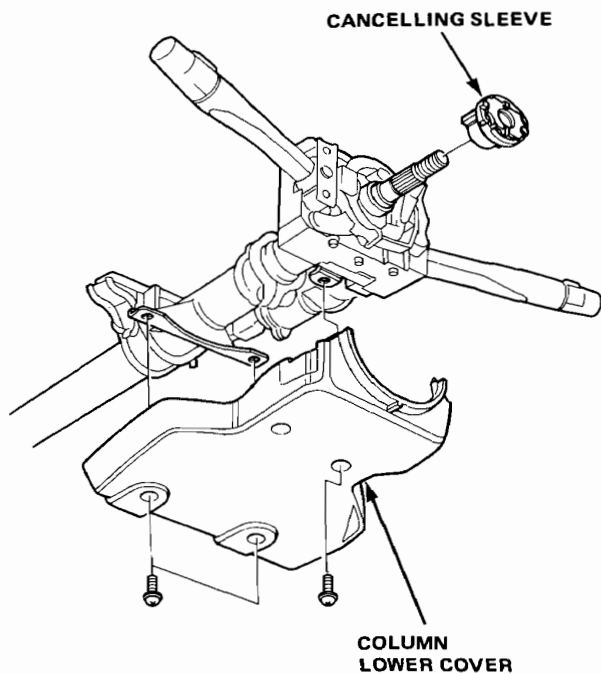

COLUMN LOWER COVER


14. Install the column upper cover and lower cover.

15. If applicable, assemble the tilt lever.

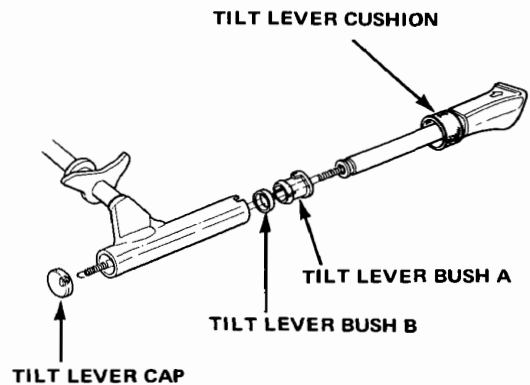

16. Position the bending plate on the steering column; if applicable insert the tilt lever shaft into the column with the washer as shown.

NOTE: Coat sliding surfaces with clean grease.

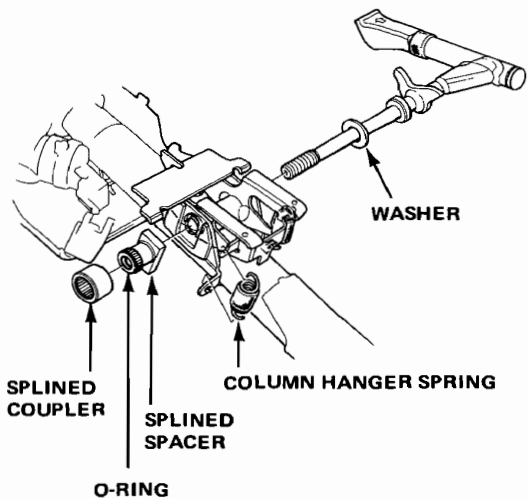

17. If applicable, install the splined spacer on the tilt shaft.


NOTE: Avoid damaging the O-ring.

18. Slide the splined coupler onto the splined spacer.

19. Install the column hanger spring.




20. If applicable, tighten the tilt lock nut to 7 N·m (0.7 kg-m, 5 lb-ft) then slide the splined coupler toward the tilt lock nut until it stops.

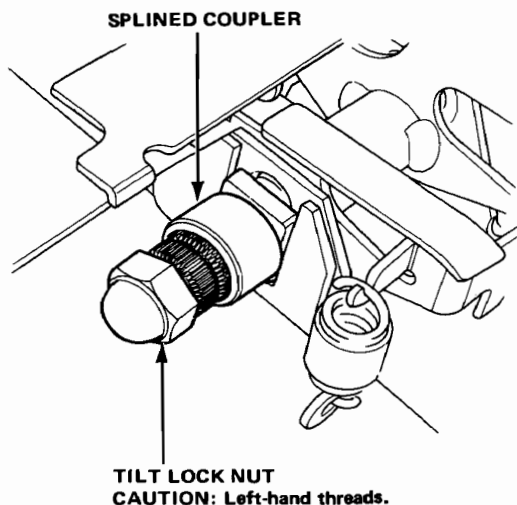

NOTE: To align the splines on the locknut and the spacer, turn the tilt shaft slightly.


21. If applicable, pull the tilt lever knob out fully and measure the force required to move the lever. Attach the spring scale 35 mm (1.38 in) from the end of the knob.

OPERATING FORCE: 5.9–9.0 kg (11–20 lbs)

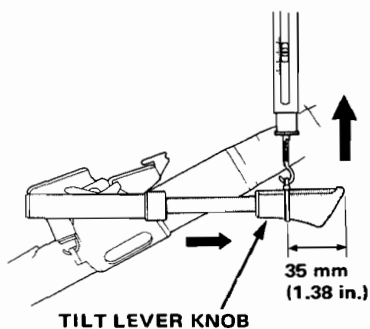


22. If the force measured does not fall within the specification, slide the splined coupler toward the splined spacer, and tighten or loosen the tilt locknut until the correct force is obtained.

NOTE: Turning the locknut counterclockwise will increase the force required.

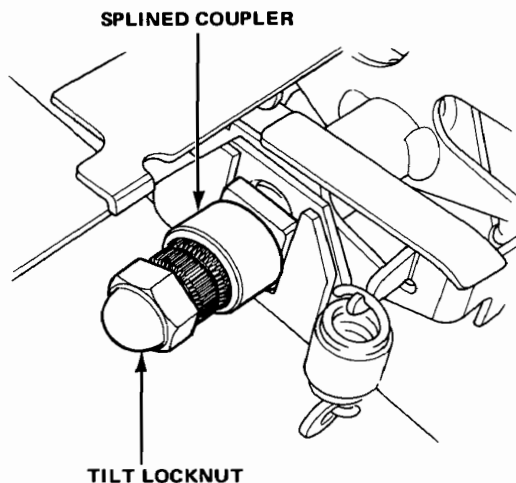

23. Slide the splined coupler toward the tilt locknut.
24. Install the lock clip.

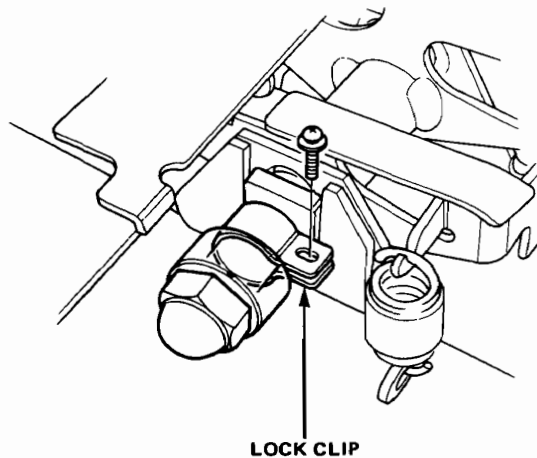


(cont'd)

Column


Reassembly (cont'd)

25. Install the bending plate guide. Secure the upper column holder and bending plate with the rubber bands. (Tilt steering column)


NOTE: Install the bending plate and plate guide with the arrows facing toward the steering gearbox.

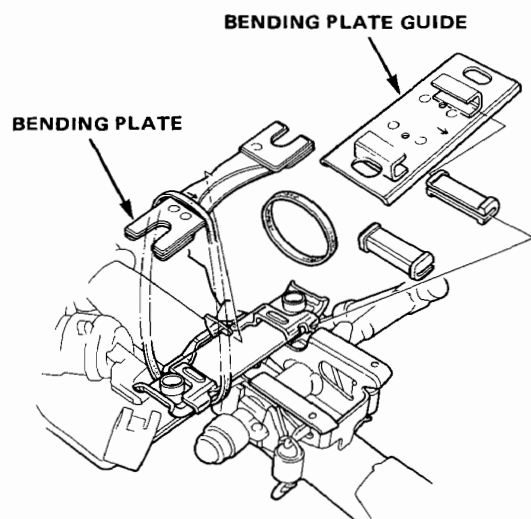

- Install the upper column bracket, bending plate and rubber bands. (Conventional steering column)

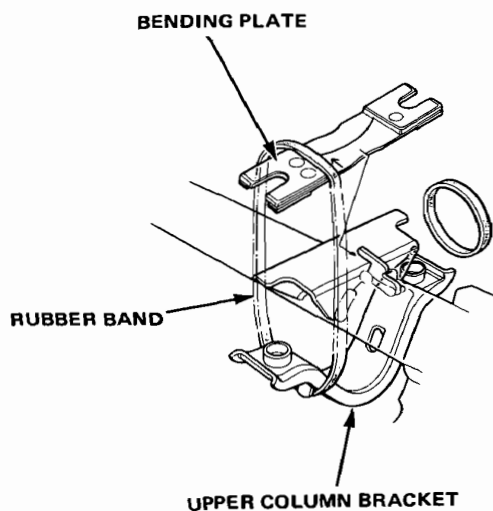


26. Slide the plain washer and steering joint onto the steering shaft aligning the cutout in the shaft with the hole in the joint. Insert the set bolt through the hole, pull the joint as far down as possible, and temporarily tighten the bolt (except for 4D H/B).

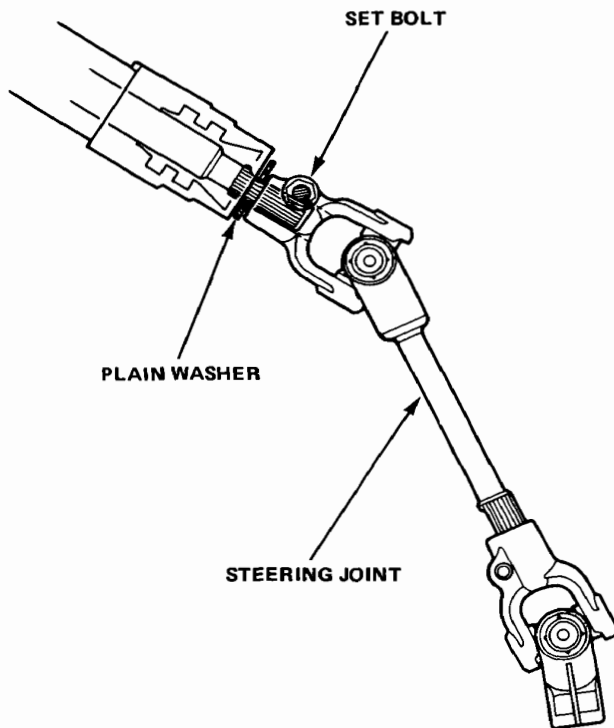



Installation

1. Slide the steering joint onto the steering pinion and loosely install the mount bolt.
2. Reconnect the wire couplers.
3. Install the column upper cover.
4. Insert the frame studs into the holes of the bending plate guide and plate and secure with the mount nuts.
5. Tighten the steering joint lower bolt.
6. Tighten the steering joint upper bolt.
7. Install the cover panel.
8. Install the steering wheel.

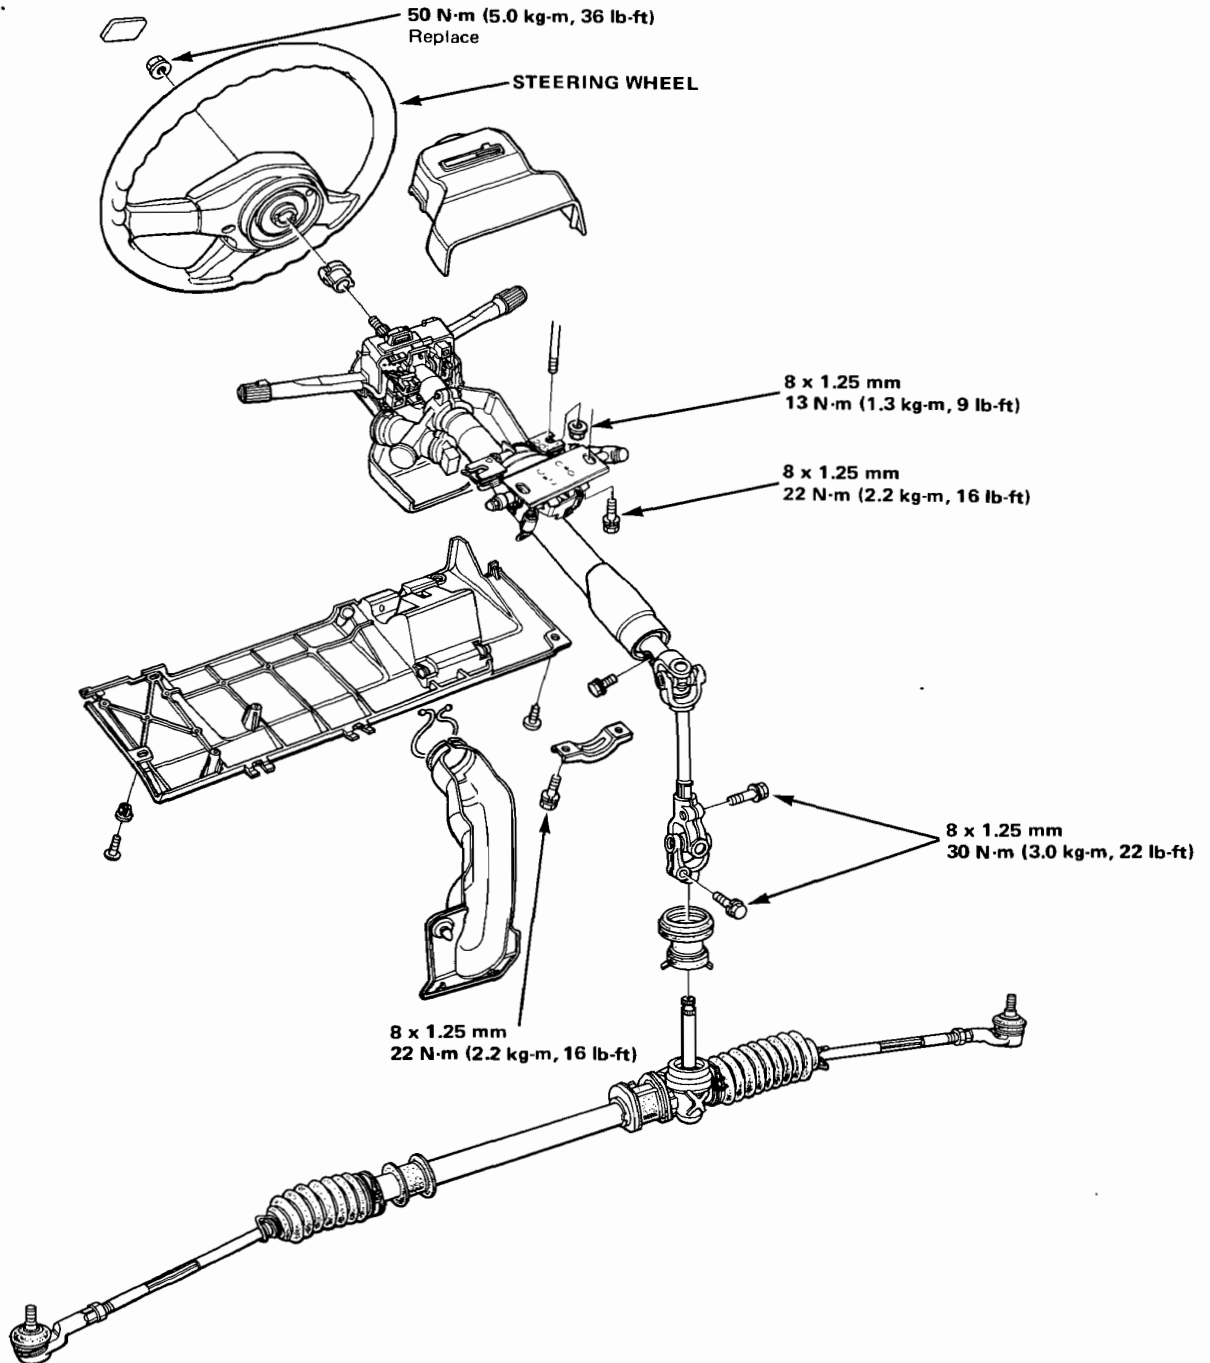

Suspension

Index

FRONT WHEEL ALIGNMENT

Inspection/adjustment, pages 20-3, 4

FRONT DAMPER

Removal, page 20-18

Disassembly/Inspection, page 20-18

Assembly, page 20-19

RADIUS ARM

Removal/Installation, page 20-13

FRONT STABILIZER BAR

Removal/Installation, page 20-13

FRONT KNUCKLE, HUB

Removal, page 20-10


Bearing removal/Installation, page 20-11

LOWER ARM

Removal/Installation, page 20-17

TORSION BAR SPRING

Removal/Installation, page 20-15

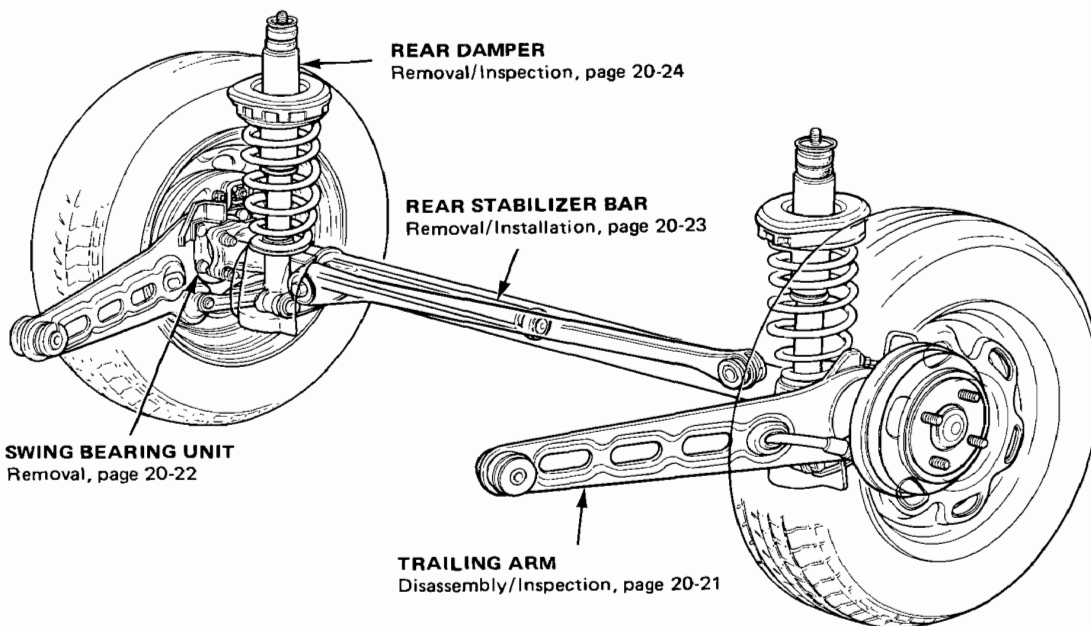

Wheel Alignment



Front Toe Adjustent

1. Center steering wheel spokes.


NOTE: Measure difference in toe measurements with the wheels pointed straight ahead.

Front Toe: $0 \pm 3 \text{ mm}$ ($0 \pm 0.118 \text{ in.}$)

- If adjustment is required, go on to step 2.
- If no adjustment is required, remove alignment equipment.

2. Loosen the tie-rod locknuts and turn both tie-rods in the same direction until the front wheels are in straight ahead position.
3. Turn both tie-rods equally until the toe reading is correct.
4. After adjusting, tighten the tie-rod locknuts.

NOTE: Make sure the tie-rod boots are not twisted or otherwise displaced after adjustment.

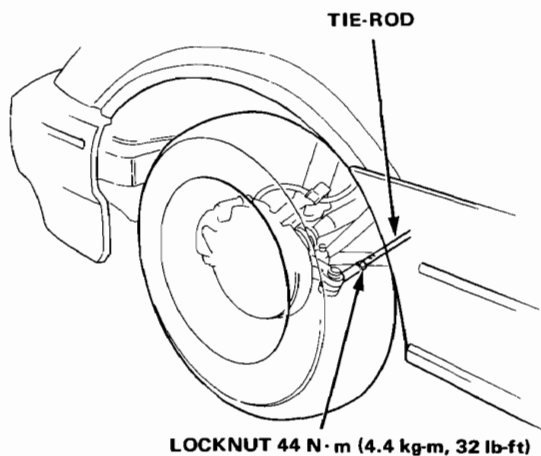


Camber Inspection

1. With the wheels in a straight ahead position, remove the spindle nut and install the special tool on the spindle as shown.
2. Set up the camber/caster gauge.
3. Read the camber on the gauge with the bubble at the center of the gauge.

Front Camber

	KC	KB,KE,KF KG,KS,KW KX	KQ	KY	Others
Coupe	$0^{\circ}00' \pm 1^{\circ}$	←	←	←	←
2D H/B	$0^{\circ}00' \pm 1^{\circ}$	←	←	$0^{\circ}20' \pm 1^{\circ}$	$0^{\circ}00' \pm 1^{\circ}$
4D	$0^{\circ}00' \pm 1^{\circ}$	←	←	$0^{\circ}30' \pm 1^{\circ}$	$0^{\circ}00' \pm 1^{\circ}$
4D H/B	$0^{\circ}20' \pm 1^{\circ}$	$0^{\circ}26' \pm 1^{\circ}$	$0^{\circ}30' \pm 1^{\circ}$	←	←

Rear Camber : $-0^{\circ}45' \pm 15'$

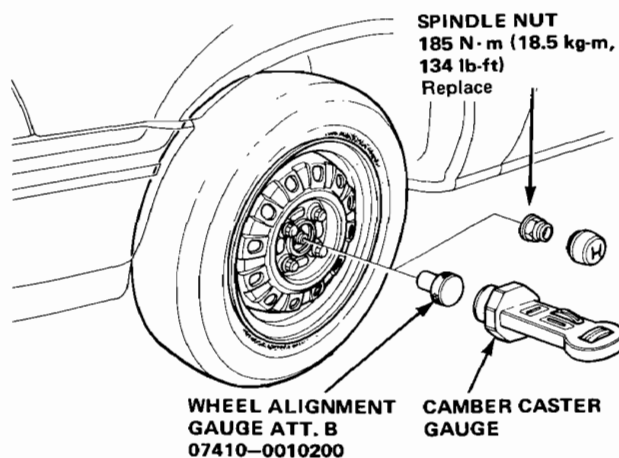

NOTE:

- If your alignment equipment must be mounted at axle centerline, use Honda front and rear wheel alignment attachments as shown.
- Camber is not adjustable. If out of specification, check suspension for damage and replace parts as necessary, then recheck alignment.

Rear Toe Inspection

1. Release parking brake.

NOTE: If the parking brake is engaged, you may get an incorrect reading.

Rear toe: $IN 2 \pm 2 \text{ mm}$ ($0.079 \pm 0.079 \text{ in.}$)

NOTE: Rear wheel toe is not adjustable. If out of specification, check suspension for damage and replace parts as necessary, then recheck alignment.


Wheel Alignment

Caster Inspection

1. Jack up the front of the car and set the turning radius gauges beneath the front wheels, then lower the car.
2. Remove the spindle nut and install Wheel Alignment Gauge Attachment.
3. Install Camber/Caster Gauge on the Attachment and apply the front brake. Turn the wheel 20° inward.
4. Turn the adjust screw so that the bubble in the caster gauge is at 0°. Return the wheel to the straight ahead position.

Caster angle:

	KC	KB,KE,KF KG,KS,KW KX	KQ	KY	Others
Coupe	2°25'±1°	←	←	←	←
2D H/B	2°20'±1°	←	←	2°10'±1°	2°20'±1°
4D	2°20'±1°	←	←	2°15'±1°	2°20'±1°
4D H/B	2°05'±1°	1°49'±1°	2°00'±1°	←	←

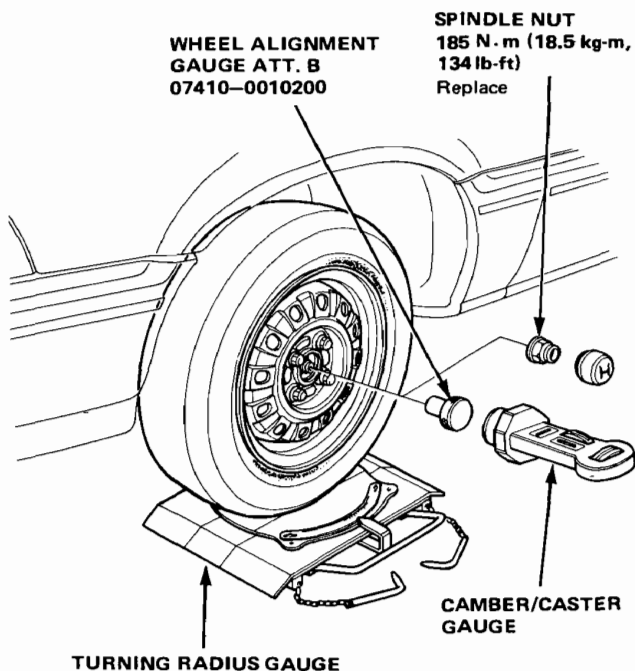

NOTE:

- If your alignment equipment must be mounted at axle centerline, use Honda front and rear wheel alignment attachments as shown.
- Caster is not adjustable. If out of specification, check suspension for damage and replace parts as necessary, then recheck alignment.

Spring Height


Inspection

NOTE:

- The car must not be occupied; the tires must be properly inflated and in good condition (i.e., the tread wear indicators must not be showing); and the fuel tank must be full.
- Bounce the front or rear of the car up and down several times before measuring.

Front

1. Measure the torsion bar spring height between the ground and the wheel arch.

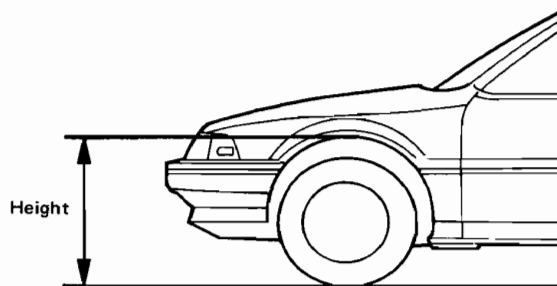

		Standard
Coupe	KC	644±15mm (25.35±0.59 in)
	Others	639±15mm (25.16±0.59 in)
2D H/B	All	646±15mm (25.43±0.59 in)
	Arias for higher Ground clearance	671±15mm (26.42±0.59 in)
4D	All	651±15mm (25.63±0.59 in)
	Arias for higher Ground clearance	676±15mm (26.61±0.59 in)
4D H/B	KB,KE,KF,KG,KS,KW KX,KD,KP,KT,KU,KQ	659±15mm (25.94±0.59 in)
	KC	649±15mm (25.55±0.59 in)
	Arias for higher Ground clearance	674±15mm (26.54±0.59 in)

Higer Ground Clearance:

Standard for KY

Factory Option for KD, KE, KF, KP, KT, KU, KW

2. Adjust the height if the reading is not within specifications. (Page 20-5)

Wheel Measurement




Torsion Bar Adjustment

1. Raise the front wheels off the ground.
2. Adjust the height by turning the height adjusting nut.

Height adjusting nut	Height
Tighten (Turned right)	Up
Loosen (Turned left)	Down

Height varies 5 mm (0.20 in) per turn of the adjusting nut.

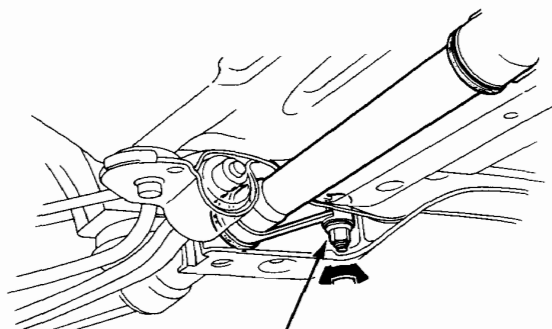


HEIGHT ADJUSTING NUT

3. Lower the front wheels to the ground, push the car up and down and back and forth several times, then confirm that the spring height is within specifications.

Bearing End Play


Front Wheel End Play

Standard: 0–0.05 mm (0–0.002 in.)

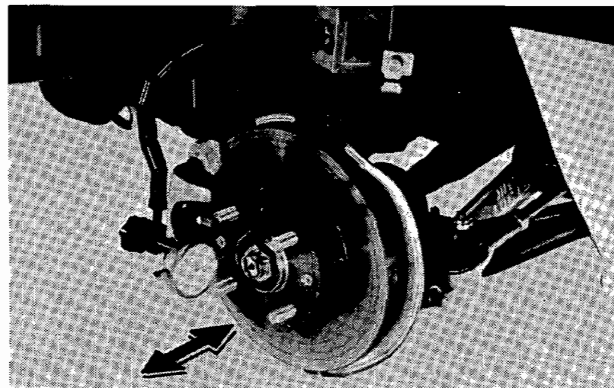

Rear Wheel End Play

Standard: 0–0.05 mm (0.002 in)

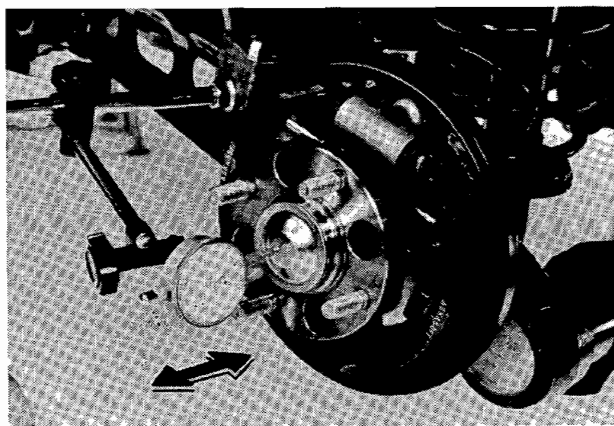


Wheel Measurement

Runout


Front and Rear Wheel Axial Runout

Standard: Steel—
0–1.0 mm (0.04 in.)
Aluminum—
0–0.7 mm (0.028 in.)

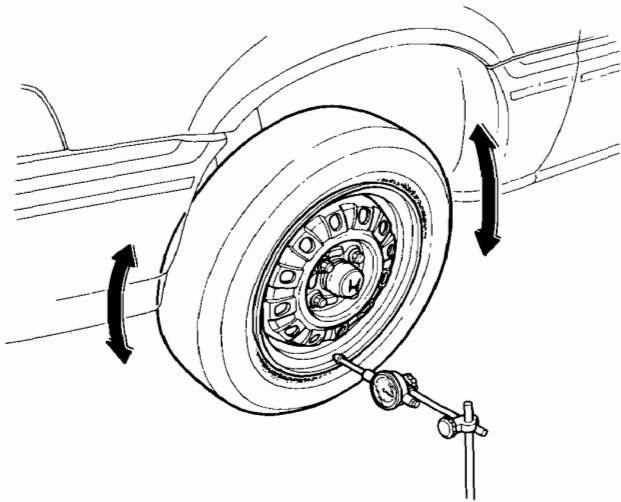

Front and Rear Wheel Radial Runout

Standard: Steel— 0–1.0 mm (0.039 in.)
Aluminum— 0–0.7 mm (0.028 in.)

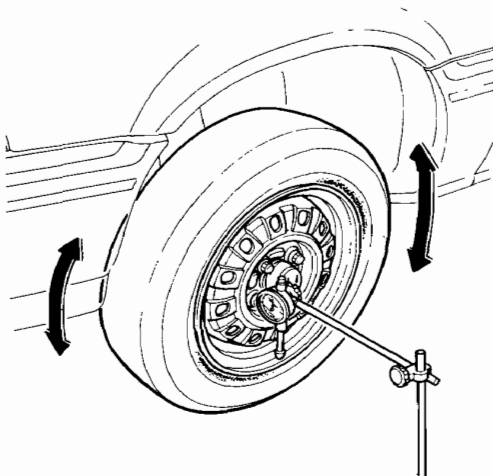


Front Suspension




Index

NOTE: Replace the self-locking bolts if you can easily thread a nut past their nylon locking inserts.

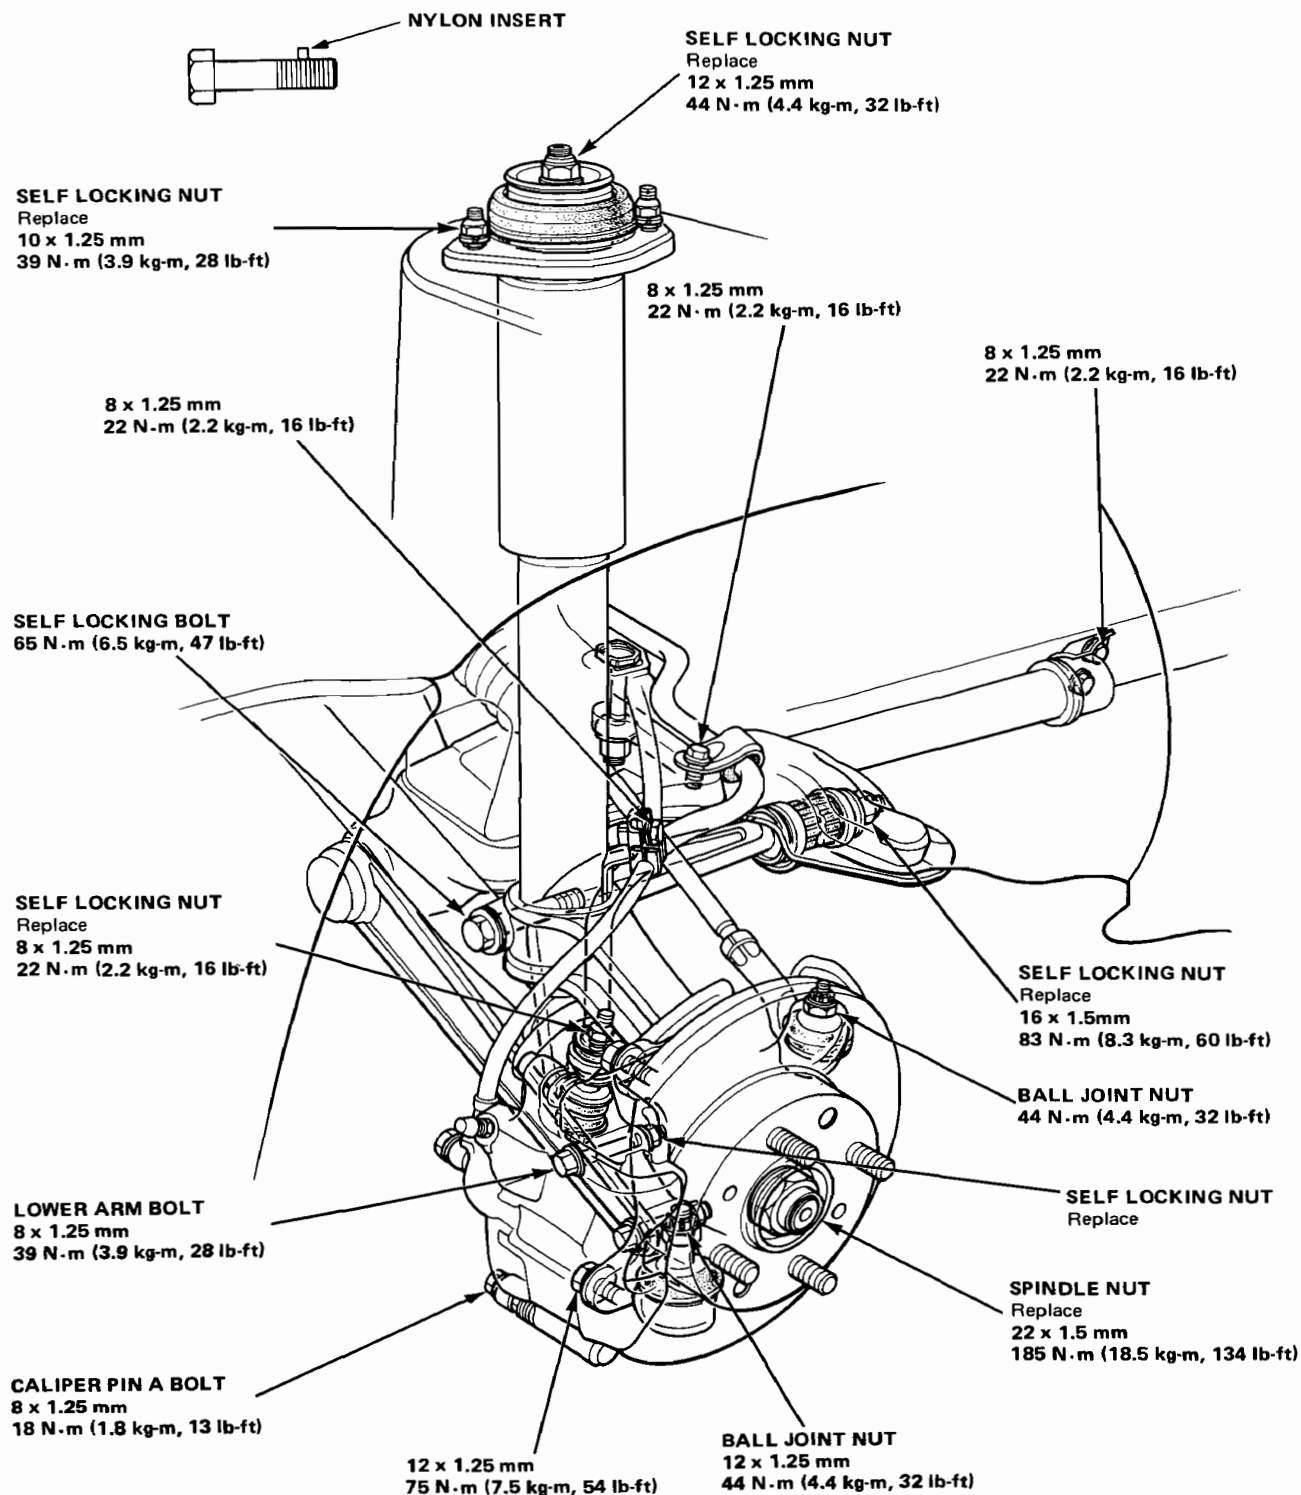

Knuckle/Hub

Index

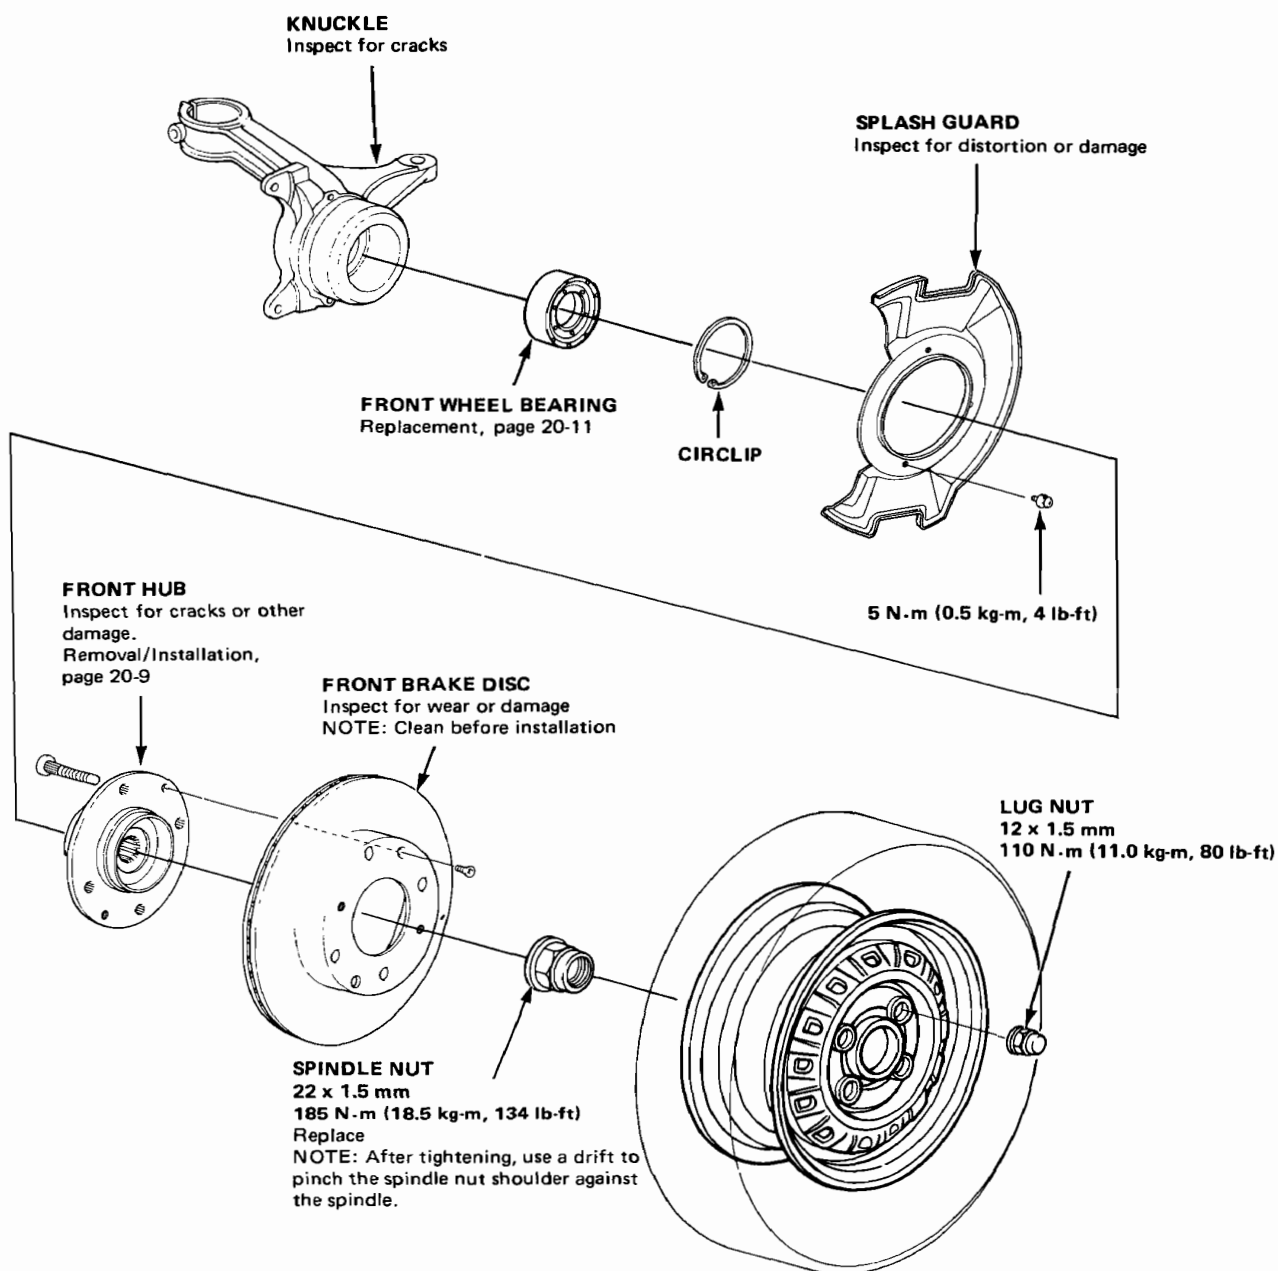




Replacement

1. Pry the spindle nut lock tab away from the spindle, then loosen the nut using a 32 mm socket.

SPINDLE NUT

Replace


185 N·m (18.5 kg-m, 133 lb-ft)

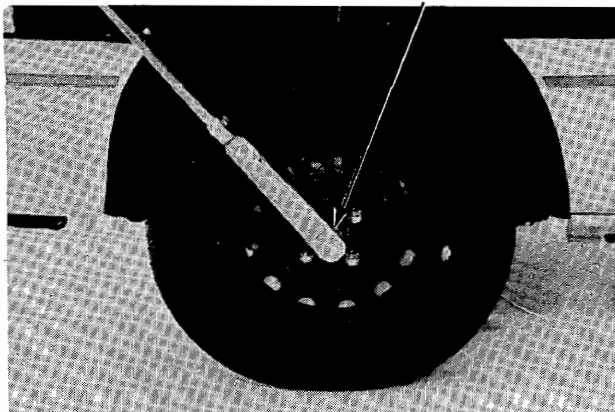

2. Loosen the lug nuts slightly.
3. Raise the front of car and support with safety stands in the proper locations.
4. Remove the lug nuts, wheel, and spindle nut.
5. Remove the caliper mounting bolts and hang the cliper assembly to one side.

CAUTION: To prevent accidental damage to the caliper assembly or brake hose, use a short piece of wire to hang the caliper assembly from the undercarriage.

CALIPER ASSY

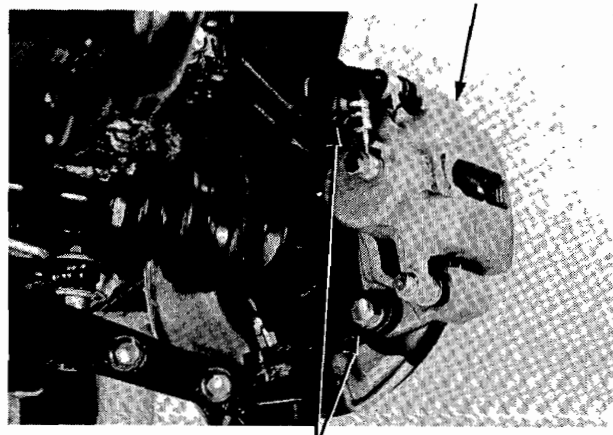


78 N·m (7.8 kg-m, 56 lb-ft)

6. Remove the 6 mm brake disc retaining screws.
7. Screw two 8 x 1.25 x 12 mm bolts into the disc to push it away from the hub.

NOTE: Turn each bolt two turns at a time to prevent cocking disc excessively.

DISC RETAINING SCREWS 6 mm

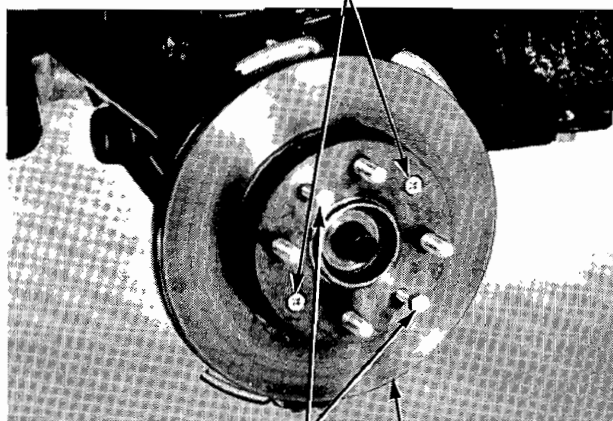


BOLTS FOR DISC REMOVAL
8 x 1.25 mm

BRAKE DISC

8. Remove the cotter pin from the tie-rod castle nut then remove the nut.
9. Break loose the tie-rod ball joint using Ball Joint Remover, then lift the tie-rod out of the knuckle.

TIE-ROD

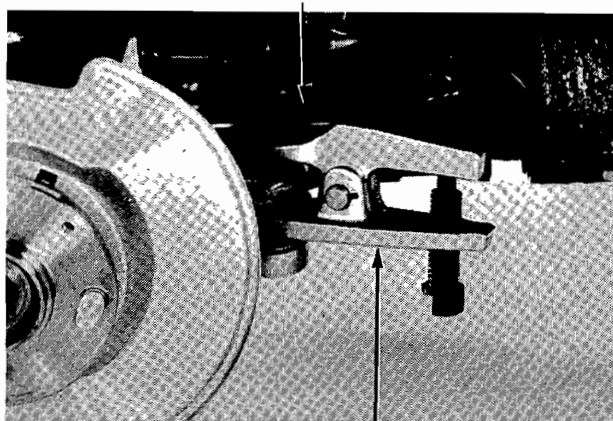

BALL JOINT REMOVER
07941-6920001

44 N·m (4.4 kg-m, 32 lb-ft)


Knuckle/Hub

Replacement (cont'd)

10. Use a floor jack to support the lower control arm, then remove the ball joint cotter pin and nut.

CAUTION: Make sure the floor jack is positioned securely under the lower control arm, at the ball joint. Otherwise, torsion bar tension on the lower control arm may cause the arm to "jump" suddenly away from the steering knuckle as the ball joint is being removed.


11. Pry the ball joint out of the steering knuckle. If necessary use the ball joint remover.

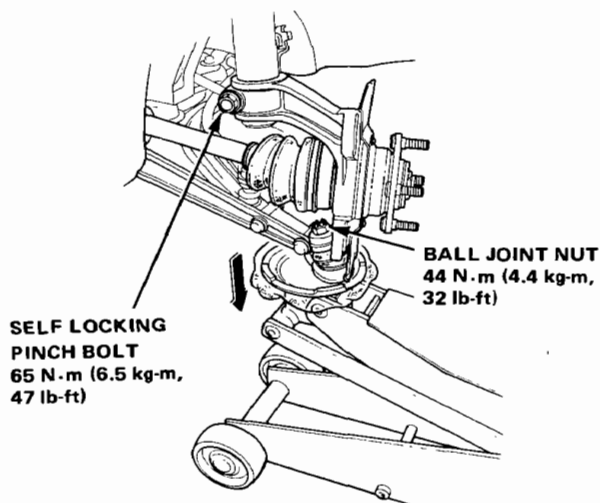


12. Remove the self locking pinch bolt, then use a brass or lead hammer to tap the knuckle down until it clears the damper.

13. Pull the driveshaft out of the knuckle, then remove the hub/knuckle assembly.

14. Remove the two screws holding the splash guard on the steering knuckle.

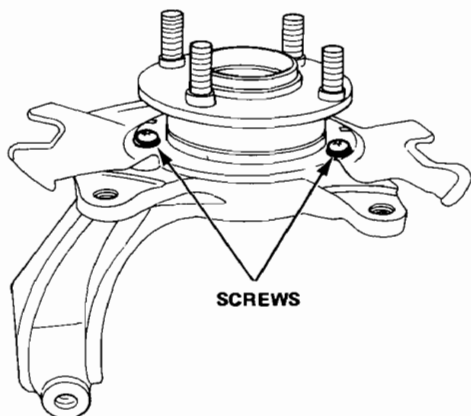

15. Remove the hub from the knuckle with a hydraulic press and the special tools shown below.

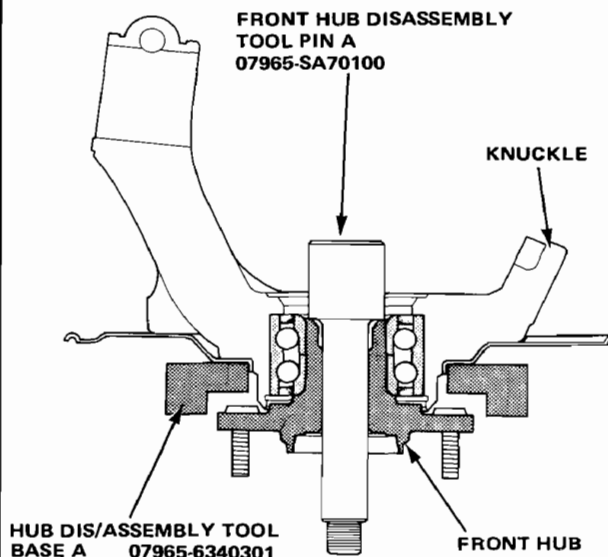


CAUTION:

- Make sure the knuckle is securely mounted on the base.
- Take care not to distort the splash guard.




Bearing Removal

1. Remove the circlip.
2. Remove the bearing from the steering knuckle with the hydraulic press and special tools shown below.

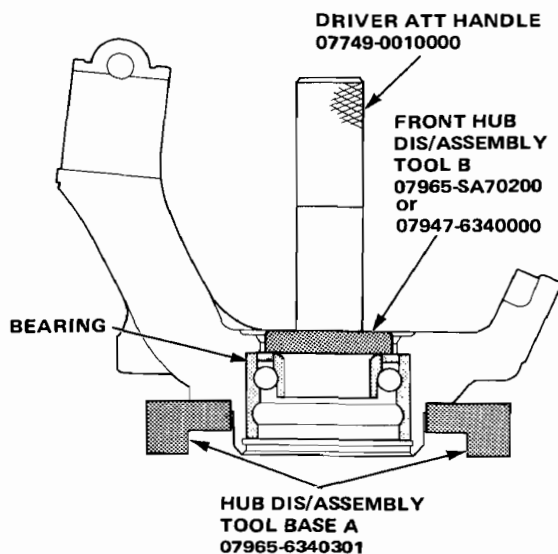


3. Remove the outboard bearing inner race from the hub with the special tool and a bearing remover.

NOTE: Wash the knuckle and hub thoroughly before re-assembly.

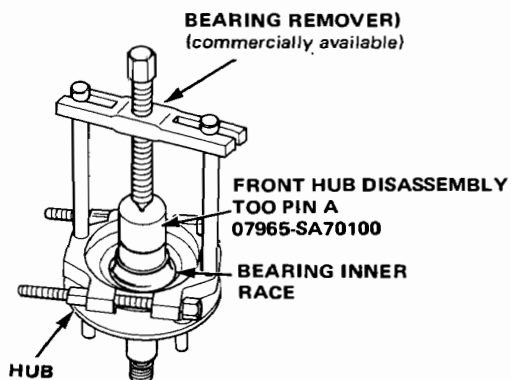


Knuckle/hub Reassembly

1. Push the bearing assy into the knuckle with a hydraulic press and the special tools shown below.

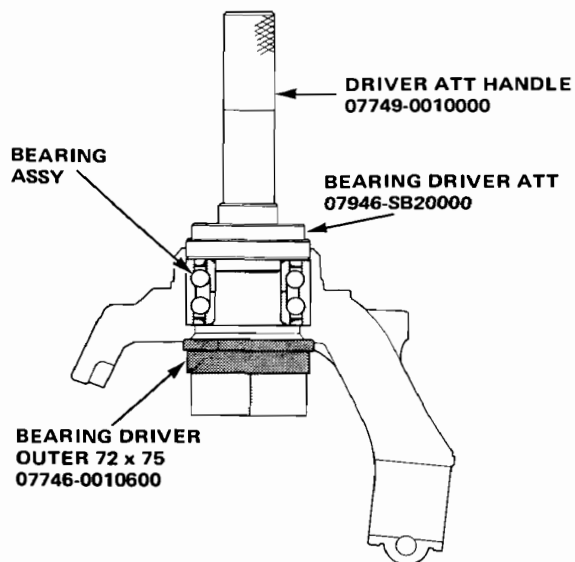

2. Install the circlip.
3. Install the splash board.
4. Push the front hub into the knuckle with a hydraulic press and the special tools shown below.

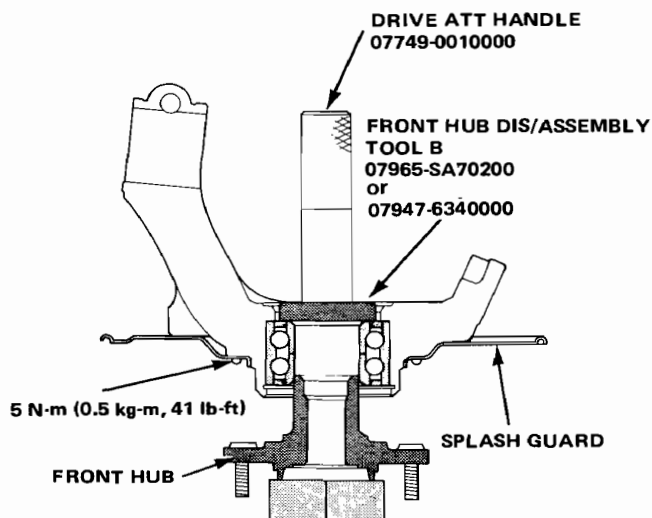


Lower Arm/Radius Arm/Stabilizer/Torsion Bar

Index

NOTE: Replace the locking nut after removal.

Inspect all bushings and rubber parts for wear or damage.

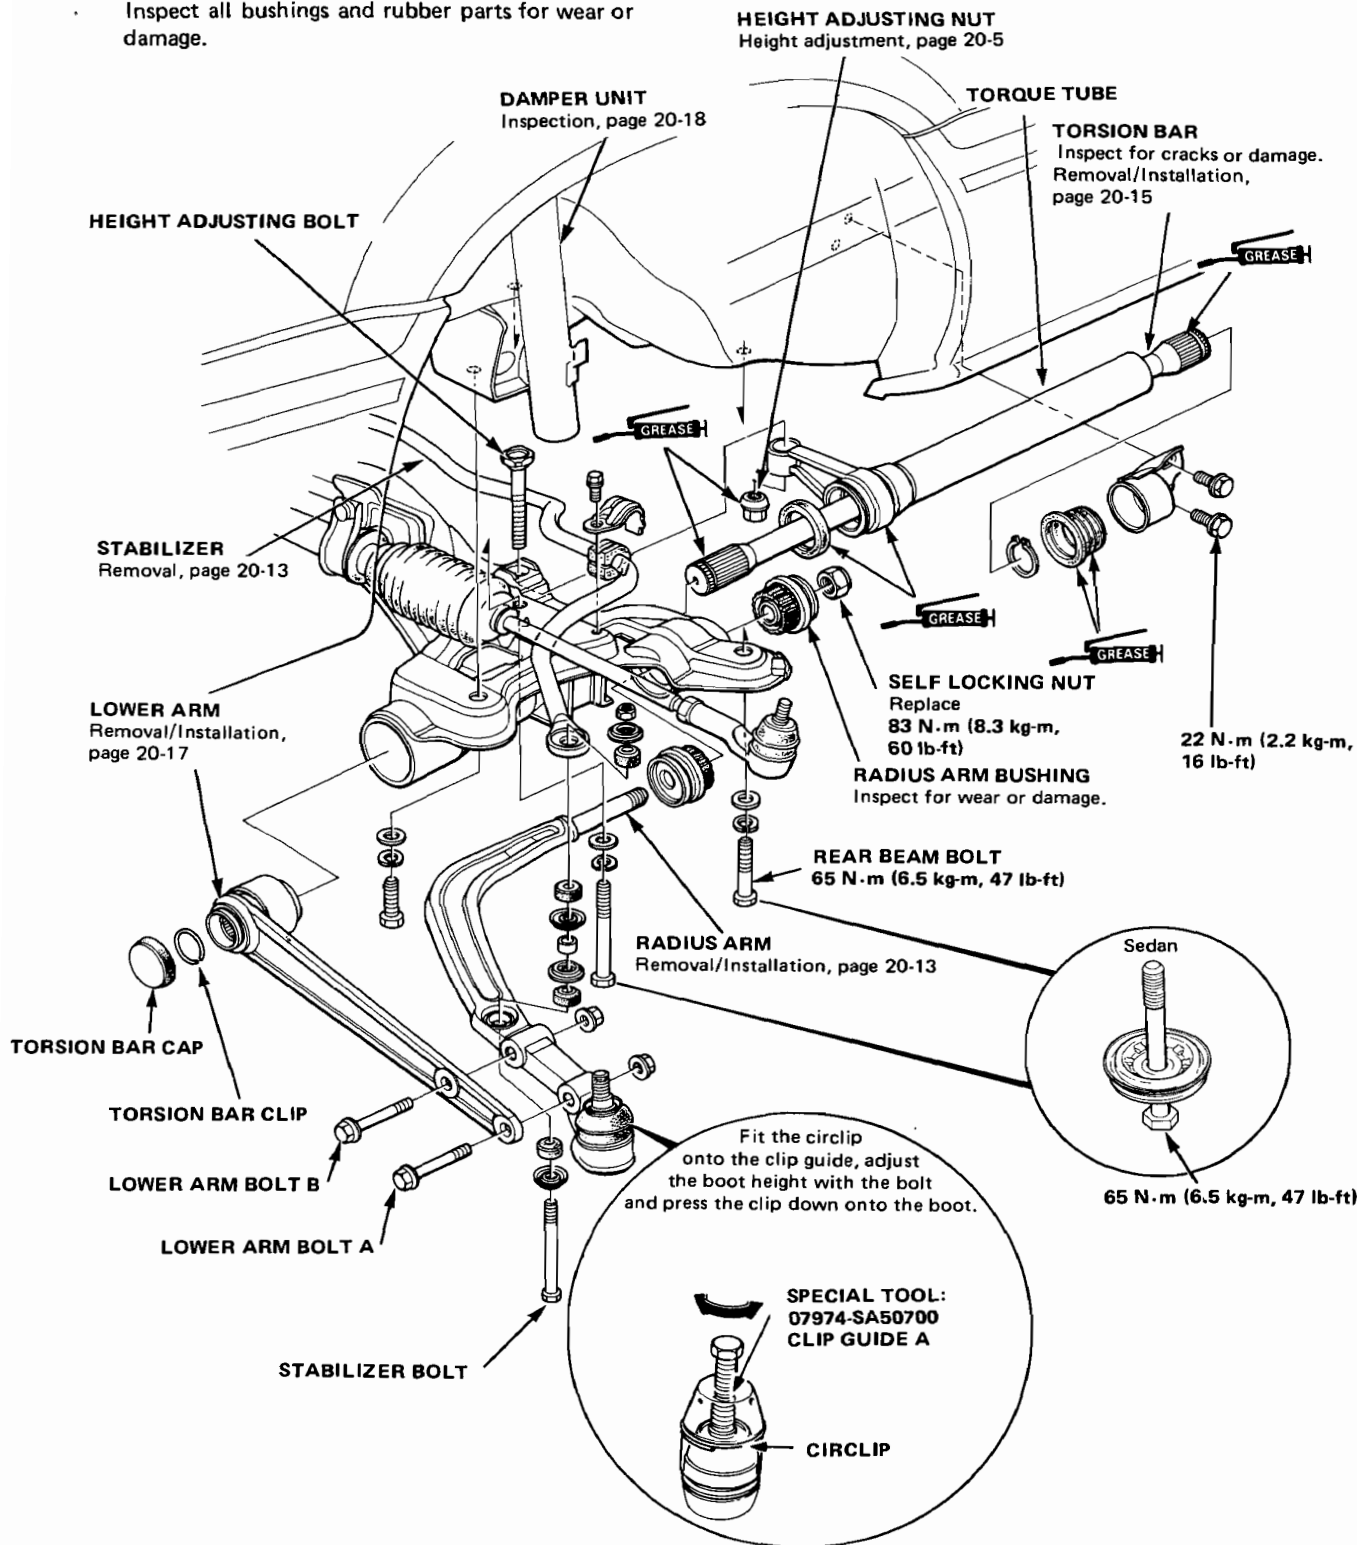


Radius Arm

Removal/Installation

1. Raise the front of the car off the ground and support it with safety stands (see page 1-7 for the proper location of the safety stands).
2. Remove the front wheels.
3. Remove the radius arm ball joint from the knuckle. (Page 20-10)

CAUTION: Make sure the floor jack is positioned securely under the lower control arm at the ball joint. Otherwise, torsion bar tension on the lower control arm may cause the arm to "jump" suddenly away from the steering knuckle as the ball joint is being removed.

4. Remove the radius arm self locking nuts.

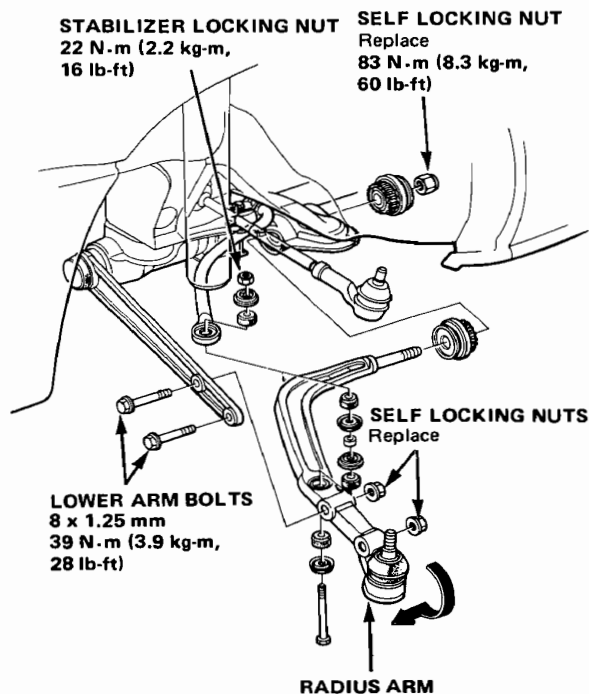

5. Remove the stabilizer locking nut and separate the radius arm from the stabilizer spring.
6. Remove the lower arm bolts.
7. Remove the radius arm by pulling it down and then forward.
8. Installation is the reverse order of removal.

CAUTION: Tighten all bushings and rubber damped parts only after the car is back on the ground.

Stabilizer


Removal

1. Raise the front of the car off the ground and support it with safety stands (see page 1-7 for the proper location of the safety stands).
2. Remove the front wheels.
3. Support the weight of the engine with a chain hoist or similar device.
4. Remove the steering gearbox. (Page 18-4)
5. Separate the radius arm ball joint from the knuckle. (Page 20-10)

CAUTION: Make sure the floor jack is positioned securely under the lower control arm at the ball joint. Otherwise, torsion bar tension on the lower control arm may cause the arm to "jump" suddenly away from the steering knuckle as the ball joint is being removed.

6. Remove the torque tube holder.
7. Remove exhaust pipes A and B. (Page 9-4)
8. Manual Transmission:
Disconnect the shift rod and extension from the transmission. (Page 5-9, 5-10)
Automatic Transmission:
Remove the shift cable guide from the floor and pull the shift cable down by hand.
9. Remove the engine mount bracket nuts.
10. Pry off the rear beam by placing a jack at the center and removing the six 12 mm bolts.

CAUTION: Take care not to drop the rear beam assembly.

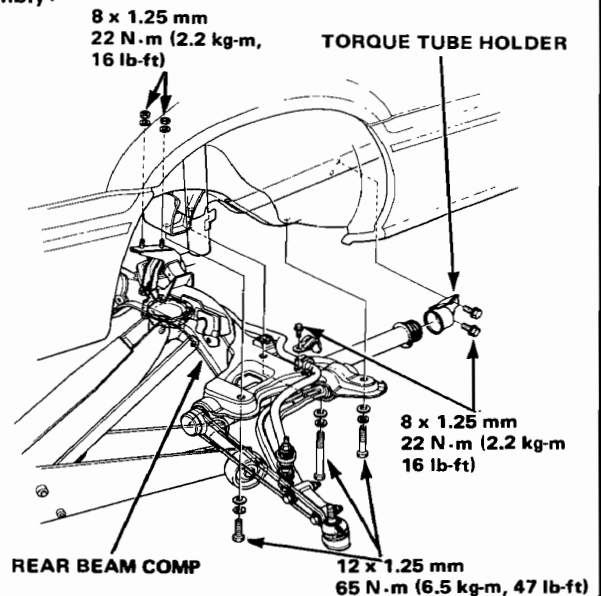

11. Remove the stabilizer bracket and bolt, and then remove the stabilizer spring.
12. Remove the rear mounting bracket.


Sub Frame Mount/Lower Bushing(4D)

Installation

Whenever the rear beam is replaced, the rear beam lower bushing C and sub frame mounts A and B must be replaced.

SUB FRAME* MOUNT


* reuse, unless damaged

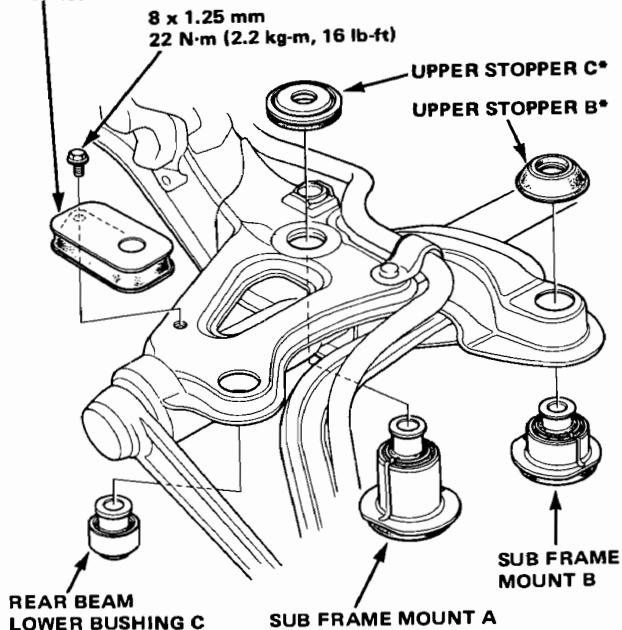

• Lower bushing C



Press a new bushing into the replacement rear beam until the outer edge is flush with the end of the rear beam.

Press-fit load:
500—1,000 kg (1,102—2,205 lb)

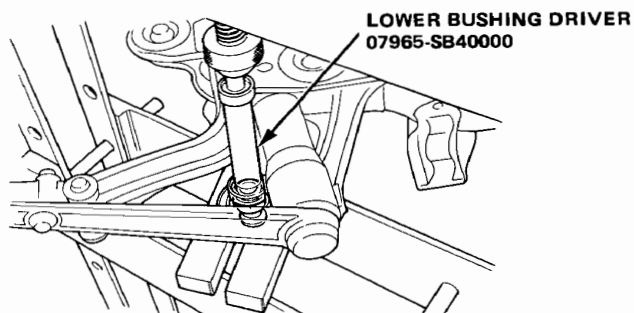

• Sub frame mounts A and B

Drive new mounts into place in the rear beam with the splits in the mounts positioned as shown.

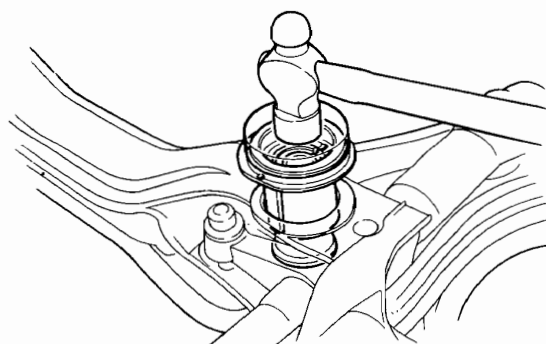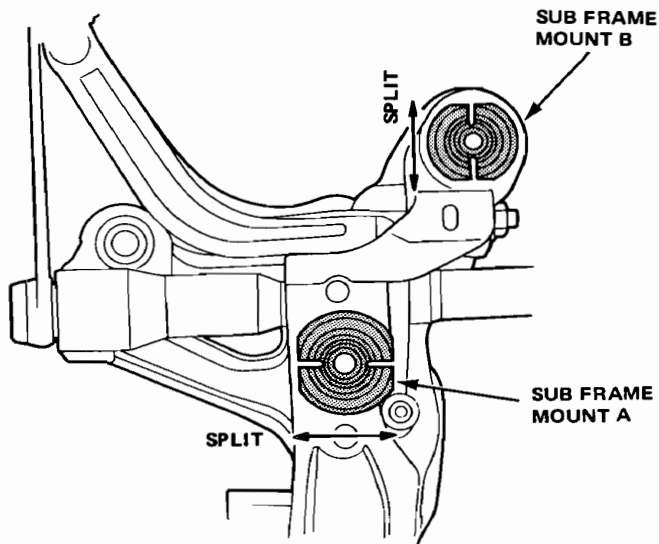


NOTE: Be sure to use a suitable pad when driving the new mounts into the rear beam as shown.

Torsion Bar Assembly


Removal/Installation

1. Jack up the front of the car and support it with safety stands (see page 1-7 for the proper location of safety stands)
2. Remove the height adjusting nut.
3. Remove the torque tube holder.
4. Remove the 30 mm circlip.
5. Remove the torsion bar cap and then remove the torsion bar clip by tapping the torsion bar out of the torque tube.


NOTE: Move the lower arm up and down to make the torsion bar slide easier.

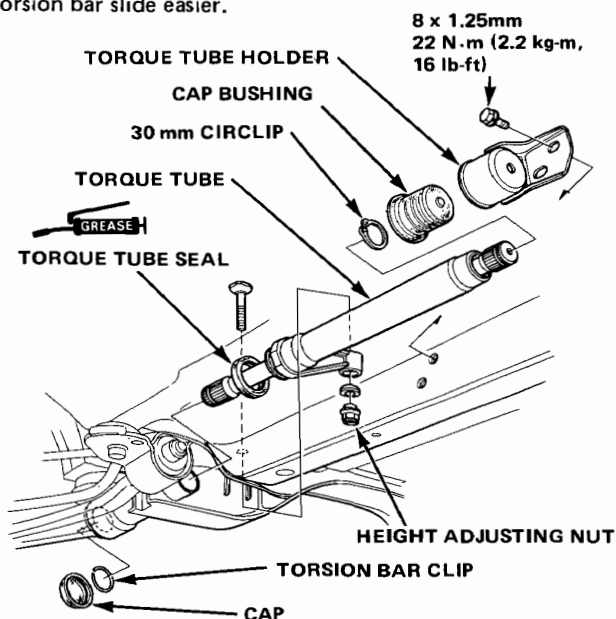

6. Tap the torsion bar backward, out of the torque tube.
7. Remove the torque tube.
8. Inspect the torsion bar for cracks or damage.
9. Install a new torque tube seal onto the torque tube.
10. Coat the torque tube seal and the torque tube sliding surface with grease, then install them on the rear beam.

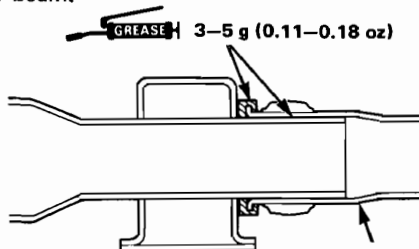


11. Grease the spline at each end of the torsion.

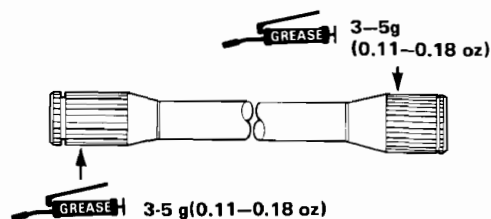


12. Insert the torsion bar into the torque tube from the back.

13. Align the projection or punch mark on the torque tube splines with the cutout or paint mark in the torsion bar splines and insert the torsion bar approximately 10 mm (0.394 in).

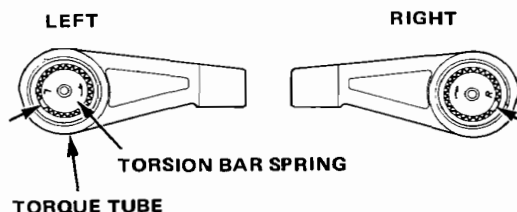

NOTE:


- Move the lower arm up and down for easier installation.
- There are two types of torsion bars and torque tube; torque tubes with and without raised lugs and torsion bars with and without lug reliefs. The torque tube with the raised lug will not fit over a torsion bar without a lug relief. But all other combinations of torque tube and torsion bar will fit together and work properly.

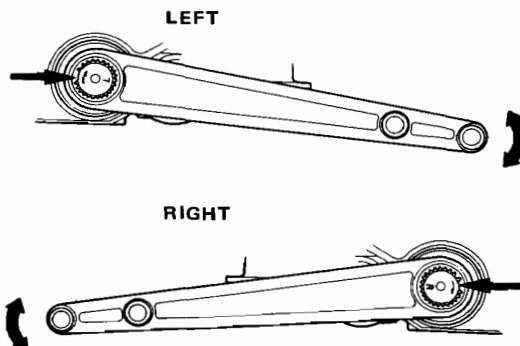

Torsion Bar Assembly


Removal/Installation (cont'd)

14. Install the clip on the torsion bar, and the cap over it.

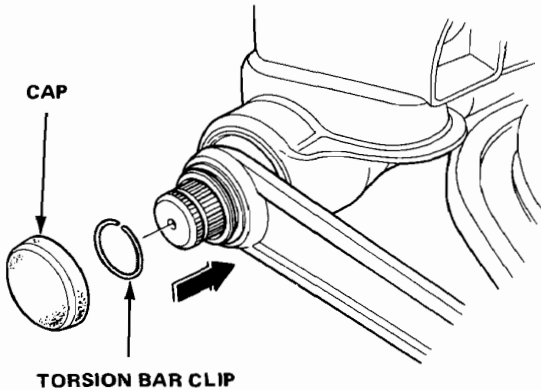

15. Install the 30 mm circlip and the torque tube cap.

NOTE: Push the torsion bar forward so that there is no clearance between the 30 mm circlip and the torque tube.

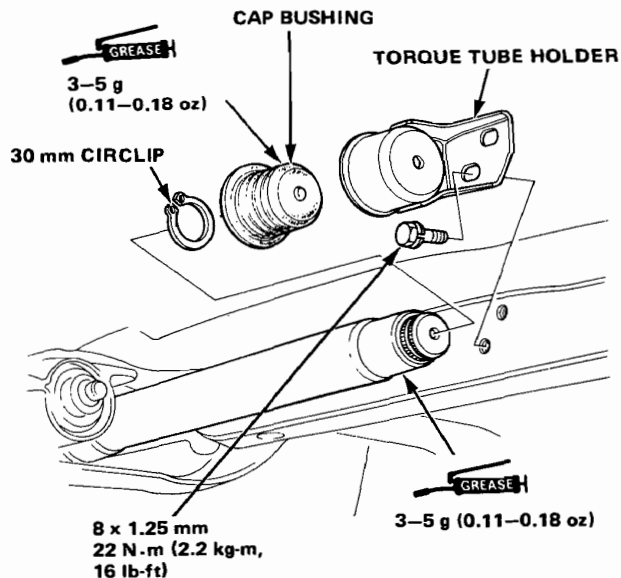

18. Tighten the height adjusting nut temporarily.

NOTE: Coat the height adjusting nut and the torque tube sliding surface with grease.

19. Set the car on the ground and adjust the torsion bar spring height. (Page 20-5)


Lower Arm



Replacement


NOTE: Lower arm replacement should be done with the rear beam removed from the frame.

1. Remove the lower arm with a hydraulic press and the special tools.
- 1) Set the special tool B in the lower arm bushing outer pipe as shown.
- 2) Insert special tool A into the rear beam to set special tool B.
- 3) Place special tool C under the rear beam and remove the lower arm by pressing tool A.

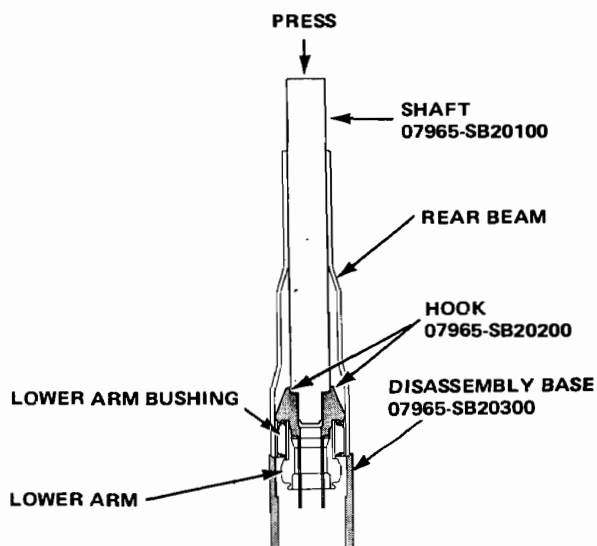


LOWER ARM COMP DIS/ASSEMBLY TOOL SET 07965-SB20000


2. Mark the lower arm bushing so that the lower arm can be aligned easily with the rear beam.

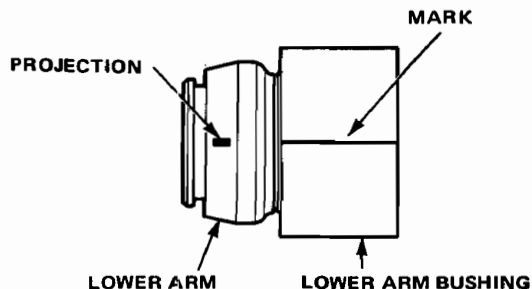

3. Align the index mark on the rear beam with the mark on the bushing and then install the rear beam by tapping it with a soft hammer.

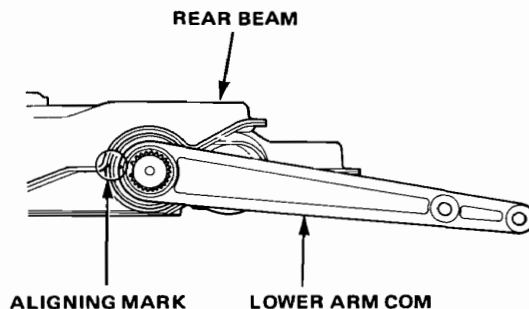

4. Install the lower arm with a hydraulic press and the special tools.
- 1) Place special tool D on special tool C. Align special tool D with the lower arm bushing outer pipe.

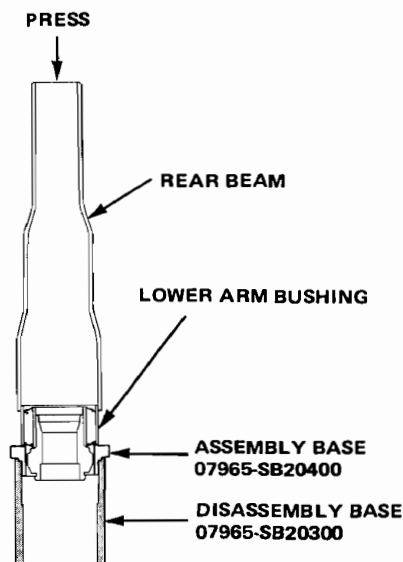


- 2) Insert the rear beam so that the lower arm bushing outer pipe aligns with the rear beam pipe, then press the rear beam.

Front Damper

Removal

1. Jack up the front of a car and remove the front wheels.
2. Remove the brake hose clamp bolt.
3. Use a floor jack to support the lower control arm.

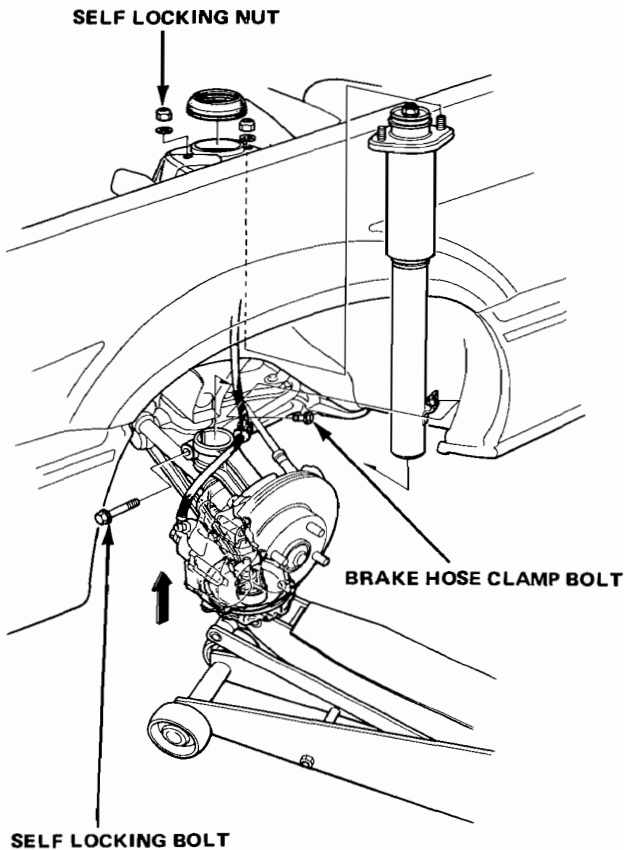


4. Remove the self locking bolt, then lower the jack gradually and remove it from the knuckle.

CAUTION: Make sure the floor jack is positioned securely under the lower control arm at the ball joint. Otherwise, torsion bar tension on the control arm may cause the knuckle to "jump" suddenly away from the front shock absorber as the pinch bolt is being removed.


5. Remove the self locking nut and then remove the damper from the frame by compressing the shock absorber spring.

Disassembly/Inspection

1. Remove the self locking nut while holding the damper rod.

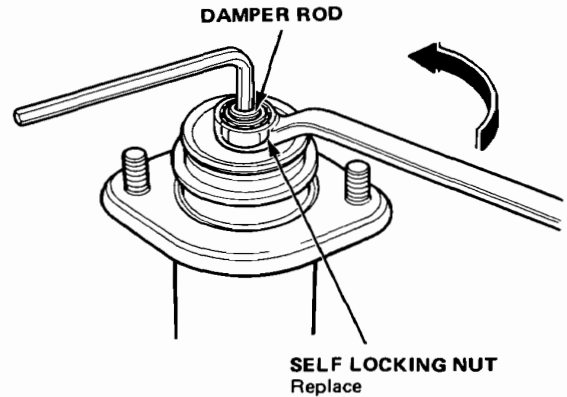

2. Disassemble the damper assembly.
3. Slowly move the damper piston rod a full stroke and check for smooth operation.
4. Jerk the piston rod back and forth 5–10 mm (2–4 in.) to check for smooth operation.
5. Inspect for an oil leak cracks in the piston rod.
6. Listen for abnormal noises.

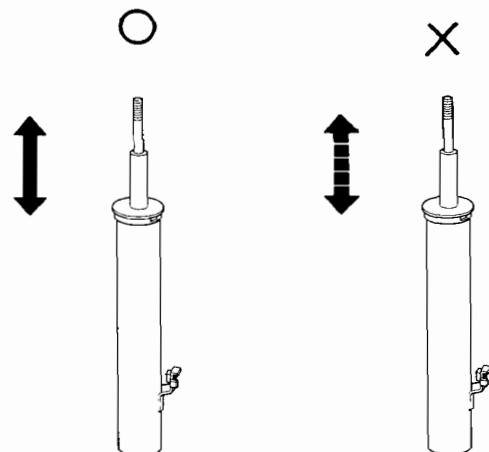


NOTE: The damper cannot be disassembled. If it does not operate smoothly, or if it makes any abnormal noises during operation, replace it.




Assembly/Installation


NOTE: Use a new self locking nut for reassembly

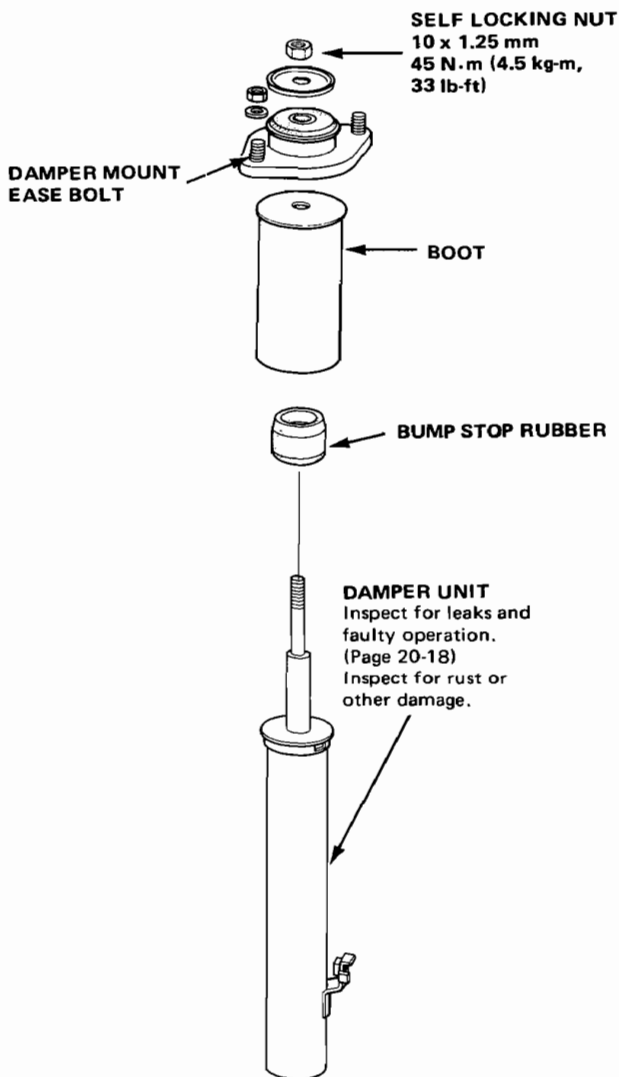

1. Install the damper assembly.

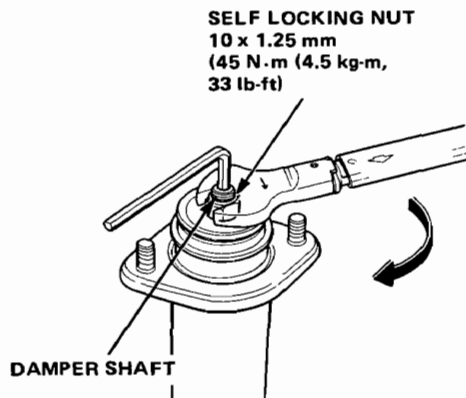

2. Install the self locking nut and tighten it while holding the damper shaft.
3. Compress the damper assembly and fit it into the frame.
4. Extend the damper, align the projection on the damper with the slot in the steering knuckle, then fit the damper into the knuckle and tighten the self locking bolt.

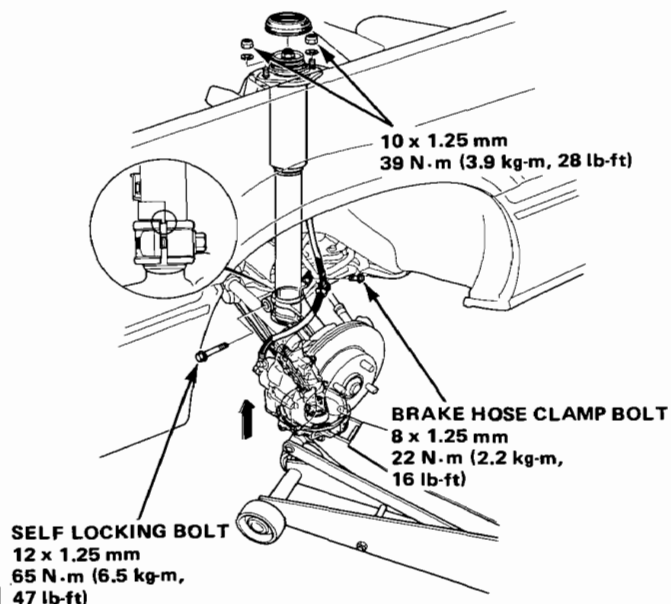

5. Install and tighten the brake hose clamp bolt.

Brakes

Index

BRAKE HOSE/LINE

- Inspection, page 21-29

BRAKE BOOSTER

- Index/Inspection, page 21-15
- Testing, page 21-16
- Disassembly, page 21-17
- Rebuild kit, page 21-18
- Reassembly, page 21-19
- Pushrod Clearance Adjustment, page 21-23

BRAKE LIGHT SWITCH

- Pedal Height Adjustment, page 21-3
- Inspection, page 21-31

MASTER CYLINDER

- Overhaul/Inspection, page 21-12
- Disassembly, page 21-13
- Reassembly, page 21-14
- Brake Fluid Level Switch, page 21-32

DUAL PROPORTIONING VALVE

- Index, page 21-11

FRONT BRAKE


- Inspection, page 21-4, 5
- Brake Pad Inspection/Replacement, page 21-6
- Brake Caliper Disassembly, page 21-7
- Brake Disc Inspection, page 21-9

PARKING BRAKE

- Adjustment, page 21-3
- Disassembly/Reassembly, page 21-30

REAR BRAKE


- Inspection, page 21-25
- Brake Shoe Removal, page 21-26
- Wheel Cylinder Disassembly/Inspection, page 21-27
- Brake Shoe Reassembly, page 21-28

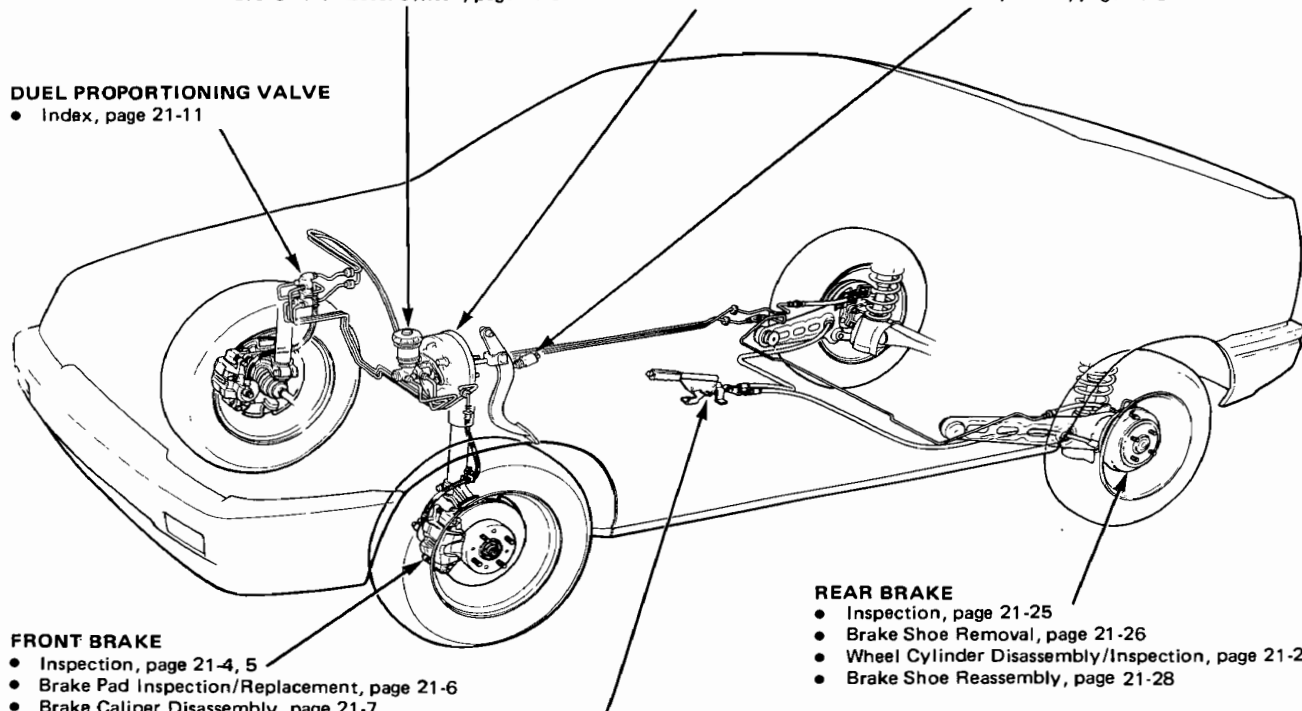


Pedal Height

Adjustment


1. Loosen the brake light switch locknut and back off the brake light switch until it is no longer touching the brake pedal.

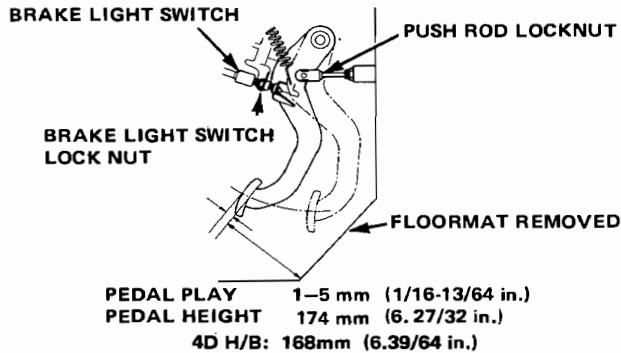

2. Loosen the pushrod locknut and screw the pushrod in or out with pliers until the pedal is 174 mm (6 27/32 in.), 4D H/B 168 mm (639/64 in.) from the floor. After the adjustment, tighten the locknut firmly.

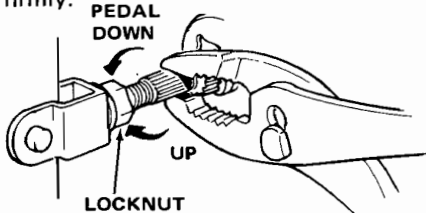

3. Screw in the brake light switch until its plunger is fully depressed (threaded end touching the pad on the pedal arm). Then back off the switch 1/2 turn and tighten the locknut firmly.

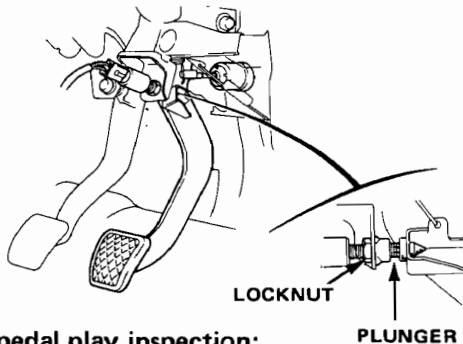

Brake pedal play inspection:

Stop the engine and inspect the play by pushing the pedal by hand.

Brake pedal play: 1–5 mm (1/16-13/64 in.)

NOTE: Do not adjust the play with the pushrod pushed.

CAUTION: Check that the brake lights go off when the pedal is released.

Parking Brake


Adjustment

NOTE: After brake drum servicing, depress the brake pedal several times to set the self-adjusting brakes before adjusting brake cable.

WARNING Block the front wheels before jacking up the rear of the car.

1. Raise the rear wheels off the ground.
2. Loosen the equalizer adjusting nut in the console.
3. Pull the parking brake lever up one notch.
4. Tighten the equalizer adjusting nut until the rear wheels drag slightly when turned.
5. Release the brake lever and check that the rear wheels do not drag when turned. Readjust if necessary.

NOTE: With the equalizer properly adjusted, the rear brakes should be fully applied when the parking brake lever is pulled up 4 to 8 clicks.

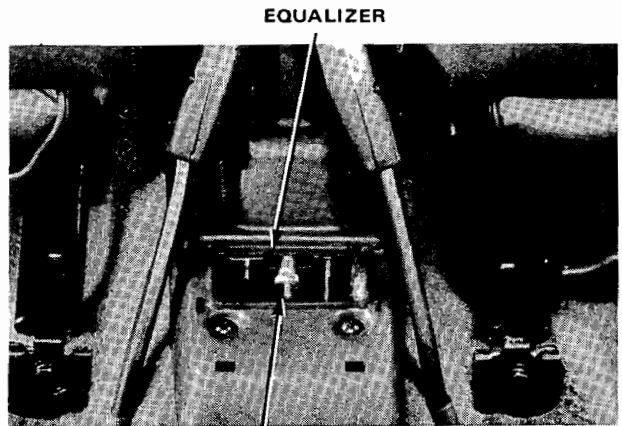

ADJUSTING NUT



Front Brakes

Index/Inspection

(NISSIN Model)

NOTE:

- Coat piston, piston seal, and caliper bore with silicone grease or rubber grease and clean brake fluid.
- Replace all rubber parts with new ones whenever disassembled.

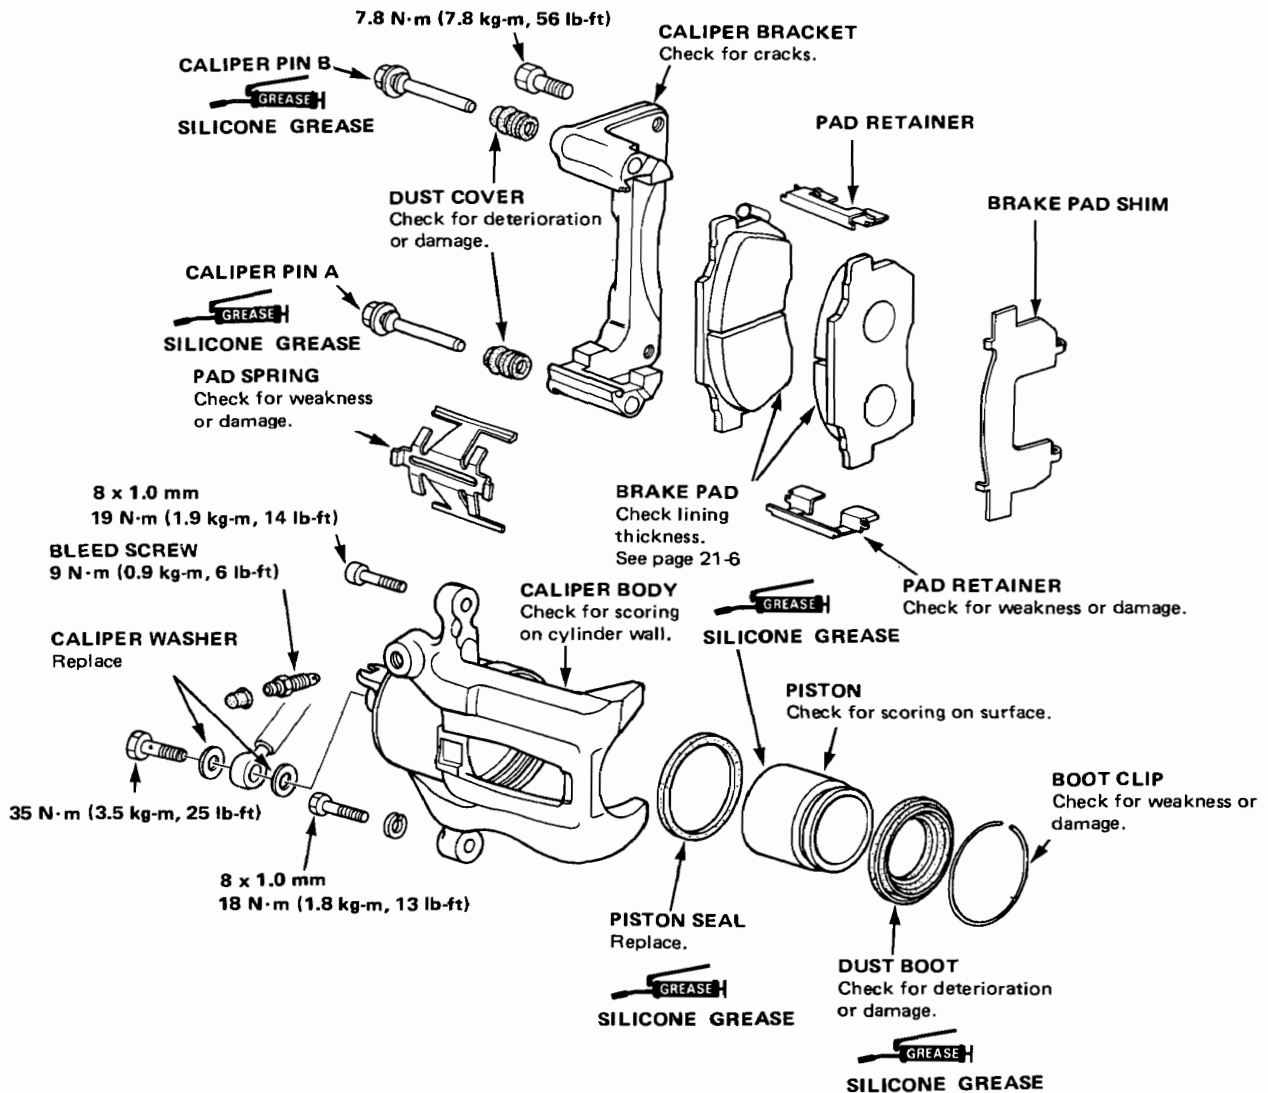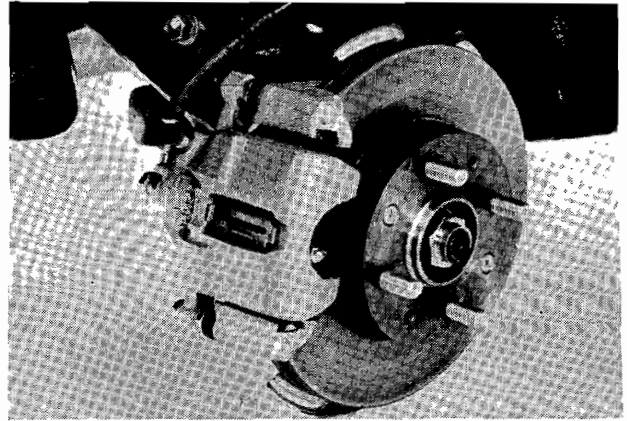



(TOKICO Model)

BLEED SCREW
9 N·m (0.9 kg-m, 6 lb-ft)

PAD SPRING
Check for weakness
or damage

CALIPER BODY
Check for scoring
on cylinder wall.

BRAKE PAD
Check lining
thickness.
See page 21-6

CALIPER PIN

78 N·m (7.8 kg-m, 56 lb-ft)

CALIPER BRACKET
Check for cracks.

DUST COVER
Check for deterioration
or damage.

CALIPER PIN

RUBBER GREASE

8 x 1.25 mm
27 N·m (2.7 kg-m, 20 lb-ft)

RUBBER GREASE

BRAKE PAD SHIM

PISTON SEAL
Replace.

DUST BOOT
Check for deterioration
or damage.

PISTON
Check for scoring
on surface.

RUBBER GREASE

(SUMITOMO Model)

BLEED SCREW
9 N·m (0.9 kg-m, 6 lb-ft)

PAD SPRING
Check for weakness
or damage.

SLIDE PIN BOLT
50 N·m (5.0 kg-m, 36 lb-ft)

RUBBER GREASE

CALIPER BODY
Check for scoring
on cylinder wall.

SPRING PLATE
Check for distortion
or damage.

BRAKE PAD
Check lining
thickness.
See page 21-6

BRAKE PAD SHIM

CALIPER BRACKET
Check for cracks.

BUSH
Check for deterioration
or damage.

PISTON SEAL
Replace.

PISTON
Check for scoring
on surface.

DUST BOOT
Check for deterioration
or damage.


RUBBER GREASE

RUBBER GREASE

Brake Pad

Inspection/Replacement

1. Remove the front wheels and support the front of car on safety stands.
2. Remove caliper pin A bolt and pivot caliper up out of the way.

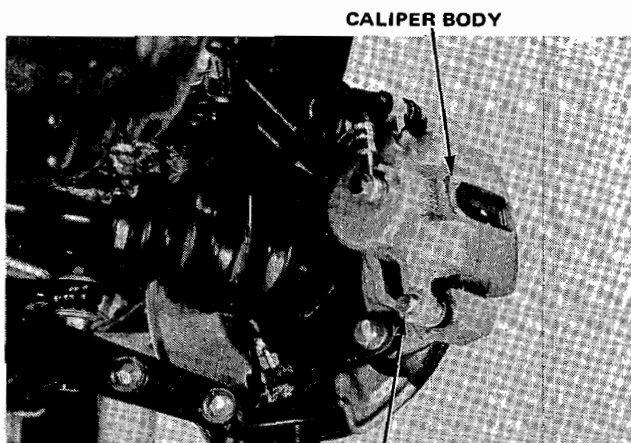


CALIPER PIN A BOLT


3. Remove the pad shim and pads.
4. Using a vernier caliper, measure the thickness of each brake pad lining.

Brake Pad Thickness


Standard: 4D H/B EC and KX 10.0 mm (0.39 in.)
Other models 9.5 mm (0.374 in.)
Service limit: 3.0 mm (0.118 in.)

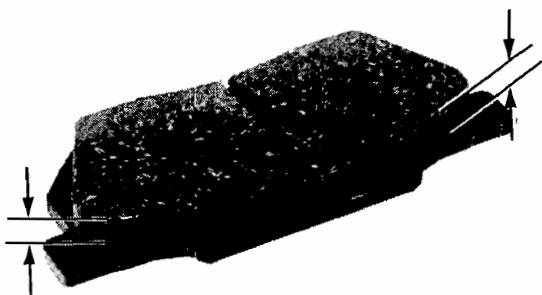

5. If lining thickness is less than service limit, replace both pads as a set.

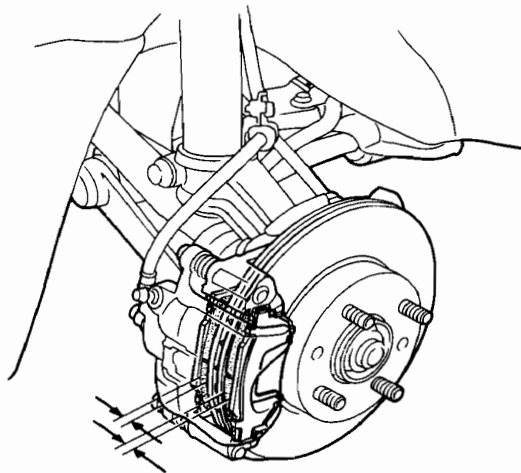

6. Clean the caliper thoroughly; remove any rust, and check for grooves or cracks.
7. Install the pad retainers.

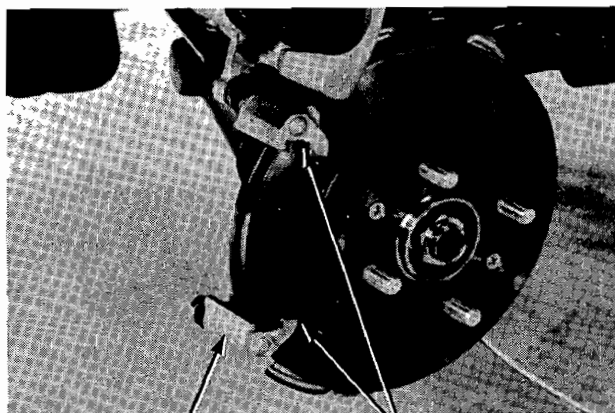


CALIPER BRACKET PAD RETAINER



Brake Caliper

Disassembly

8. Apply a thin coat of high temperature brake grease between the shim and the pad, then install them with the shim on the outside.

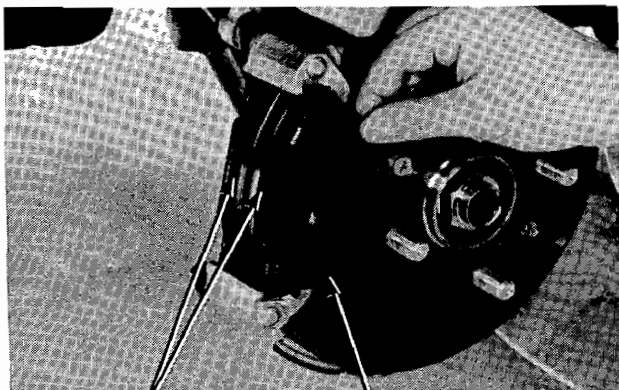


PADS

PAD SHIM

9. Loosen the bleed screw slightly and push in the piston so the caliper will fit over the pads. Tighten the bleed screw.
10. Pivot the caliper down into position, then reinstall the caliper pin A bolt and tighten to 18 N·m (1.8 kg·m, 13 lb·ft).

NOTE: Install the inner pad with pad wear indicator on the inside. (KC Only)

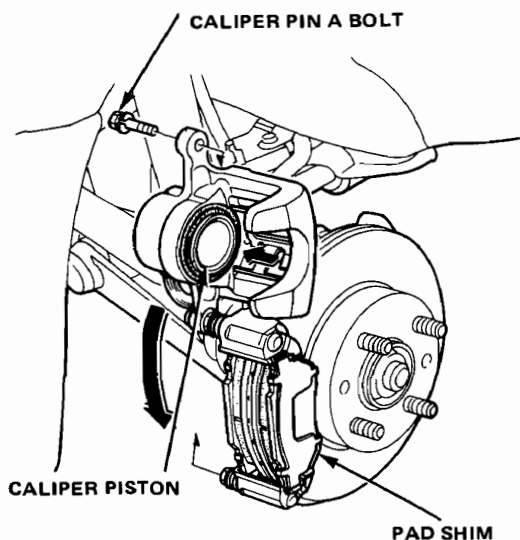

Depress the brake pedal several times to make sure the brakes are working, then road test.

Disassembly

1. Unscrew the banjo bolt and remove the brake line.
2. Remove the caliper pin bolts, then remove the caliper.


NOTE: Avoid damaging the splash guard at the upper part of the caliper.

CAUTION:

- Avoid spilling brake fluid on paint as it may damage the finish.
- Plug the end of the brake hose with a shop rag to prevent brake fluid from flowing out of the brake hose after disconnecting.

BANJO BOLT
35 N·m (3.5 kg·m,
25 lb·ft)

CALIPER PIN B BOLT

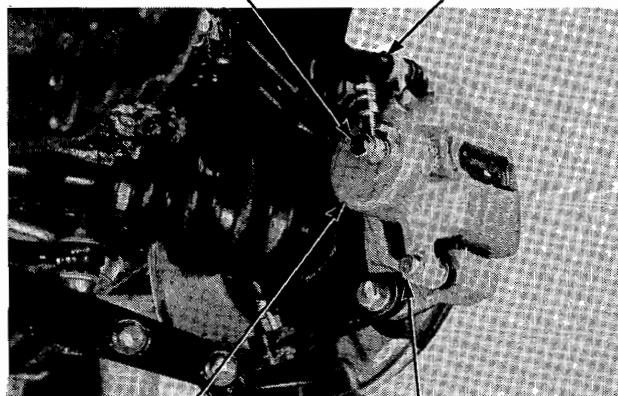


CALIPER BODY

CALIPER PIN A BOLT

3. Remove the boot clip (NISSIN Model), dust seal and pad spring.

DUST SEAL

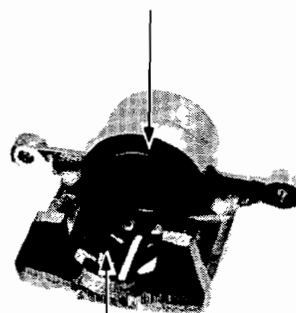

PAD SPRING


(cont'd)

Brake Caliper

Disassembly (cont'd)

4. Place a shop rag in the caliper opposite the piston, then carefully remove the piston from the caliper by applying air pressure through the brake line hole.


- Do not place your fingers in front of the piston.
- Do not use high air pressure; use an OSHA-approved 30 PSI nozzle.

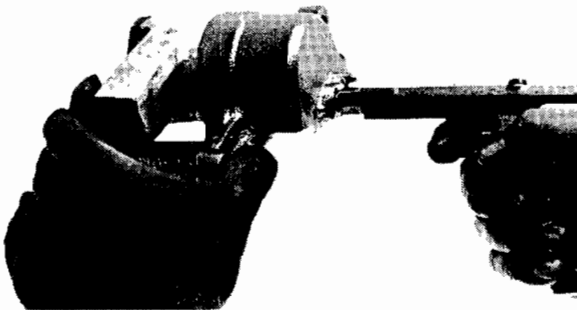

5. Remove the piston seal.

CAUTION: Take care not to damage the cylinder bore.

6. Clean the piston and cylinder bore with brake fluid and then inspect the sliding surfaces for wear or damage.

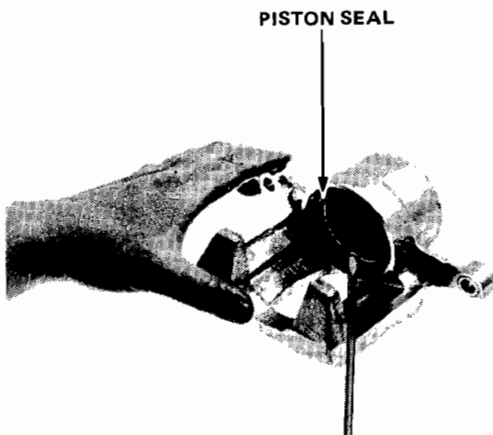


Reassembly

1. Clean the piston and cylinder bore with brake fluid and inspect for wear or damage.
2. Apply brake fluid to a new piston seal, then install piston seal in cylinder groove.



3. Lube the piston with brake fluid, then slip the boot onto the groove-less end of the piston.
4. Hold the piston slightly above the caliper, then gently guide the bottom ridge of the boot into the caliper wall.

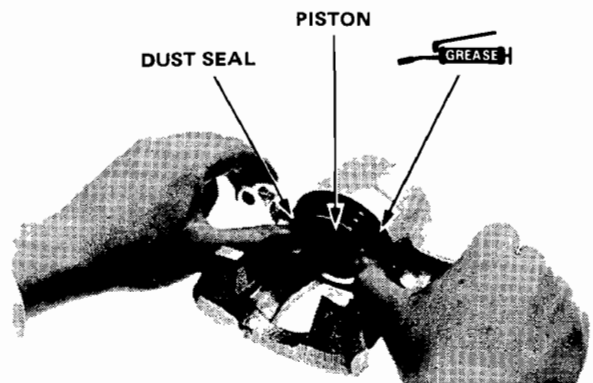


5. When the boot is evenly seated, push the piston until the upper ridge of the boot is seated in the piston groove.
6. Install the boot clip. (NISSIN Model Only)

Front Brake Disc



Run-Out

1. Remove the front wheels and support the front of car with safety stands.
2. Remove caliper pin A bolt, then pivot the caliper up out of the way on the upper guide pin bolt, and remove the pads and pad retainers (page 21-6).

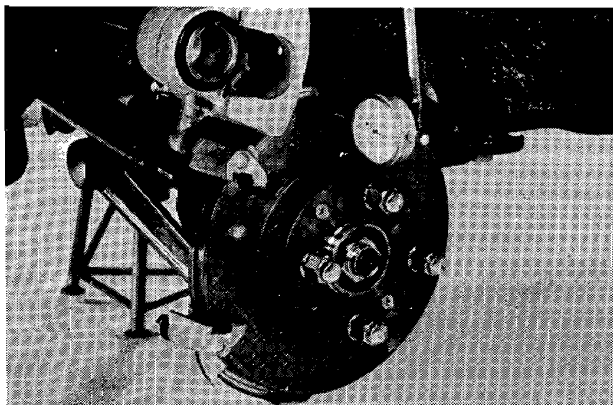

3. Inspect the disc surface for grooves, cracks, and rust. Clean the disc thoroughly and remove all rust.
4. Use the lug nuts to hold the disc securely against the hub, then mount a dial indicator 10 mm (0.39 in.) in from the outer edge.
 - Check the runout while turning the disc slowly by hand.


Brake Disc Runout:

Service Limit: 0.10 mm (0.004 in.)

5. If the disc is beyond the service limit, refer to the Honda Brake Disc Grinder Manual to see if it can be ground. If it can't be ground, remove it and install a new one. Then, reinstall the caliper bracket and torque the bolts to 78 N·m (7.8 kg·m, 56 lb·ft).

Thickness and Parallelism

1. Remove the front wheels and support the front of car with safety stands.
2. Move the caliper and pads out of the way as described in the preceding column.
3. Using a micrometer, measure disc thickness at eight points, approximately 45° apart and 10 mm (0.39 in.) in from the outer edge of the disc.

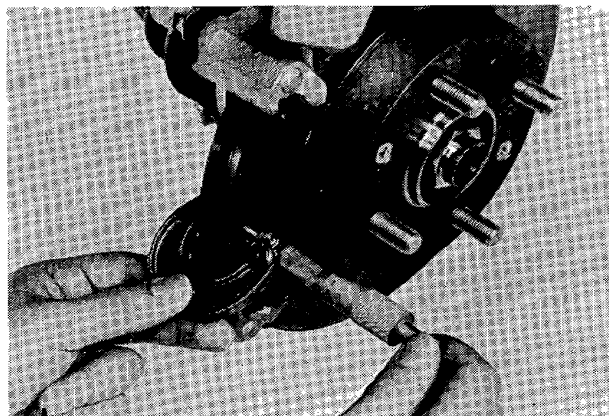

Brake Disc Thickness

Standard:	12 mm (0.47 in)
Max. Refinishing Limit:	10 mm (0.39 in)

Ventilated Disk

Standard:	17 mm (0.67 in)
Max. Refinishing Limit:	15 mm (0.59 in)

NOTE: If the refinishing limit stamped on the disc does not match the one listed above, use the one on the disc.

Brake Disc Parallelism:

The difference between any thickness measurements should not be more than 0.015 mm (0.0006 in.).


4. If the disc is beyond the limits for parallelism, refer to the Honda Brake Disc Grinder Manual to see if it can be ground. If it can't be ground, remove it and install a new one. Then, reinstall the caliper bracket and torque the bolts to 78 N·m (7.8 kg·m, 56 lb·ft).

Bleeding

NOTE: The reservoir on the master cylinder must be full at the start of bleeding procedure and checked after bleeding each wheel cylinder. Add fluid as required. Use only DOT 3 or 4 brake fluid.

- Make sure no dirt or other foreign matter is allowed to contaminate the brake fluid.
- Avoid spilling brake fluid on painted surfaces as it can damage the finish. Wash spilled brake fluid off immediately with clean water.


Bleeding Sequence

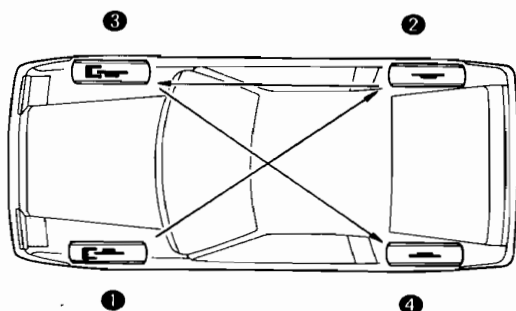


1. Have someone slowly pump the brake pedal several times, then apply steady pressure.
2. Loosen the brake bleed screw to allow air to escape from the system.

FRONT

9 N·m (0.9 kg-m, 7 lb-ft)

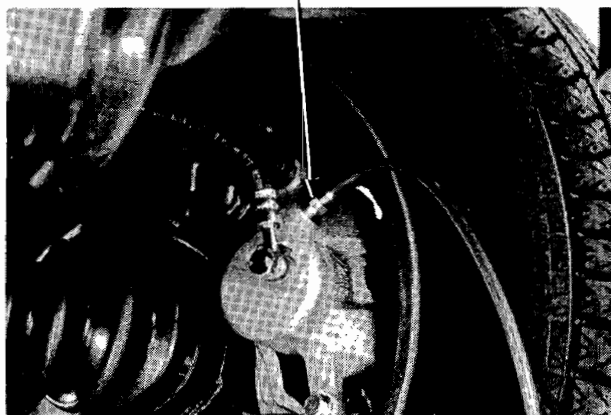

REAR

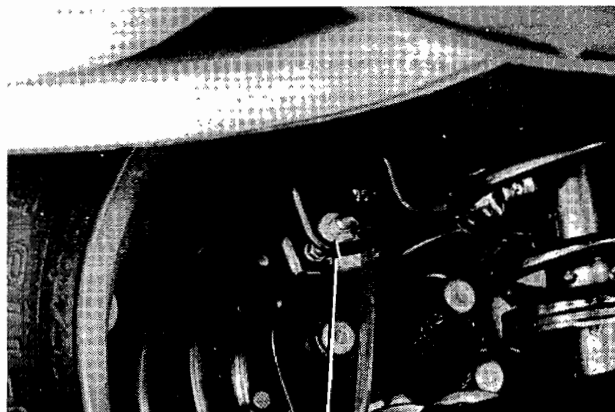


7 N·m (0.7 kg-m, 5 lb-ft)

3. Repeat the procedure for each wheel in the sequence shown above. When air bubbles no longer appear in the fluid, tighten the bleed screw securely.
4. Check brake performance by road testing.

Brake Booster, Master Cylinder, Proportioning Valve



Index

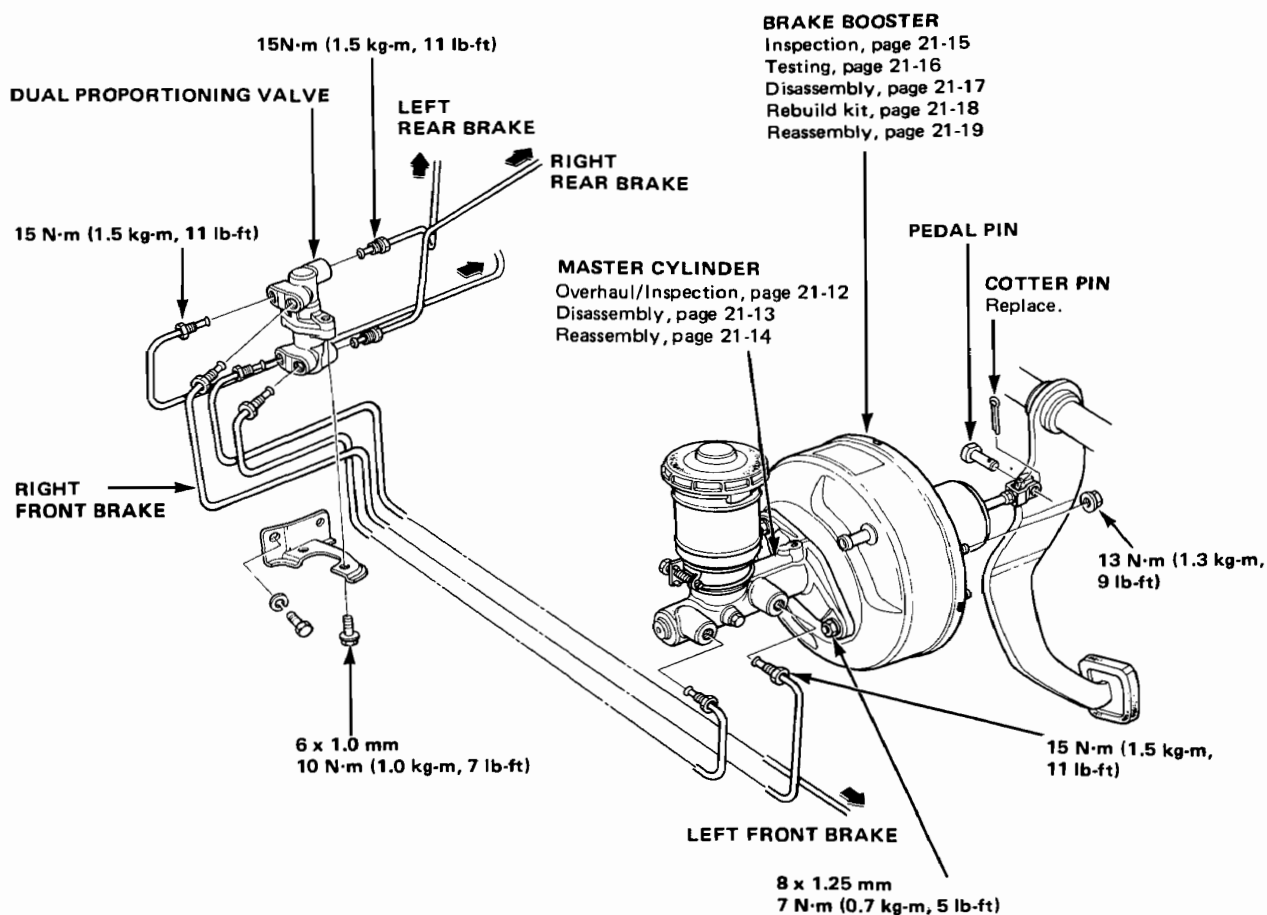


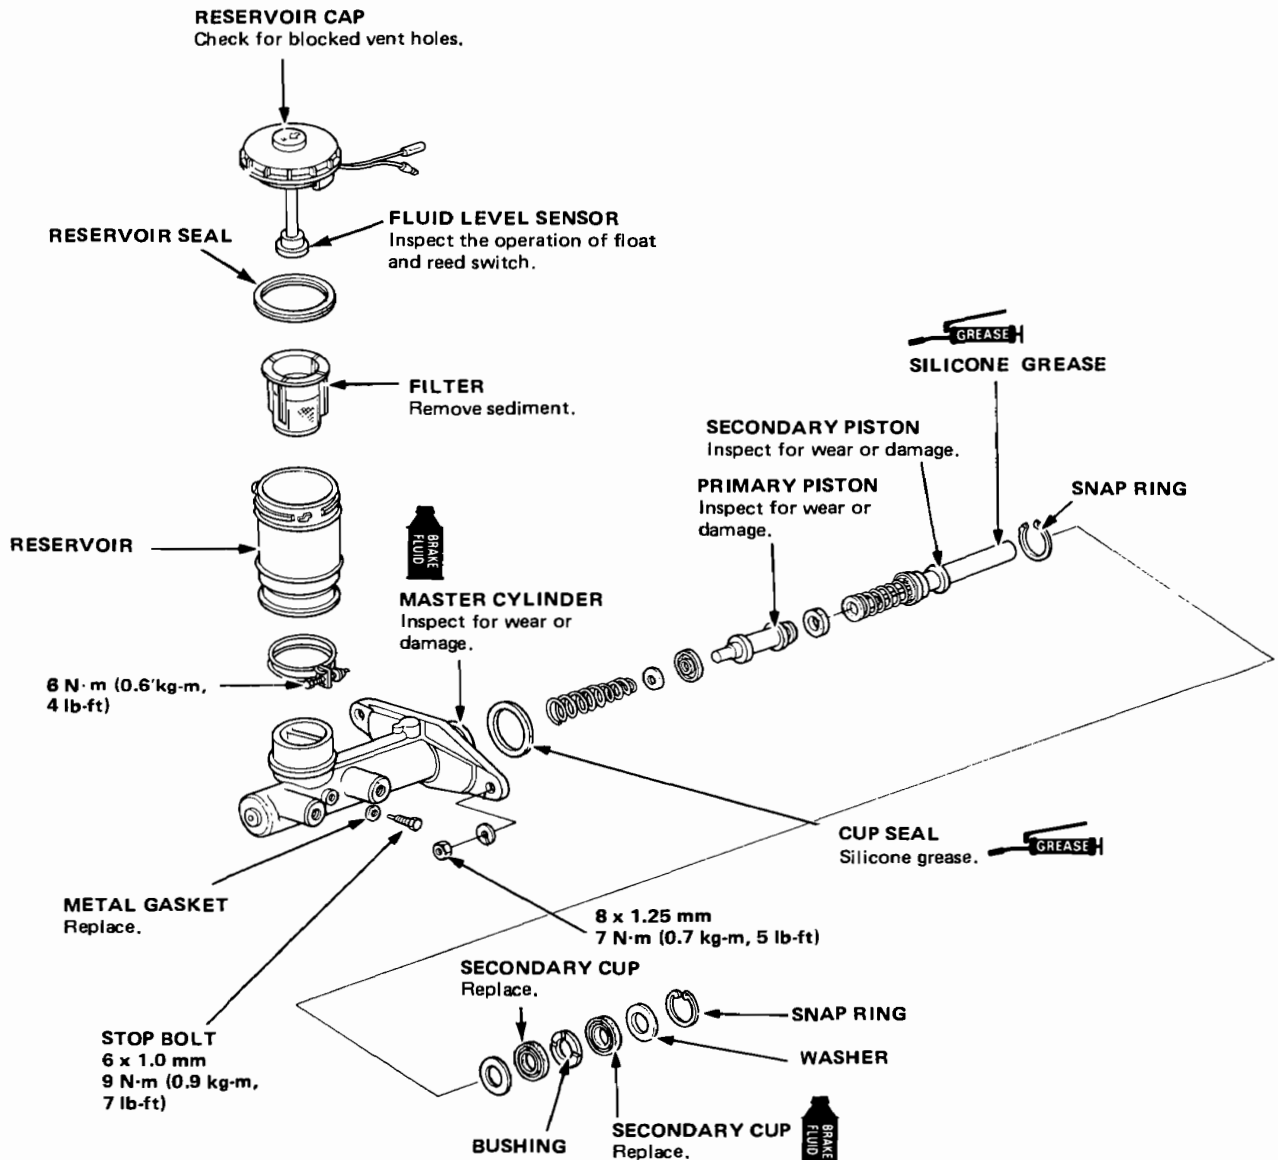
Master Cylinder

Overhaul/Inspection

NOTE: Use only new replacement parts.

CAUTION:

-  This symbol represents brake fluid. Use only DOT 3 or 4 brake fluid.





Disassembly


CAUTION:

- Avoid spilling brake fluid on painted surfaces as it can damage the finish. Wash spilled brake fluid off immediately with clean water.


NOTES:

- Wash all removed parts in brake fluid and blow dry with compressed air. Blow open all passages and fluid ports.
- Replace all rubber parts with new ones whenever the cylinder is disassembled.
- To prevent damage, liberally apply clean brake fluid to the piston cups before installation.

1. Remove the outer snap ring.

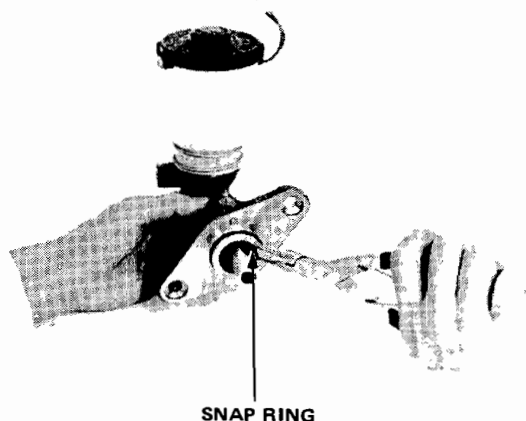

2. Remove the washer, secondary cup, and secondary piston bushing.
3. Remove the stop bolt, and remove the inner snap ring with the snap ring pliers while pushing on the secondary piston assy.

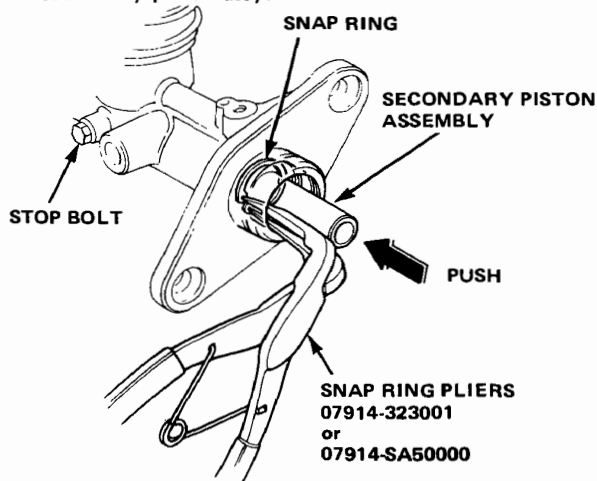


NOTE: Avoid damaging the master cylinder wall.

4. Remove the primary piston assembly. If necessary, remove by blowing compressed air through the primary piston hole.

NOTE: Wrap a shop rag around the open end of the cylinder before using compressed air.

5. Remove the screw from the secondary piston assy, and remove the secondary spring.

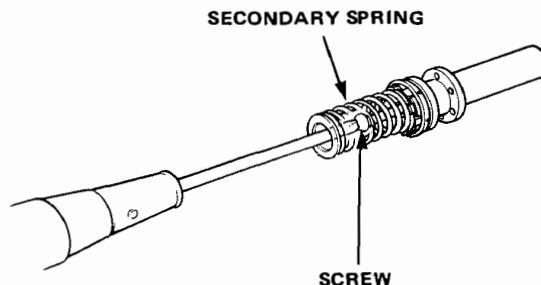

6. Clean all parts thoroughly with BRAKE FLUID only.

Master Cylinder


Reassembly

CAUTION:

- Make sure all parts are clean before installation.
- Use only new replacement parts.
- Use only new clean brake fluid.
Do not allow dirt or other foreign matter to contaminate the brake fluid.
- Do not mix different brands of brake fluid.
- Avoid spilling brake fluid on painted surfaces as it can damage the finish. Wash spilled brake fluid off immediately with clean water.


1. Lubricate new piston assemblies with brake fluid, then install in the master cylinder.

NOTE: To ease assembly, rotate the pistons while inserting.

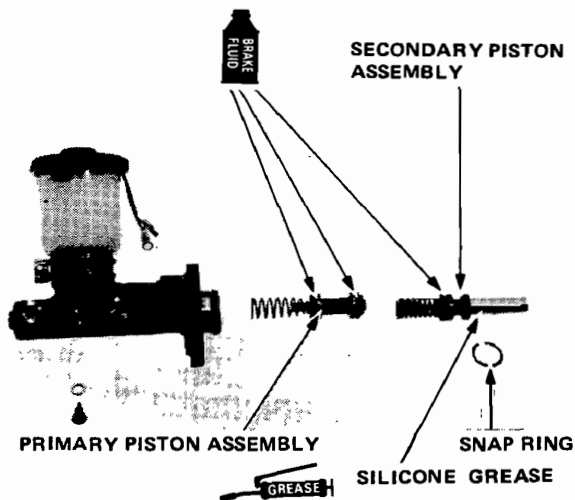


2. Press down on the cylinder as shown, then install the stop bolt.

NOTE: Replace the piston stop bolt metal gasket with a new one.

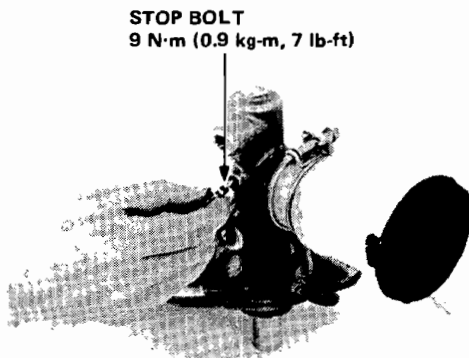

3. Turn the master cylinder over, press down on the secondary piston, then install the inner snap ring.
4. Install the secondary cups, bushing, and outer snap ring.
5. Install the seal on the master cylinder mounting flange.

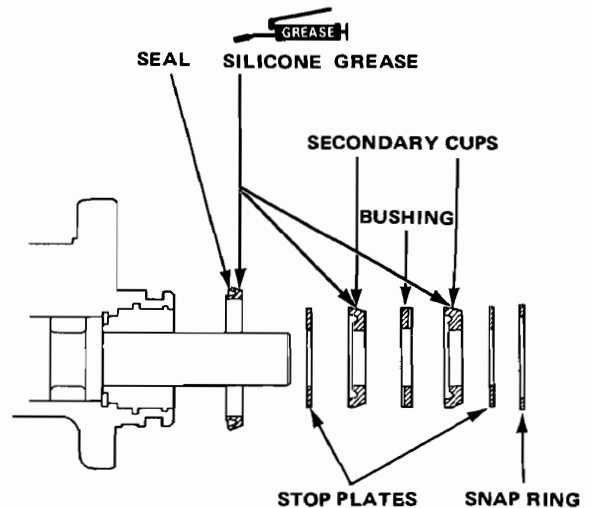

NOTE: Make sure the seal and cups are installed facing the direction shown.

Brake Booster




Index and Inspection


Booster testing is on next page.

NOTE:

- Parts marked® are available with rebuild kit and must be replaced whenever disassembled.

-  on this page refers to silicon grease.

NOTE: Scribe an alignment mark across the front and rear housings so you can reassemble them in their original positions.

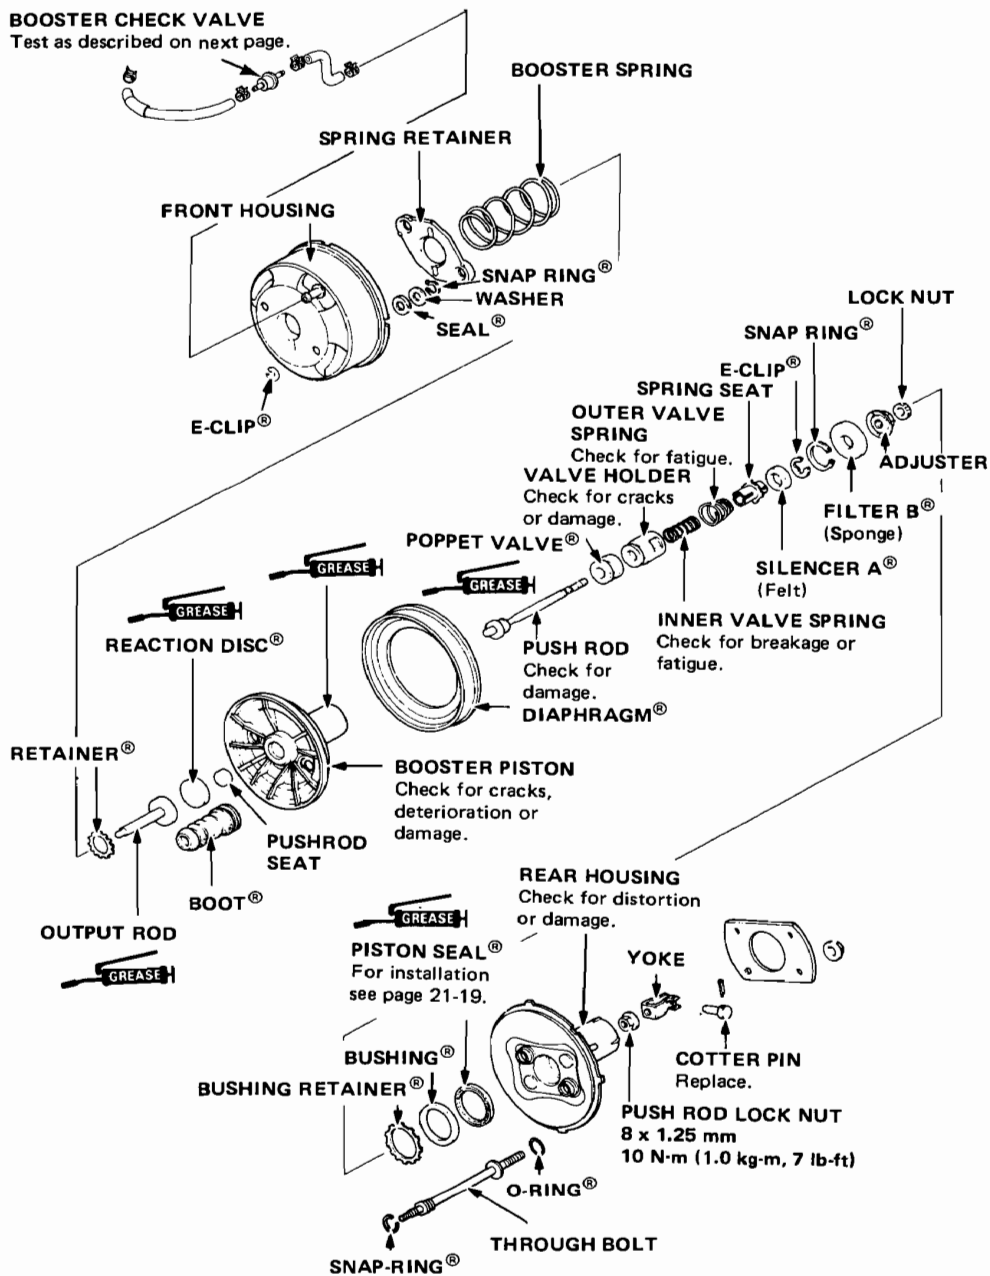

Brake Booster

Testing

Functional Test


1. With the engine off, depress the brake pedal several times, then depress the pedal hard and hold that pressure for 15 seconds. If the pedal sinks, a brake line, a wheel cylinder, or the master cylinder is faulty.
2. Start the engine with the pedal depressed. If the pedal sinks slightly, the vacuum booster is working. If the pedal height does not vary, the booster or check valve is faulty.

Leak Test

1. Depress the brake pedal with the engine running, then stop the engine. If the pedal height does not vary while depressed for 30 seconds, the vacuum booster is OK. If the pedal rises, the booster is faulty.
2. With the engine off, depress the brake pedal several times, using normal pressure. When the pedal is first depressed, it should be low. On consecutive applications, pedal height should gradually rise. If the pedal position does not vary, check the booster check valve.

Check Valve Test


1. Disconnect the brake booster vacuum hose at the booster.
2. Start the engine and let it idle. There should be vacuum available. If no vacuum is available, the check valve is not working correctly. Replace the check valve and retest.

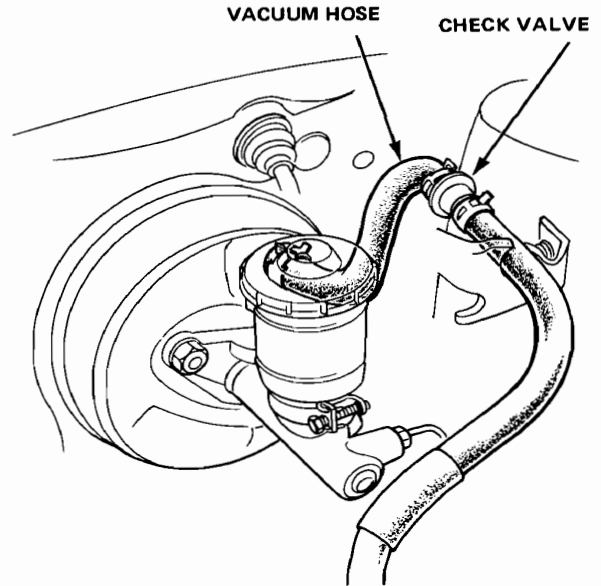




Disassembly

1. Scribe an aligning mark across the front and rear booster housings to ensure proper positioning of parts on reassembly.
2. Remove the master cylinder.
3. Remove the E-clips, and separate the front booster housing and the rear booster housing.

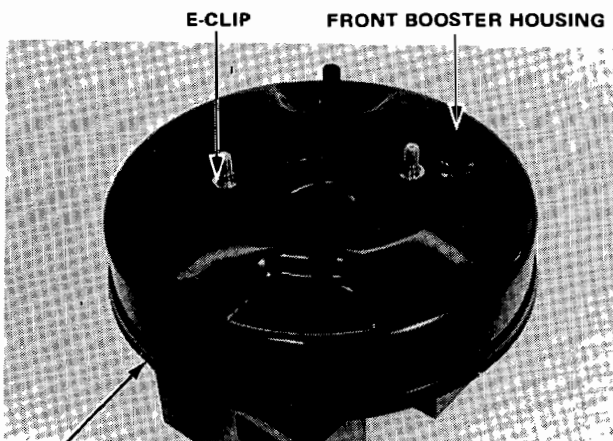


REAR BOOSTER HOUSING

4. Remove the washers and seals from the rear housing, then remove the snap ring.

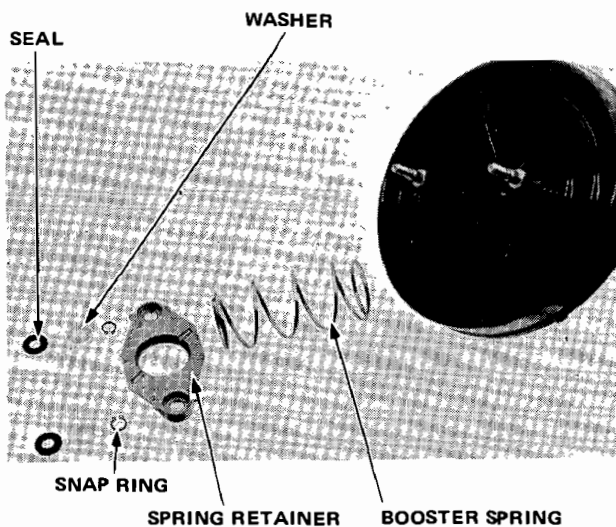


5. Remove the spring retainer and booster spring.

6. Remove the retainer and the through bolt boots.

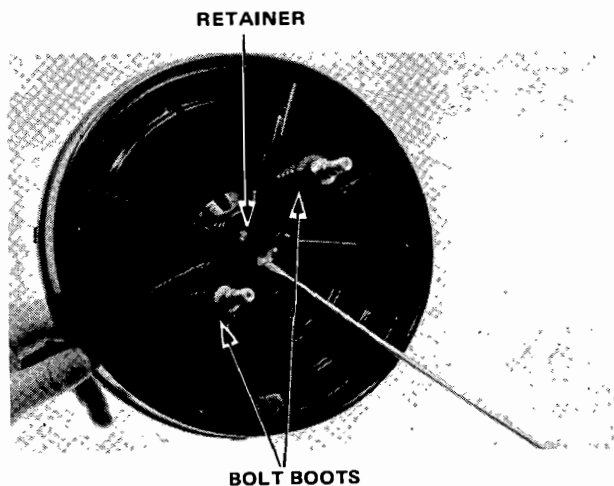

7. Remove the diaphragm from the rear housing.

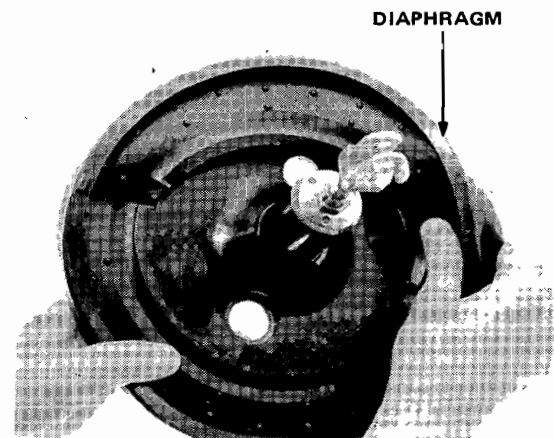


(cont'd)

Brake Booster

Disassembly (cont'd)

8. Remove the yoke, push rod locknut, star locknut, adjuster and filter.
9. Remove the snap ring, then remove the valve holder assembly.

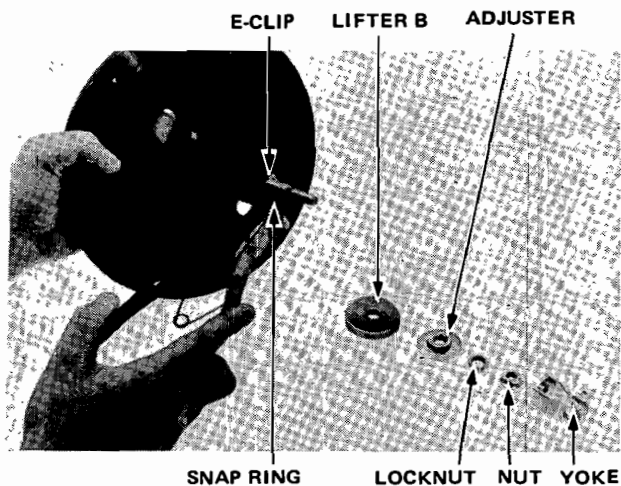

Remove the E-clip from the valve holder assembly and disassemble.

Rebuild Kit



E-CLIP



SEAL



SNAP RING




RETAINER



REACTION SIDE



BOOT

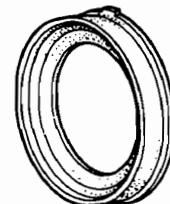

DIAPHRAGM



POPPET VALVE



SILENCER A
(Felt)



E-CLIP



FILTER B
(Sponge)



SNAP RING



RETAINER



BUSHING



PISTON SEAL



SNAP RING



O-RING




SILICONE GREASE




Reassembly


1. Install the poppet valve on the valve holder.

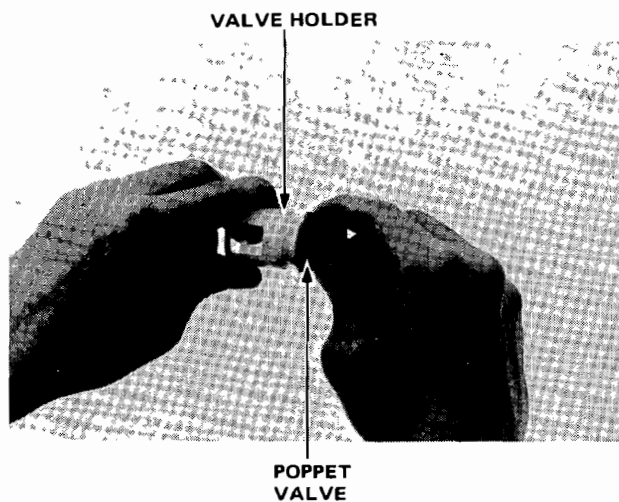


2. Install the valve holder, inner valve spring, outer valve spring, and spring seat onto the push rod.

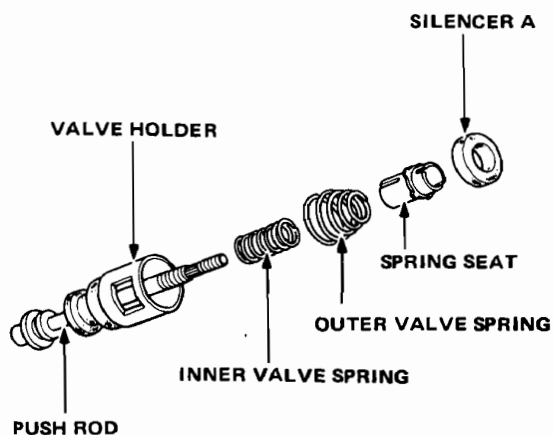

3. Install the silencer with the E-clip.

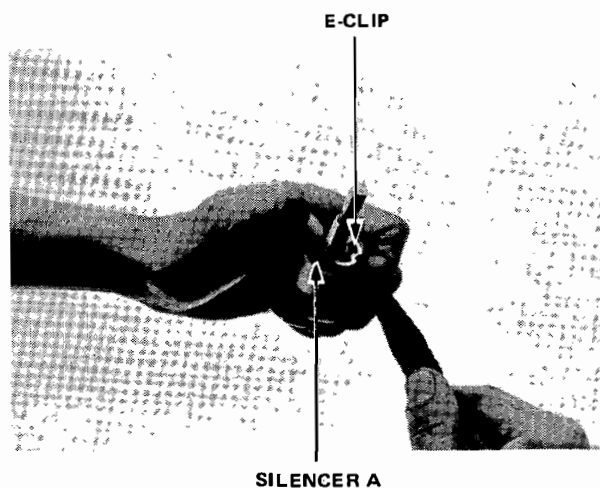

4. Install the diaphragm onto the booster piston with the diaphragm tabs aligned with the slots in the piston.

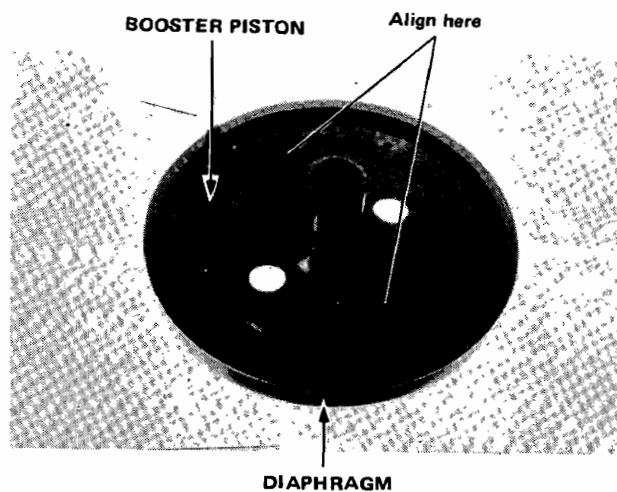

Brake Booster


Reassembly(cont'd)

5. Apply silicone grease to the inner and outer surfaces of the piston tube.

Press the valve holder assembly into the booster piston tube, and install the snap ring.



6. Slip the filter (foam) over the end of the pushrod. Thread the adjuster and locknut onto the shaft but do not tighten.


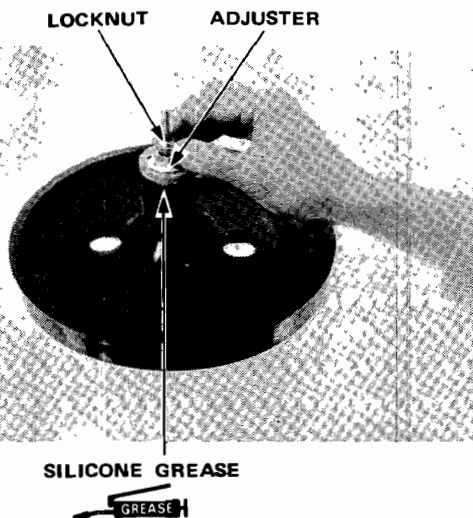


7. Apply silicone grease to the piston seal, then set the seal in position on the housing.

NOTE: Make sure the lip of the seal is facing in, as shown in drawing below.


8. Install the piston seal and bushing in the rear housing, and gently drive the retainer in until it is 6 mm below the edge of the rear housing.

CAUTION: If you drive in the retainer more than 6 mm, you may distort the piston seal.

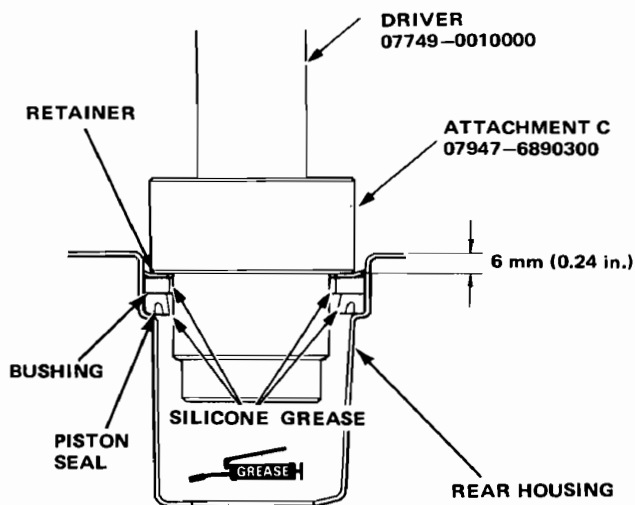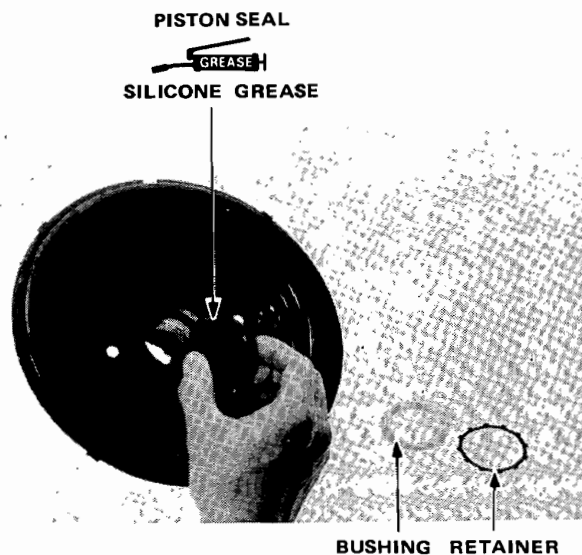





9. Install both through bolts, using the O-rings and snap rings.

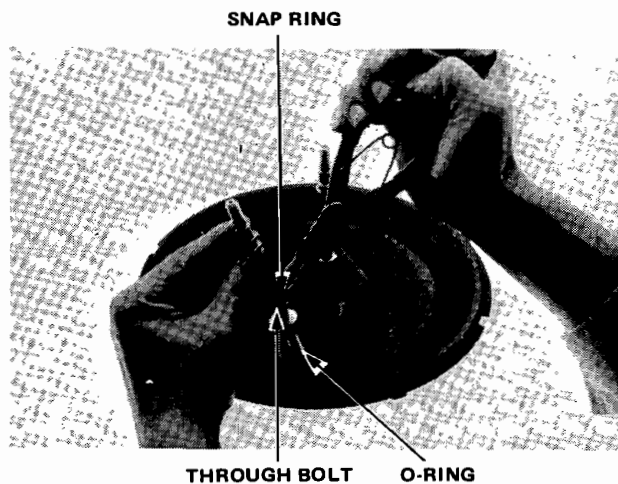


10. Attach the booster piston to the rear housing, aligning the tab of the booster piston with the slot in the rear housing.

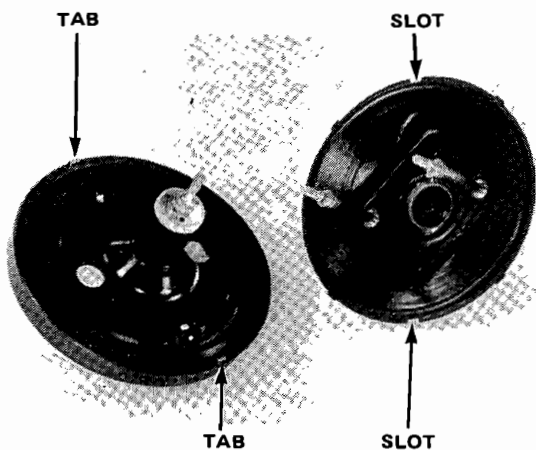

11. Install the boots onto the through bolts.

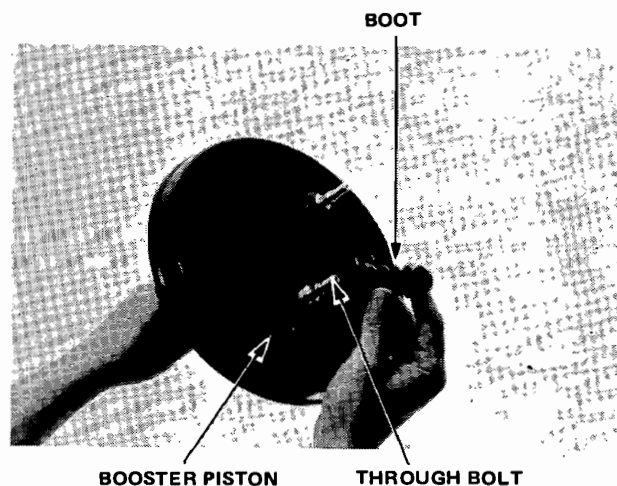

12. Apply silicone grease to the bore of the booster piston, then install the push rod seat, reaction disc, output-rod, and retainer.

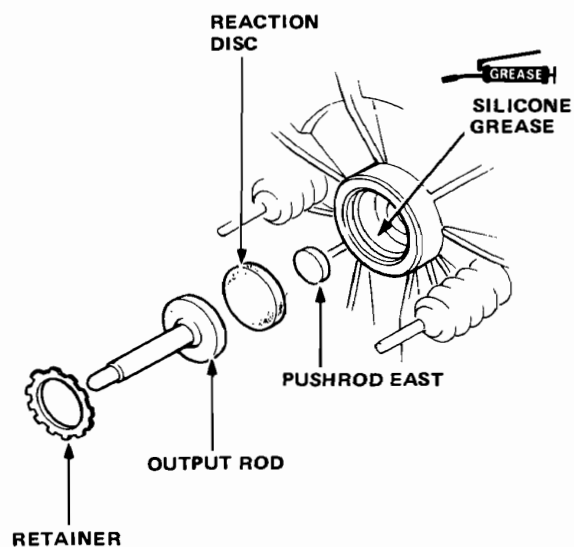


(cont'd)


Brake Booster

Reassembly(cont'd)


13. Install the booster spring.

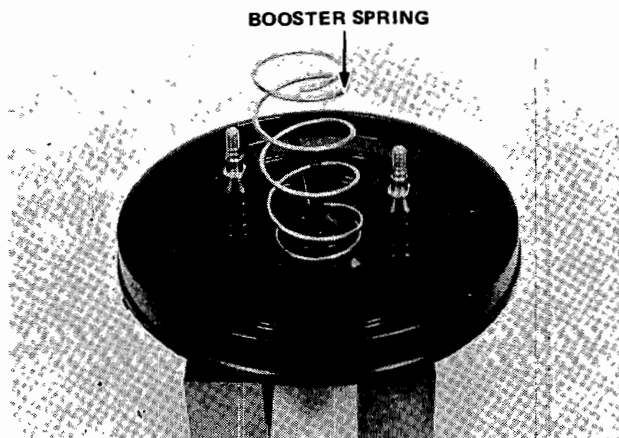


14. Install the spring retainer by compressing the booster spring, then installing the snap rings on the through bolts.

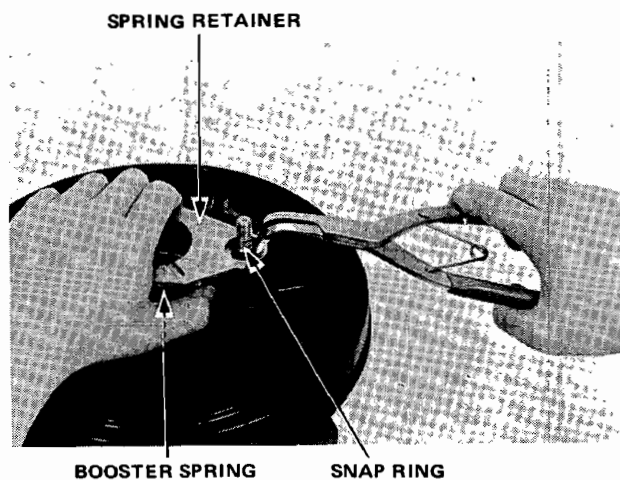

15. Install the washers and seals.

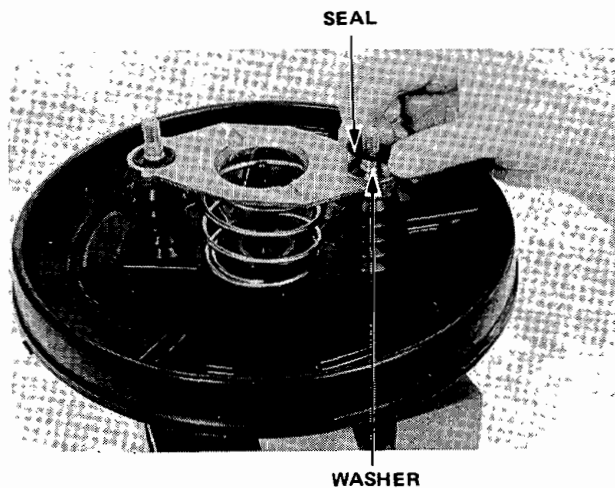

16. Assemble the front booster housing onto the rear booster housing, press down on the front housing, then install the E-clips on the through bolts.

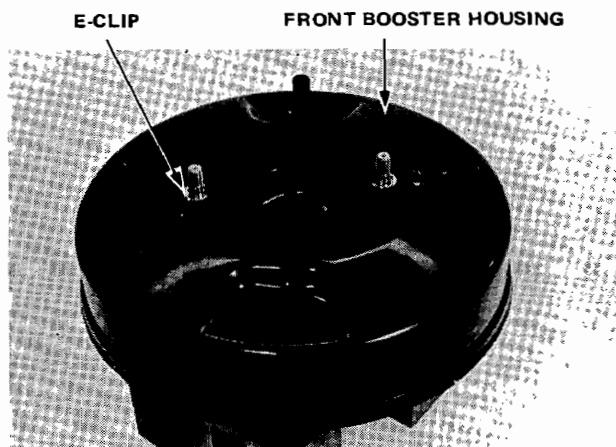

17. Adjust the pushrod clearance (page 21-23), and install the master cylinder.




Pushrod Clearance


Adjustment

NOTE: Master cylinder pushrod-to-piston clearance must be checked, and adjustments made if necessary, before installing master cylinder.

1. Using the Rod Bolt Adjustment Gauge, adjust bolt so the top of it is flush with end of master cylinder piston.

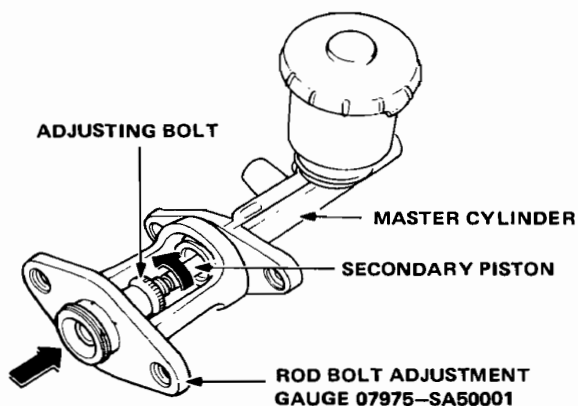

2. Without disturbing the adjusting bolt's position, put the gauge upside down on the booster.
3. Install the master cylinder nuts and tighten to the specified torque.
4. Connect the vacuum pump to the brake booster, and draw a vacuum of 500 mm Hg (20 in. Hg).
5. Measure the clearance between the out-put rod and adjusting bolt with a feeler gauge.

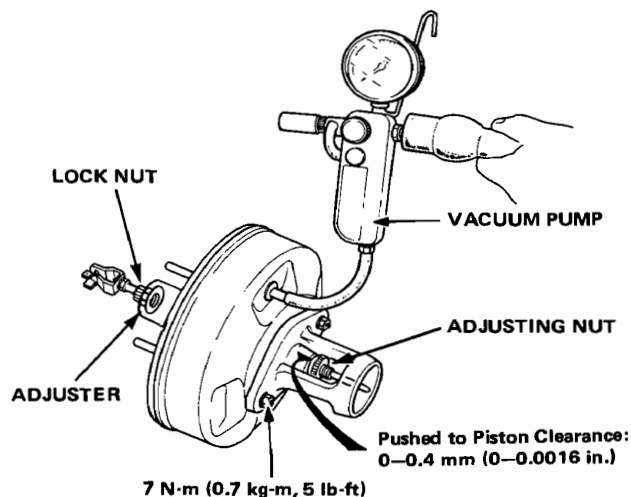


6. If clearance is incorrect, loosen star locknut and turn adjuster in or out to adjust.
7. Tighten locknut securely.

Rear Brakes

Index and Inspection

WARNING

- Block the front wheels before jacking up the rear of the car.
- Do not use an air hose to blow the brake assembly clean. Use an OSHA-approved vacuum cleaner, to avoid breathing the brake lining dust.

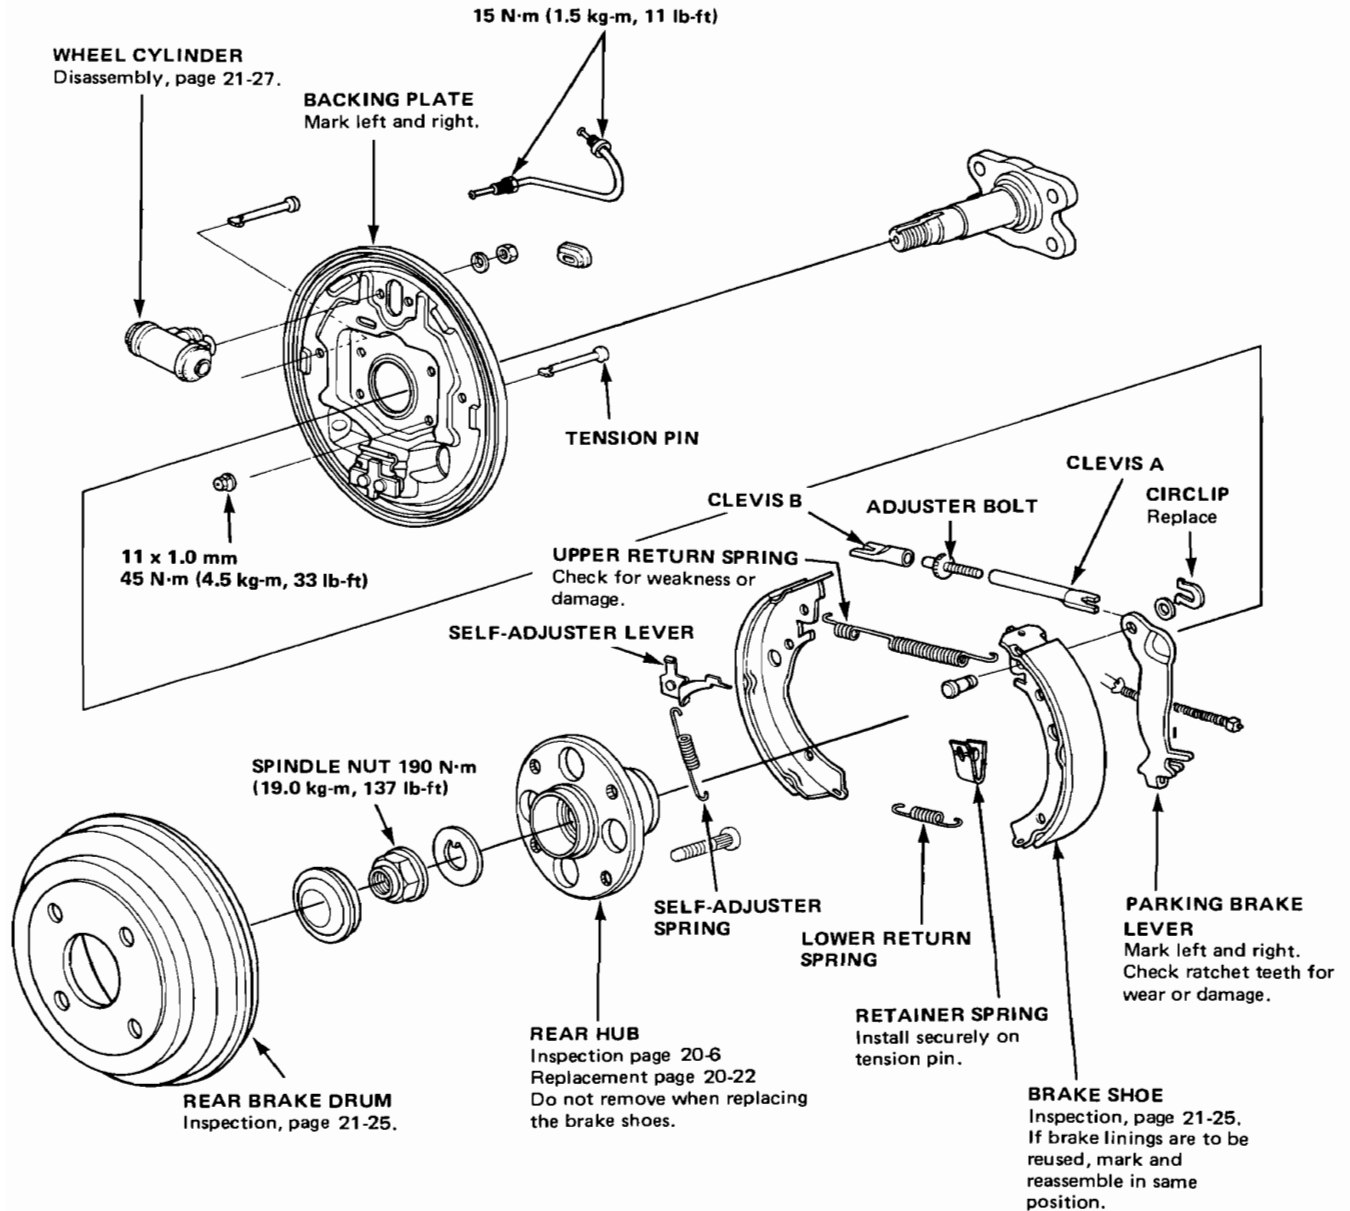

Rear Brakes



Inspection

1. Inspect the wheel cylinders for leakage.
2. Inspect the brake linings for cracking, glazing, wear or contamination.
3. Measure the brake lining thickness.


Lining Thickness

(Does not include brake shoe thickness)

Standard: 4.5 mm (0.177 in.)

Service Limit: 2.0 mm (0.079 in.)

WHEEL CYLINDER

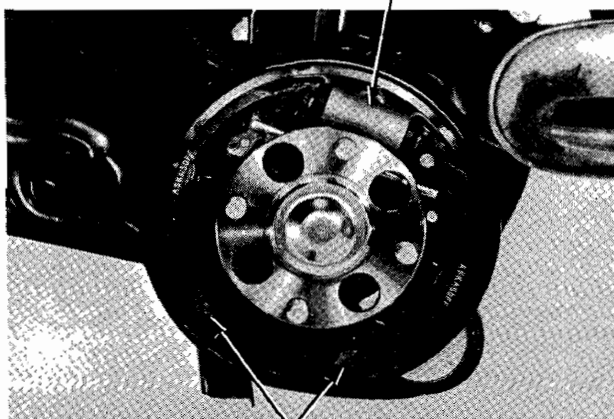

LINING

4. Measure the inside diameter of the brake drum at three points.

Drum Inside Diameter:

Standard: 180 mm (7.09 in.)


Service Limit: 181 mm (7.13 in.)

4D H/B

Standard: 200 mm (7.87 in.)

Service Limit: 201 mm (7.91 in.)

NOTE: If the refinishing limit stamped on the drum does not match the one listed above, use the one on the drum.

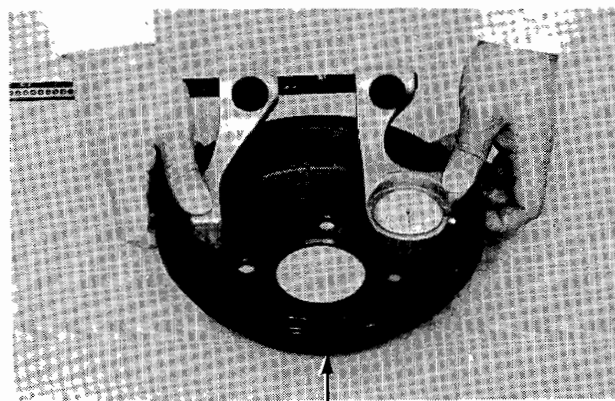


BRAKE DRUM

5. Inspect the brake drum for scoring, grooves, or cracks.

Brake Shoes

Removal

1. To remove the tension pins, push the retainer springs and turn them.

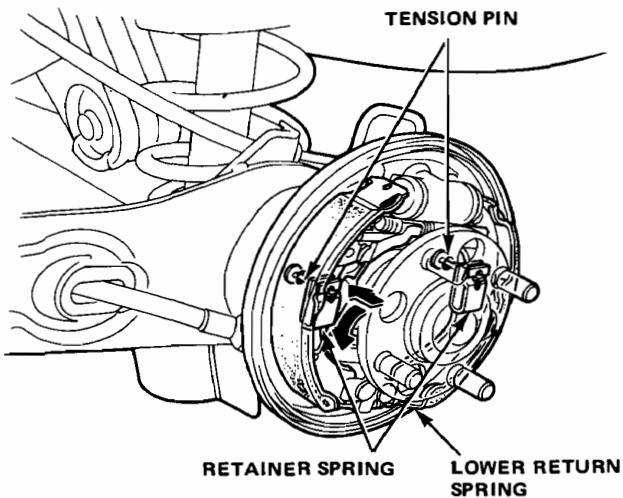


2. Lower the brake shoe assembly in order to clear the wheel cylinder, then remove the lower return spring.

CAUTION: Do not damage the dust covers of the wheel cylinder.


3. Remove the brake shoe assembly by pulling it up over the hub.
4. Disconnect the parking brake cable from the parking brake lever.
5. Remove the upper return spring, then separate the brake shoes.

SELF-ADJUSTER LEVER

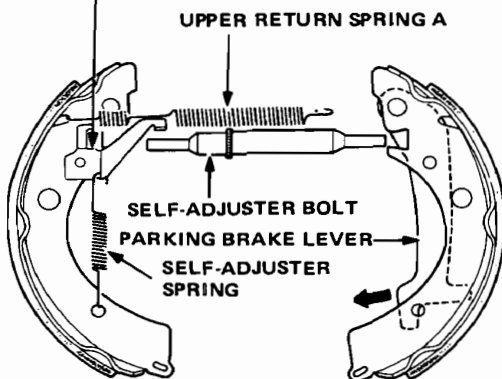

6. Remove the self-adjuster bolt, lever and spring.

7. Remove the parking brake lever.

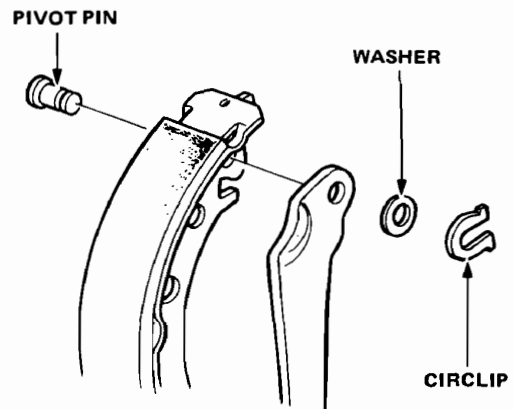


Wheel Cylinder



Disassembly and Inspection

CAUTION:


- Clean all parts thoroughly with BRAKE FLUID only.
- Blow out all passages with compressed air.
- Lubricate all parts with brake fluid during assembly.
- Apply sealant between the wheel cylinder and backing plate whenever the wheel cylinder is removed.

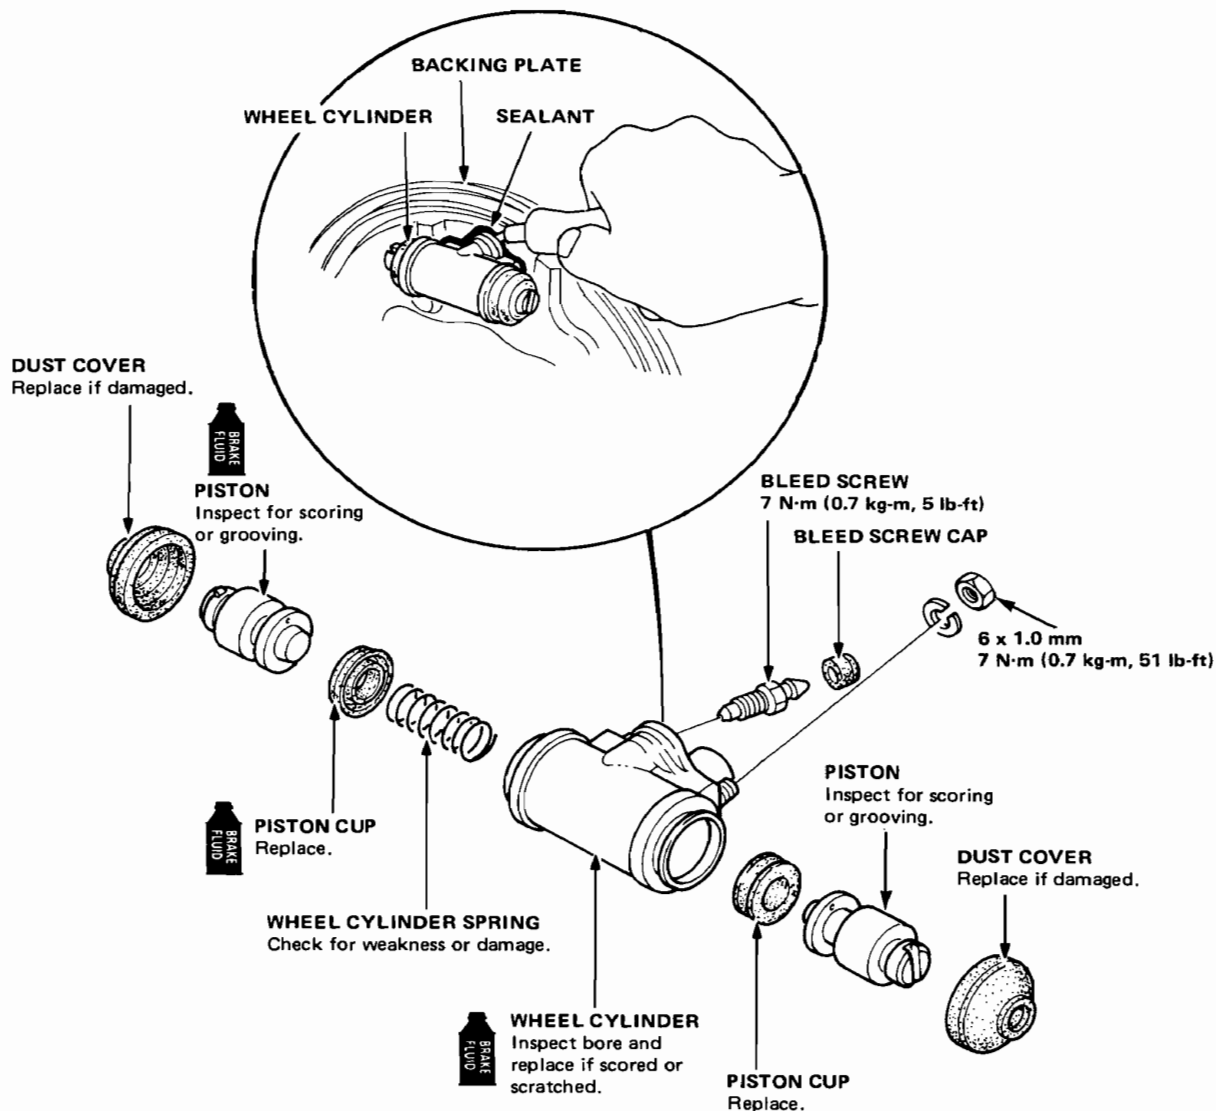

Brake Shoes


Reassembly

1. Fit the parking brake lever and secure it using the pivot pin, washer, and circlip.

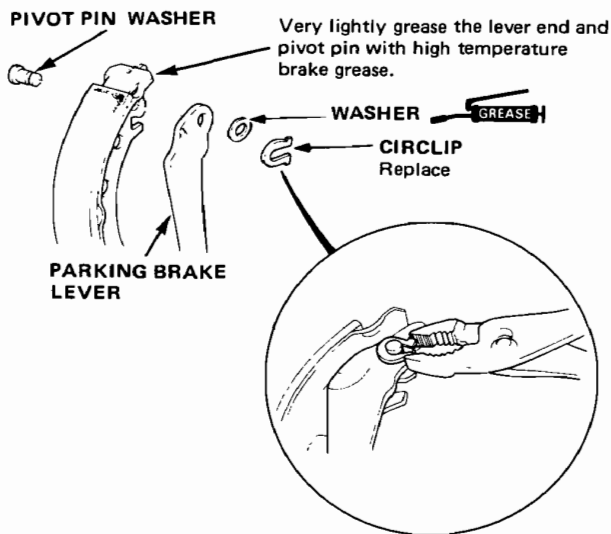

2. Fit the parking brake cable to the backing plate.
3. Connect the parking brake cable to the parking brake lever.
4. Apply grease on metal-to-metal contact areas as shown.

NOTE: Do not get grease or oil on lining surface.

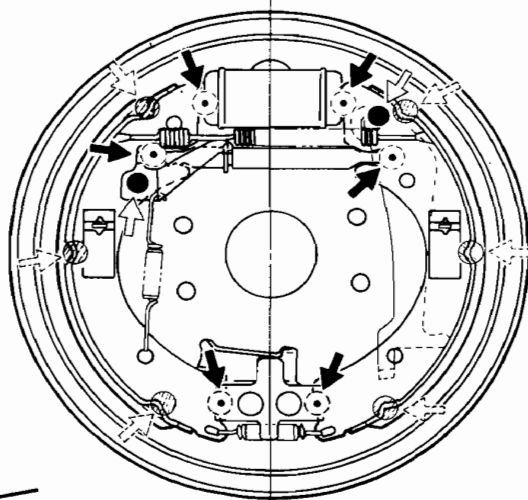


GREASE RUBBER GREASE

Greasing symbols:

- ➔ ○ Brake shoe ends
- ➔ ○ Opposite the edge of the shoe,
- ➔ ● Sliding surface

5. Screw in the self-adjuster bolt until it stops.
6. Hook the self-adjuster spring to the self-adjuster lever, and then to the brake shoe.

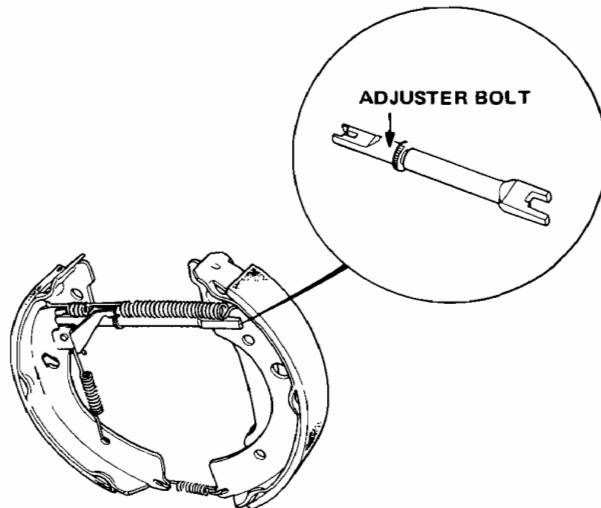

7. Install the self-adjuster bolt and upper return spring on the brake shoes as shown.
8. Fit the brake shoe assembly over the hub and onto the backing plate. Fit the tension pins through their holes in the brake shoes, and fit the shoes into the grooves in the wheel cylinder pistons.

CAUTION: Make sure the wheel cylinder dust covers are not damaged during installation.


9. Fit the retainer springs onto the tension pins.
10. Hook the lower return spring to the brake shoes.
11. Install the brake drums.
12. Bleed and then adjust the brakes as described on pages 21-10 and 21-3.

Brake Lines and Hoses



Inspection


1. Inspect the brake hoses for damage, leaks, interference or twisting.
2. Check the brake lines for damage, rusting or leakage. Also check for bent brake lines.
3. Check for leaks at hose and pipe joints or connections, and retighten if necessary.

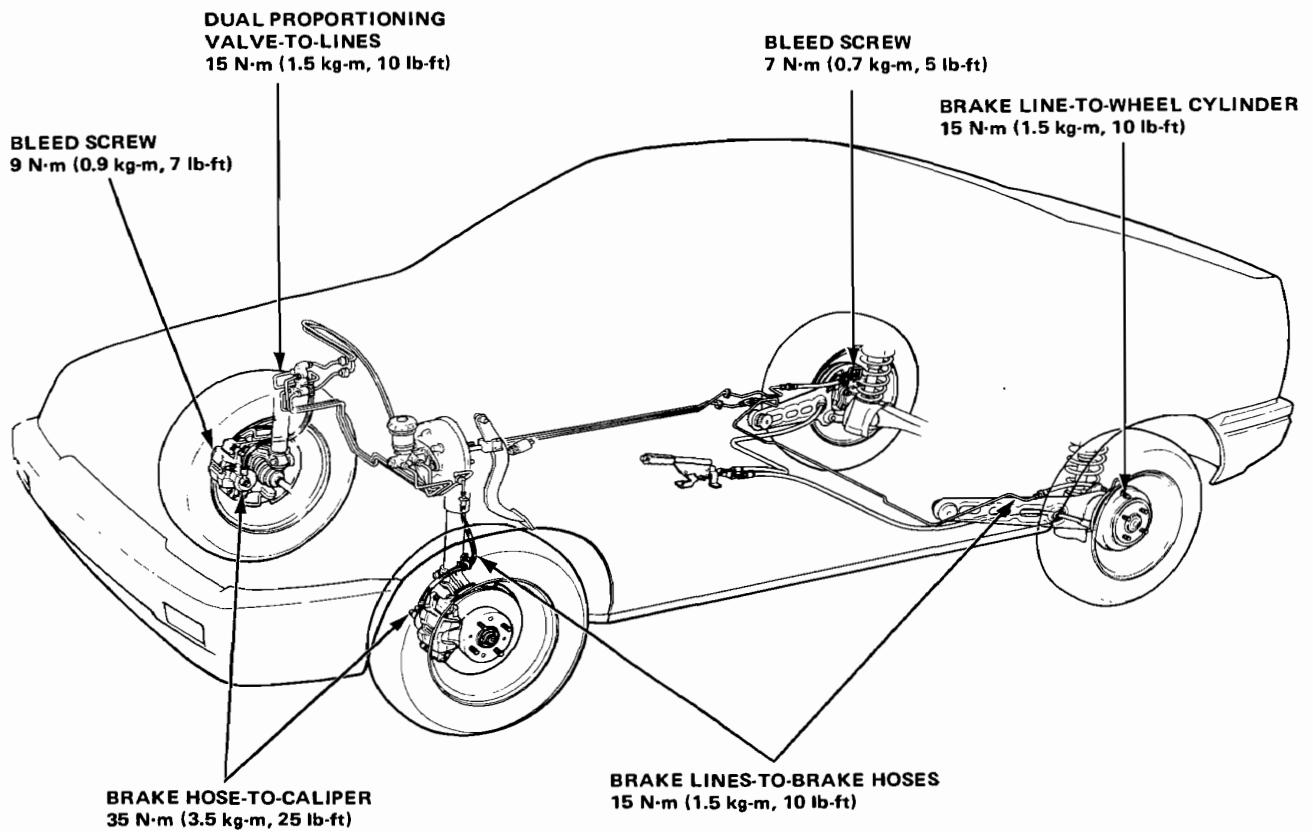

Parking Brake

Disassembly/Reassembly

Remove the parking brake cable from the backing plate using a 12 mm offset wrench as shown.

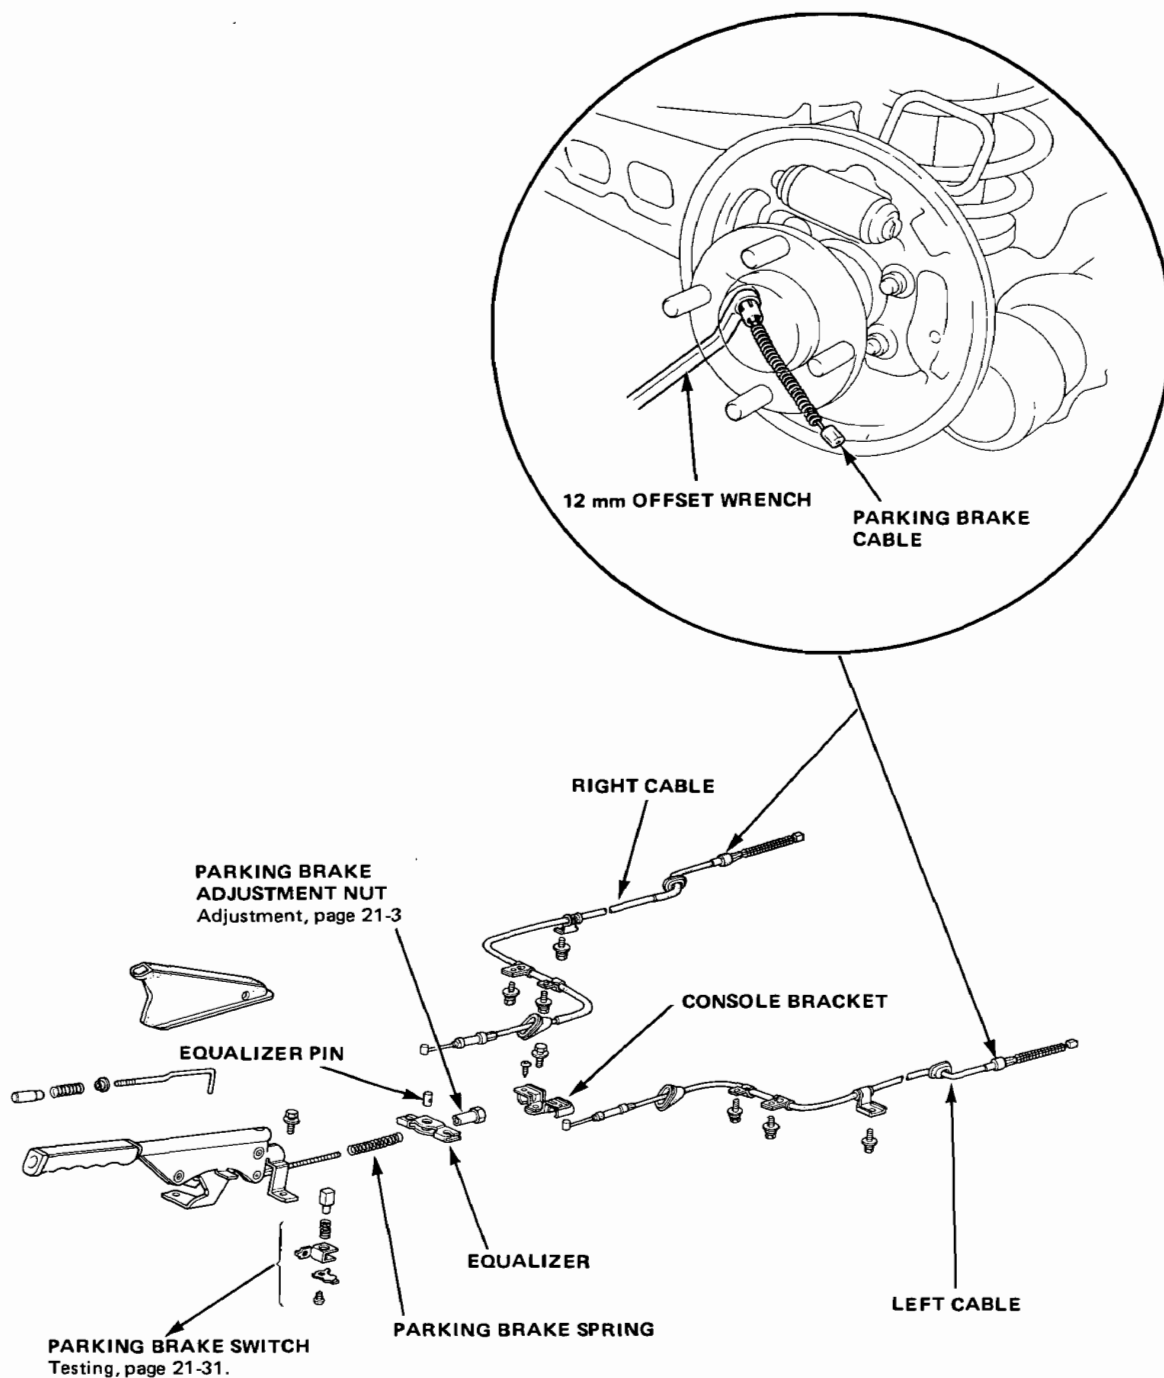


Parking Brake Switch

Testing

Attach one test probe of an ohmmeter to the switch, and the other to the body.

- With the brake lever up, there should be continuity.
- With the brake lever down, there should be no continuity.

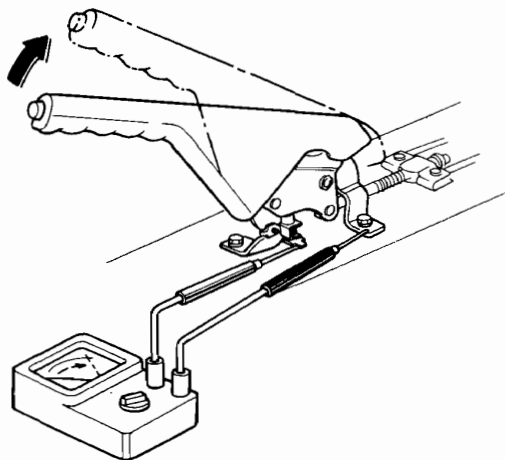

If continuity readings are incorrect, replace switch.

Brake Light Switch




Testing

Check for continuity between both terminals with an ohmmeter.

- With the switch plunger pushed in, there should be no continuity.
- With the switch plunger released, there should be continuity.

If no continuity, replace switch.

NOTE: If you replace the brake light switch, or change its position, readjust pedal height (page 21-3).

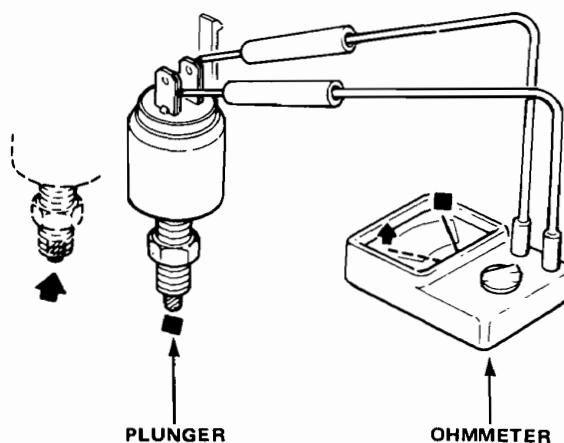


Warning System Testing

Fluid Level Switch

A float level sensor switch is part of the cap on the master cylinder reservoir. When fluid level drops below limits, the switch is actuated by a magnet in the float which completes the ground circuit to the BRAKE indicator light.

To check the brake fluid level switch:

1. Put the transmission in gear and release the parking brake.
2. Turn the ignition switch to II.
3. Remove the reservoir cap and lift the float level switch out of the reservoir.
4. Check that the BRAKE indicator light turns on.

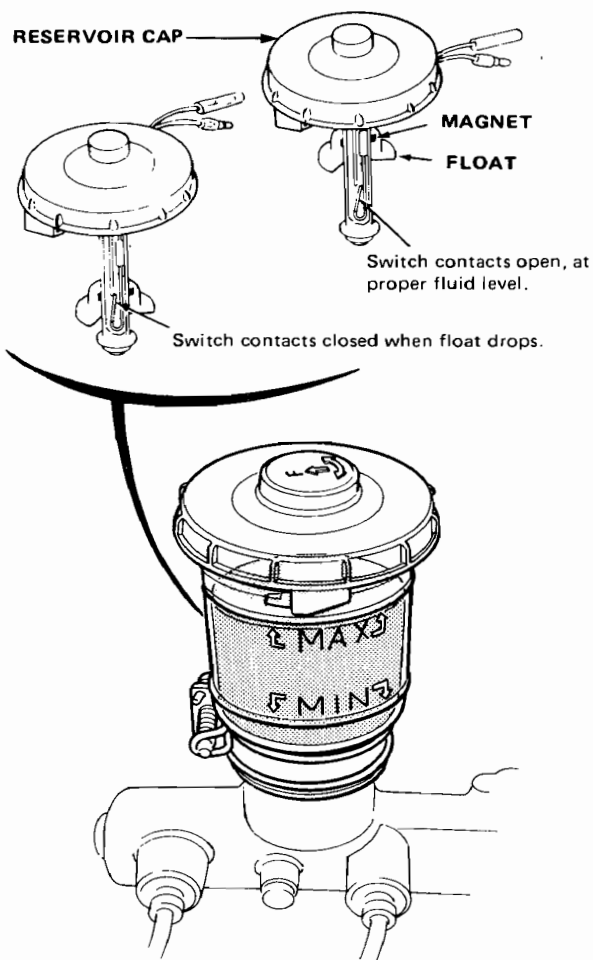

Warning Indicator Light

1. Be sure the brake master cylinder is full.
2. Set the parking brake, then turn the ignition switch to II. The warning light should come on.
 - If it does not come on at all, check the fuse.
 - If the fuse is OK, check the fluid level switch (see the previous procedure), then check the bulb.
 - If the light still does not come on, check the parking brake switch.
3. Then release the parking brake; the warning light should go out.
 - If the light does not go out, check the parking brake switch, fluid level switch and the bulb check relay.
4. Be sure the transmission is in neutral, then turn the key to III (start). The warning light should come on again.
 - If the light does not come on, check the bulb check relay.

Brake Warning System Circuit




Brake Fluid Level Switch

A float level sensor type switch is installed in the brake fluid reservoir. When fluid level drops below limits, the switch is actuated by a magnet in the float which completes the ground circuit to the brake warning light. The brake warning light comes on when the ignition switch is turned to "III" (start) position, to indicate bulb working properly by means of the bulb check relay.


Parking Brake Switch

Parking brake warning light comes on when the parking brake is engaged with the ignition position "II or III" and goes off when the parking brake released.


KC model

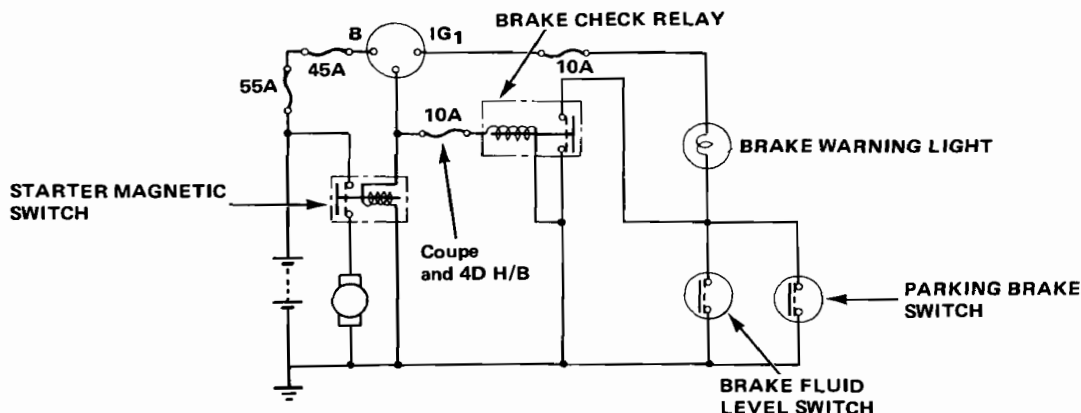

KQ model

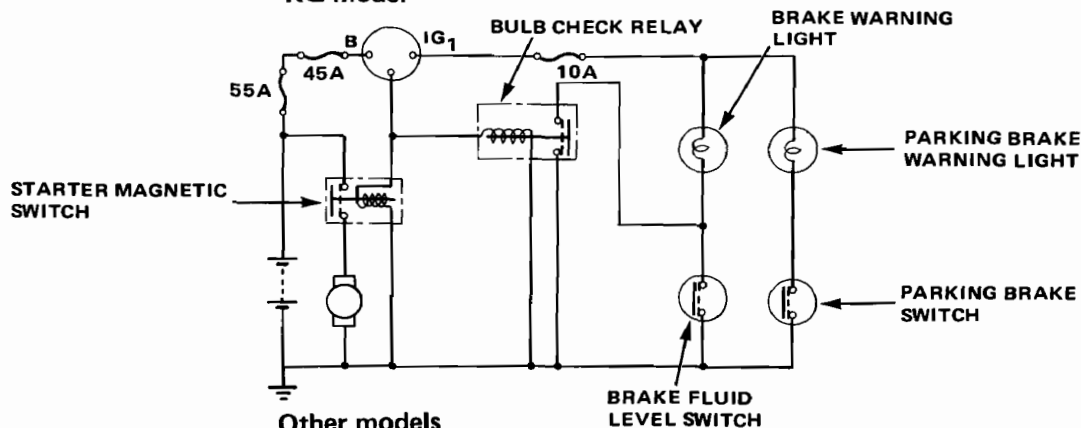


Other models

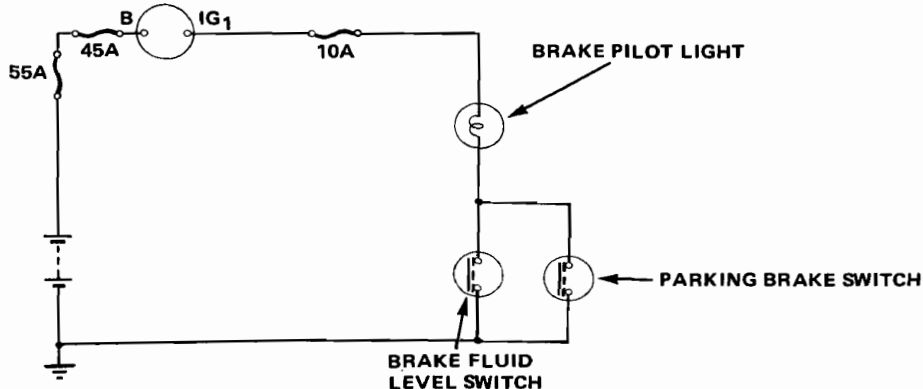


Windshield and Rear Windows

Index (Coupe)

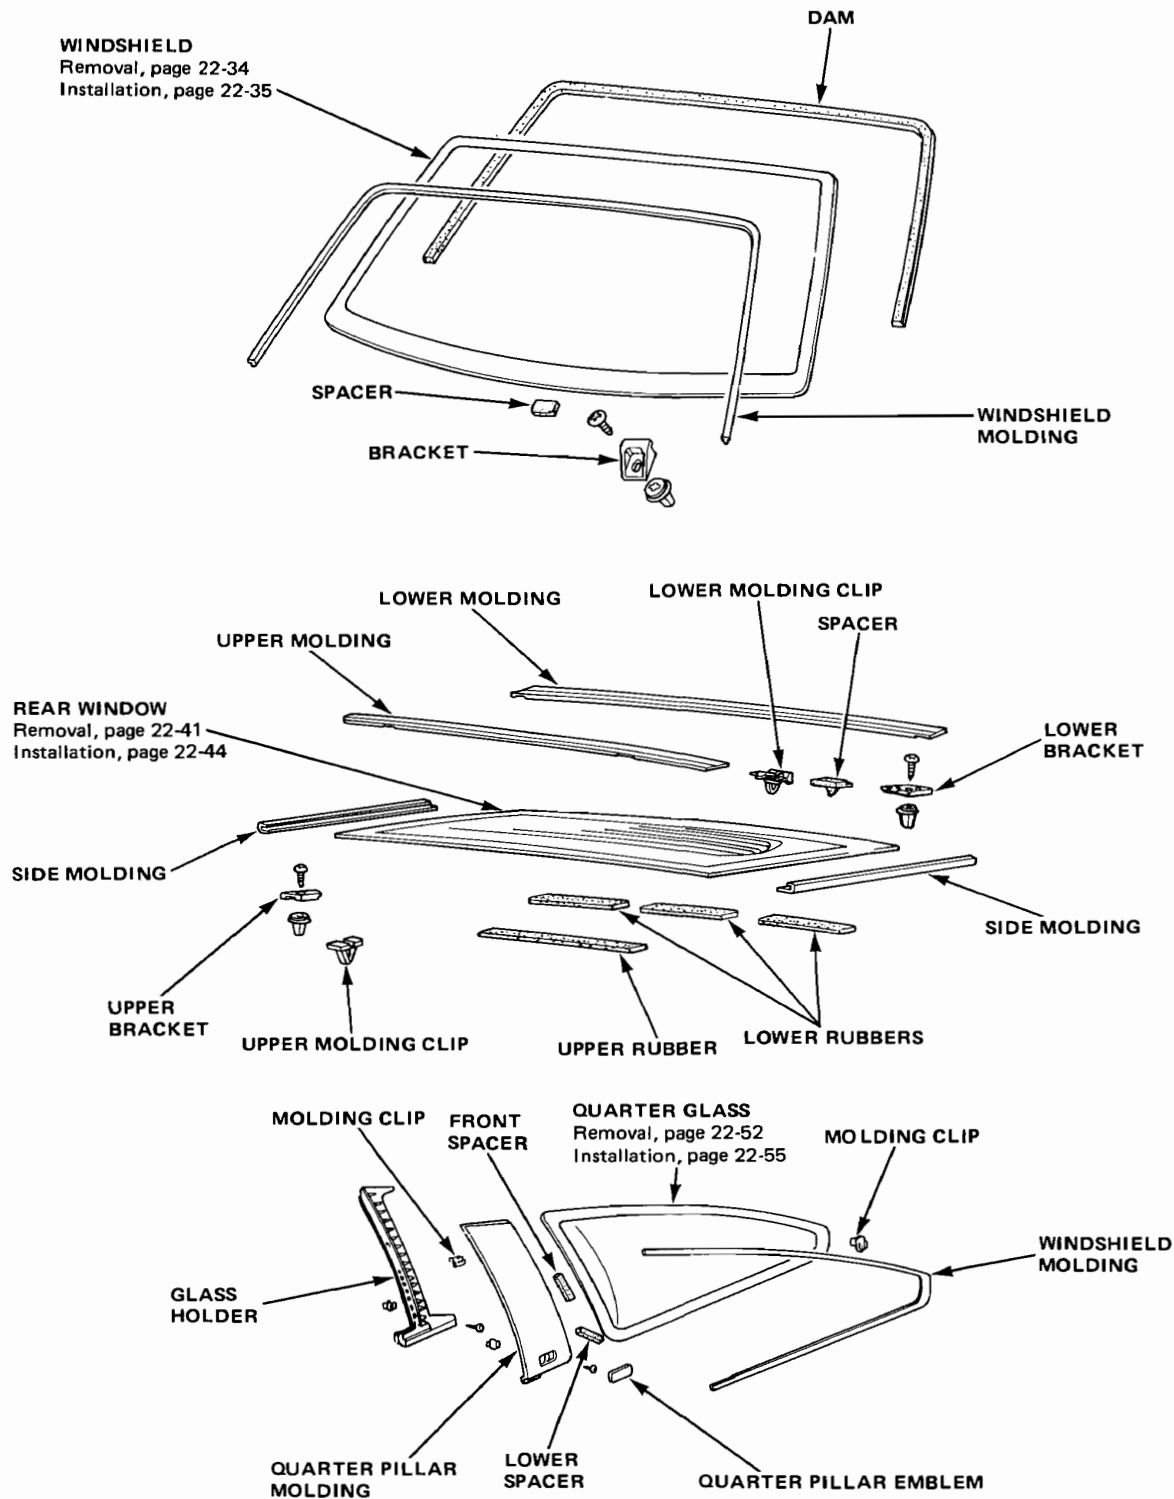





(2D H/B)

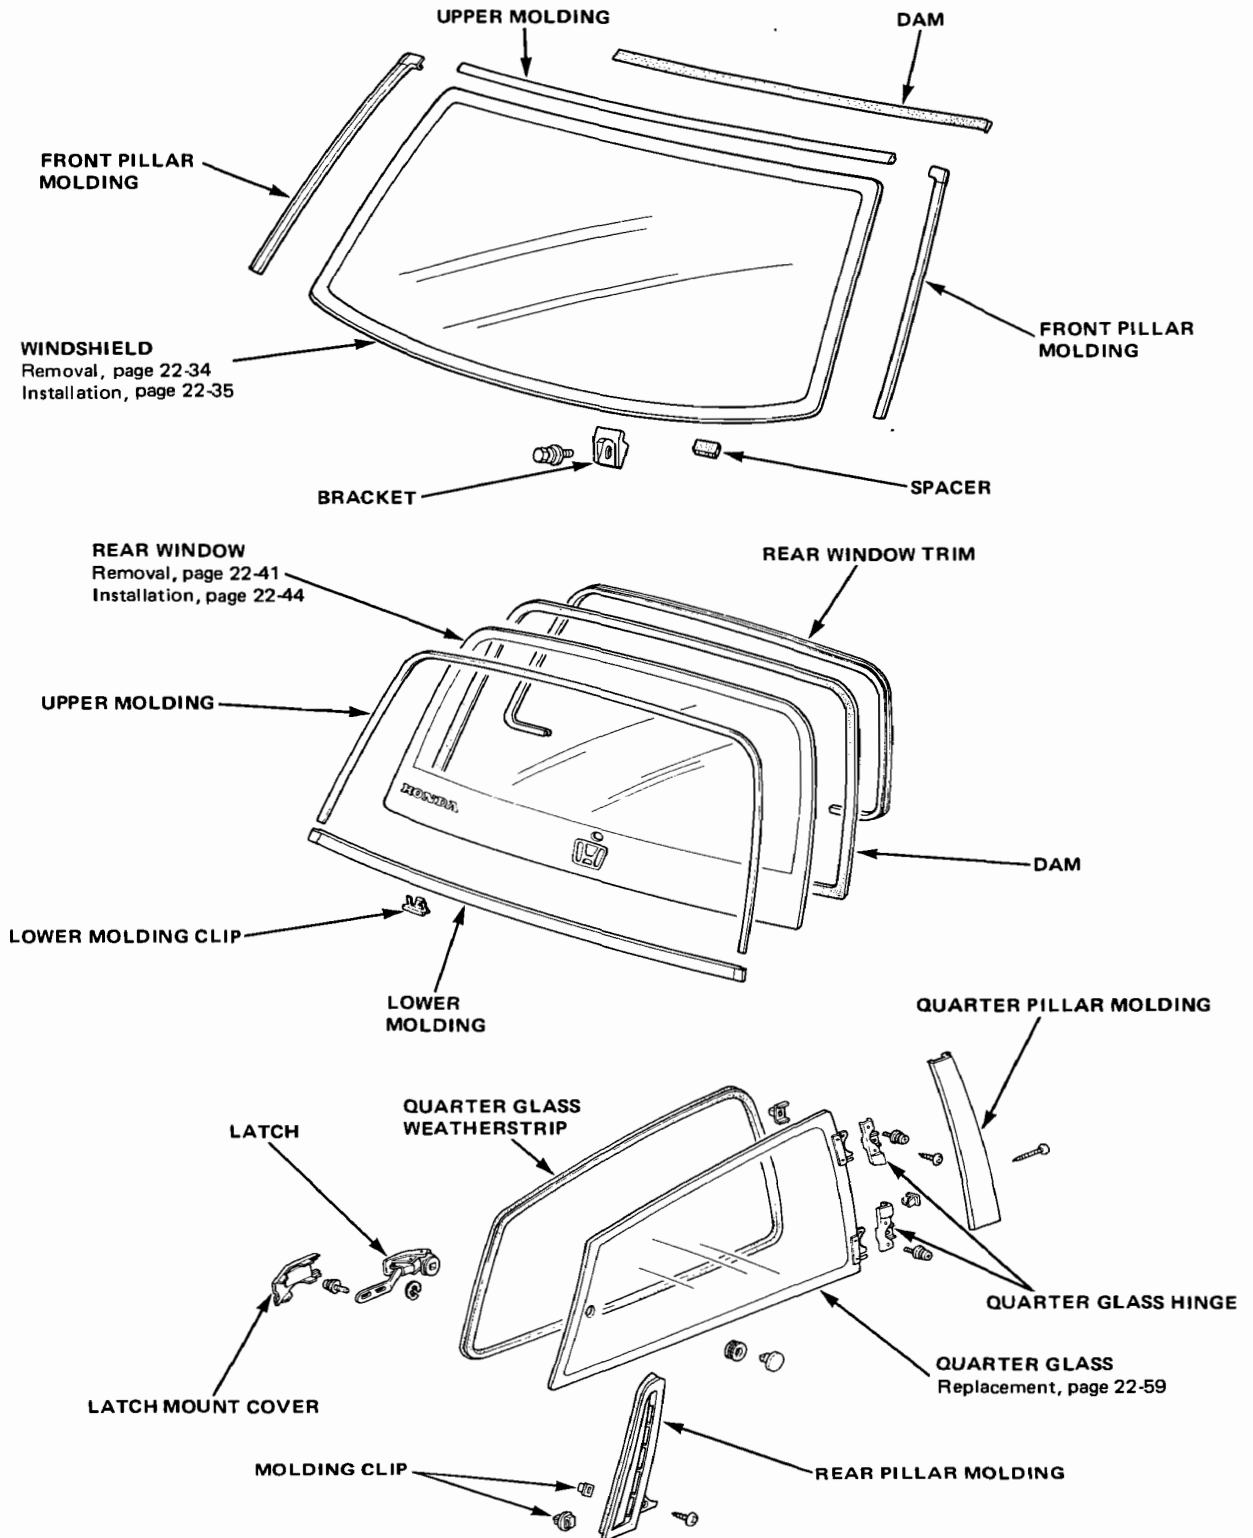


Windshield and Rear Windows

Index (4D)

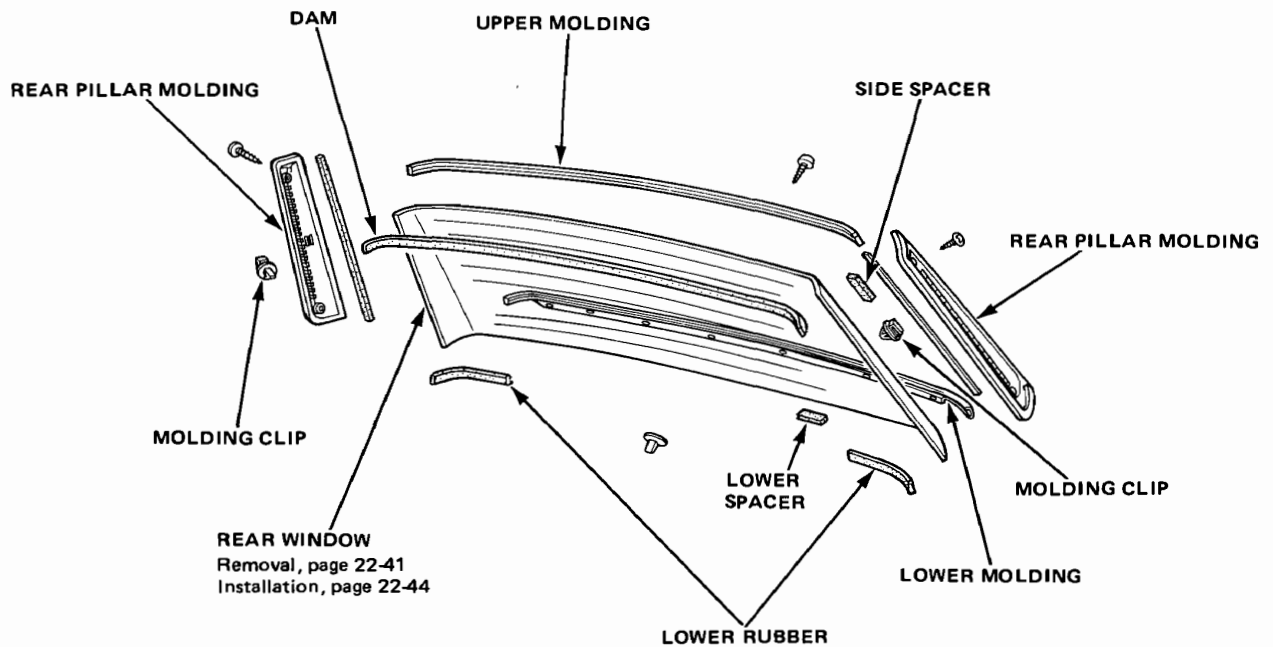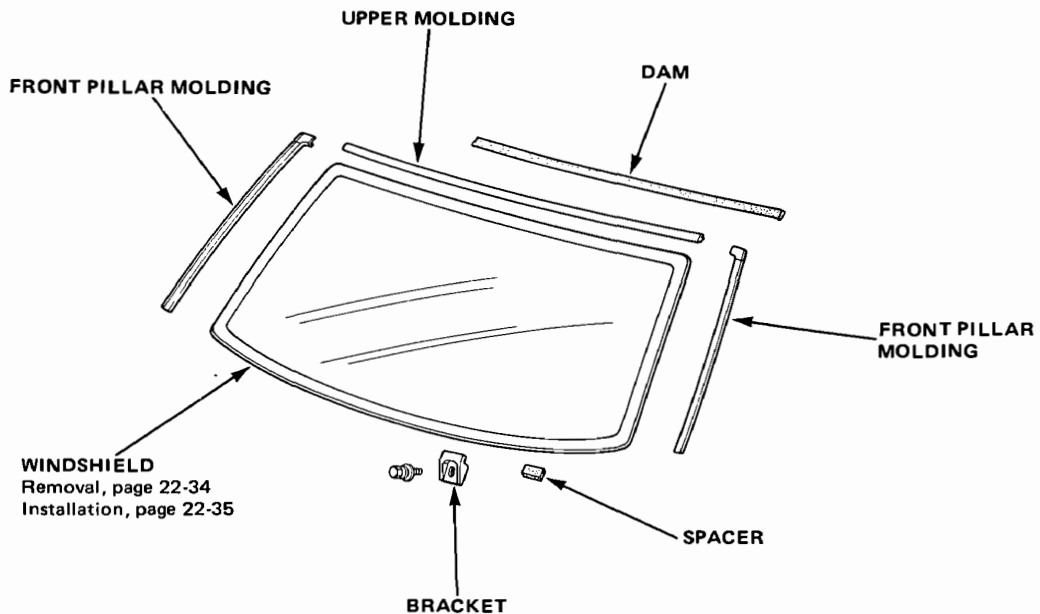




(4D H/B)

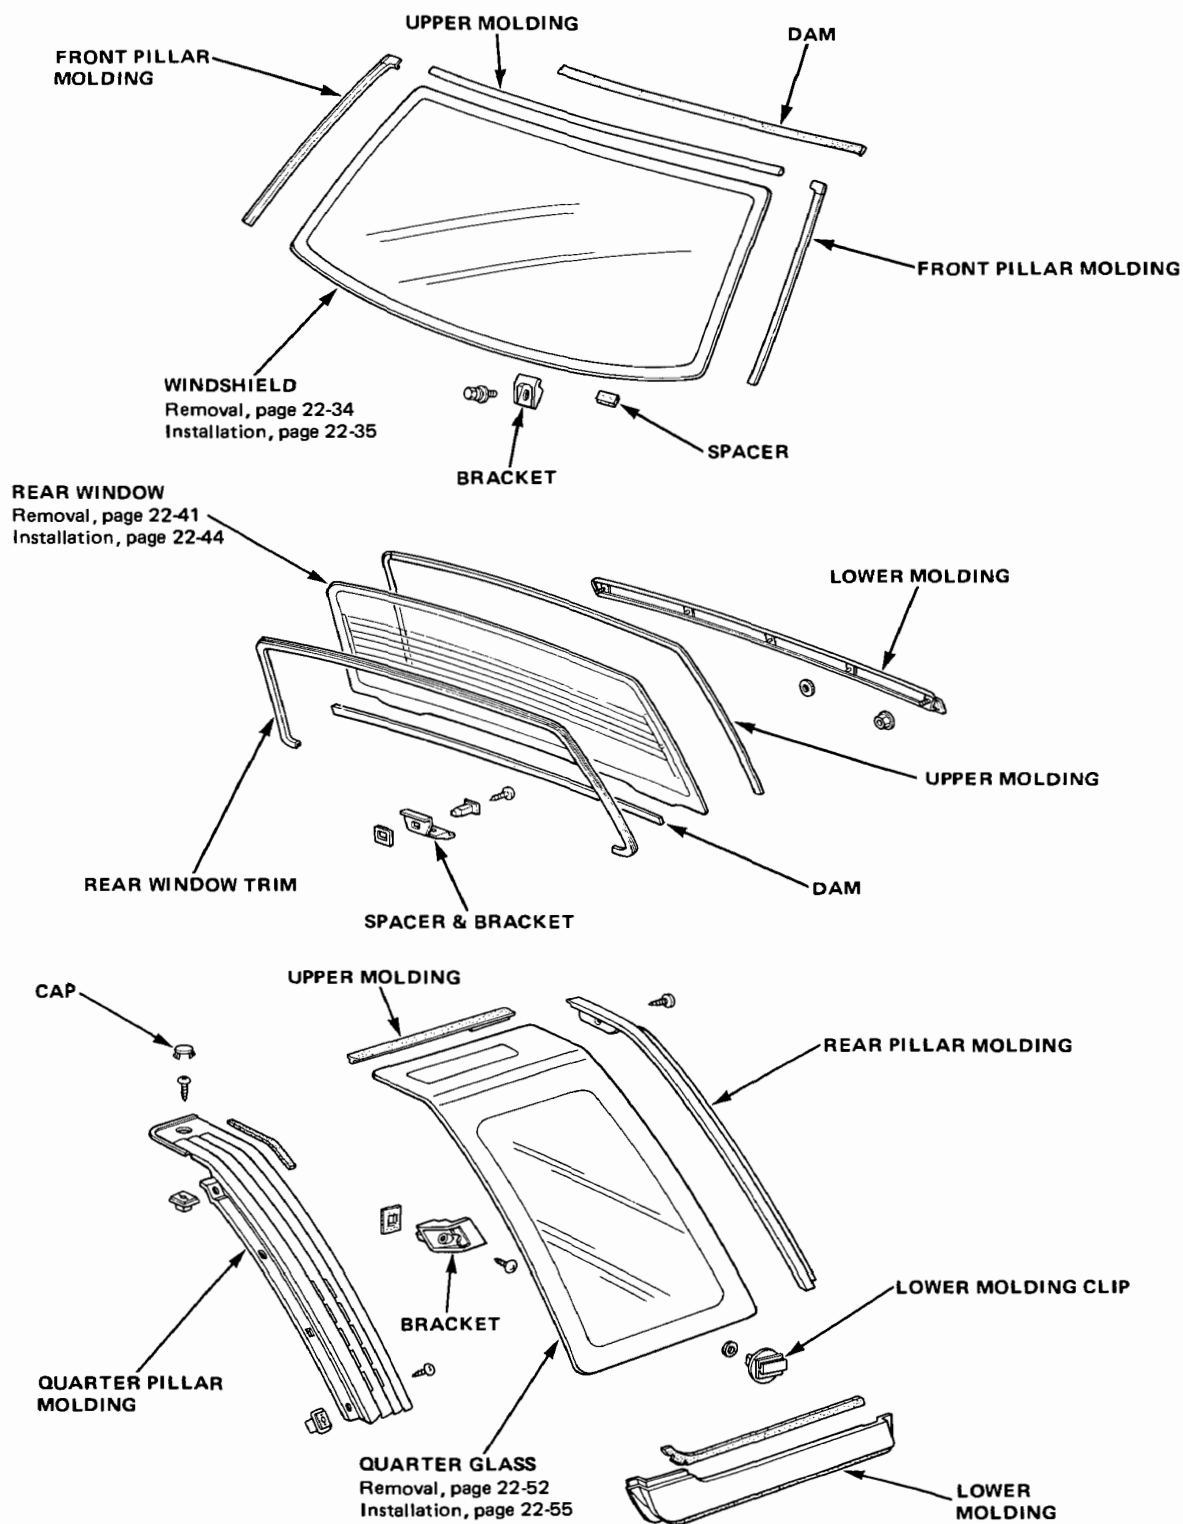

Windshield and Rear Windows

Removal/Installation

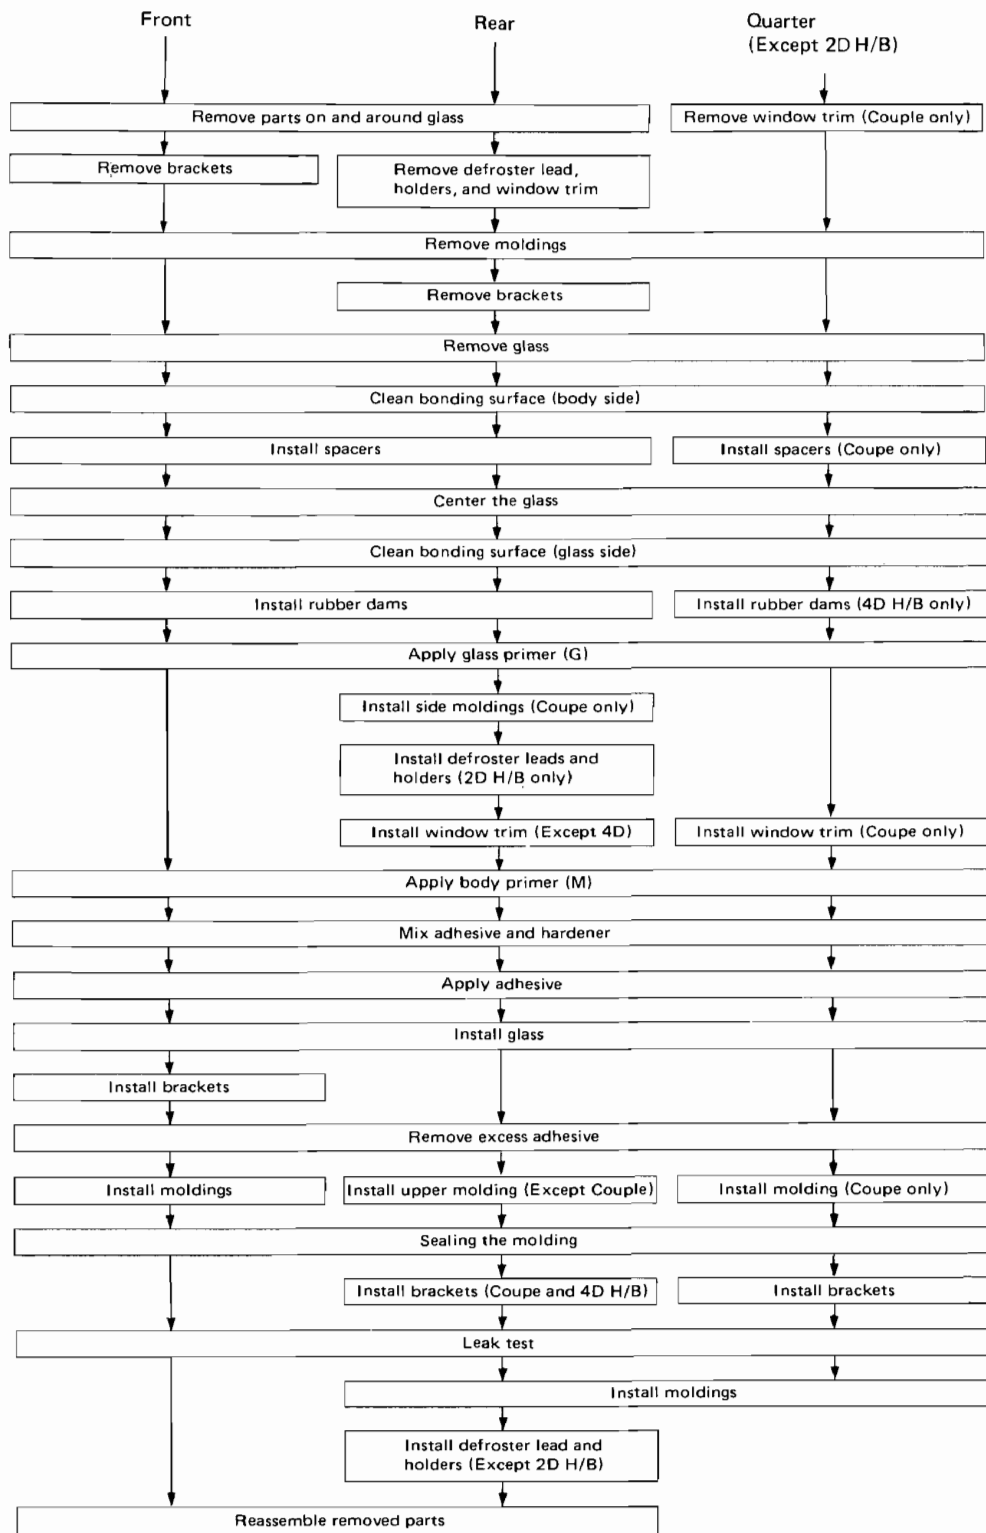



Parts

Part Number	Contents	Comment
Adhesive kit – Low temperature 08718–99960 –High temperature 08718–99961	Adhesive sealant (500 g) Hardener (75 g) Glass primer G (20 g) Body primer M (20 g) Piano wire (0.6φ x 1 m (3.3 ft)) Gauze Cartridge Sponge	For glass primer (G) For applying adhesive For applying primer

Tools

Tool/Material	Remarks
Glass or steel plate Putty knife Caulking gun Suction cups	To mix adhesive and hardener on To mix adhesive and remove excess To apply bead of adhesive to windshield To install windshield
Knife Awl Two wood sticks Toluene or alcohol	To scrape bonding surface around window opening To make hole through existing adhesive for piano wire To hold piano wire To clean bonding surfaces

Windshield and Rear Windows

Adhesive/Primer


Workable Time

Adhesive workable time varies widely according to temperature, so choose the correct adhesive kit for the temperature range you will be working in.

After mixing and applying adhesive, you should install the windshield within the time shown on the chart.

For example, when the ambient temperature is 25°C (77°F), the glass should be installed within 45 minutes using the high temperature type adhesive.

Kit part numbers and contents are listed on previous page.

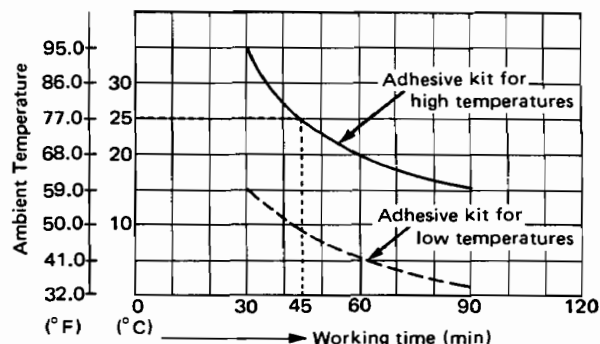


Hardening Time

Hardening time can be shortened by heating with infrared light.

For example, the adhesive (for high temperature type) will start to harden within 270 minutes after mixing at 20°C (68°F). If, however, it is heated to 35°C (95°F), it will start to harden within 90 minutes.

CAUTION: To prevent bubbling, keep the surface temperature below 50°C (122°F).

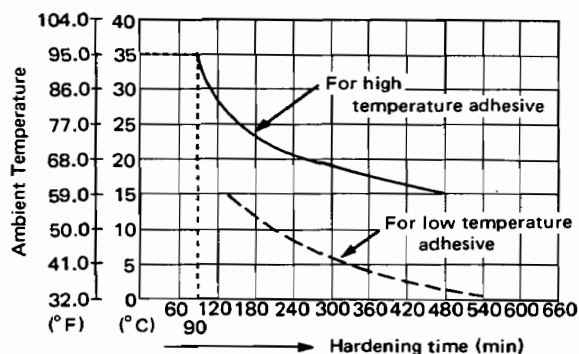

Primer

Both kits have two types of primer: One for the body (metal), and one for glass.

Notes

- Always use new genuine Honda primer, or equivalent.
- Do not use the adhesive if 6 months have elapsed since date of manufacture.
- Store adhesive and primer in a cool, dry place.
- Open only immediately before you are going to use it.



Broken Glass Removal

Windshield:


Remove as much broken glass as possible with a vacuum cleaner.

Blow out the glass in the heater and behind the dashboard with low pressure compressed air:

WARNING Wear eye protection while using the air gun.

1. Set the temperature control lever to COLD.
2. Push the HEAT button on the function panel.
3. Make sure the recirculation button is out (OFF).
4. Blow compressed air through the defroster center vent outlet.
5. Remove the blower duct, and remove any glass from the air mix chamber.
6. Remove any glass from the top of the vent/defrost door.
7. Remove any glass from the top and bottom of the carpet and seats with a vacuum cleaner

NOTE: You should remove the seats and shake them to remove any glass.

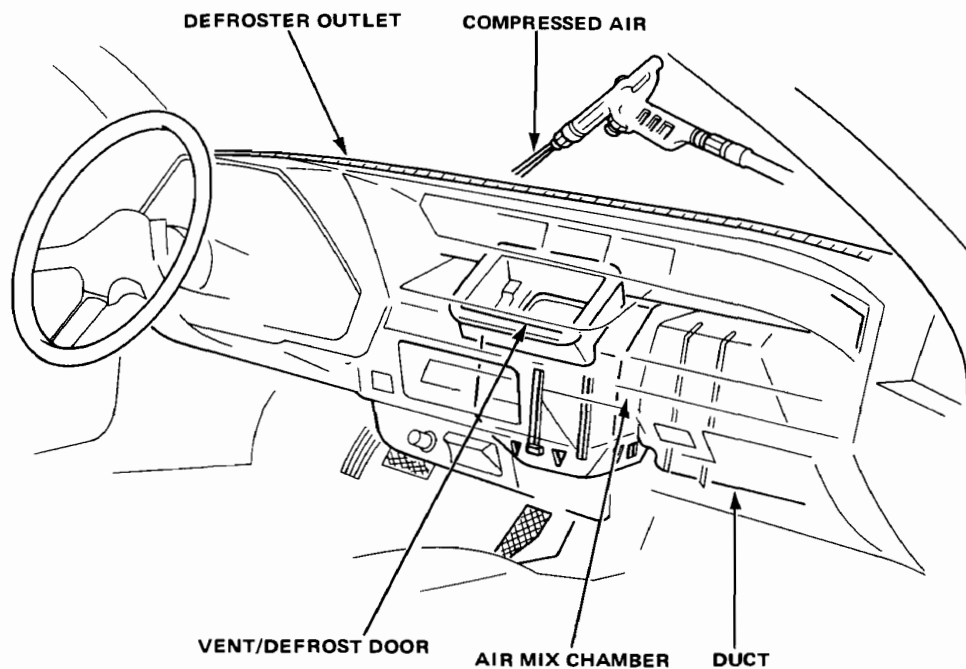


Windshield


Removal

1. To remove the windshield, first remove the:
 - Inside rear view mirror (page 22-76).
 - Sun visor.
 - Front pillar trim (pages 22-61 to 64).
 - Front wiper and air scoop (page 22-128).

2. Remove the right and left brackets.

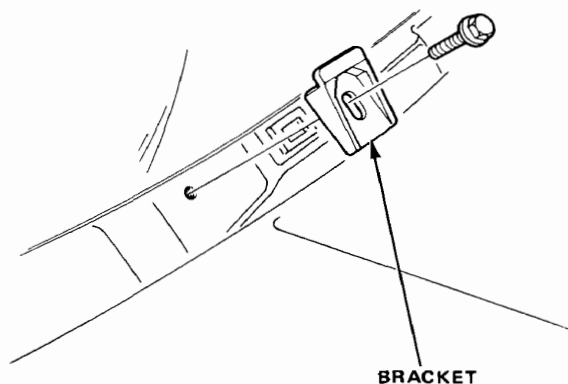


3. Remove the front pillar molding by taking off the drip seal, and removing the screws (except coupe).

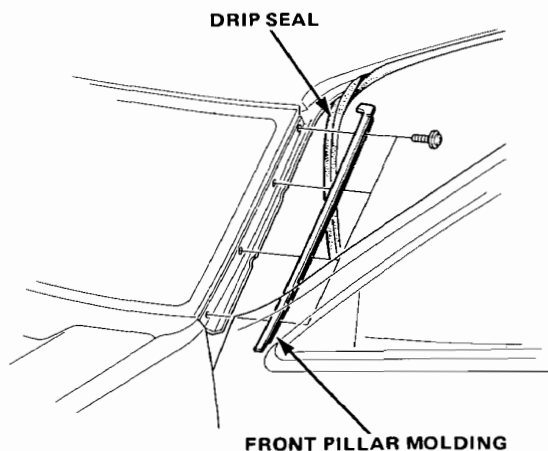


4. Peel off the windshield molding, then pull down the front edge of the headliner so it will not interfere with the glass removal.

NOTE: Take care not to bend the headliner excessively.

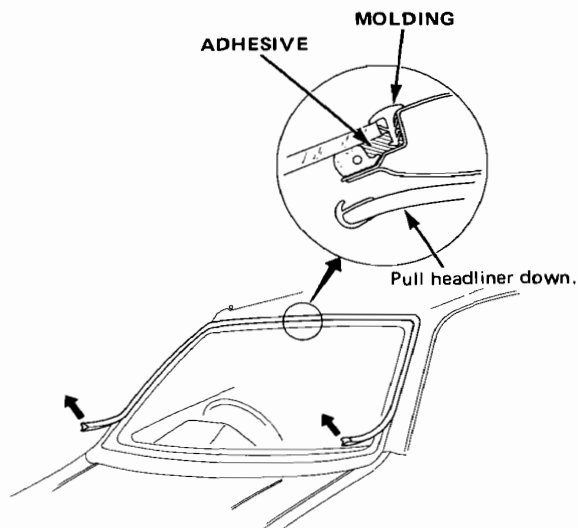


5. Apply protective tape along the edge of the dashboard and body next to the windshield as shown.

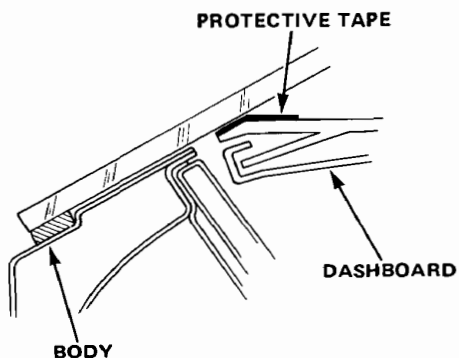




6. Using an awl, make a hole through the windshield adhesive from inside the car. Push piano wire through the hole and wrap each end around a piece of wood.

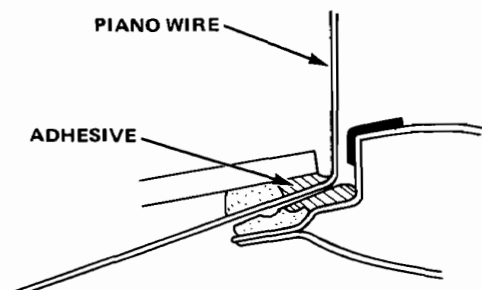

7. With a helper on the outside, pull the wire back and forth in a sawing motion and carefully cut through the adhesive around the entire windshield.

CAUTION: Hold the piano wire as close to the glass as possible to prevent damage to the body and dashboard.

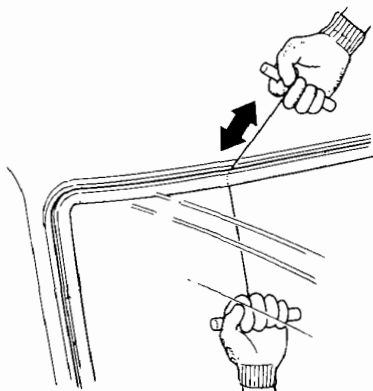

8. Cut the rubber spacers away from the body with a knife; they are cemented in place.

NOTE: Replace the rubber spacers with new ones whenever the windshield has been removed.

Installation

1. Scrape the old adhesive smooth with a knife, to a thickness of about 2 mm (0.08 in.) on the bonding surface around the entire windshield flange.


NOTE:

- Do not scrape down to the painted surface of the body; damaged paint will interfere with proper bonding.
- Remove all traces of the rubber spacer material from the body.
- Mask off surrounding surfaces before painting.

2. Clean the body bonding surface with a sponge dampened in alcohol.

NOTE: After cleaning, keep oil, grease or water from getting on the surface.

3. Peel the lining off each spacer, then install the spacers by pressing them firmly into place at the locations shown.

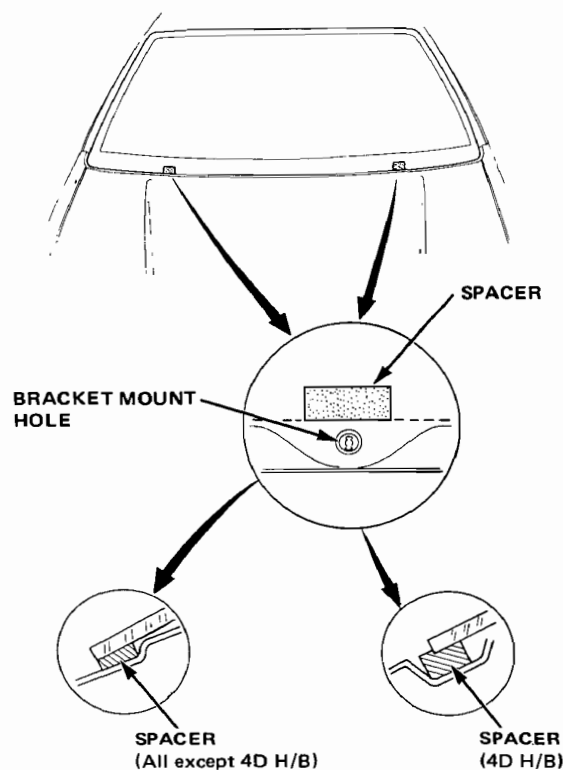


(cont'd)

Windshield


Installation (cont'd)

4. Set a new windshield upright on the spacers, and center it in the opening. Mark the location by marking lines across the glass and body with a grease pencil at the four points shown.

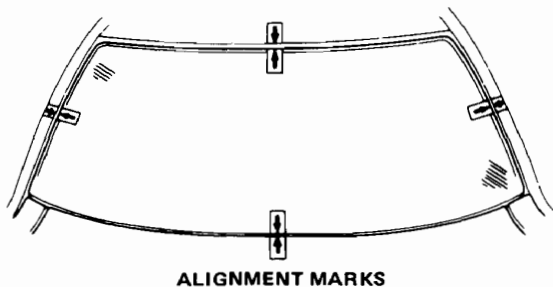

5. If the glass is to be reinstalled, use a putty knife to scrape off all traces of old adhesive, then clean the glass surface with alcohol where new adhesive is to be applied.


NOTE: Make sure the bonding surface is kept free of water, oil and grease.

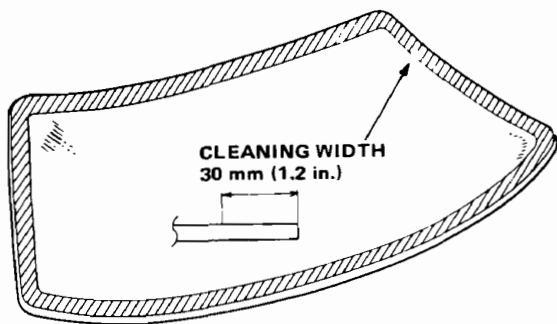


6. Glue the rubber dam to the inside face of the windshield as shown, to contain the adhesive during installation.

NOTE: Be careful not to touch the glass where adhesive will be applied.

Coupe:

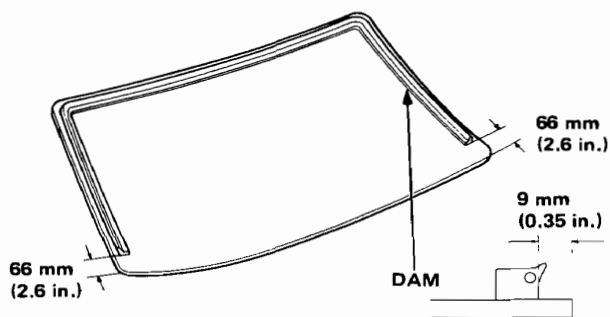

2D H/B, 4D, and 4D H/B:

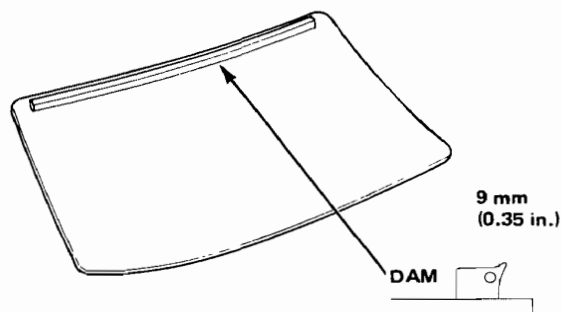




7. With a sponge, apply a light coat of glass primer around the edge of the glass as shown, then lightly wipe it off with gauze or cheesecloth.


NOTE:

- Do not apply body primer to the glass, and do not get body and glass primer sponges mixed up.
- Never touch the primed surfaces with your hands. If you do, the adhesive may not bond to the glass properly, causing a leak after the windshield is installed.
- Keep water, dust, and abrasive materials away from the primed surface.

Coupe:

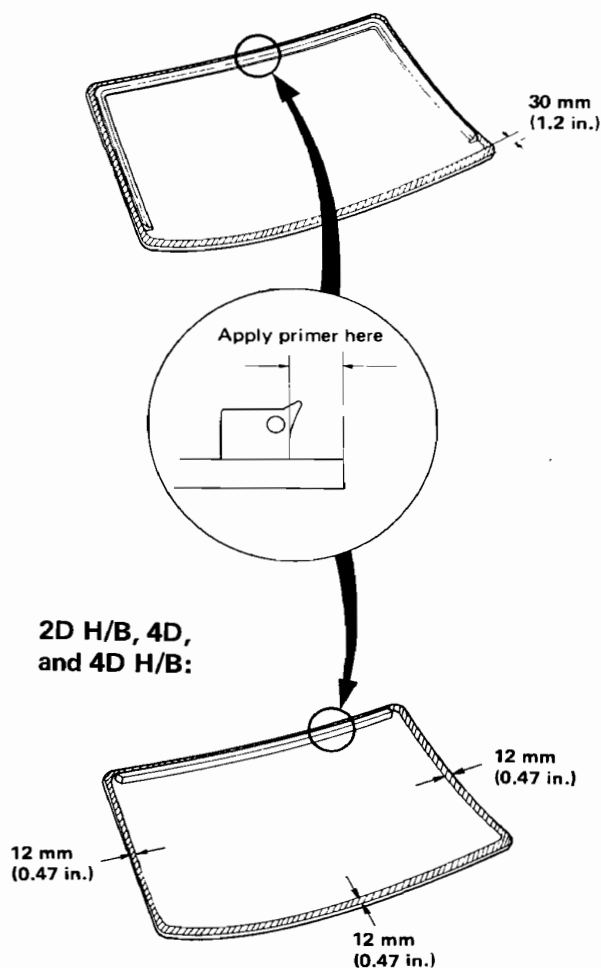

8. With a sponge, apply a light coat of body primer to the original adhesive remaining around the window opening flange. The glass should be installed 10 minutes after you apply the primer.

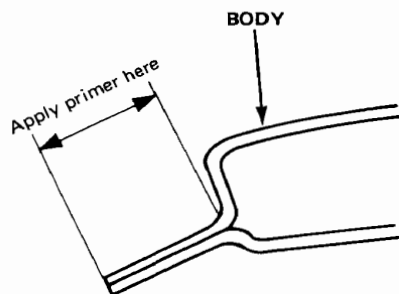


NOTE:

- Do not apply glass primer to the body, and be careful not to mix up glass and body primer sponges.
- Never touch the primed surfaces with your hands.
- Mask off the dashboard before painting the flange.

9. Thoroughly mix all the adhesive and hardener together on a glass or metal plate with a putty knife.

NOTE:

- Clean the plate with a sponge and alcohol before mixing.
- Follow the instructions that come with the adhesive.

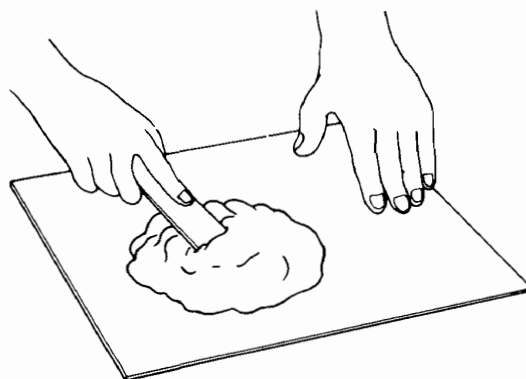


(cont'd)

Windshield

Installation (cont'd)


10. Before filling a cartridge, cut off the end of the nozzle at the angle shown.

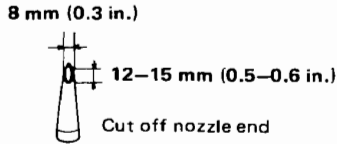


11. Pack adhesive into the cartridge without air pockets, to ensure continuous delivery. Put the cartridge in a caulking gun, and run a bead of adhesive around the edge of the glass as shown.

NOTE: Apply the adhesive within 30 minutes after applying the glass primer.


Coupe:

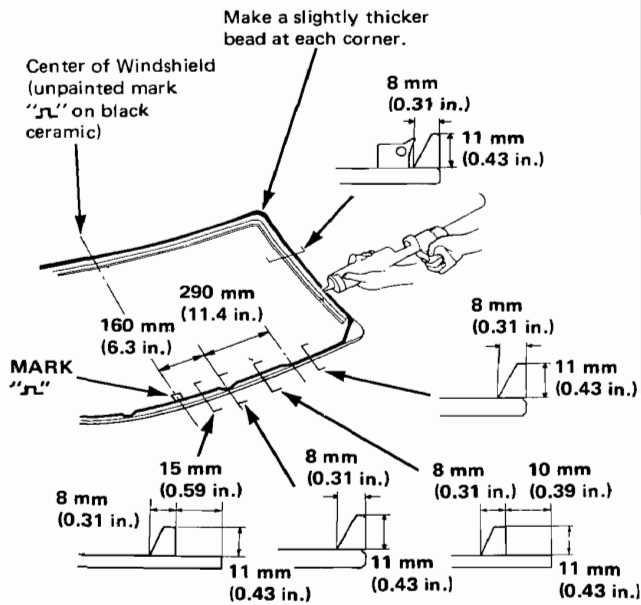

2D H/B, 4D and 4D H/B:

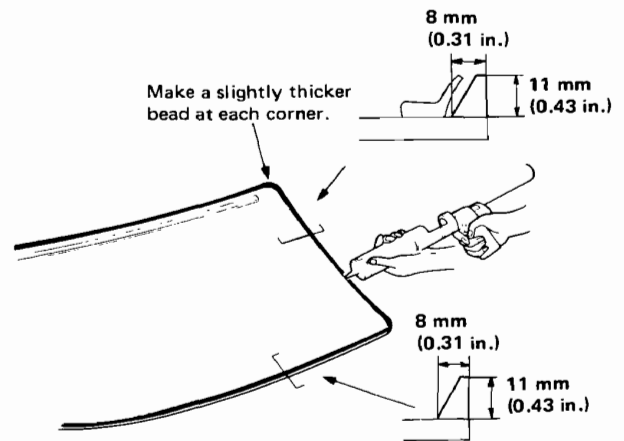


12. Use suction cups to hold the glass over the opening, align it with the marks made in step 4 and set it down on the adhesive. Lightly push on the glass until its edge is fully seated on the adhesive all the way around.

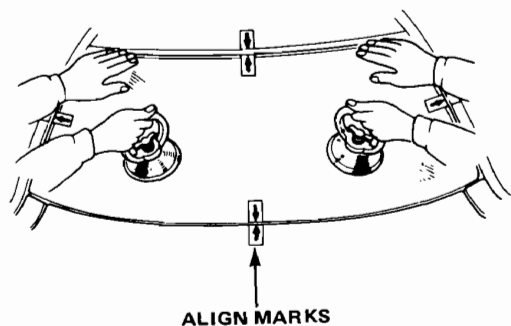




13. Scrape or wipe the excess adhesive off with a putty knife or gauze.

NOTE: Wipe with a soft rag or towel dampened with unleaded gasoline to remove adhesive from a painted surface or glass.

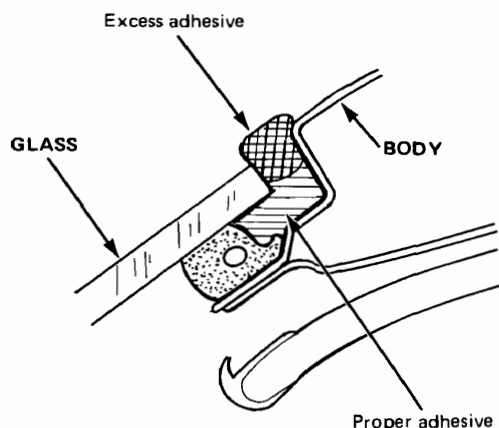

14. Install the windshield molding evenly on both sides. Be sure that adhesive fully contacts the attaching surface by checking the molding at points 100 mm (3.9 in.) apart all the way around.

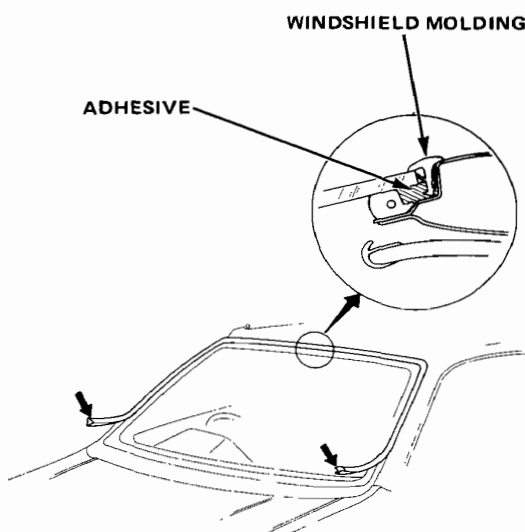

NOTE: Wipe excess adhesive off with a soft rag or towel dampened with unleaded gasoline.

15. Let the molding air dry for about 5 minutes. Check that there are no gaps between the molding and the windshield or frame body all the way around. Seal any gaps in accordance with the instructions on page 22-40.

16. Spray water on the windshield 1–2 hours after installing the glass. Mark any leaks and let the windshield dry, then seal the leaking area with sealant.

NOTE:

- Do not squirt water on freshly applied adhesive.
- Drive the car slowly if it must be driven during the first 4 hours after the windshield has been installed.

17. Reassemble all removed parts.

NOTE:

- Check that the end of the molding is set under the air scoop on both sides.
- Install the interior mirror rubber damper after the adhesive has dried thoroughly.


CAUTION: Do not drive the car on rough or uneven surfaces for at least 4 hours.

Windshield


Sealing the Molding

Follow the procedures described below if there are gaps between the molding and windshield or frame body 5 minutes after the molding has been installed.


1. To seal a corner gap between the molding and glass:

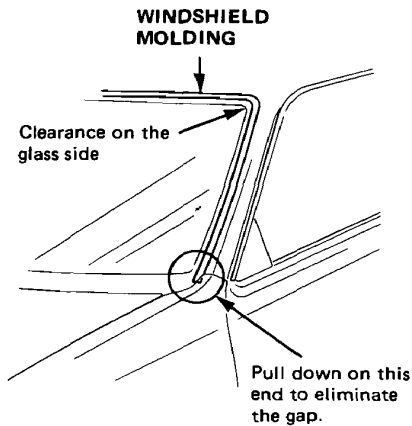

2. To seal a corner gap between the molding and body.

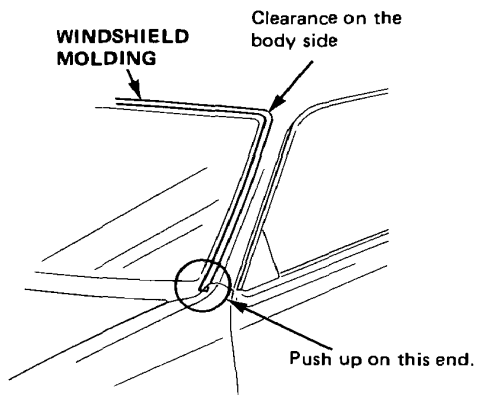

3. To seal a molding gap in a straight area:

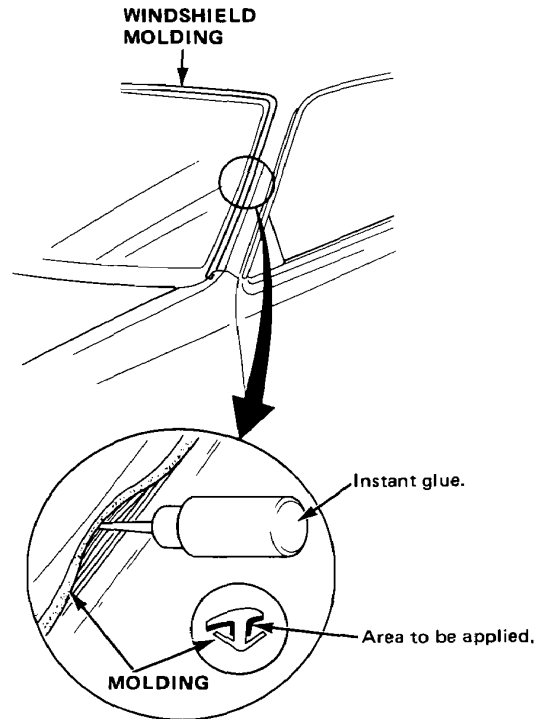

- Raise the molding at the area where gap exists; apply small amount of an instant glue to the area and hold the molding against the glass and/or frame body for at least 20 seconds.

CAUTION: Avoid "instant glue" contact with your skin. See a doctor immediately if it gets in your eyes. Avoid getting the glue on the car glass or body.

Rear Window



Removal

CAUTION:

- Wear gloves to remove and install the glass.
- Do not damage the defroster printed circuit.

1. To remove the rear window glass, first remove the:

Coupe:

- Tailgate trim panel (page 22-122).
- Rear spoiler (page 22-115).

2D H/B:

- Tailgate trim panel (page 22-123).
- Rear spoiler (page 22-116).
- Rear wiper (page 22-129).


4D:

- Rear shelf (page 22-60).
- Rear roof trim (page 22-74).

4D H/B:

- Tailgate trim panel (page 22-123).
- Tailgate spoiler (page 22-116)
- Rear wiper (page 22-129).

2. Remove the rear window trim (except 4D)

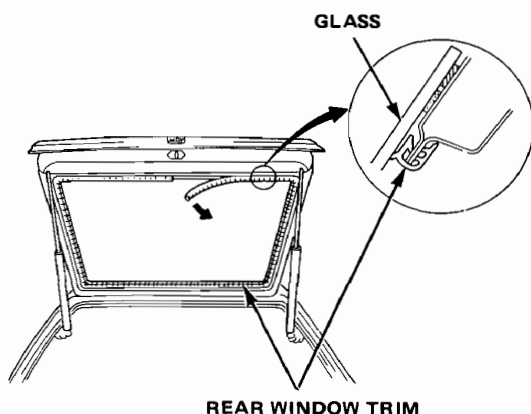


3. Disconnect the defroster leads, and remove their holders.

4. Remove the upper and lower moldings.


Coupe:

- Remove the upper and lower moldings, by releasing the clips and brackets at the locations shown.

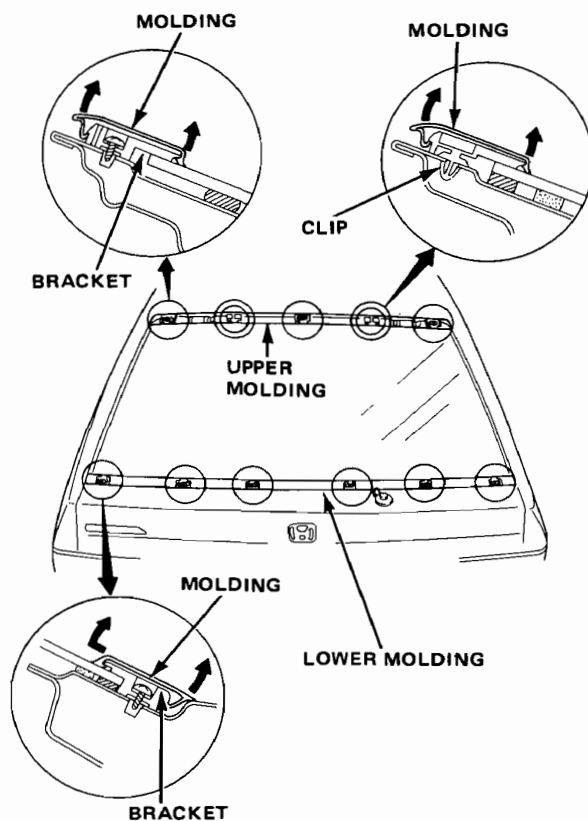

- Lift the inside edge of the molding slightly, then slip a flat screwdriver to the side of clip or bracket, and push the edge of molding with the end of screwdriver, to release the moldings.

CAUTION: Be careful not to damage the body and glass with the tool.

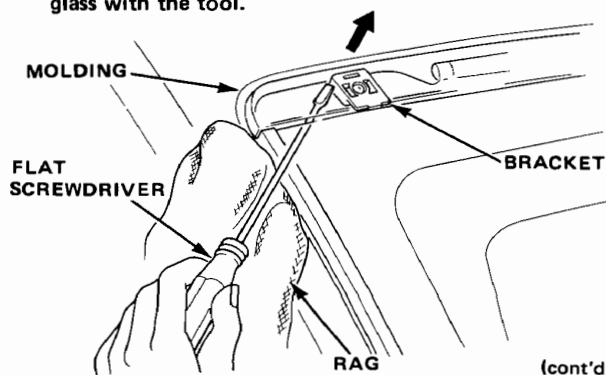



(cont'd)

Rear Window


Removal (cont'd)

2D H/B and 4D H/B:

- Remove the lower molding by removing the bolts (2D H/B) or plastic nuts (4D H/B), and prying up the retainer clips (4D H/B).

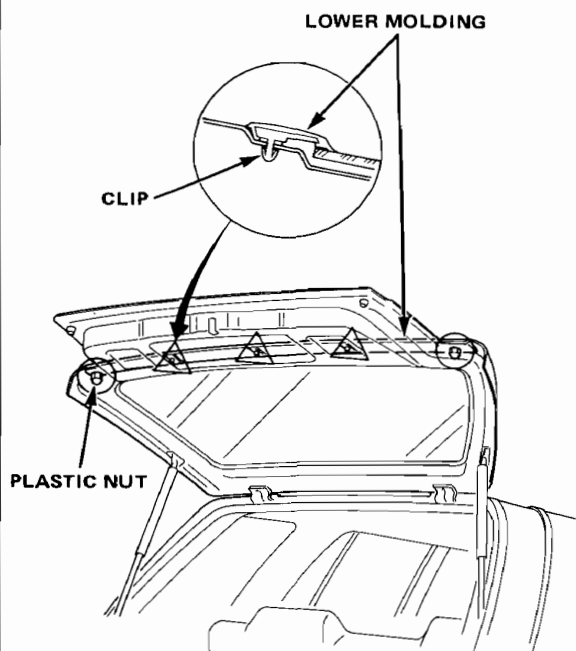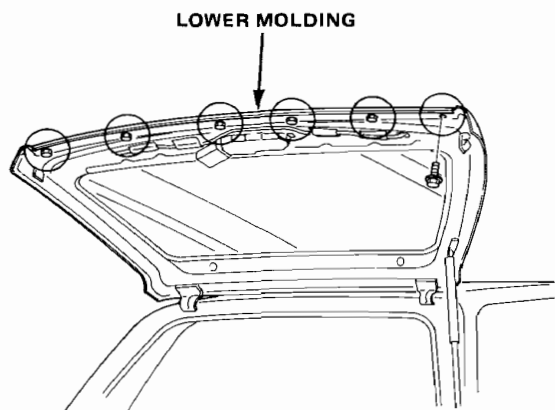


- Peel off the upper molding.

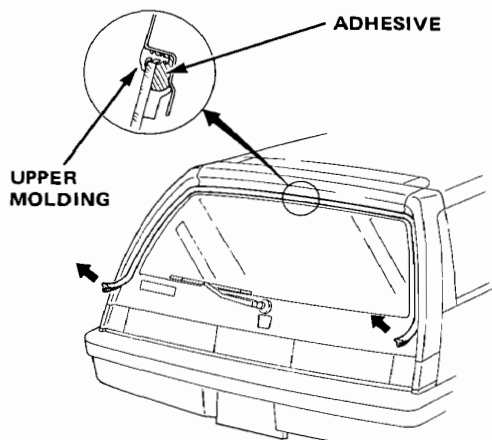


4D:

- Remove the rear pillar molding and the lower molding, by removing the screws.

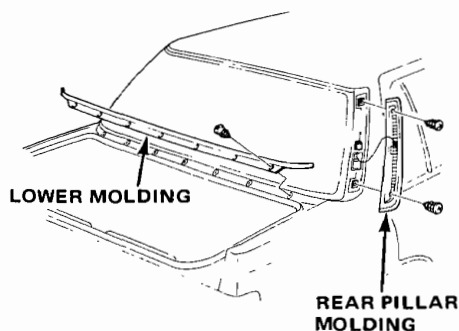


- Peel off the upper molding.

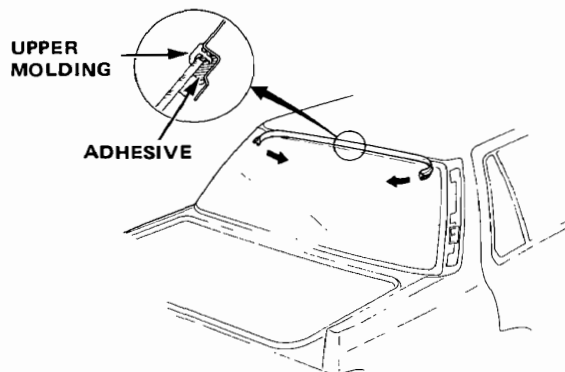




5. Remove the screws and all the brackets. Then, on the coupe, turn the 2 upper clips 90°.


Coupe:

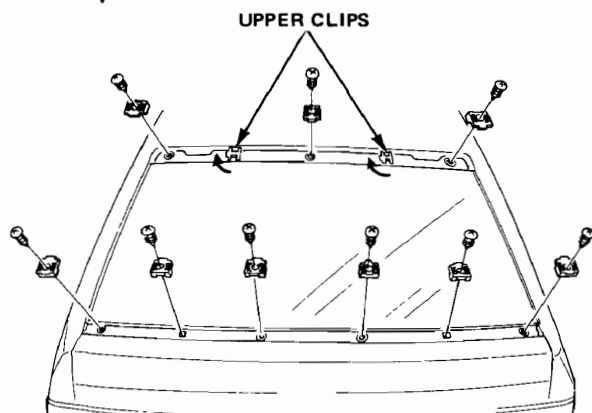


4D H/B:

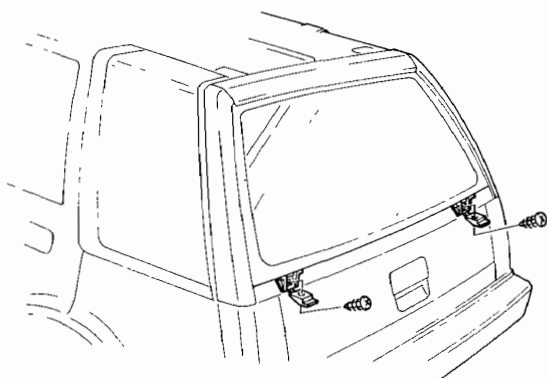

6. Apply protective tape along the edge of the body next to the glass as shown.

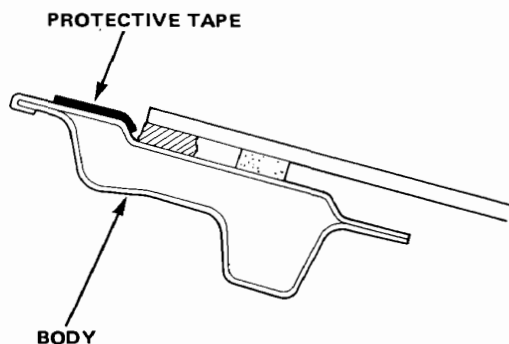


7. Using an awl, make a hole through the glass adhesive from inside the car. Push piano wire through the hole and wrap each end around a piece of wood.

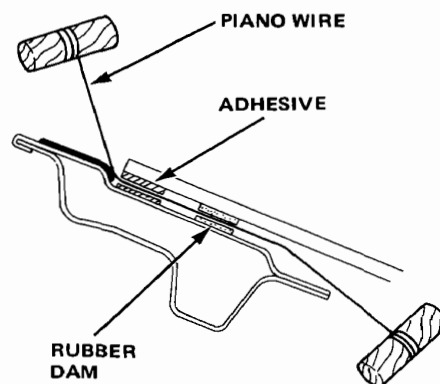

8. With a helper on the outside, pull the wire back and forth in a sawing motion and carefully cut through the adhesive around the entire glass.

CAUTION: Hold the piano wire as close to the glass as possible to prevent damage to the body.

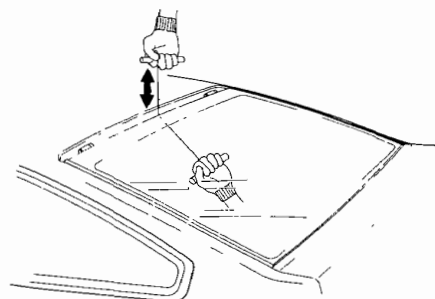

9. Cut the rubber spacers away from body with a knife; they are cemented in place.

NOTE: Replace the rubber spacers with new ones whenever the glass has been removed.

Rear Window

Installation

1. Scrape the old adhesive smooth with a knife, to a thickness of about 2 mm (0.08 in) on the bonding surface around the entire window flange.

NOTE:


- Do not scrape down to the painted surface of the body; damaged paint will interfere with proper bonding.
- Remove all traces of the rubber spacer material from the body.
- Mask off surrounding surfaces before painting.

2. Clean the body bonding surface with a sponge dampened in alcohol.


NOTE: After cleaning, keep oil, grease or water from getting on the surface.

3. Install the spacers as shown.

Coupe:

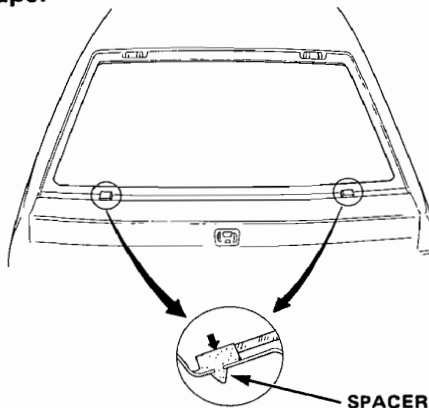


2D H/B:

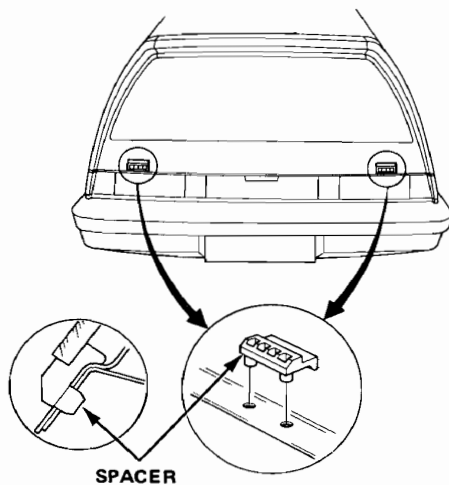


4D:

- Peel the lining off the spacer, install the spacers by pressing them firmly.

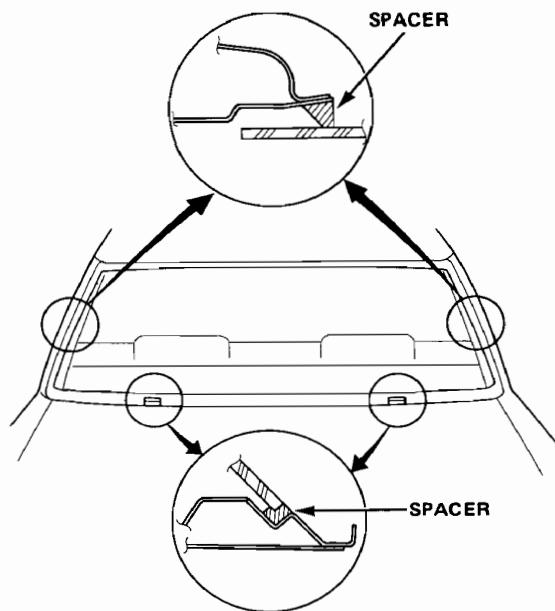


4D H/B:

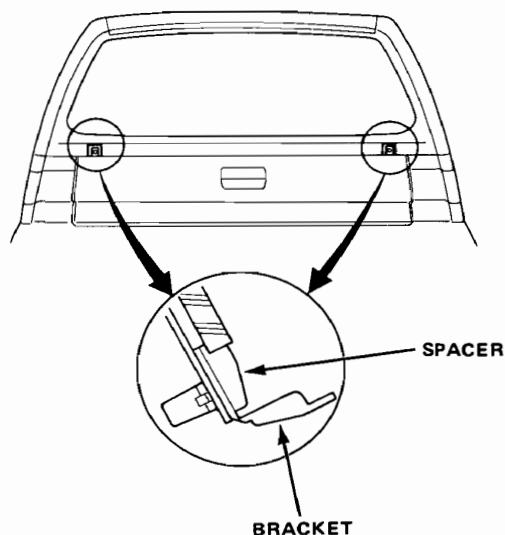



4. Set a new window upright on the spacers, and center it in the opening. Mark the location by marking lines across the glass and body with a grease pencil at the four points shown.

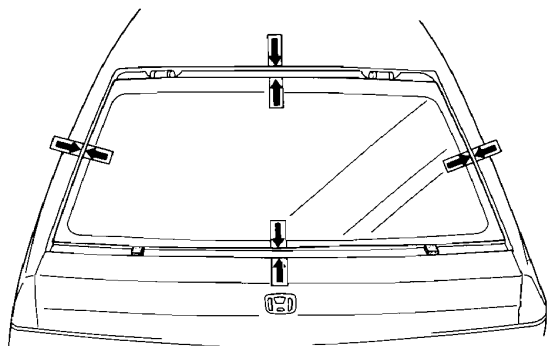


ALIGNMENT MARKS


5. If the glass is to be reinstalled, use a putty knife to scrape off all traces of old adhesive, then clean the glass surface with alcohol where new adhesive is to be applied.

NOTE: Make sure the bonding surface is kept free of water, oil and grease.

Coupe:

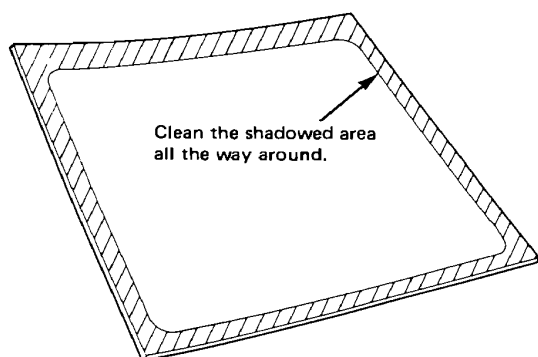


2D H/B, 4D, and 4D H/B:

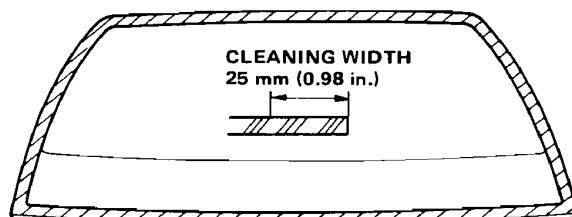

6. Glue the rubber dam to the inside face of the windshield as shown, to contain the adhesive during installation.

NOTE: Be careful not to touch the glass where adhesive will be applied.

Coupe:

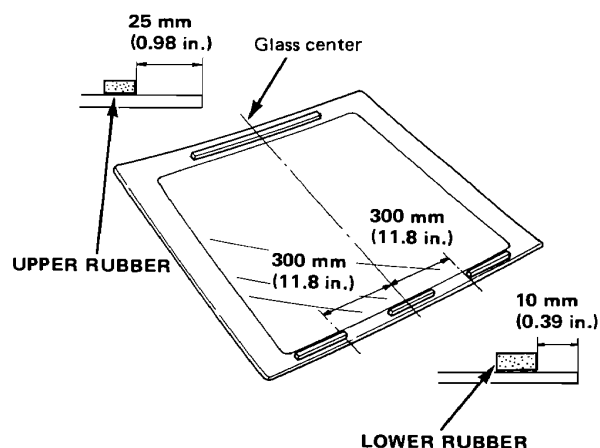


(cont'd)


Rear Window

Installation (cont'd)


2D H/B:

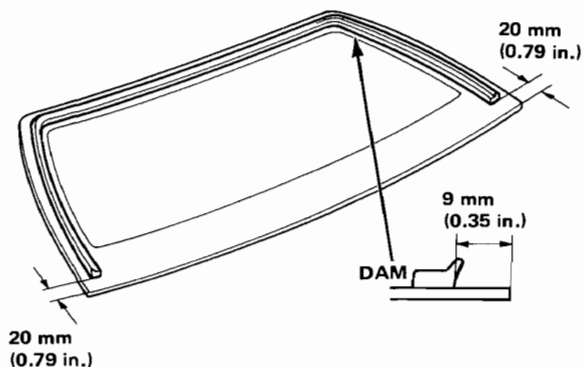

4D:

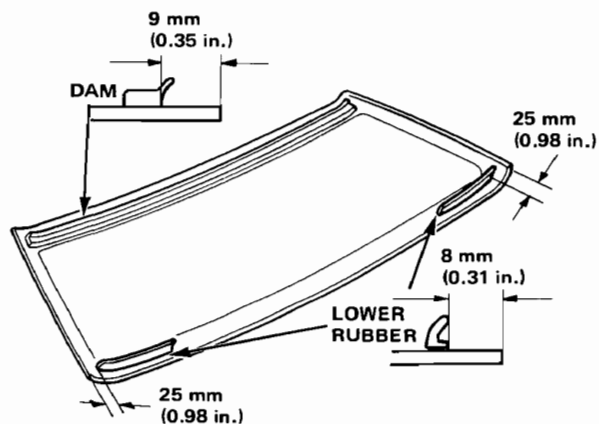

4D H/B:

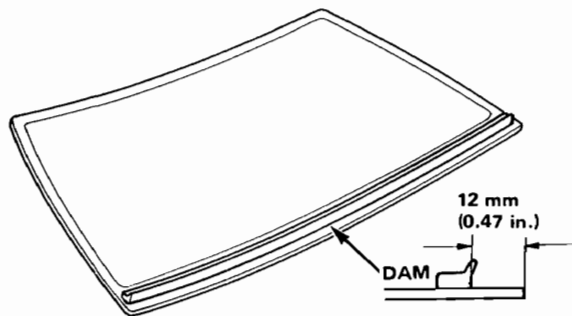


- With a sponge, apply a light coat of glass primer around the edge of the glass as shown, then lightly wipe with gauze or cheesecloth.


NOTE:

- Do not apply body primer to the glass, and do not get body and glass primer sponges mixed up.
- Never touch the primed surfaces with your hands. If you do, the adhesive may not bond to the glass properly, causing a leak after the glass is installed.
- Keep water, dust, and abrasive materials away from the primed surface.

Coupe:

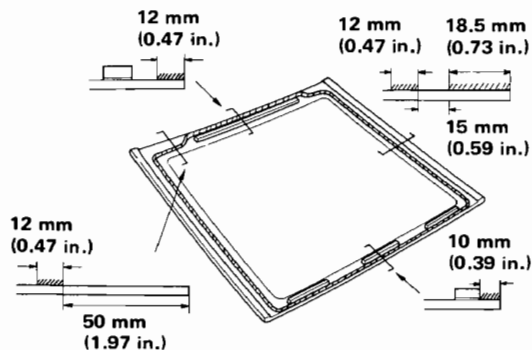


2D H/B:

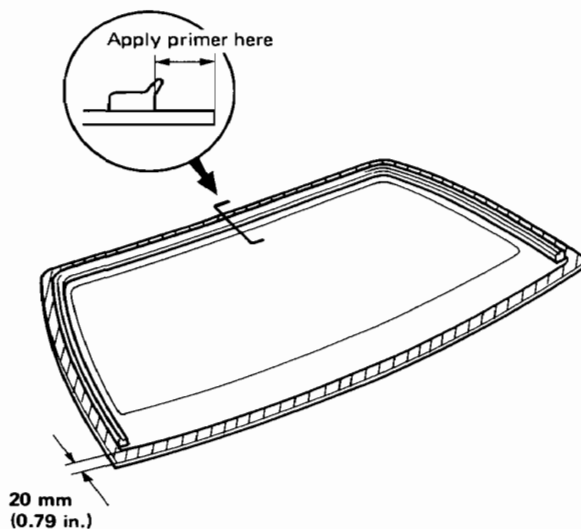




4D:

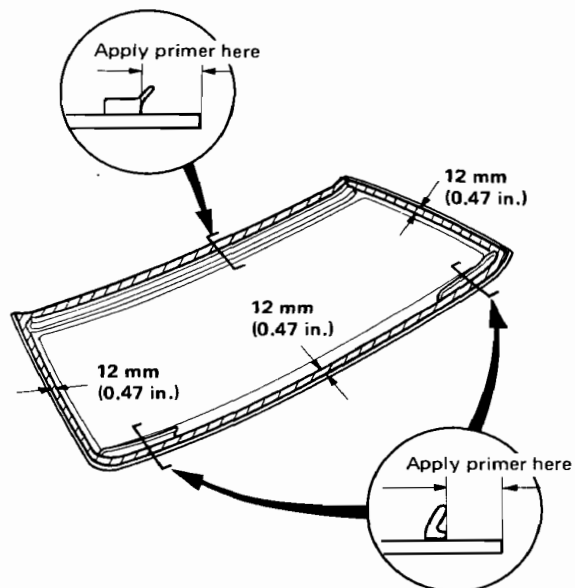


4D H/B:

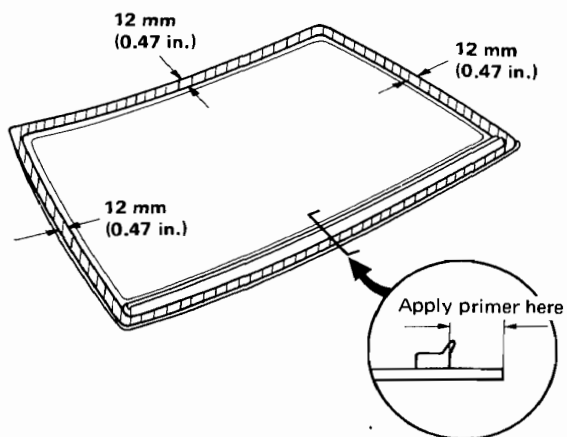

8. For Coupe only, peel the lining from the side moldings after the glass primer has dried, and install them on the glass as shown.

NOTE: Be careful not to touch the glass where adhesive will be applied.

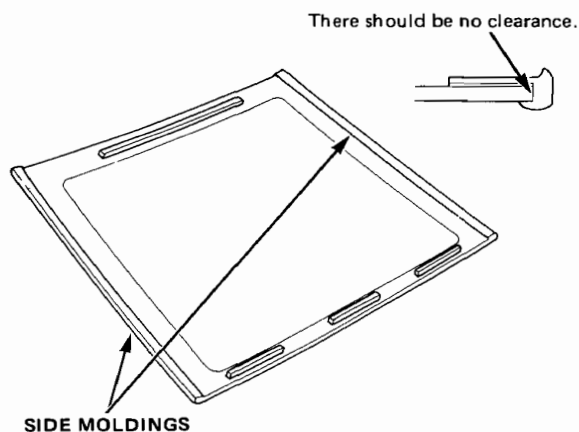


9. Install the rear window trim in the frame (except 4D).

NOTE:

- Install the rear window trim with the wide end on the interior side.
- When attaching the rear window trim, make sure the thickness is even all the way around.

Coupe:

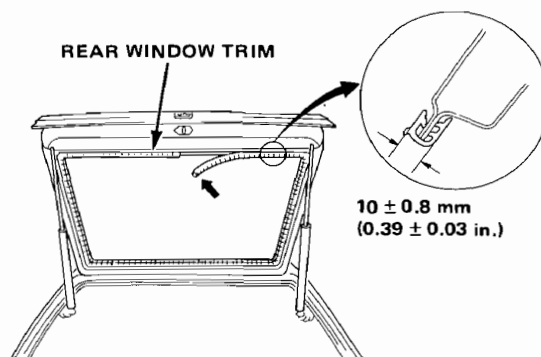


(cont'd)


Rear Window

Installation (cont'd)

2D H/B:

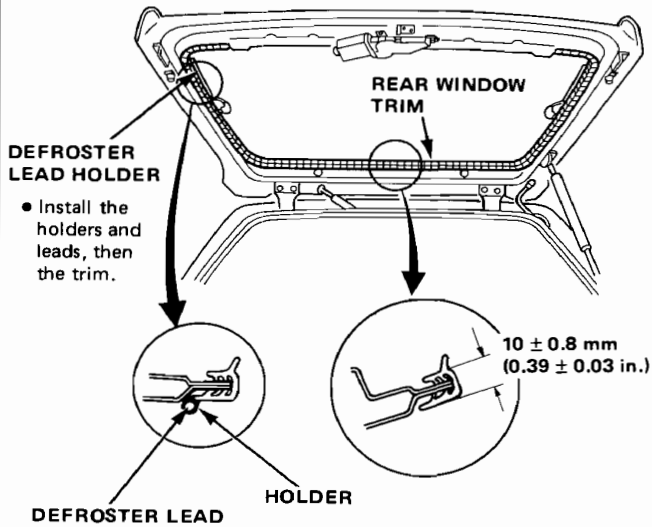

4D H/B:

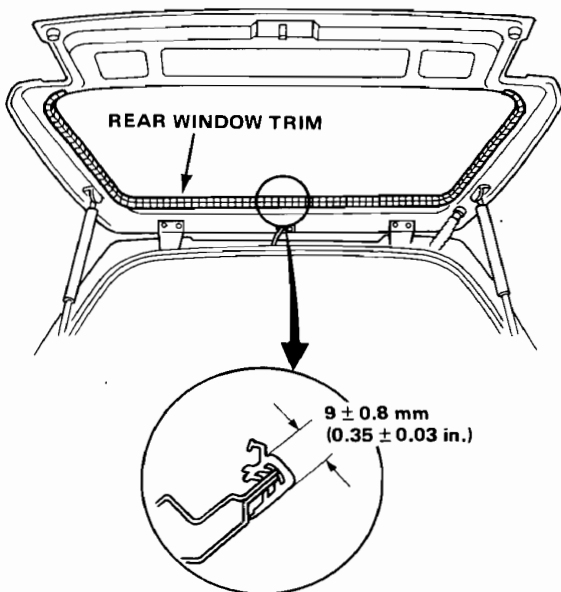


10. With a sponge, apply a light coat of body primer to the original adhesive remaining around the window opening flange. The glass should be installed 10 minutes after you apply the primer.

NOTE:


- Do not apply glass primer to the body, and be careful not to mix up glass and body primer sponges.
- Never touch the primed surfaces with your hands.

Coupe:

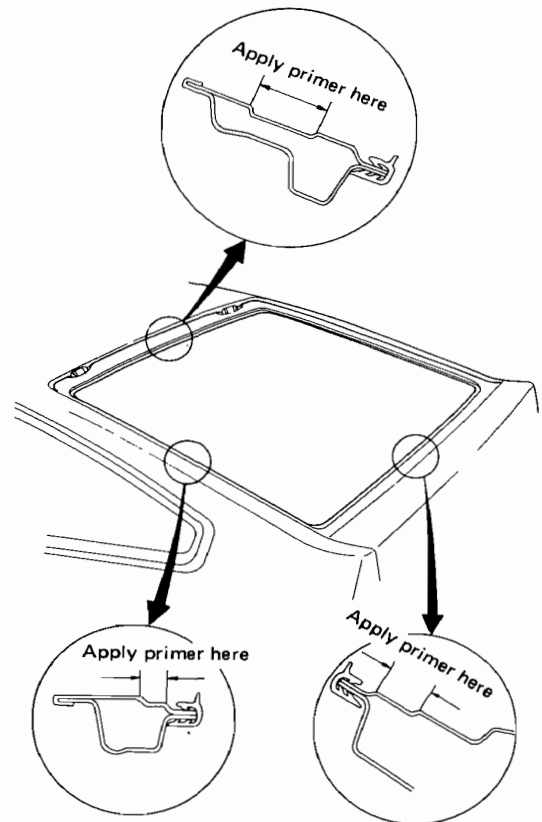





2D H/B:

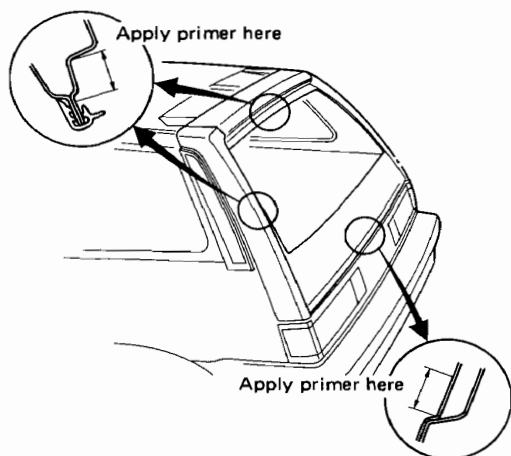

4D:

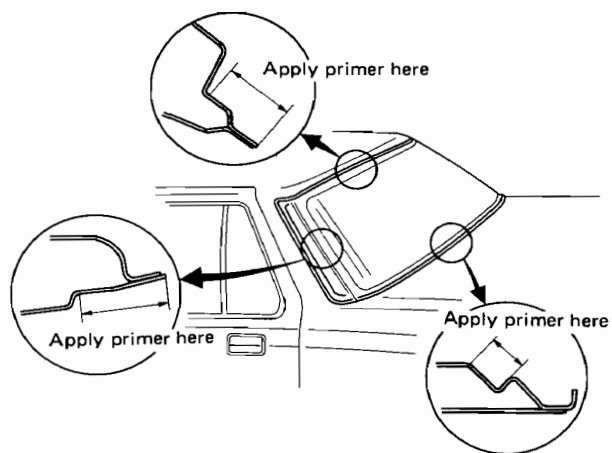


4D H/B:

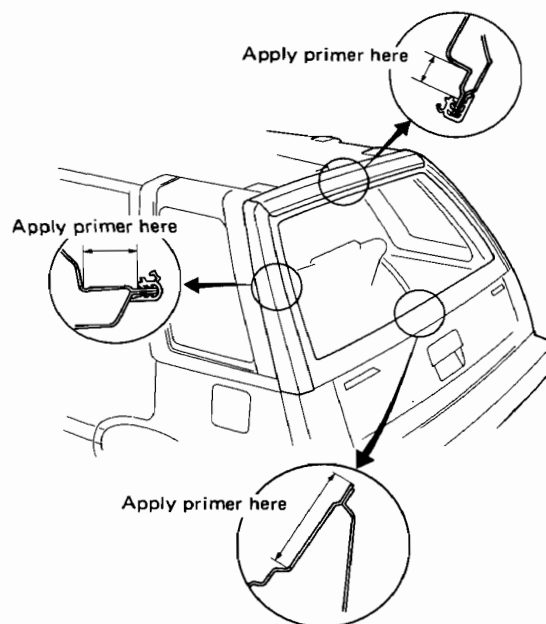

11. Thoroughly mix all the adhesive and hardener together on a glass or metal plate with a putty knife.

NOTE:

- Clean the plate with a sponge and alcohol before mixing.
- Follow the instructions that come with the adhesive.

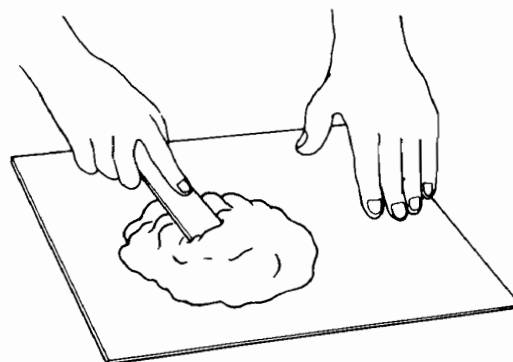


(cont'd)

Rear Window

Installation (cont'd)


12. Before filling a cartridge, cut off the end of the nozzle at the angle shown.

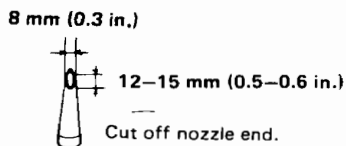


13. Pack adhesive into the cartridge without air pockets, to ensure continuous delivery. Put the cartridge in a caulking gun, and run a bead of adhesive around the edge of the glass as shown.

NOTE: Apply the adhesive within 30 minutes after applying the glass primer.


Coupe:

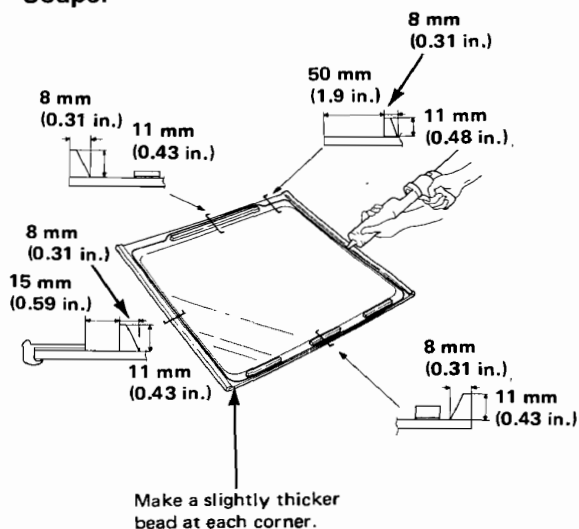

2D H/B:

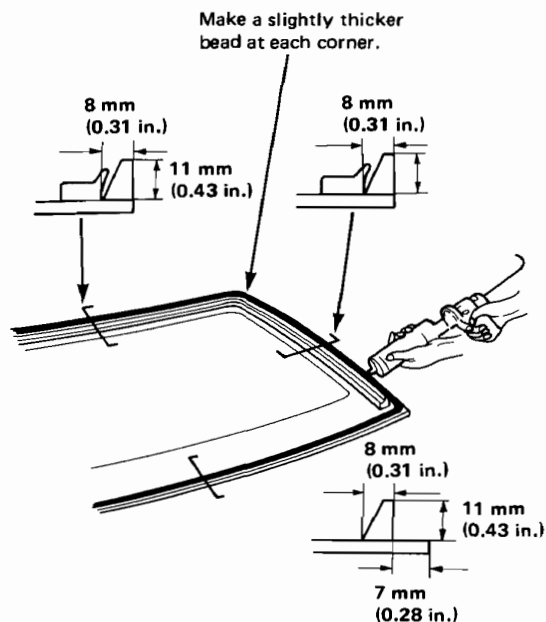


4D:

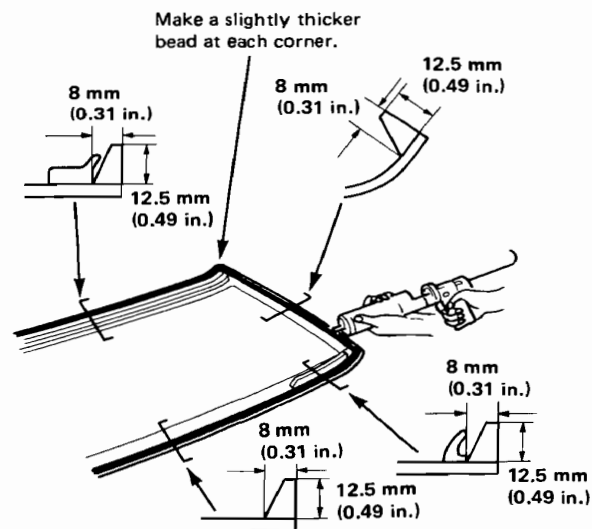




4D H/B:

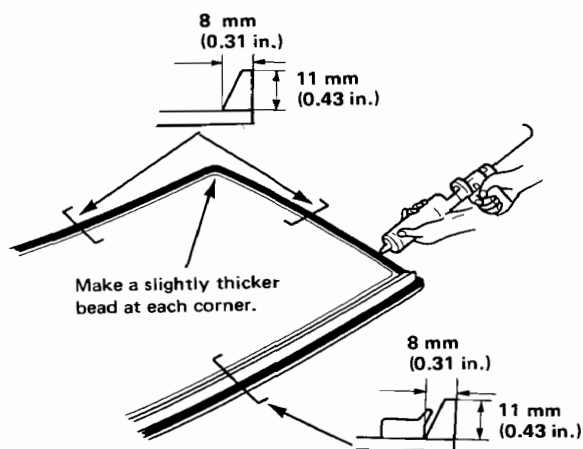


14. Use suction cups to hold the glass over the opening, align it with the marks made in step 4 and set it down on the adhesive. Lightly push on the glass until its edge is fully seated on the adhesive all the way around.

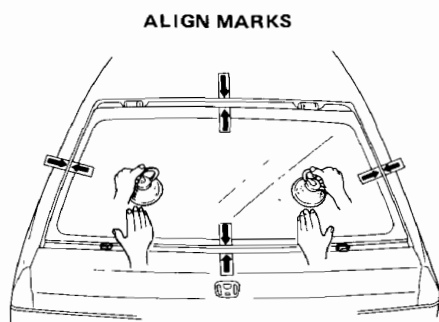


15. Scrape or wipe the excess adhesive off with a putty knife or gauze.

NOTE: Wipe with a soft rag or towel dampened with unleaded gasoline to remove adhesive from a painted surface or glass.

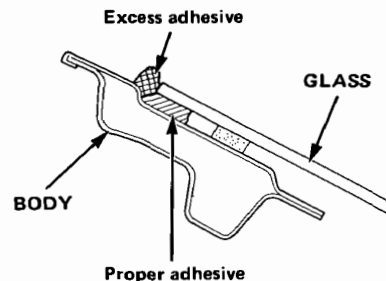

16. Install the upper molding evenly on both sides. Be sure that adhesive fully contacts the attaching surface by checking the molding at points 100 mm (3.9 in.) apart all the way around (except coupe).

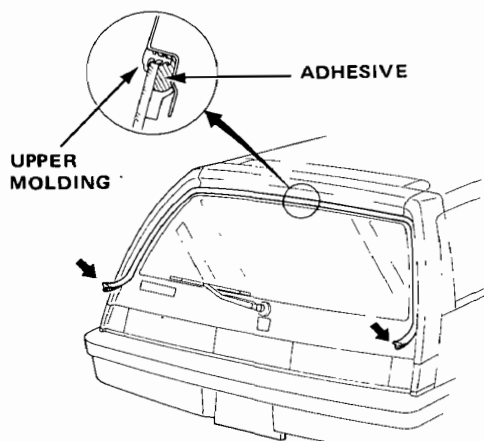

NOTE: Wipe excess adhesive off with a soft rag or towel dampened with unleaded gasoline.

(cont'd)

Rear Window

Installation (cont'd)

17. Let the molding air dry for about 5 minutes. Check that there are no gaps between the molding and the glass or frame body all the way around. Seal any gaps in accordance with the instructions described in page 22-40.
18. Secure the glass by installing the brackets (see page 22-43).
19. Spray water on the windshield 1–2 hours after installing the glass. Mark any leaks and let the windshield dry, then seal leaking area with sealant.

NOTE:

- Do not squirt water on freshly applied adhesive.
- Drive the car slowly if it must be driven during the first 4 hours after the glass has been installed.

20. Install the moldings in the reverse order of removal (see pages 22-41 and 42).
21. Install the defroster leads and their holders (except 2D H/B).

NOTE: For the Coupe, to secure the defroster lead holders, apply a small amount of adhesive before installing.

22. Reassemble all removed parts.

CAUTION: Do not drive the car on rough or uneven surfaces for at least 4 hours.

Quarter Glass (Coupe and 4D H/B)


Removal

1. To remove the quarter glass, first remove the quarter window trim.
2. Remove the quarter pillar molding as follows.

Coupe:


- Pry off the quarter pillar emblem with a screwdriver, then remove the screw. Remove the pillar molding by sliding toward the quarter window. Then remove the screws and glass holder.

CAUTION: Be careful not to damage the body and glass by sliding the molding.

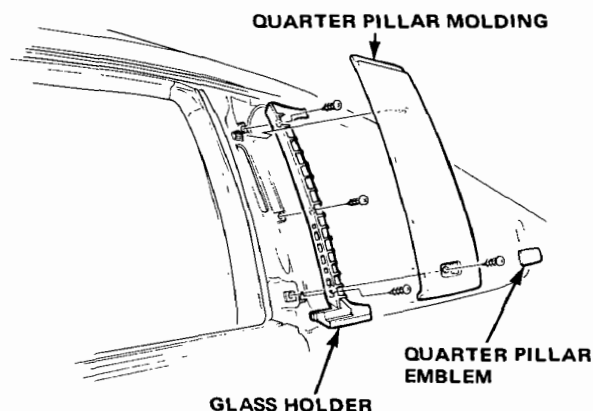

4D H/B:

- Remove the screws and quarter pillar molding, then the brackets.

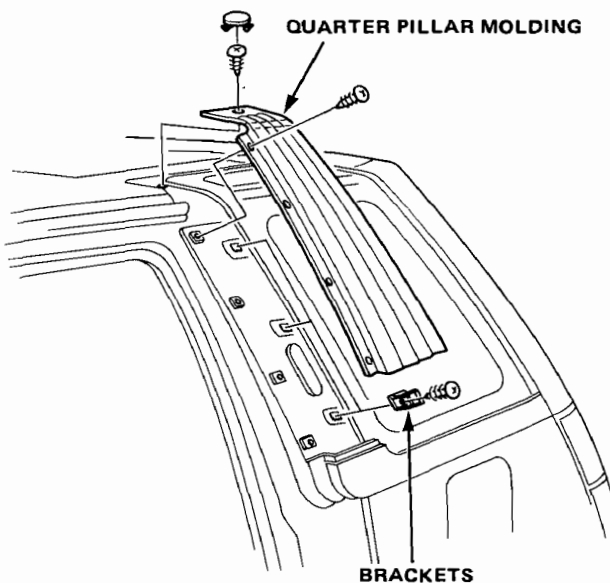




3. Remove the molding as follows.


Coupe:

- Pry the molding off the body and glass by pulling it as shown. To release the molding clips, pull down on the molding.

NOTE: Protect the body finish with a rag or shop towel when pulling down on the molding to release the clips.

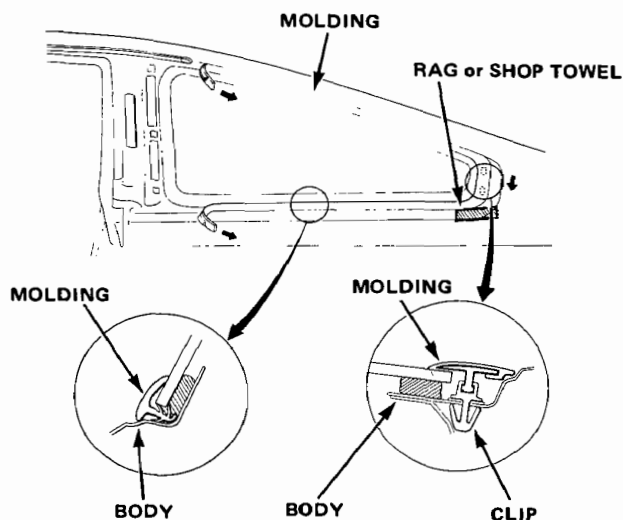


- For replacement, the 2 clips can be removed by turning them 90°.

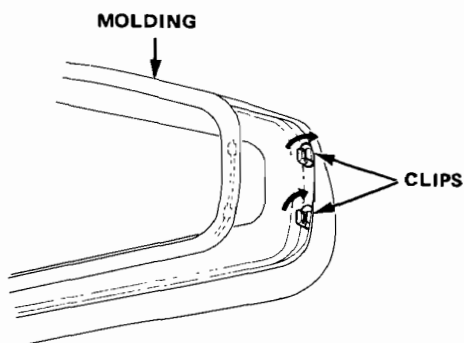


4D H/B:

- Peel the upper molding off the glass.

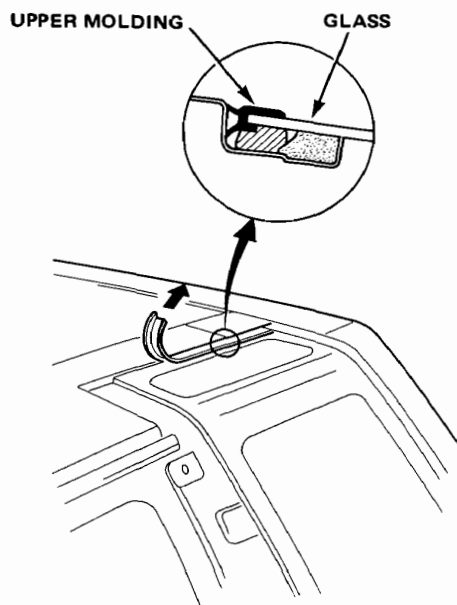

- To remove the lower molding, first carefully slide the front of it downward. Then slide it forward to free it from the other clips.

CAUTION: Be careful not to damage the body and glass by sliding the molding pieces.

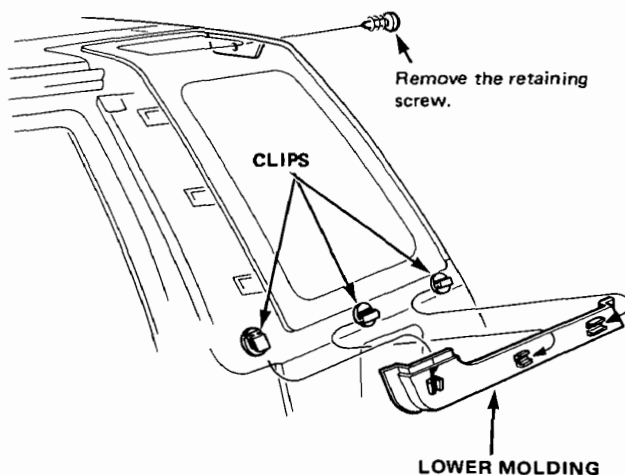


- For replacement, the lower clips can be removed by turning them 90°.

(cont'd)


Quarter Glass (Coupe and 4D H/B)

Removal (cont'd)

4. Apply protective tape along the edge of the body next to the glass as shown.

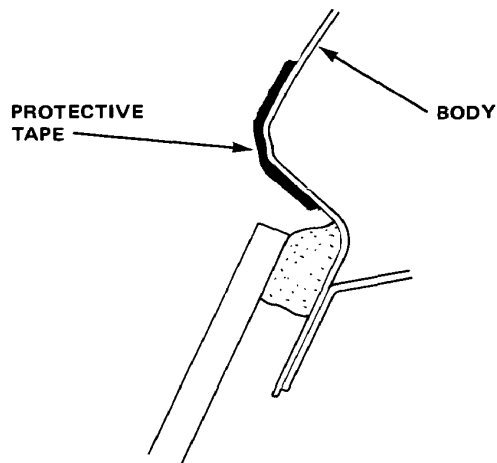


5. Using an awl, make a hole through the glass adhesive from inside the car. Push piano wire through the hole and wrap each end around a piece of wood.

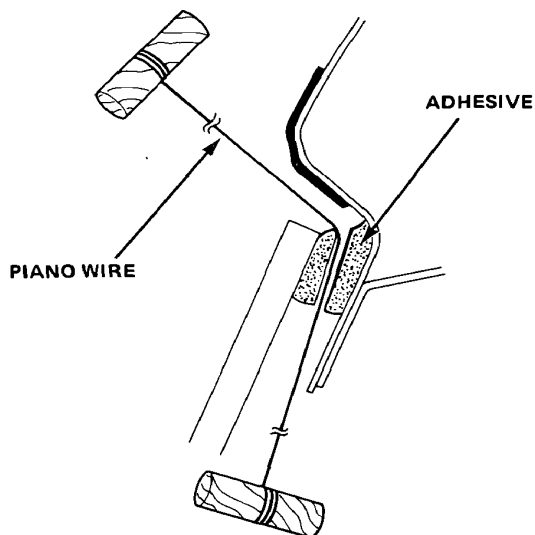

6. With a helper on the outside, pull the wire back and forth in a sawing motion and carefully cut through the adhesive around the entire glass.

CAUTION: Hold the piano wire as close to the glass as possible to prevent damage to the body.

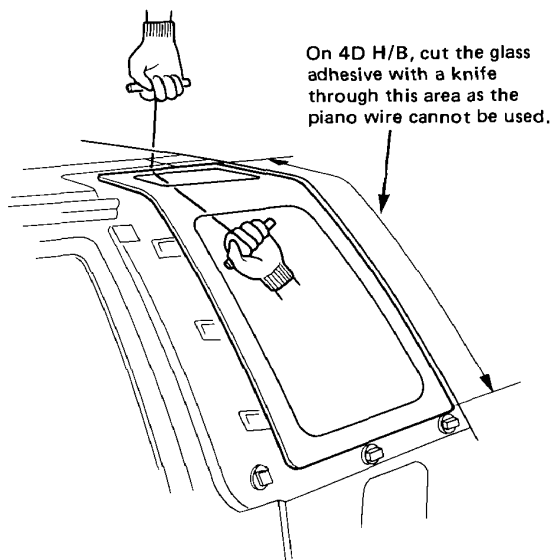

7. Cut the rubber spacers away from body with a knife; they are cemented in place.

NOTE: Replace the rubber spacers with new ones whenever the glass has been removed.



Installation

1. Scrape the old adhesive smooth with a knife, to a thickness of about 2 mm (0.08 in.) on the bonding surface around the entire window glass flange.


NOTE:

- Do not scrape down to the painted surface of the body; damaged paint will interfere with proper bonding.
- Remove all traces of the rubber spacer material from the body.
- Mask off surrounding surfaces before painting.


2. Clean the body bonding surface with a sponge dampened in alcohol.

NOTE: After cleaning, keep oil, grease or water from getting on the surface.

3. Peel the lining off each spacer, then install the spacers by pressing them firmly into place at the locations shown. (Coupe only)

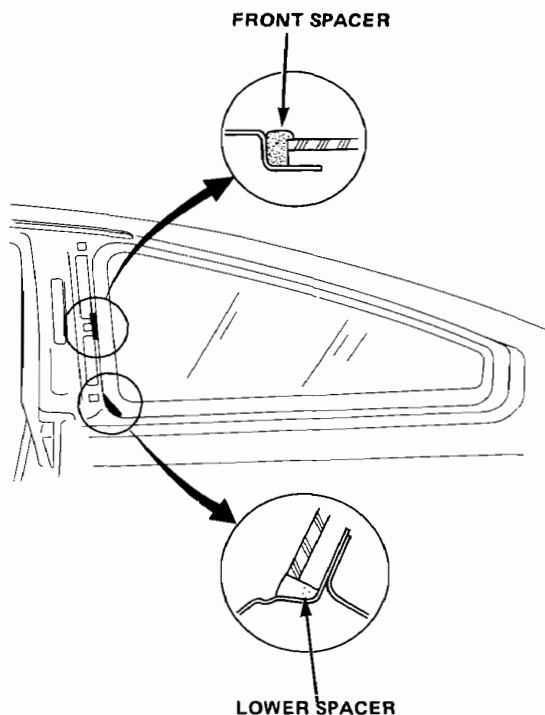

4. Set a new glass on the spacers, and center it in the opening. Mark the location by marking lines across the glass and body with a grease pencil at the four points shown.

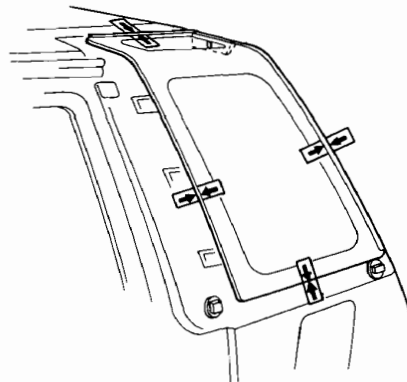


ALIGNMENT MARKS


5. If the glass is to be reinstalled, use a putty knife to scrape off all traces of old adhesive, then clean the glass surface with alcohol where new adhesive is to be applied.

NOTE: Make sure the bonding surface is kept free of water, oil and grease.

Coupe:

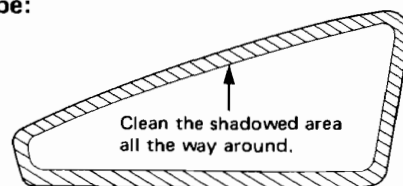

4D H/B:

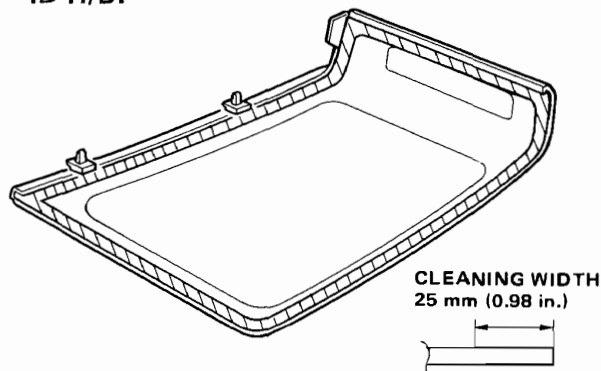


(cont'd)

Quarter Glass (Coupe and 4D H/B)

Installation (cont'd)

6. Glue the rubber dam to the inside face of the glass as shown, to contain the adhesive during installation. (4D H/B only).

NOTE: Be careful not to touch the glass where adhesive will be applied.

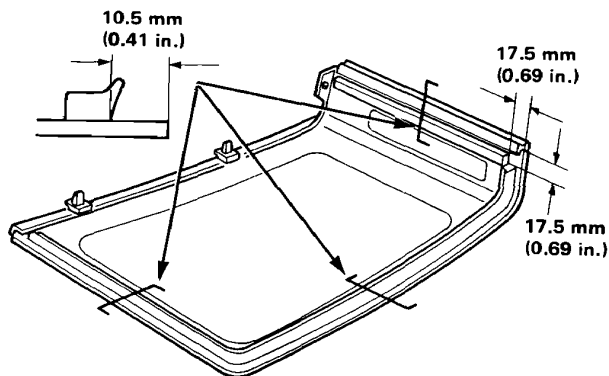


7. With a sponge, apply a light coat of glass primer around the edge of glass as shown, then lightly wipe it off with gauze or cheesecloth.


NOTE:

- Do not apply body primer to the glass, and do not get body and glass primer sponges mixed up.
- Never touch the primed surfaces with your hands. If you do, the adhesive may not bond to the glass properly, causing a leak after the glass is installed.
- Keep water, dust, and abrasive materials away from the primed surface.

Coupe:

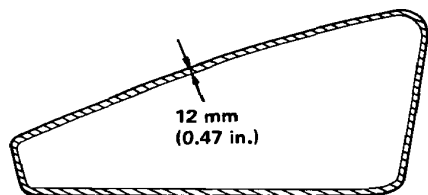


4D H/B:

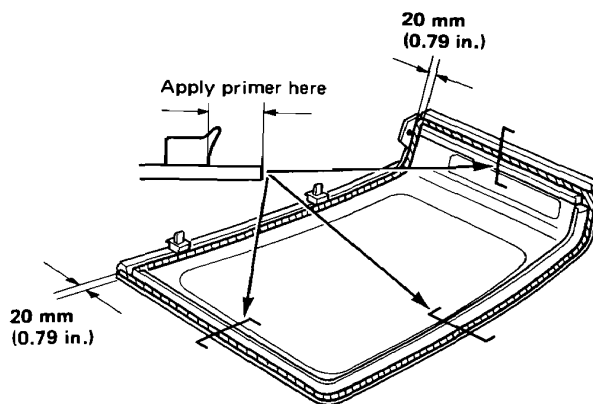

8. Install the quarter window trim. (Coupe only)

NOTE: When attaching the trim, make sure the thickness is evenly 7.35 mm (0.29 in.) all the way around.

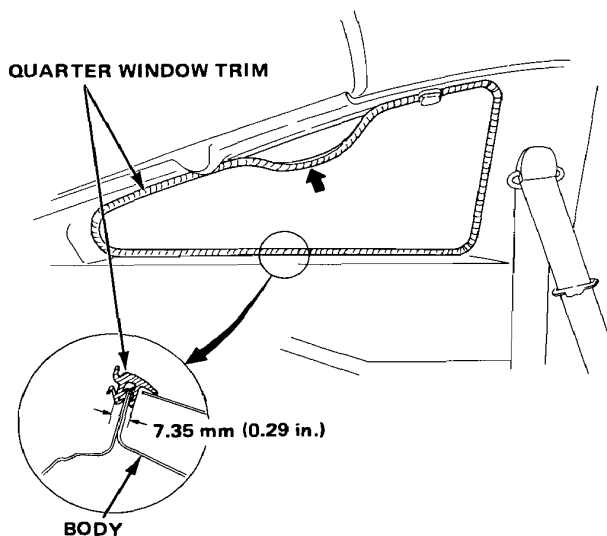




9. With a sponge, apply a light coat of body primer to the original adhesive remaining around the window opening flange. The glass should be installed 10 minutes after you apply the primer.


NOTE:

- Do not apply glass primer to the body, and be careful not to mix up glass and body primer sponges.
- Never touch the primed surfaces with your hands.

Coupe:

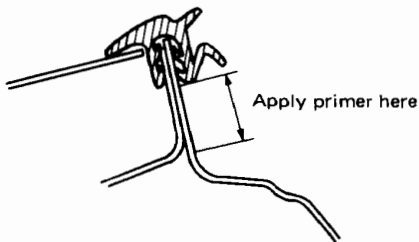


4D H/B:

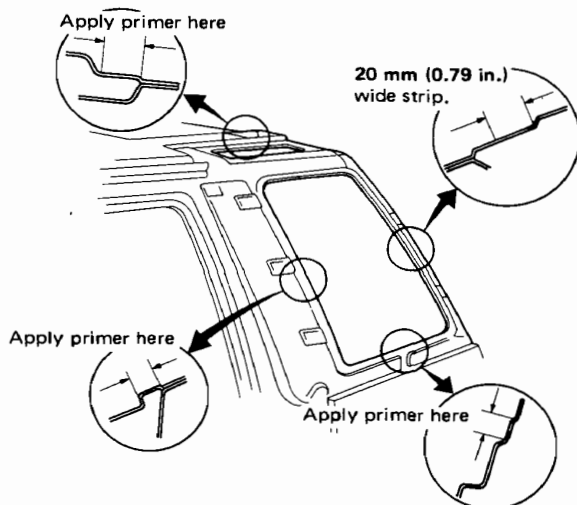


10. Thoroughly mix all the adhesive and hardener together on a glass or metal plate with a putty knife.

NOTE:

- Clean the plate with a sponge and alcohol before mixing.
- Follow the instructions that come with the adhesive.

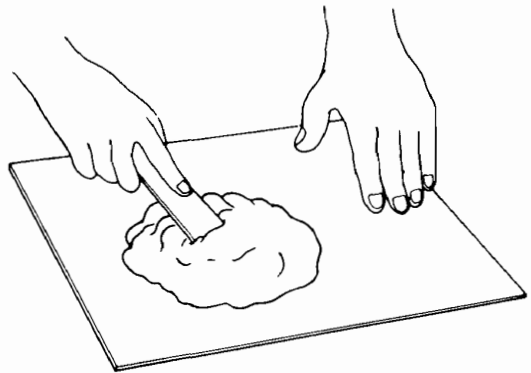


11. Before filling a cartridge, cut off the end of the nozzle at the angle shown.

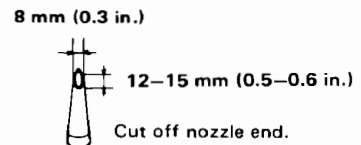

12. Pack adhesive into the cartridge without air pockets, to ensure continuous delivery. Put the cartridge in a caulking gun, and run a bead of adhesive around the edge of the glass as shown.

NOTE: Apply the adhesive within 30 minutes after applying the glass primer.

Coupe:

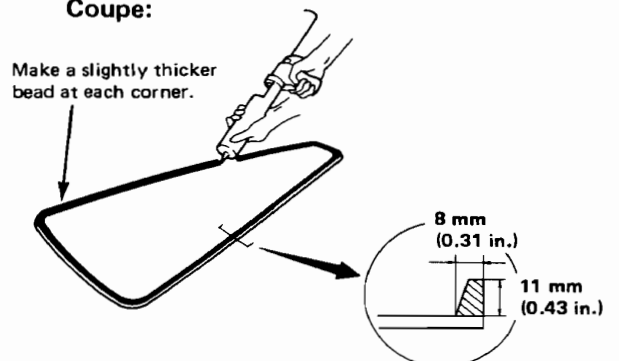


(cont'd)

Quarter Glass (Coupe and 4D H/B)


Installation (cont'd)

4D H/B:

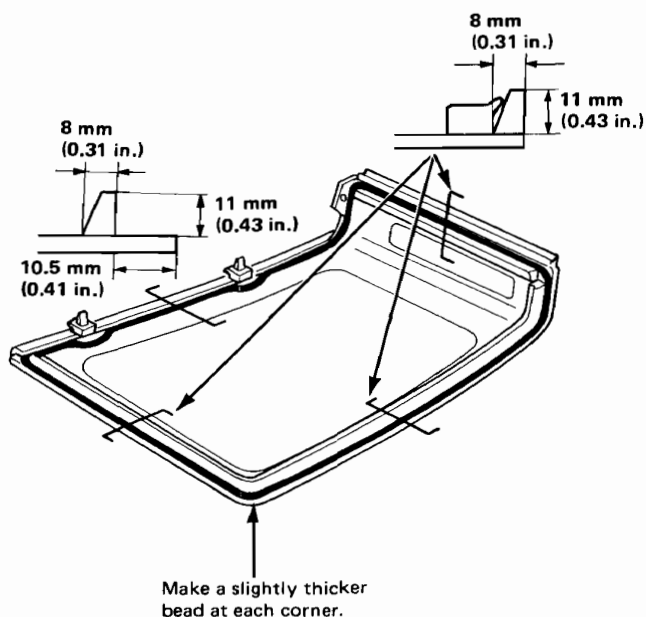


13. Use suction cups to hold the glass over the opening, align it with the marks made in step 4 and set it down on the adhesive. Lightly push on the glass until its edge is fully seated on the adhesive all the way around.

There should exit no clearance between the upper molding and body. (4D H/B only)

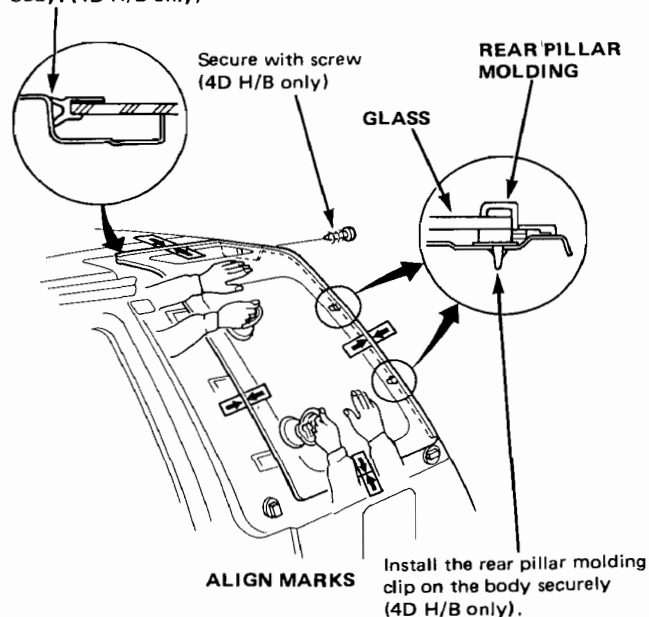


14. Scrape or wipe the excess adhesive off with a putty knife or gauze.

NOTE: Wipe with a soft rag or towel dampened with unleaded gasoline to remove adhesive from a painted surface or glass.

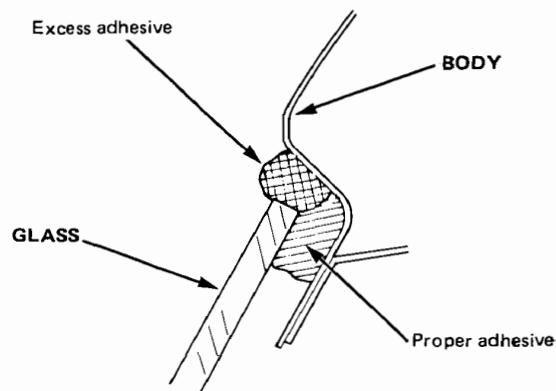

15. Install the clips on the molding, then install the molding. Be sure that adhesive fully contacts the attaching surface by checking the molding at points 100 mm (3.9 in.) apart all the way around. (Coupe only)

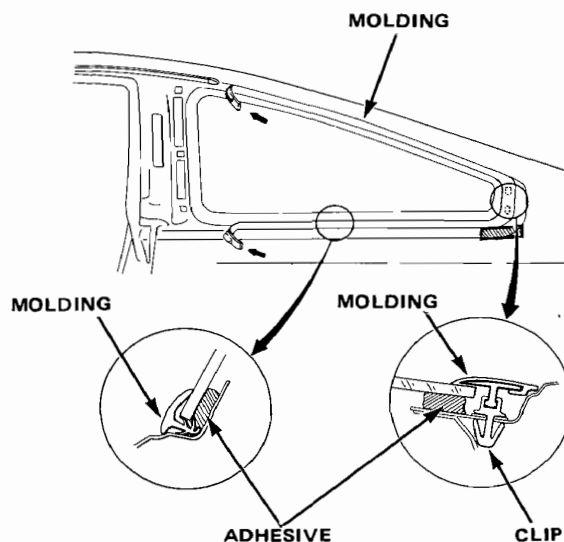

NOTE: Wipe excess adhesive off with a soft rag or towel dampened with unleaded gasoline.

Quarter Glass (2D H/B)

Replacement



16. Let the molding air dry for about 5 minutes. Check that there are no gaps between the molding and the glass or frame body all the way around. Seal any gaps in accordance with the instructions described in page 22-40. (for Coupe only)

17. Secure the glass by installing the:
Coupe: Glass holder (see page 22-52).
4D H/B: Brackets (see page 22-52).

NOTE: On Coupe, check that the ends of the molding are secured under the glass holder.


18. Spray water on the quarter glass 1–2 hours after installing the glass. Mark any leaks and let the windshield dry, then seal leaking area with sealant.

NOTE:


- Do not squirt water on freshly applied adhesive.
 - Drive the car slowly if it must be driven during the first 4 hours after the quarter glass has been installed.
19. On the 4D H/B, attach the 3 clips to the lower molding then push it into the clip holes in the body and attach the pillar molding over it. On the Coupe, attach the pillar molding onto the glass holder (see pages 22-52 and 53).

CAUTION: Do not drive the car on rough or uneven surfaces for at least 4 hours.


1. Pry the latch mount cover out and then remove the screws.

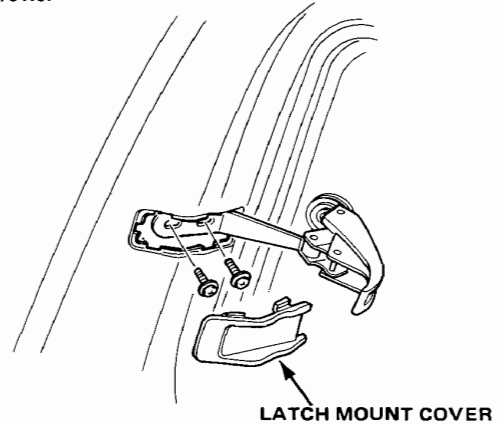

2. Remove the screws and the quarter pillar molding.

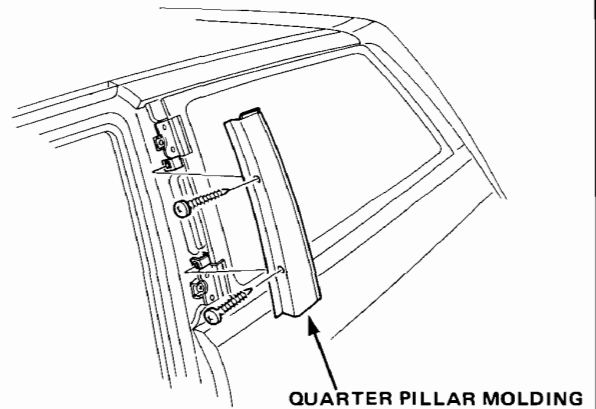

3. Remove the quarter glass hinge mounting screws, and then the glass.

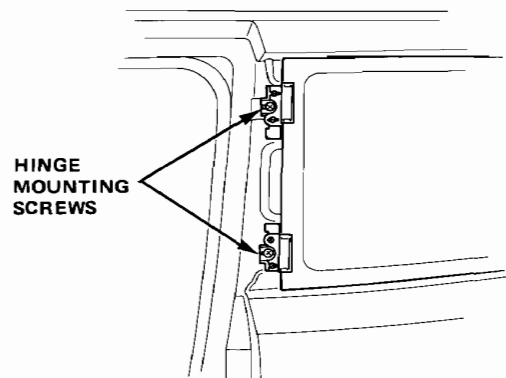


(cont'd)


Quarter Glass (2D H/B)

Replacement (cont'd)

4. Remove the circlip with a screwdriver, then remove the latch.

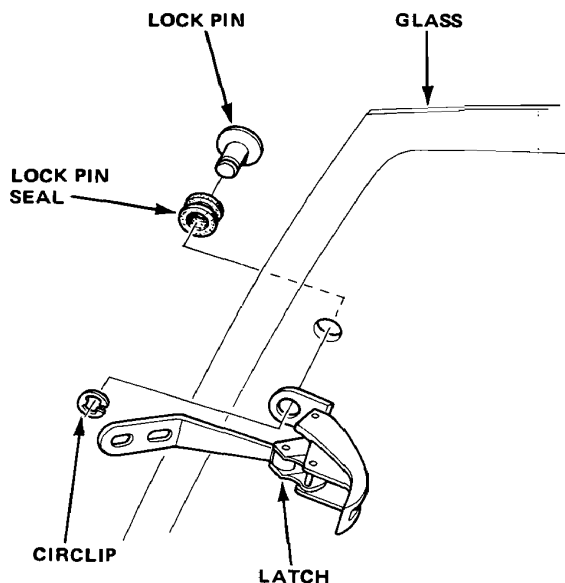


5. If necessary, pull off the weatherstrip and remove the rear pillar molding.

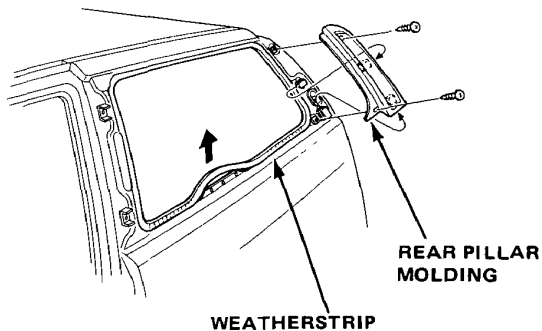

6. Install in the reverse of removal. Check for proper glass fit when closed after installation.

7. To adjust, remove the quarter pillar molding, loosen the quarter glass hinge mount screw and move the glass back and forth. Adjust so that the latch works smoothly, and the glass closes securely. Check for proper contact between the glass and weatherstrip at the rear edge.

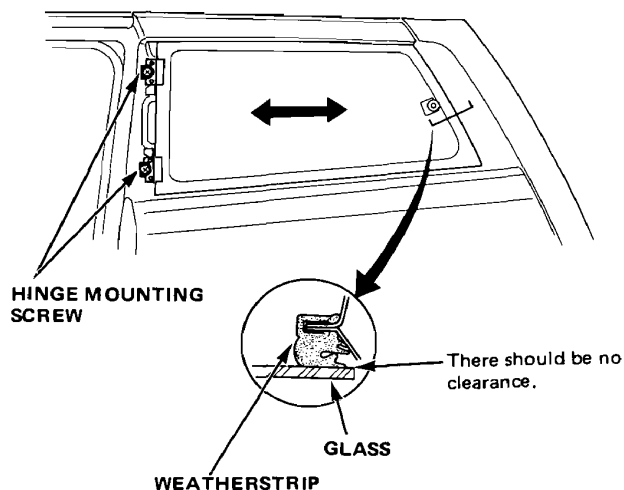



Interior Trim

Replacement (Coupe)

Disassemble in numbered sequence.

⑤ QUARTER WINDOW TRIM

- To remove the trim, first remove the support strut and coat hanger.

Clip locations

② REAR TRIM PANEL

① MAINTENANCE DOORS

③ SEAT BELT ANCHOR COVER

④ QUARTER TRIM PANEL

- To remove the panel, first remove the seat belt, luggage light, and door sill molding.

REAR SEAT SIDE TRIM

Clip locations

③ FRONT PILLAR TRIM

② KICK PANEL

① DOOR SILL MOLDING

Interior Trim

Replacement (2D H/B)

Disassemble in numbered sequence.

⑤ QUARTER WINDOW TRIM

- To remove the trim, first remove the quarter window latch mount cover and front seat belt.

③ SIDE SHELF

① REAR SHELF

④ QUARTER TRIM PANEL

- To remove the panel, first remove the door sill molding, rear seat, rear seat belt, luggage light, and door trim.

MAINTENANCE DOORS


② REAR TRIM PANEL


③ KICK PANEL

② DOOR TRIM

④ FRONT PILLAR TRIM


① DOOR SILL MOLDING

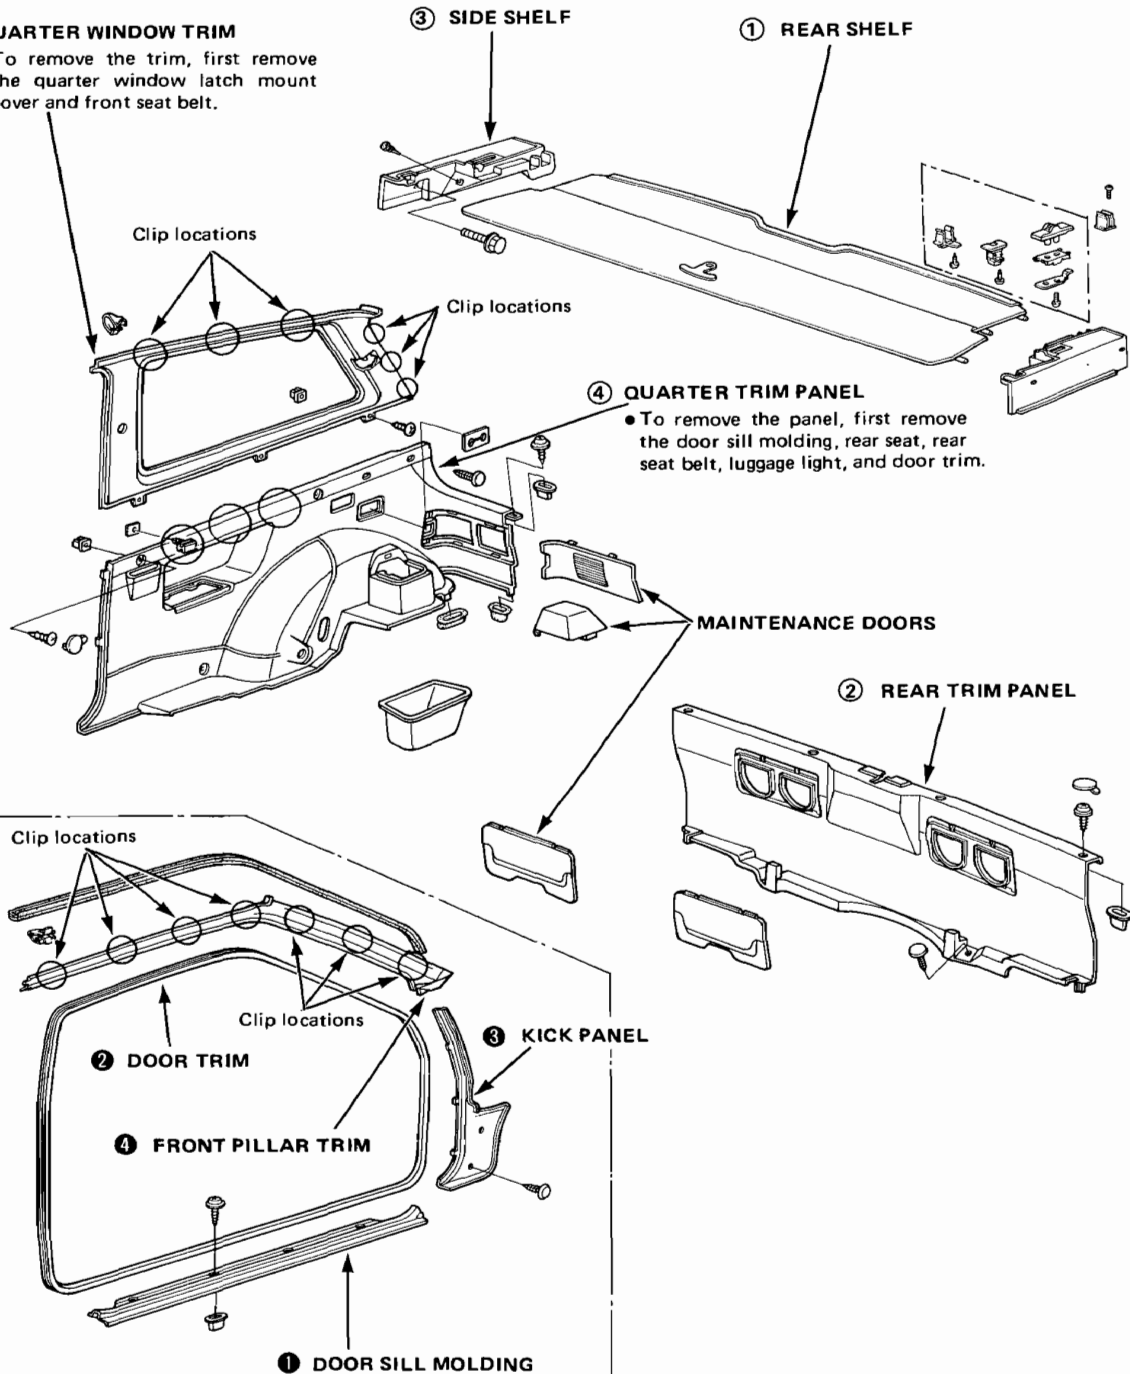



④④ CENTER PILLAR UPPER TRIM


- ## 5 FRONT PILLER TRIM



Interior Trim

Replacement (4D H/B)


Disassemble in numbered sequence.

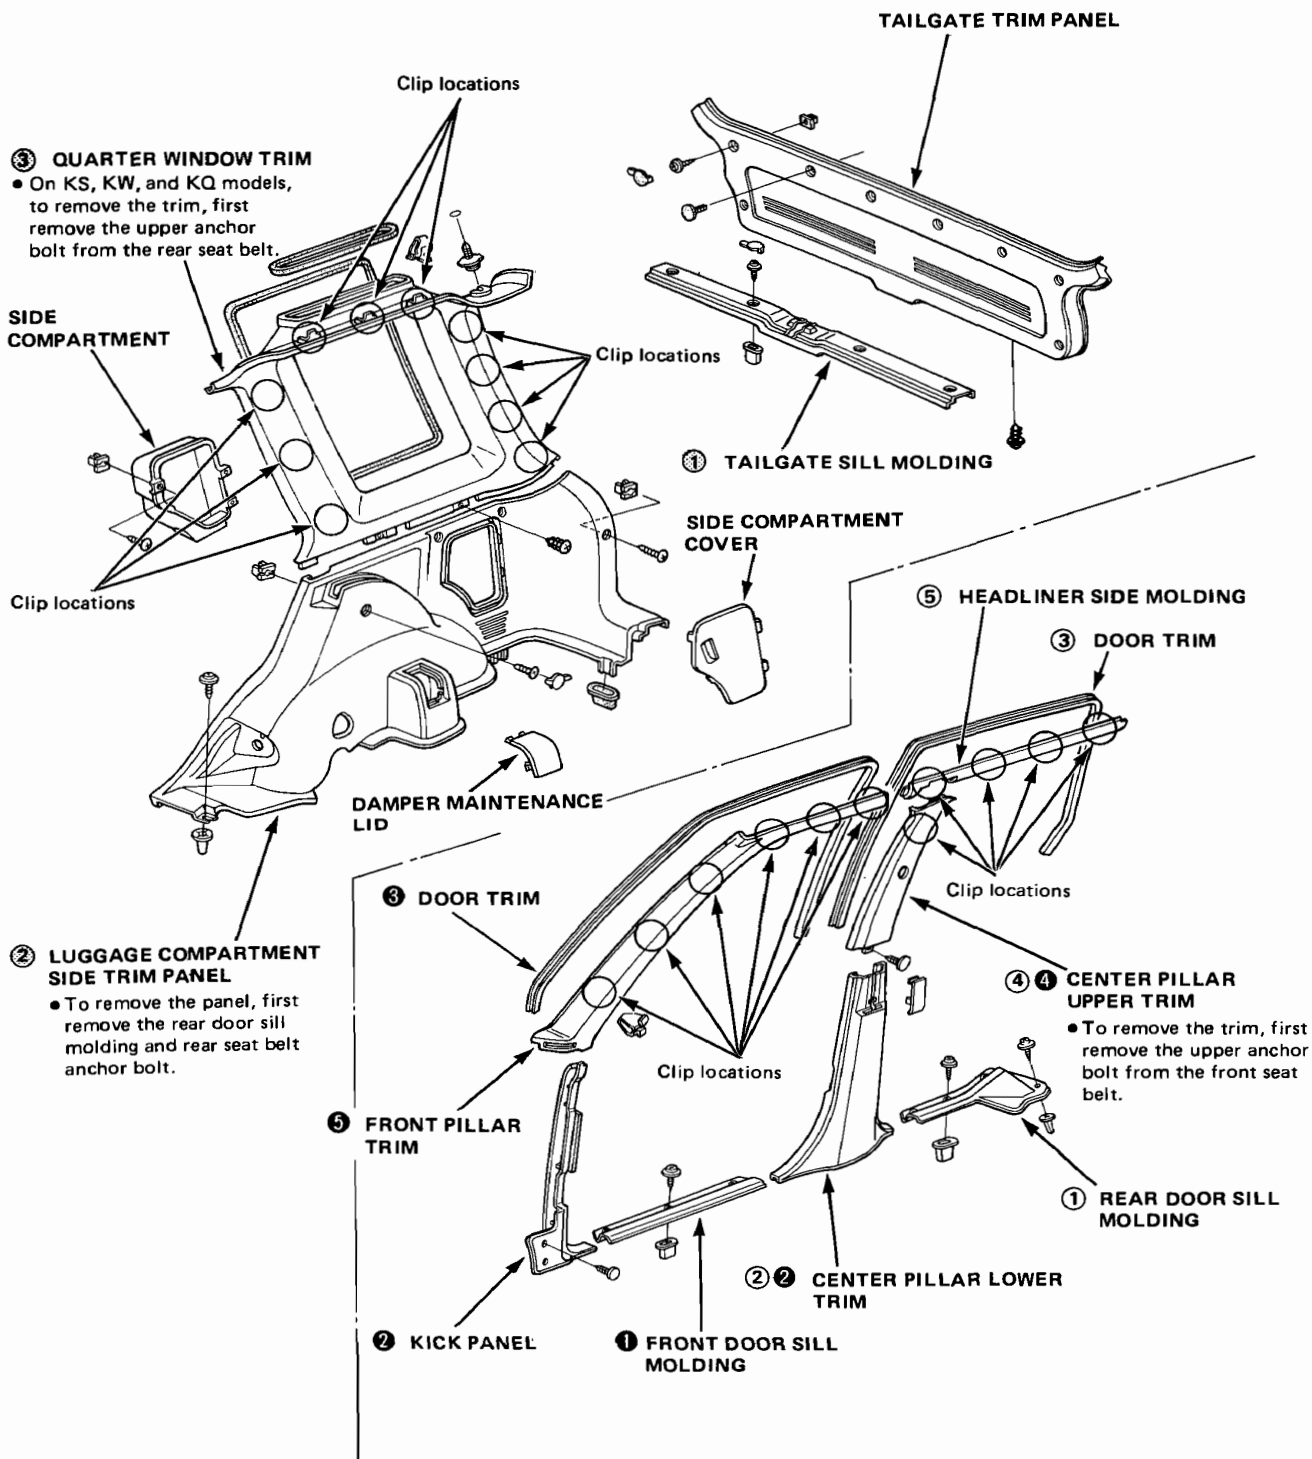




Front Seat

Replacement (Coupe, 2D H/B, and 4D)

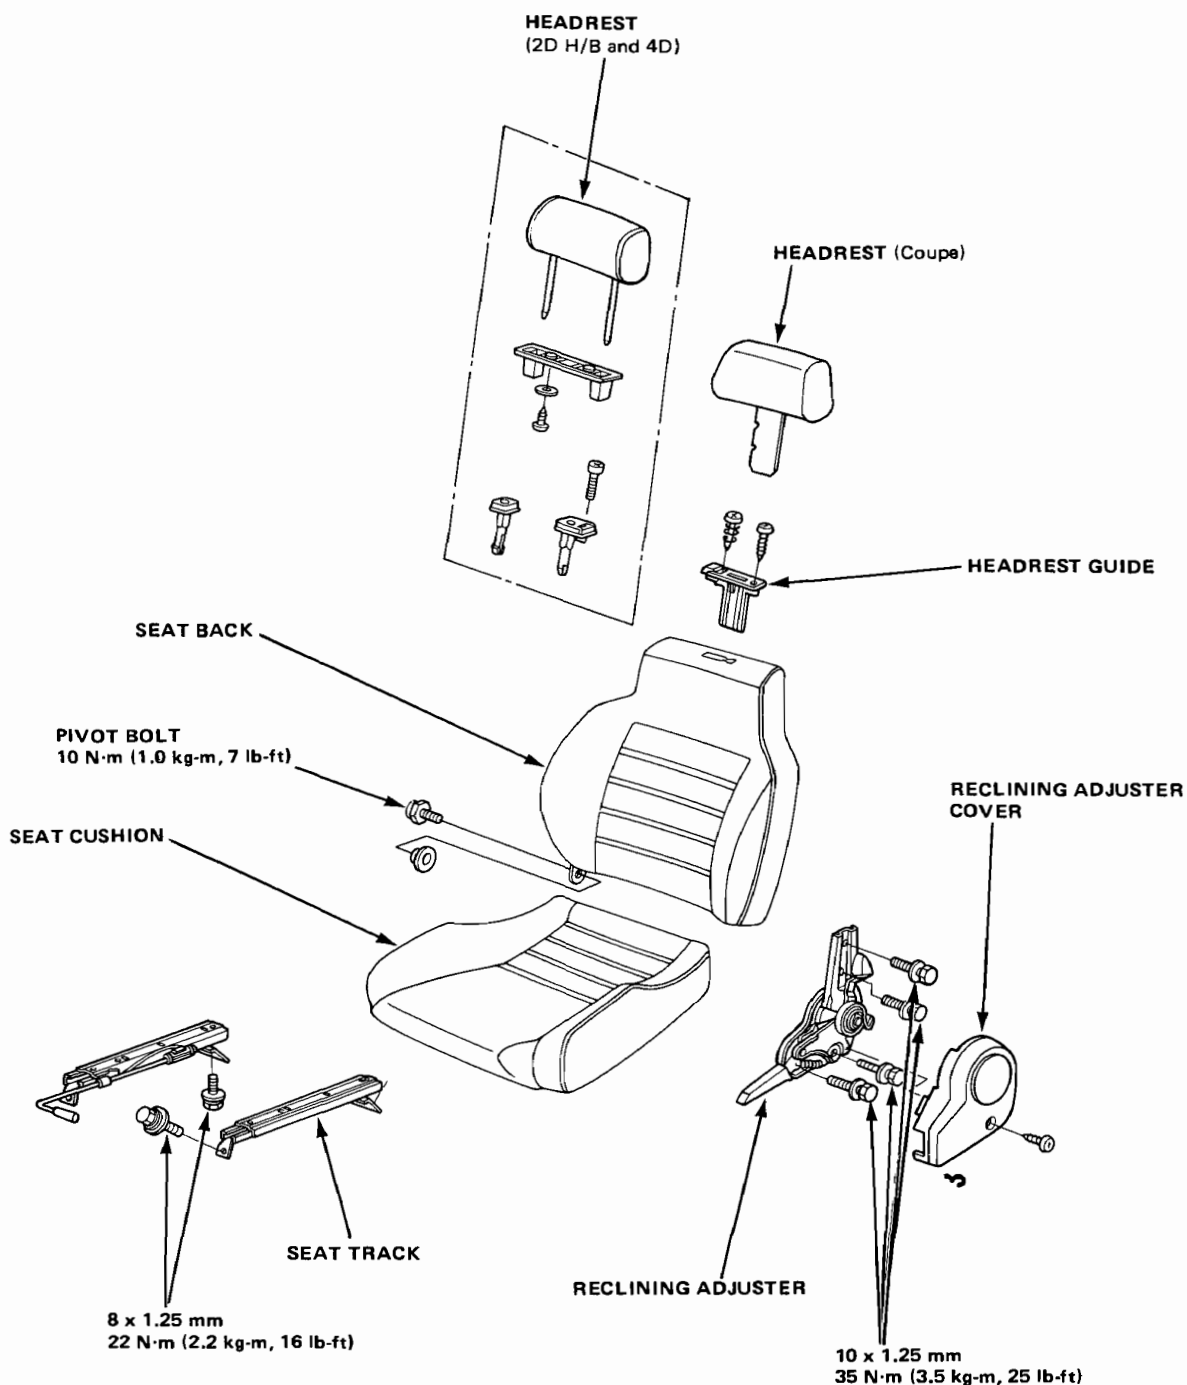

Front Seat

Replacement (4D H/B)

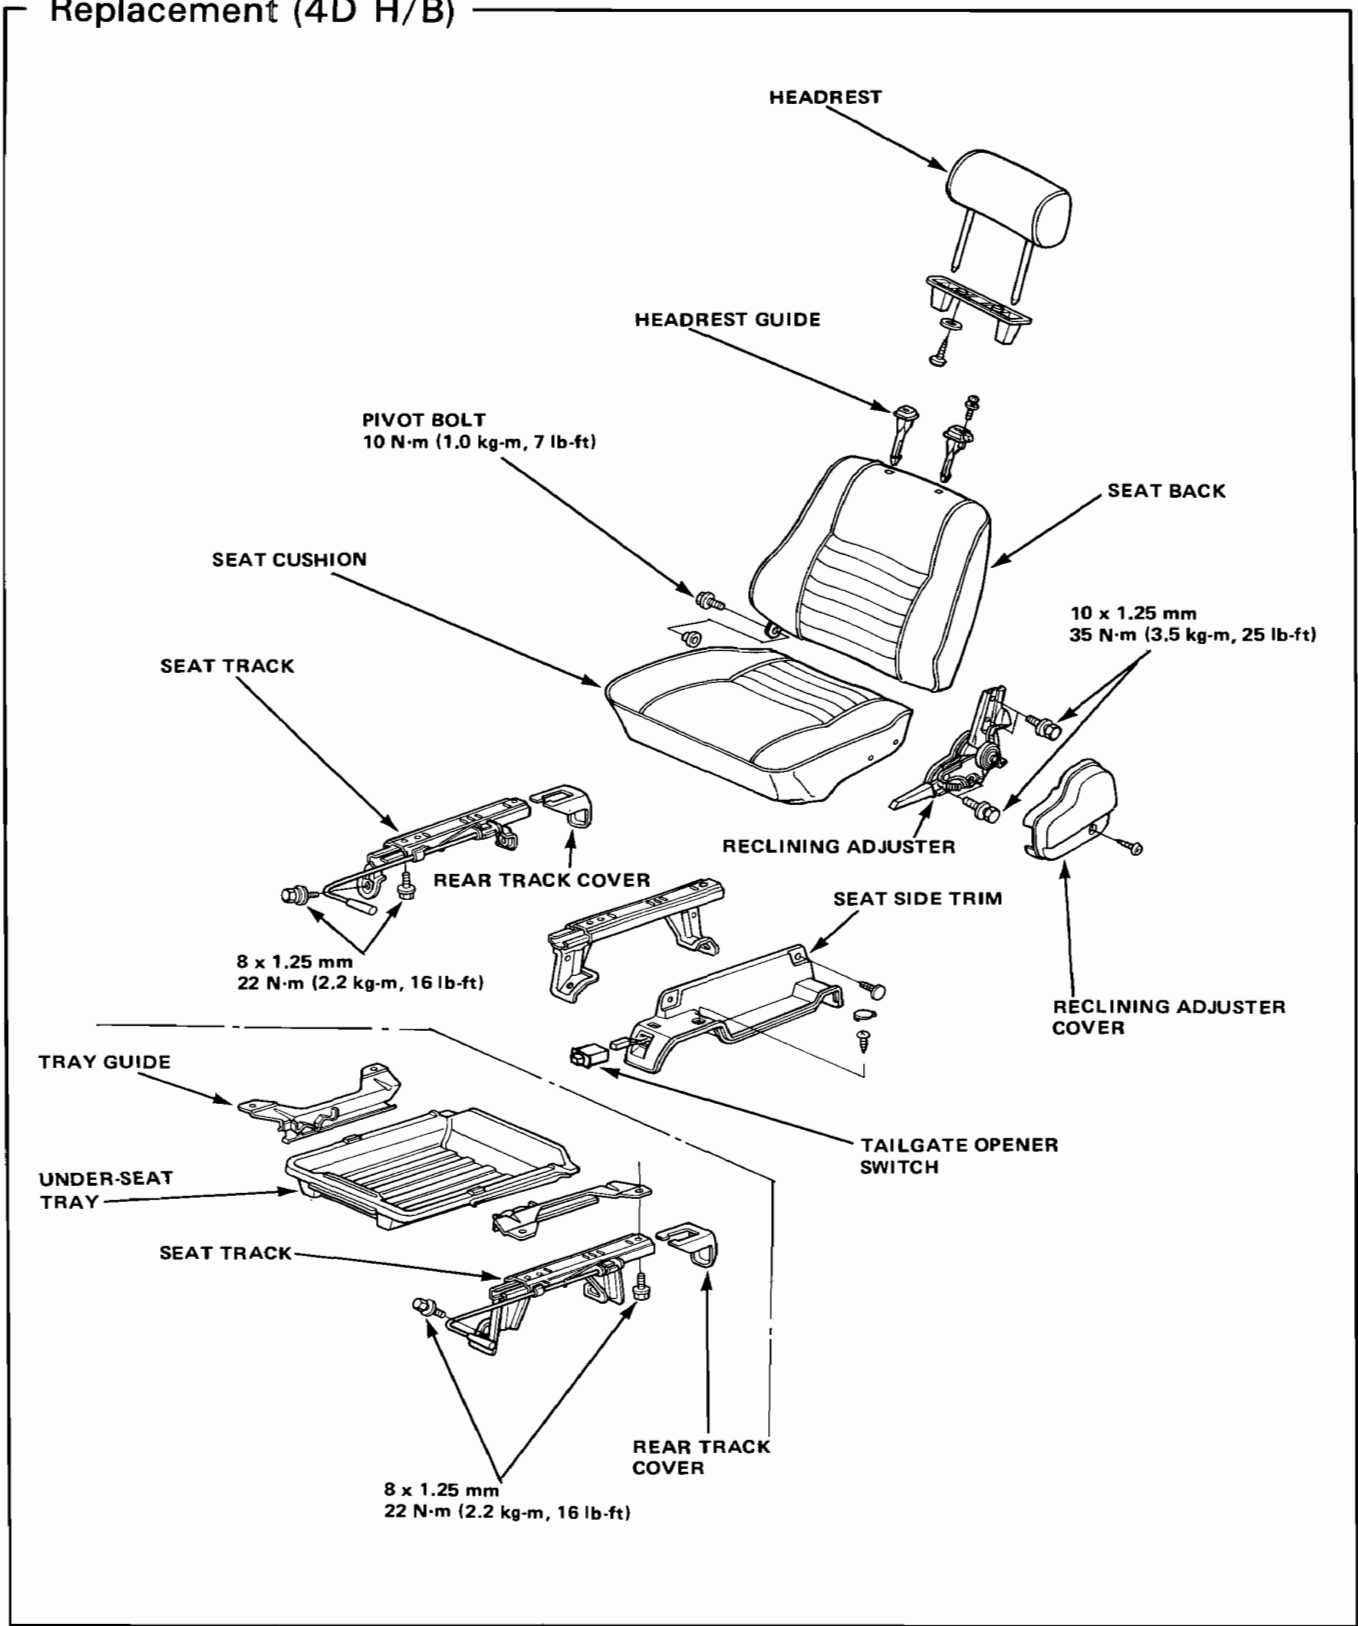




Rear Seat

Replacement (Coupe)


Disassemble in numbered sequence.

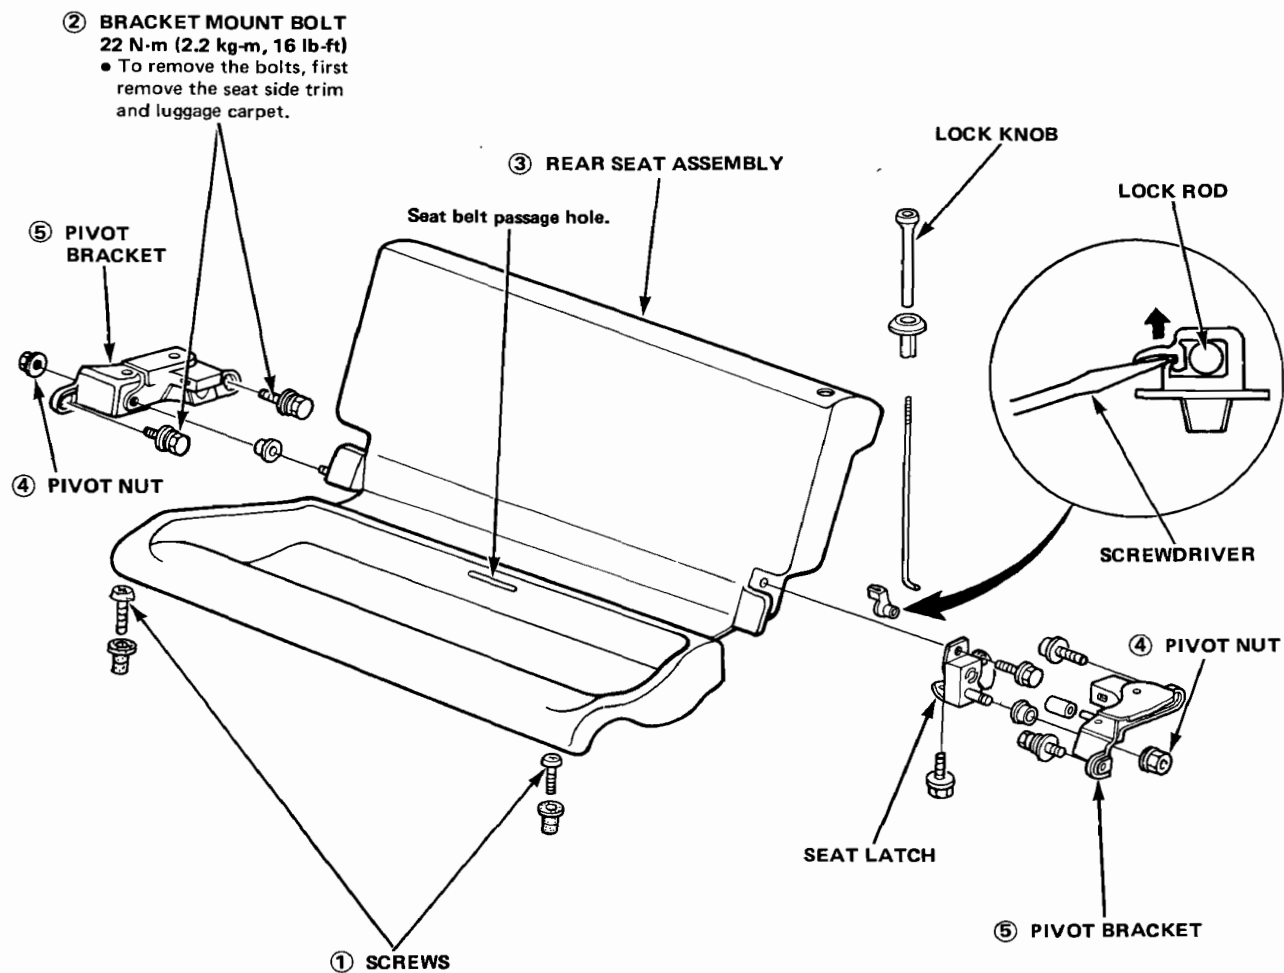

Rear Seat


Replacement (2D H/B)

Disassemble in numbered sequence.

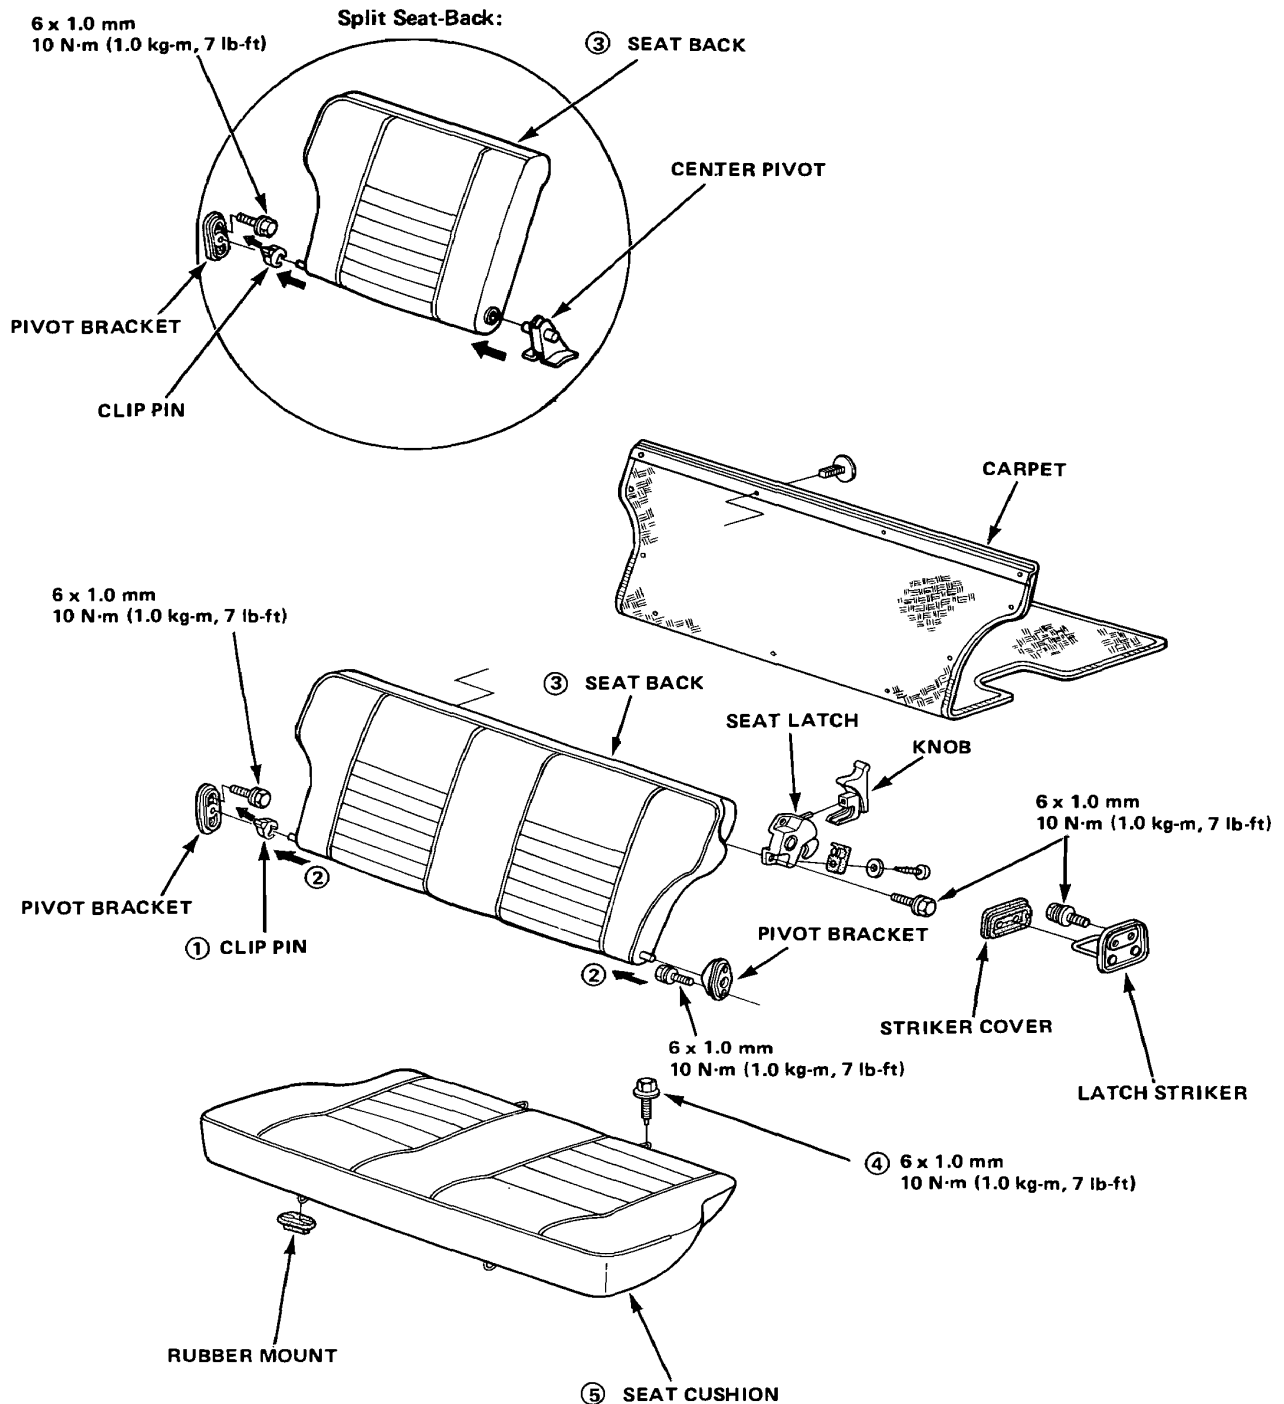




Pully-adjustable Rear Seat:

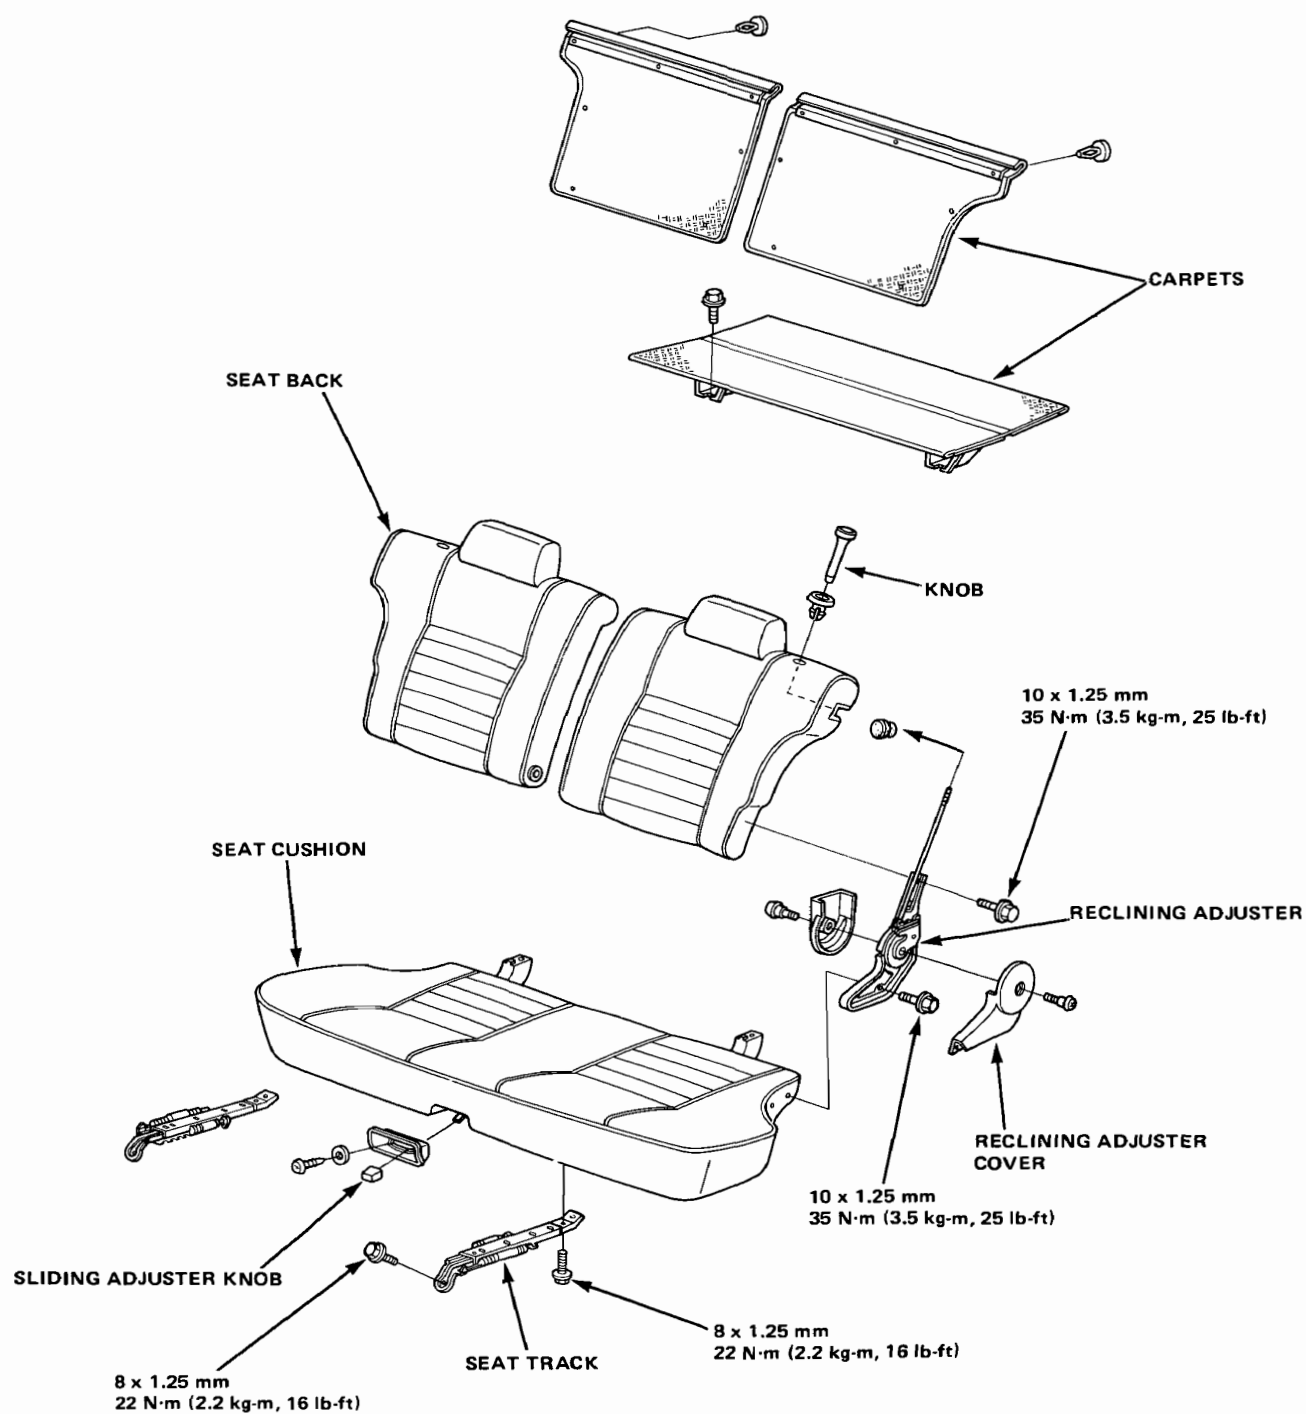

Rear Seat

Replacement (4D)


Disassemble in numbered sequence.

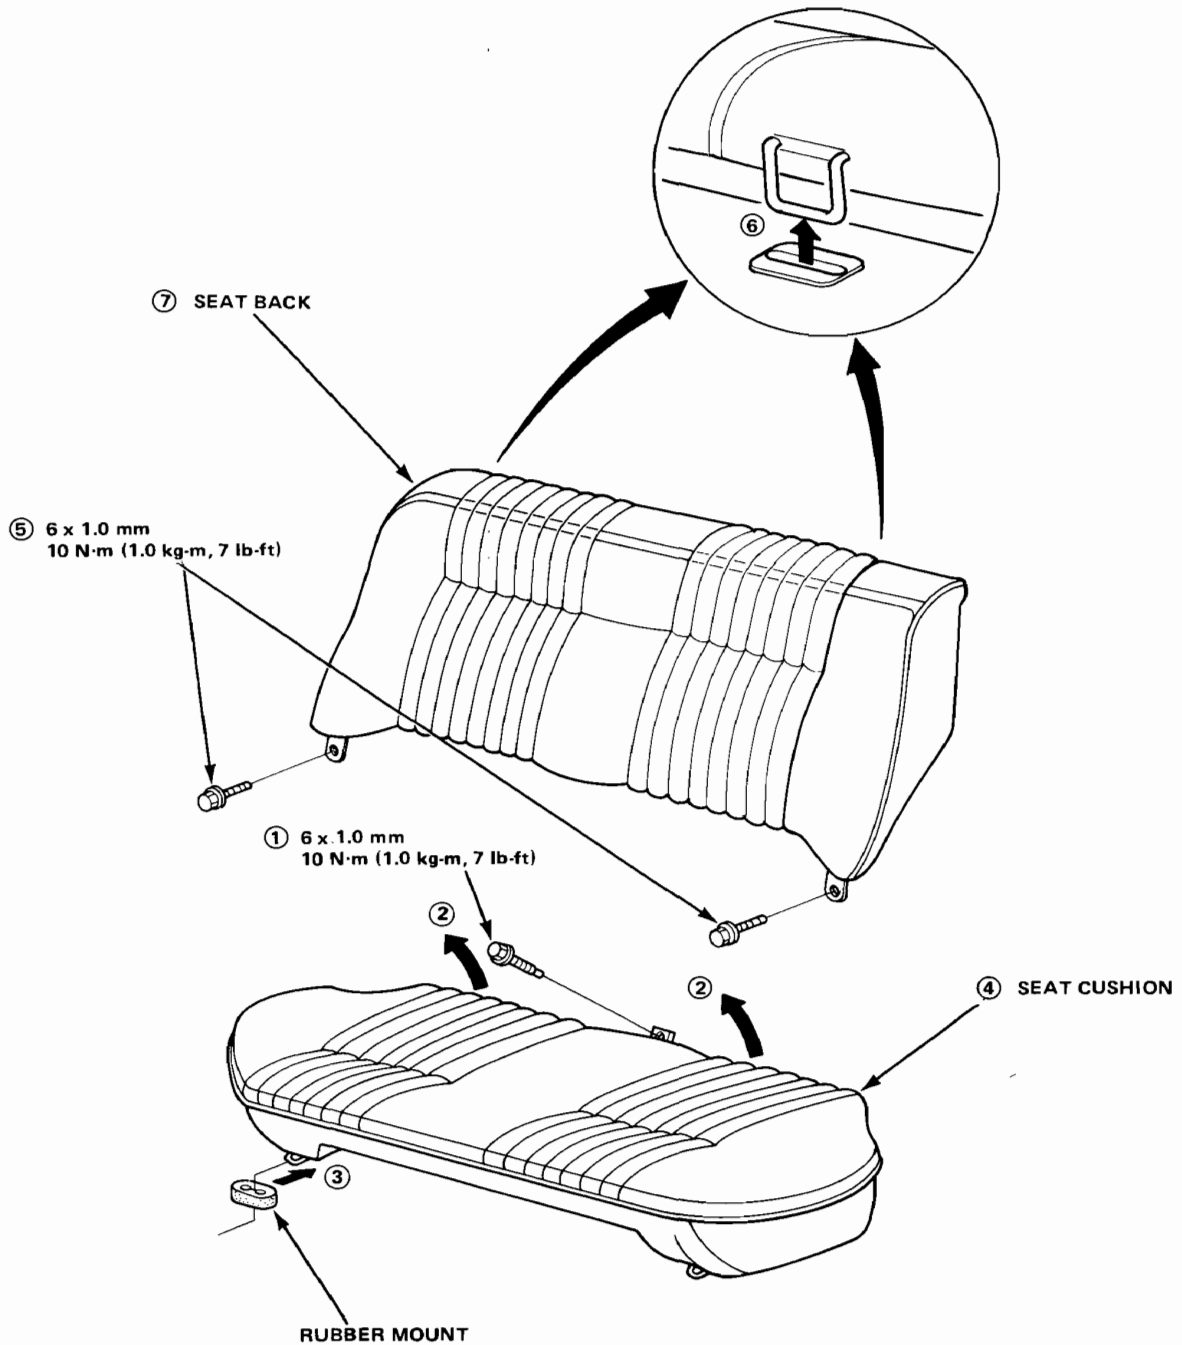



– (4D H/B)

Disassemble in numbered sequence.



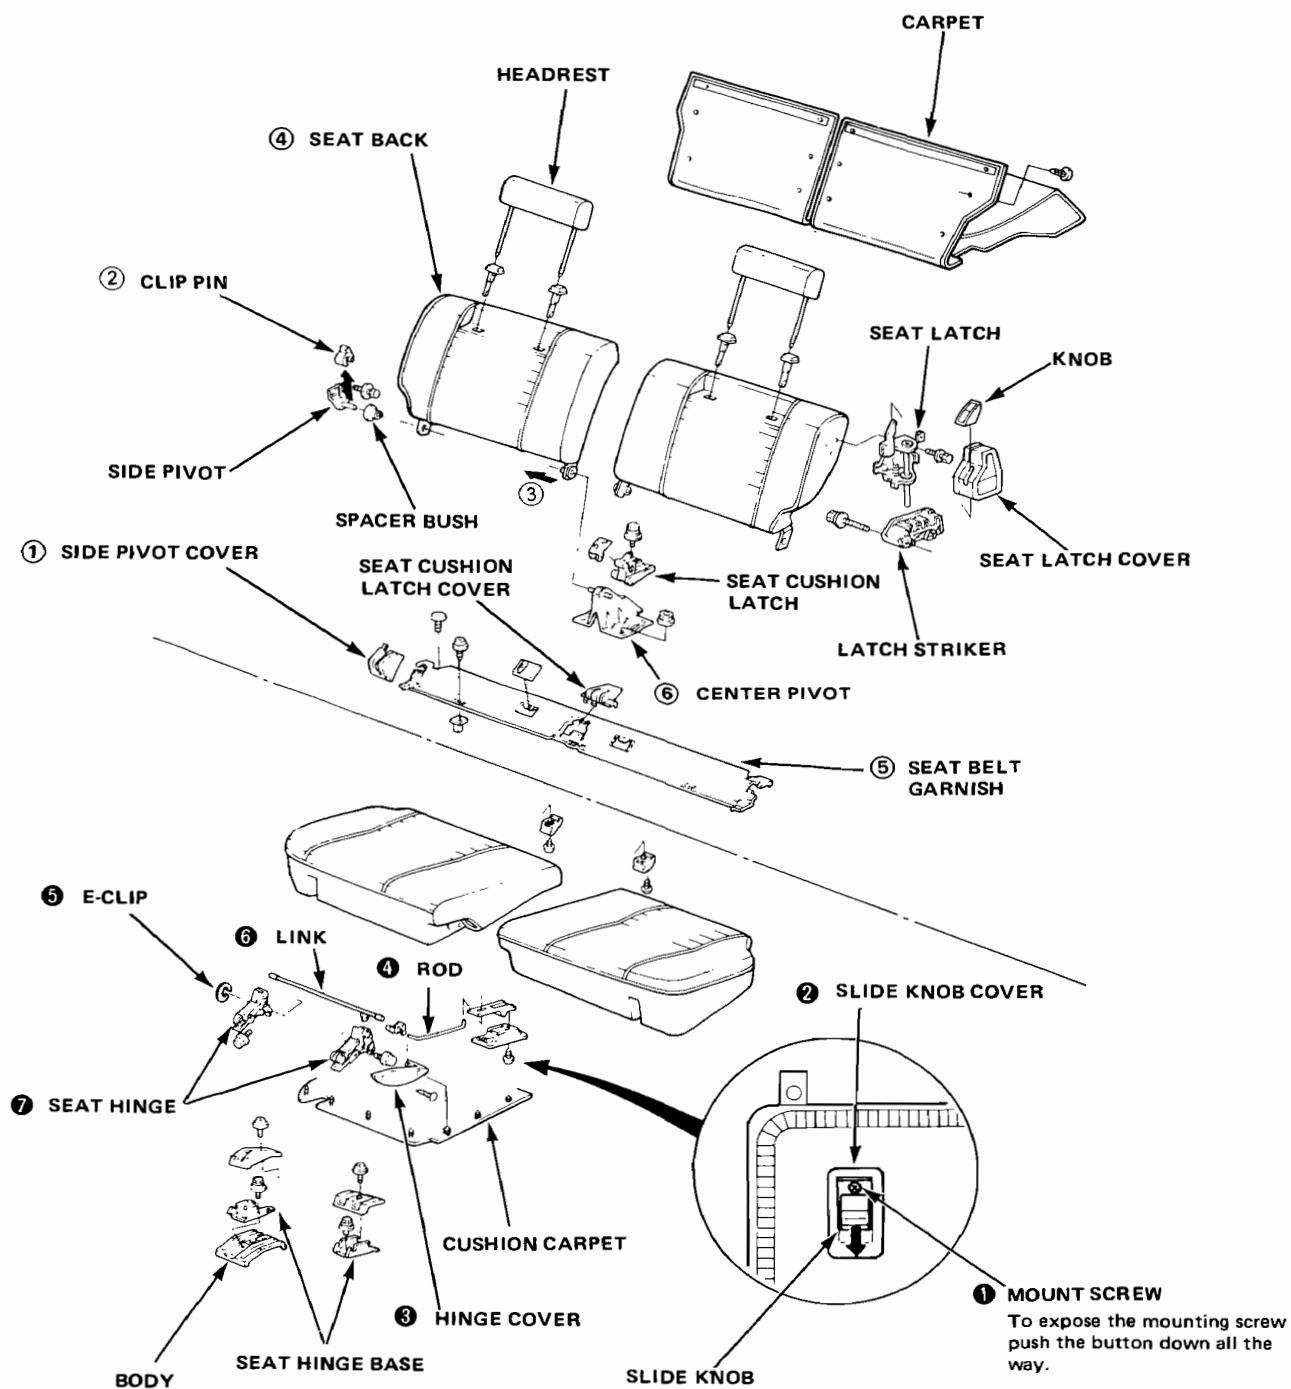


Seat Cover



Replacement

1. Separate the seat cushion and back.
2. Remove all clips on the rear of the seat, and separate the cover from the seat.

Front Seat Back:

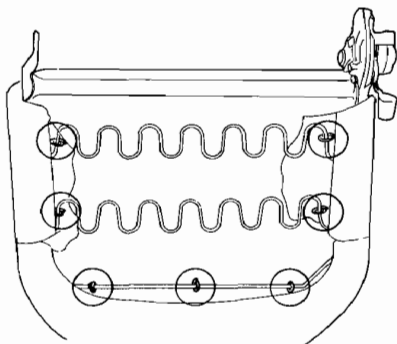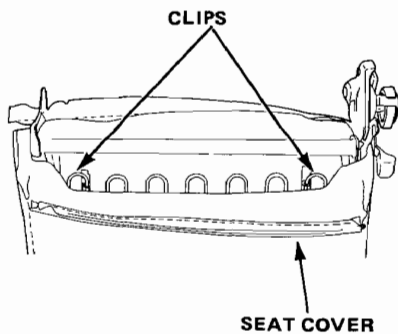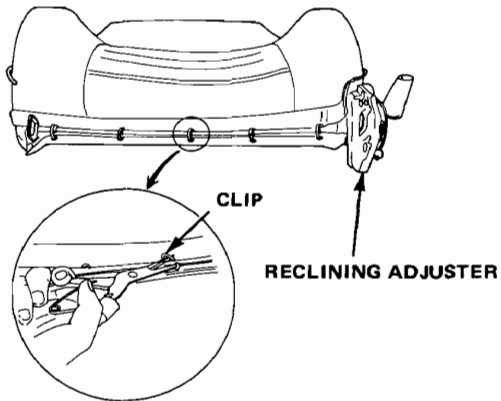

Front Seat Cushion:

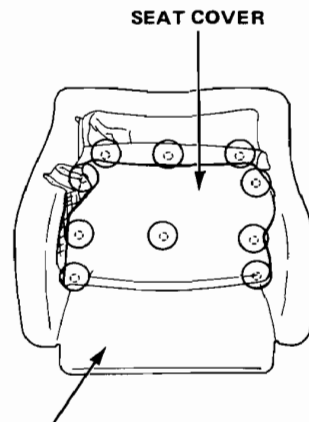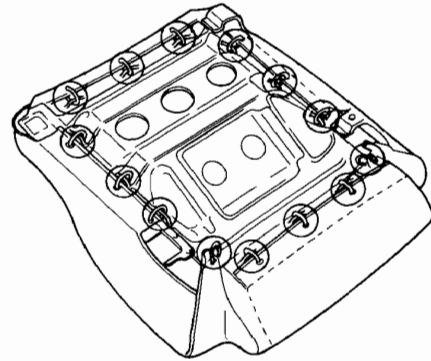

The front of the seat cushion.

3. Remove the rear seat cover by same method.

NOTE: To prevent wrinkles when installing a seat cover, make sure the material is stretched evenly over the frame before securing all the clips.



Front Seat Belts


Replacement

CAUTION: Check the seat belts for damage (see page 22-76), and replace them if necessary. Be careful not to damage them during removal and installation.

1. Remove the quarter trim panel (for Coupe and 2D H/B), or the center pillar lower trim (for 4D and 4D H/B).
2. Remove the upper anchor bolt, lower anchor bolt and retractor bolt with a 17 mm socket or box-end wrench.

NOTE: Exercise utmost care to remove the anchor bolt together with collar, washer, etc.

3. Slide the front seat forward until the seat belt center anchor bolt is accessible, then remove the bolt and the center anchor.

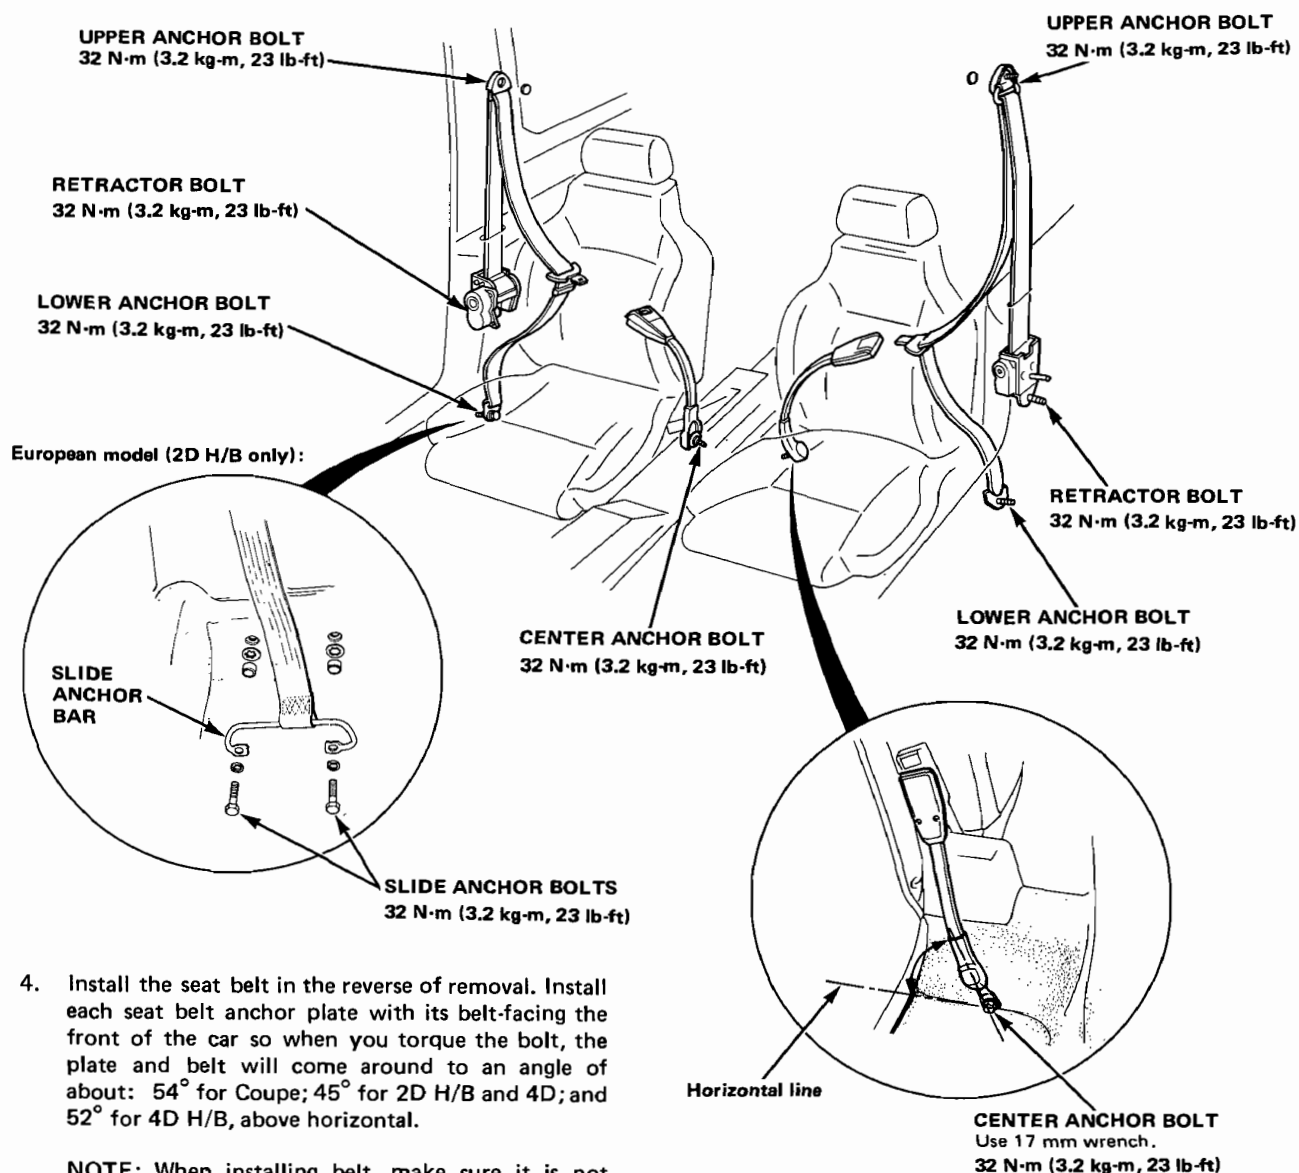

4. Install the seat belt in the reverse of removal. Install each seat belt anchor plate with its belt-facing the front of the car so when you torque the bolt, the plate and belt will come around to an angle of about: 54° for Coupe; 45° for 2D H/B and 4D; and 52° for 4D H/B, above horizontal.

NOTE: When installing belt, make sure it is not twisted behind the seat.

Rear Seat Belts

Replacement

CAUTION: Check the seat belts for damage (see page 22-76), and replace them if necessary. Be careful not to damage them during removal and installation.

1. To remove the rear seat belt, first remove the:
 - Rear seat (page 22-67 to 71).
 - Quarter trim panel (2D H/B: 3-point retractable type only) (page 22-62).
 - Luggage compartment side trim panel (4D H/B: 3-point retractable type only) (page 22-64).
 - Seat belt garnish (4D H/B only) (page 22-71).

2. Remove each anchor bolts and retractor bolts with a 17 mm socket or box-end wrench.

NOTE: Exercise utmost care to remove the anchor bolt together with collar, washer, etc.


3. Install the seat belt in the reverse order of removal.

Coupe, 2D H/B, and 4D:


Two-point manual type (2 men)




Two-point manual type (3 men)

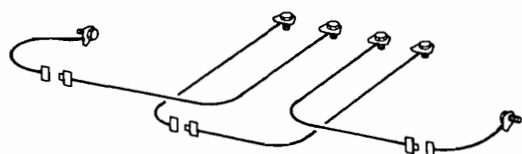


Two-point retractable type (3 men)

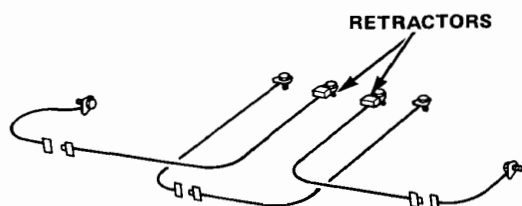

Three-point retractable type (2 men)

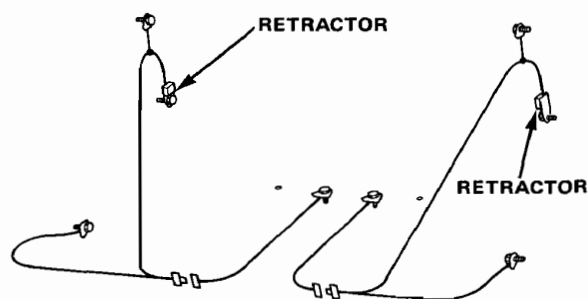

Three-point retractable type (3 men)

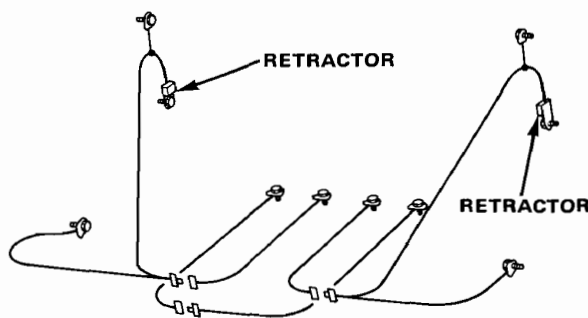




4D H/B:


Two-point manual type (2 men)




Two-point manual type (3 men)

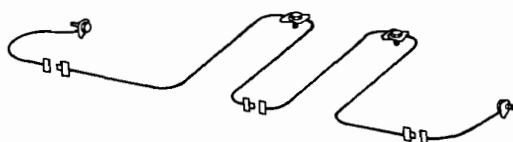

Two-point retractable type (3 men)

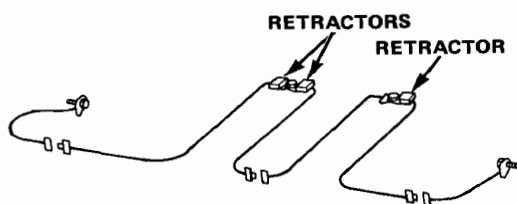



Three-point retractable type (3 men)

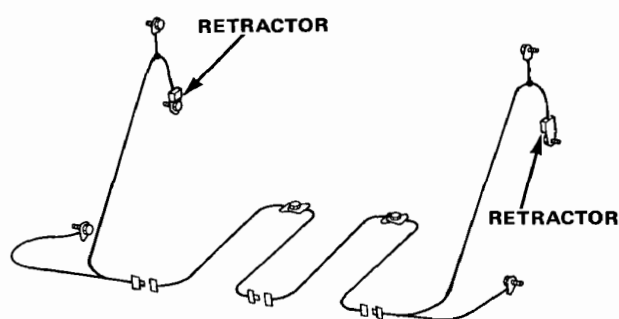

Each seat belt anchor bolt

Tightening torque: 32 N·m (3.2 kg-m, 23 lb-ft)

4. Pass the seat belts through the:
 - Passage hole of the seat cushion (For Coupe and 2D H/B-adjustable seat only).
 - Passage hole of the seat belt garnish (For 4D H/B).
5. Install each seat belt anchor plate with its belt facing the front of the car so when you torque the bolt, the plate and belt will come around to an angle of about: 48° for Coupe; 45° for 2D H/B and 4D, above horizontal, for 4D H/B, insert the anchor plate's pin into the body hole.
6. When installing belt, make sure it is not twisted behind the seat.

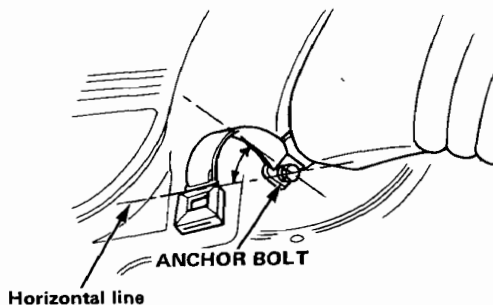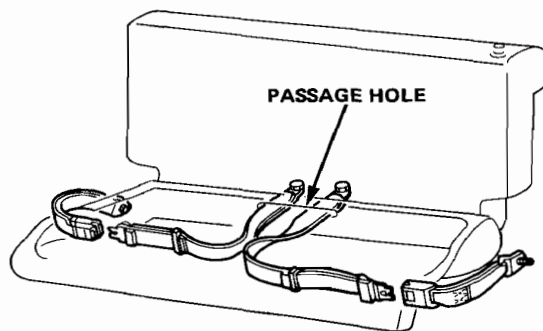


Seat Belts

Inspection

Retractor Inspection

1. With the retractor installed, check that the belt can be pulled out freely.
2. Make sure that the belt does not lock when the retractor is leaned slowly up to 15° from the mounted position. The belt should lock when the retractor is leaned over 45° .

CAUTION: Do not attempt to disassemble the retractor.

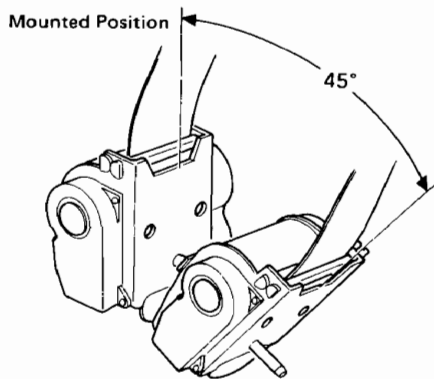

3. Replace the belt with a new one if there is any abnormality.

On the Car-Belt Inspection

1. Check that the belt is not twisted or caught on anything.
2. After installing the anchors, check for free movement on its retaining bolt. If necessary, remove the bolt and check that the washers and other parts are not damaged or are installed properly.
3. Check the belts for fouling, damage or discoloration. Clean with a shop towel if fouled.
4. Check that the belt is not locked when pulled out slowly. The belt is designed to lock only during a sudden stop or impact (Except Canadian model).
5. Make sure that the belt will retract automatically when released.
6. Replace the belt with a new one if there is any abnormality.


Rear View Mirror

Replacement

1. Remove the rubber damper.
2. Slide the mirror back to remove it.

CAUTION: Do not use a hammer or excessive force to free the mirror from the base, plastic tabs in the base are designed to break away under sudden impact.

3. Unscrew the two screws and then remove the mirror base.

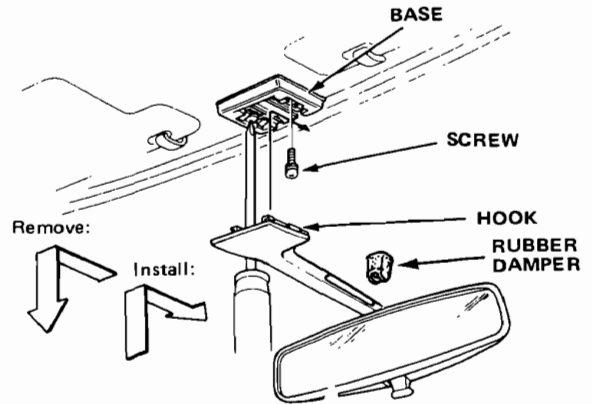

4. Install the mirror base, with the cutout toward the windshield.
5. Install the mirror by inserting its hooks in the base and sliding the mirror forward to lock it in place.


CAUTION: Installation is in the reverse order of removal, but take care that the tip of the mirror hook is not pushed beyond the front edge of the base. If this happens the mirror base will break.

Console


Replacement

1. Remove the gear shift knob (5-speed) or selector lever handle (automatic).
2. On console box equipped model, remove the mounting screws to release the front console.
3. Remove the center cap and rear lid for the center and rear console, and remove its mounting screws to release the center and rear console.

Coupe, 2D H/B, and 4D:

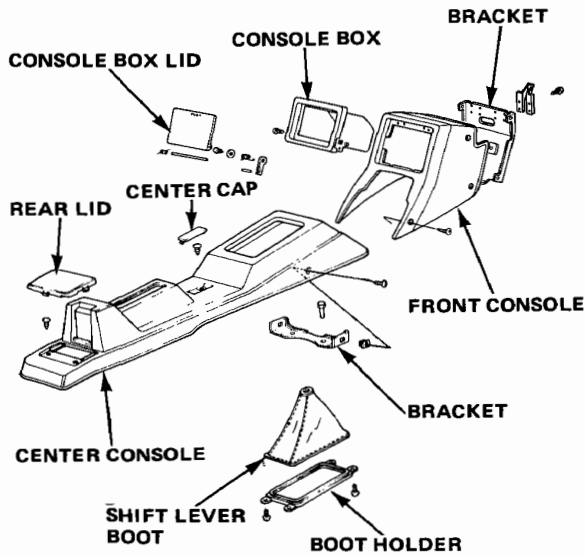

4D H/B:

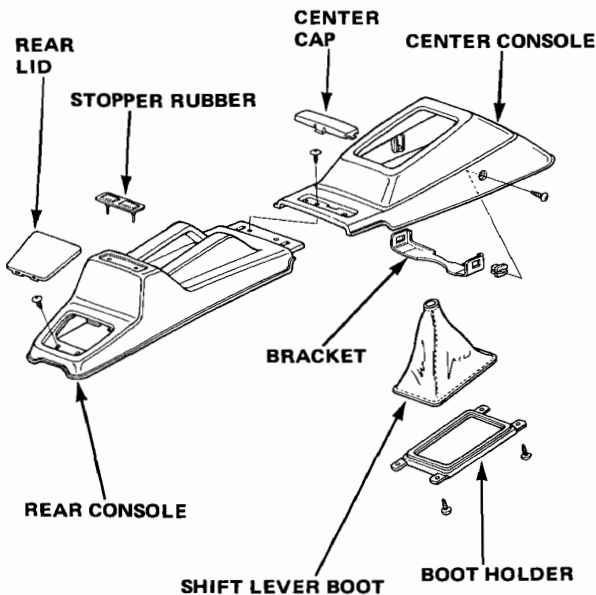


Roof Console Trunk Box




Roof Console Replacement

To remove the roof console, first remove the interior light and the rear view mirror.

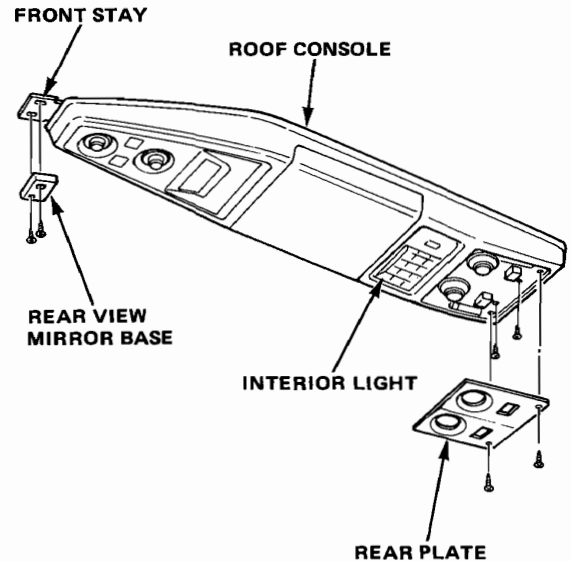

Trunk Box Replacement (4D H/B)

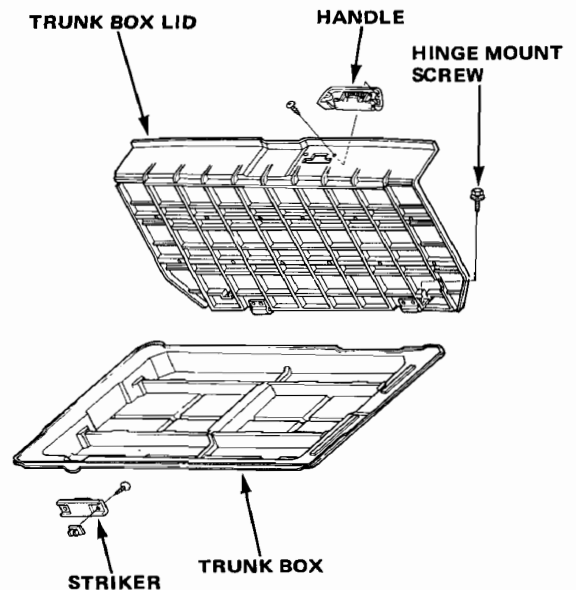


Carpet

Replacement

1. Remove:

- Front seats.
- Rear seat cushion.
- Center console.
- Right and left kick panels.
- Door sill moldings.
- Trunk lid opener.
- Right and left quarter trim panels (Coupe and 4D H/B)
- Front seat belt floor anchor bolts.
- PGM-FI control unit (Coupe only).
- Right and left center pillar lower trims (4D and 4D H/B).
- Seat hinge base covers (4D H/B only).

2. Pry out the clips at the rear edge and under the dashboard, and remove the carpet.

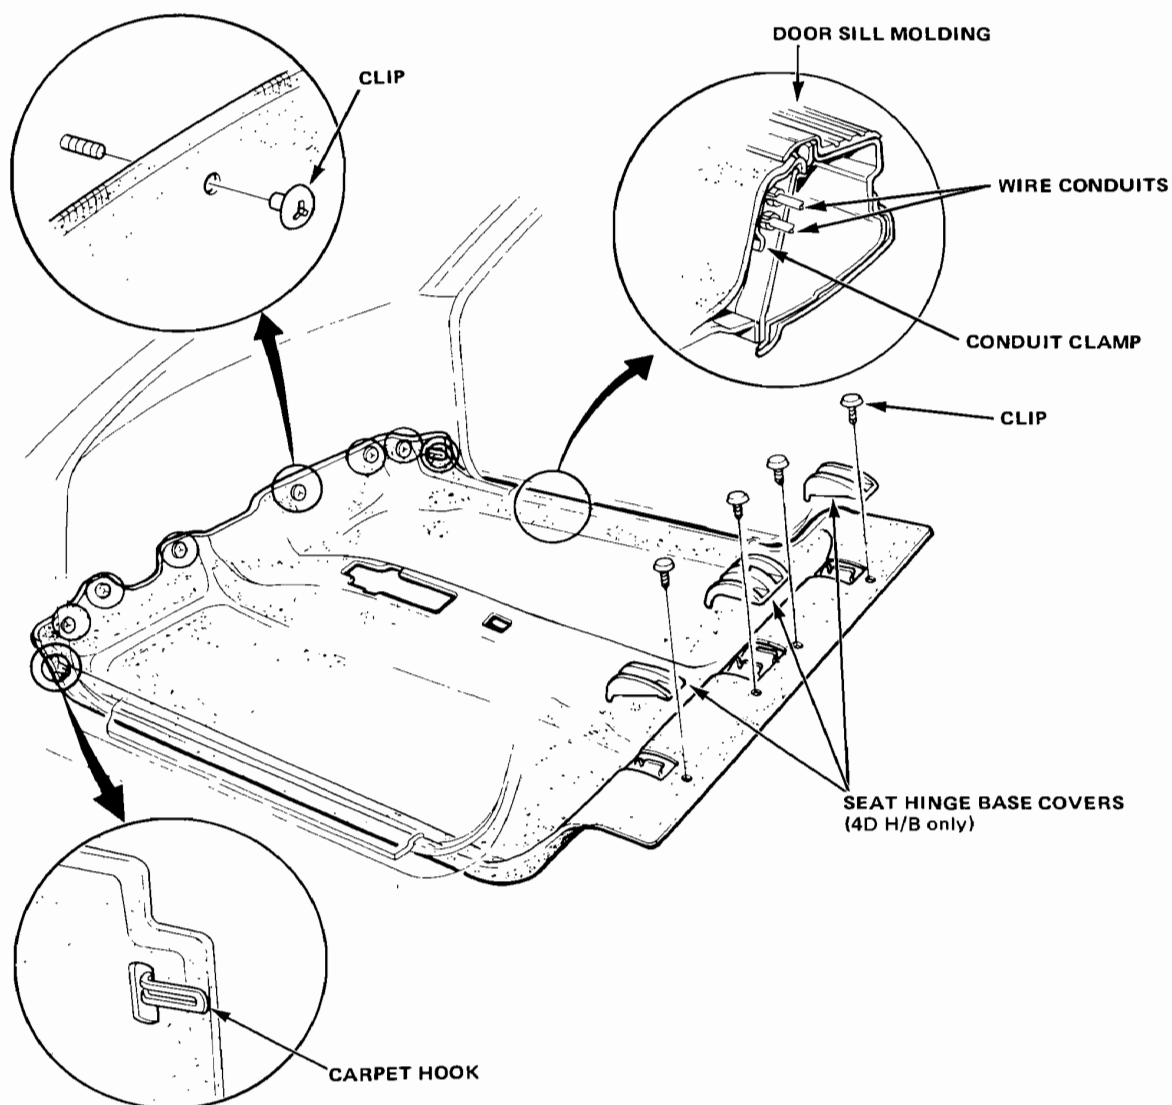

Headliner




Replacement

1. Remove:


- Sunvisors.
- Rear view mirror and base.
- Front pillar trims.
- Interior light.
- Quarter window trim (except 4D).
- Luggage light.
- Headliner side molding (4D and 4D H/B).
- Rear roof trim.
- Grab handle.
- Roof console (equipped model).
- Roof trim (Sunroof equipped model).

2. Remove the rear roof trim and the clips, then remove the headliner.

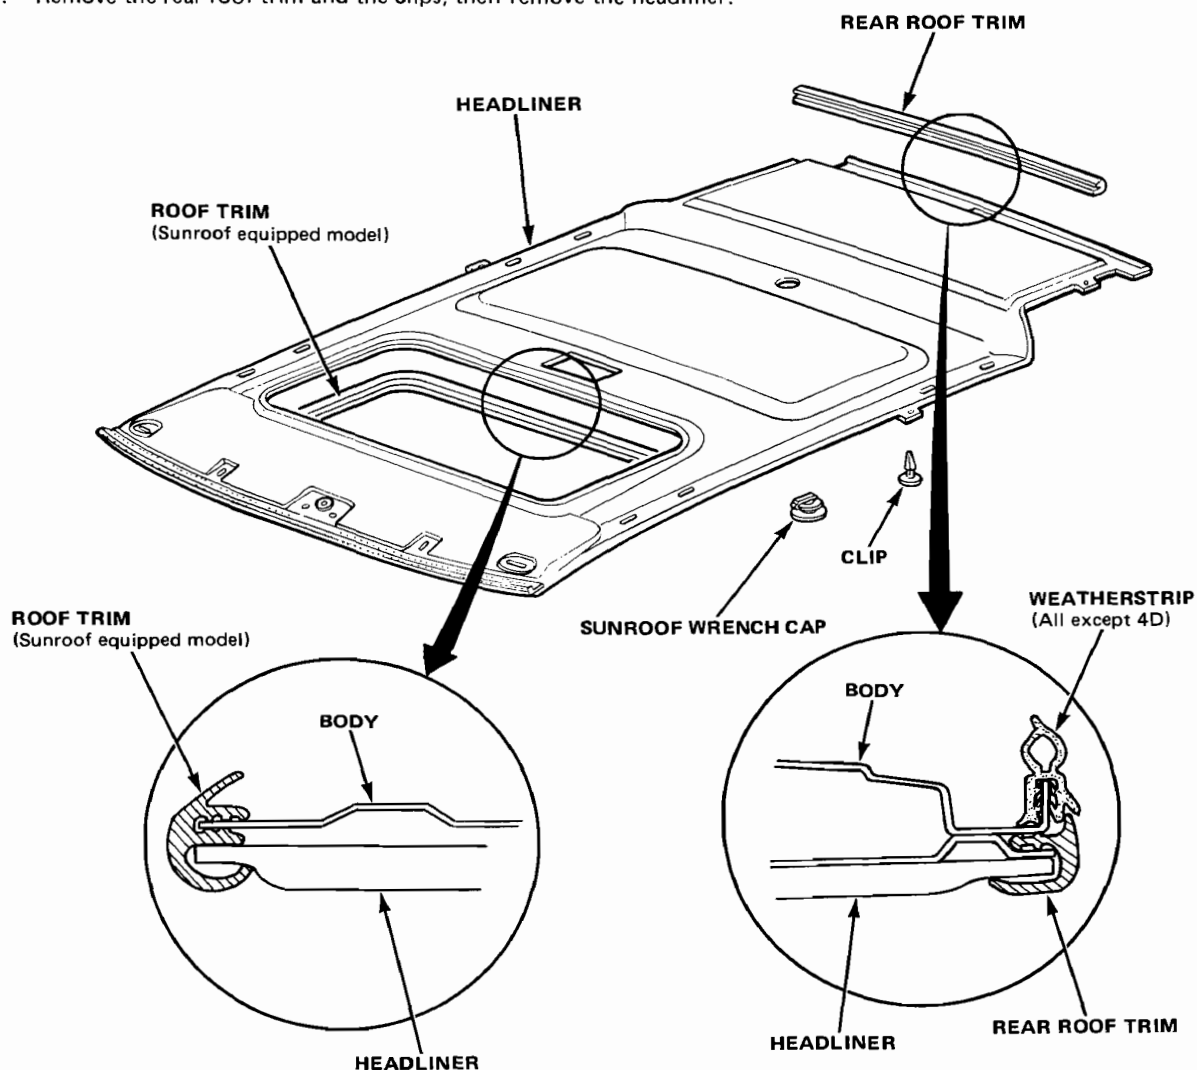

Sunroof (Coupe)

Index

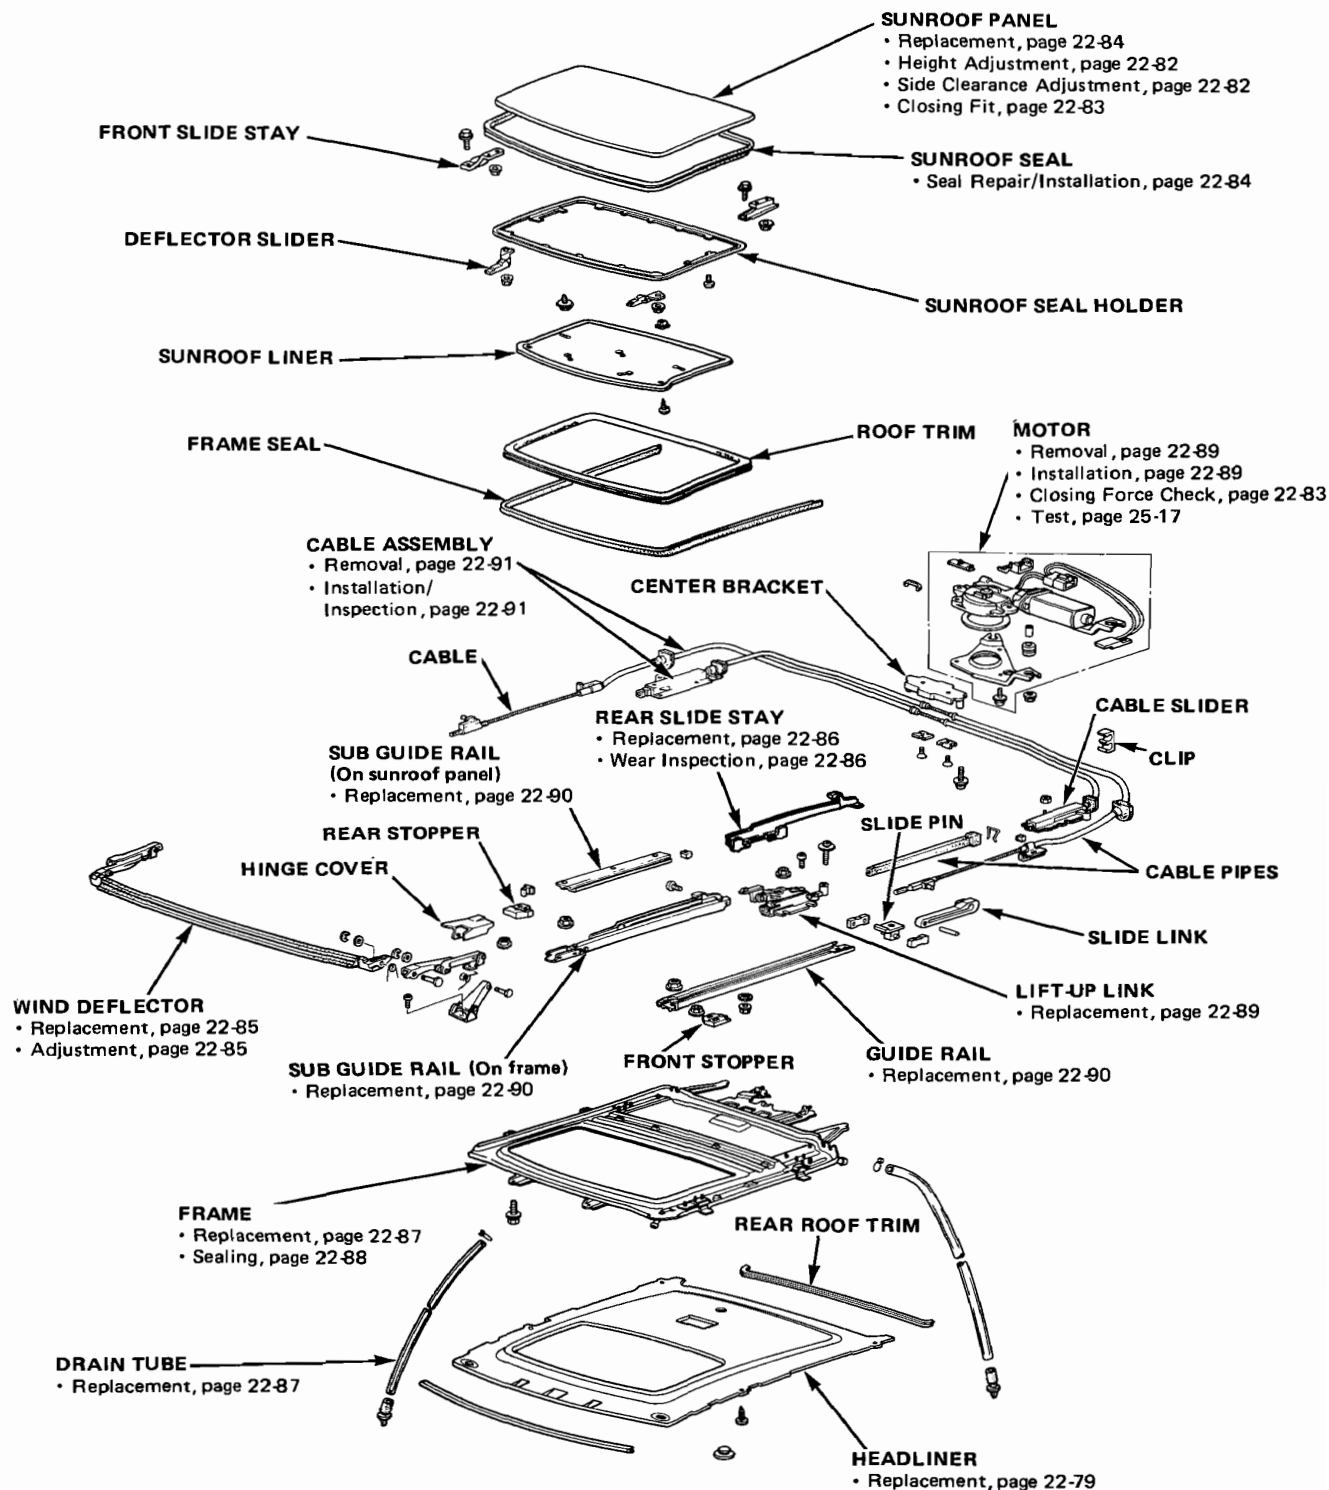



Troubleshooting


Symptom	Probable Causes
Water leak	<ol style="list-style-type: none">1. Improperly installed sunroof seal and sunroof panel (page 22-84).2. Gap between sunroof seal and roof panel (page 22-82).3. Clogged drain tube.4. Gap between frame seal and frame.5. Improper sealing between cable pipe and frame (page 22-88).6. Improper sealing between guide rail and frame (page 22-88).
Wind noise	<ol style="list-style-type: none">1. Improper clearance between sunroof seal and roof panel (page 22-82).2. Loose headliner and roof trim.
Deflector noise	<ol style="list-style-type: none">1. Improper clearance between deflector blade and roof panel (page 22-85).2. Insufficient deflector extension.3. Deformed deflector.
Motor noise	<ol style="list-style-type: none">1. Loose motor.2. Worn gear or bearing.3. Worn cable.4. Deformed cable pipe.
Sunroof does not move, but motor turns.	<ol style="list-style-type: none">1. Foreign matter stuck between guide rail and sub guide rail (page 22-86).2. Interference between moving parts.3. Cable slider loose.4. Cable pipe loose or not attached properly.5. Clutch out of adjustment (page 22-83).6. Sunroof not tilting up properly.
Sunroof does not move and motor does not turn (Sunroof can be moved manually).	<ol style="list-style-type: none">1. Blown fuse.2. Faulty switch (page 25-17).3. Battery run down (page 27-5).4. Faulty relay (page 25-18).
Sunroof vibrates	<ol style="list-style-type: none">1. Worn rear slide stay (page 22-86).2. Improperly installed guide rails.
Sunroof remains tilted	<ol style="list-style-type: none">1. Faulty cable slider (page 22-91).2. Faulty limit switch (page 25-18).

Sunroof (Coupe)

Height Adjustment


The roof panel should be flush with the sunroof seal.

1. To adjust the front of the sunroof, remove the sunroof panel (page 22-84) and add or remove shims between the slide stay and the sunroof panel as shown.

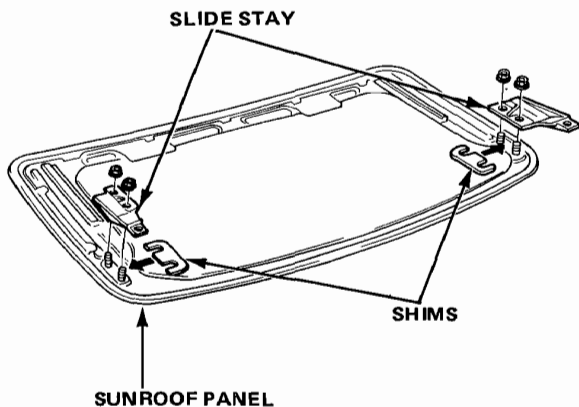

2. To adjust the rear height, remove the lift-up link (page 22-89) and add or remove washers between the lift-up link and frame as shown.


NOTE: The washers should be of equal thickness.

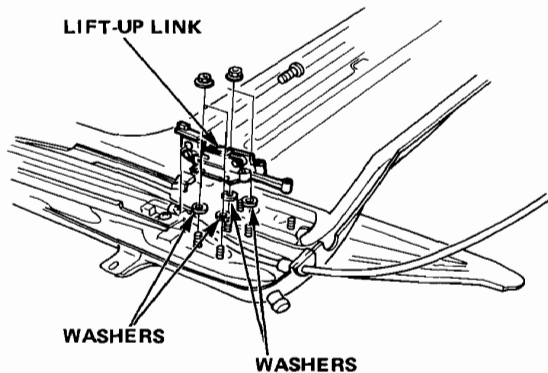


Side Clearance Adjustment

If sunroof seal fits too tight against the roof panel on one side when closed, remove the headliner, then:

1. Loosen all frame mount bolts.

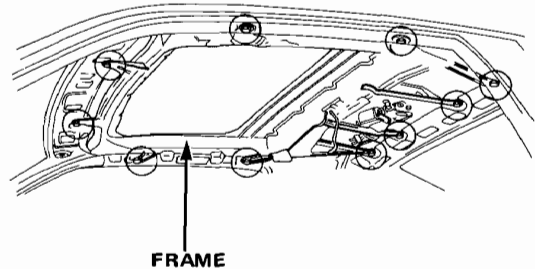

2. Side-to-side fit of sunroof seal can be adjusted by moving it right or left by hand.

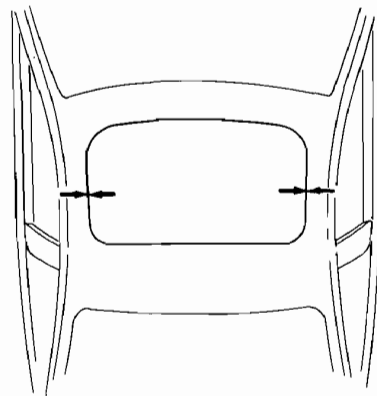


3. Tighten bolts, re-check.



Closing Fit


If the fit of the sunroof seal is too tight at the front seal when the sunroof is closed, or too tight at the rear seal when it is pulled down from the pick-up position, proceed as follows:

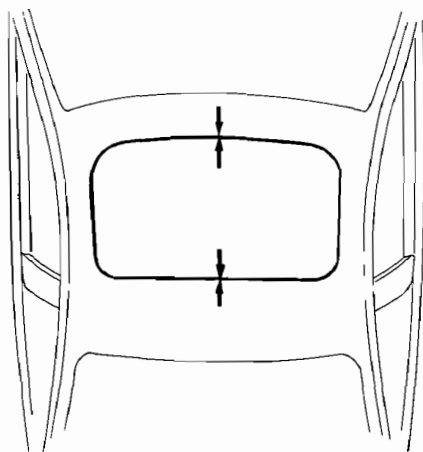

1. Open the sunroof fully.
2. Loosen the front rail stopper nuts.
3. Slide the stoppers forward or back until the sunroof closes snugly.

NOTE: Slide the right and left stoppers equally.

- ① : To increase clearance at rear seal.
- ② : To increase clearance at front seal.

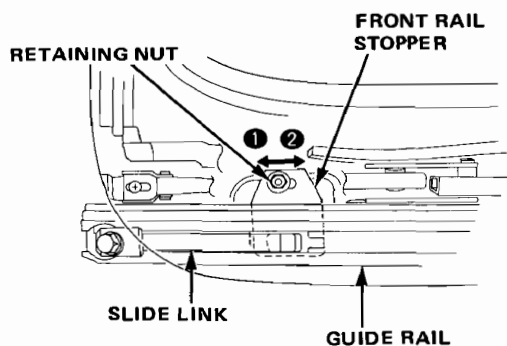


Closing Force Check


1. After installing all removed parts, have a helper hold the switch to close the sunroof while you measure force required to stop it. Attach spring scale as shown. Read force as soon as sunroof stops moving, then immediately release the switch and spring scale.

CAUTION: When using the spring scale, protect the leading edge of the sunroof with a shop rag.


Closing Force: 196–245 N (20–30 kg, 44–66 lb)

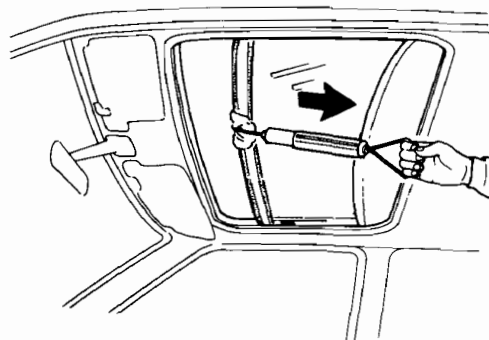

2. If force is not within specification, adjust by turning sunroof motor clutch adjusting nut.

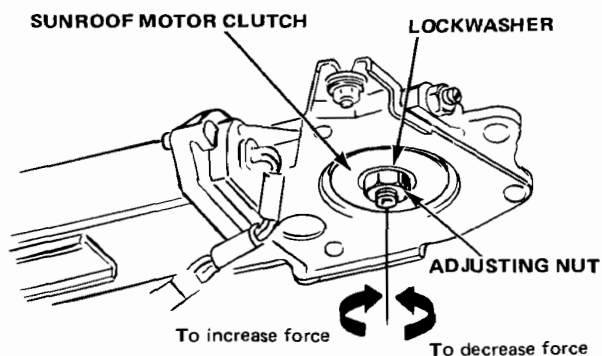


3. After adjusting, install a new lockwasher and bend it against flat on the adjusting nut.

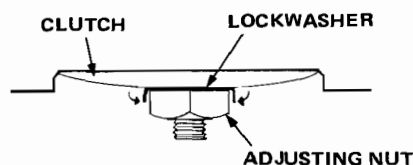

Sunroof (Coupe)


Sunroof Panel Replacement

1. Open the sunroof.
2. Remove the rear stoppers by removing the attaching nuts.

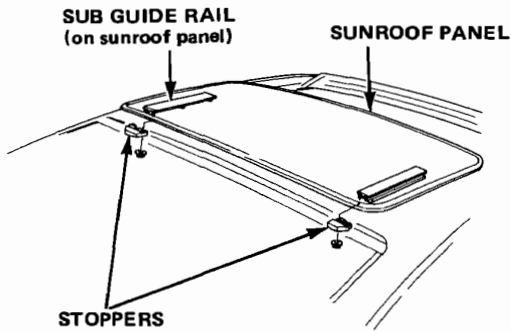

3. Remove the front mounting bolts. Remove the sunroof panel from the rear slide stay by sliding it forward by hand.

NOTE: Use extreme care to avoid damaging the body when removing the panel.

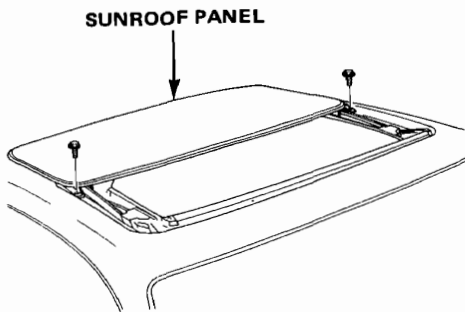

4. Install the sunroof panel in the reverse order of removal.


Seal Repair/Installation

If a seal is leaking, or if it is to be replaced, proceed as follows.

1. Remove the sunroof panel; remove the sunroof liner, front slide stay and deflector slider.
2. Remove the seal holder. Carefully peel the seal off the sunroof panel.
3. Clean the seal attaching surfaces with a clean cloth dampened in un-leaded gasoline or alcohol.

NOTE: After cleaning, keep oil, grease or water from getting on the surface.

4. Fill the seal groove with adhesive. Coat the seal attaching surfaces of the sunroof panel with the same adhesive.

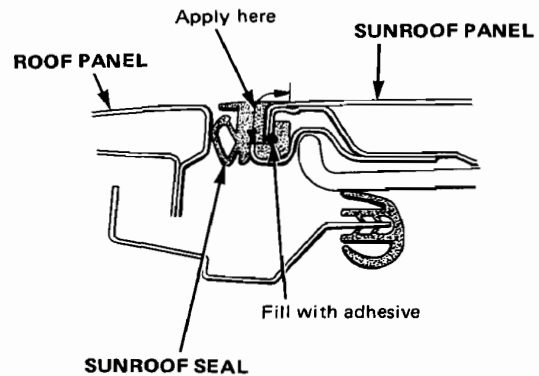


5. Fit the seal onto the sunroof panel evenly all the way around.
6. Wipe off excess adhesive with a clean cloth dampened with un-leaded gasoline or alcohol.
7. Let the sunroof panel stand for at least 4 hours after installing the seal.




Wind Deflector Replacement


1. Remove the hinge covers:
 - ① Press the front end.
 - ② Lift the cover up.
 - ③ Slide it off forward.

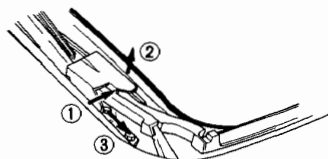

2. Remove the deflector mount screws.

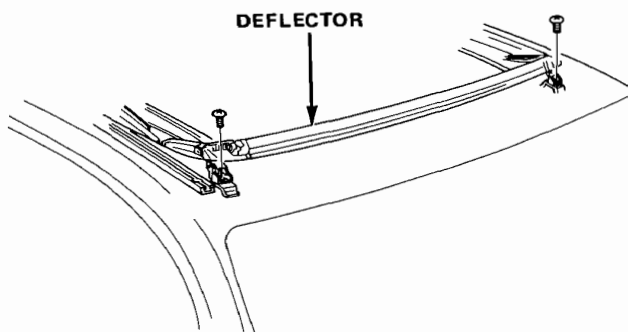

3. Swing the deflector over backward; remove the rear mount screws.

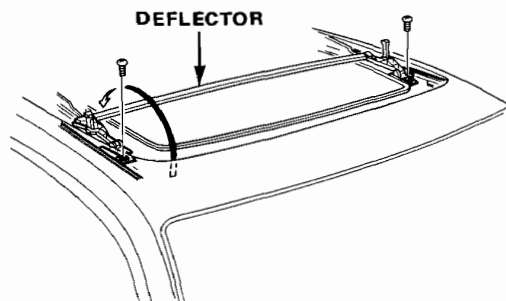


4. Install the deflector in the reverse order of removal. Adjust the deflector.


Wind Deflector Adjustment

NOTE: A gap between deflector blade and roof opening edge will cause wind noise when driving at high speed with the roof open.

1. Open the sunroof fully.
2. Loosen the deflector mount screws.

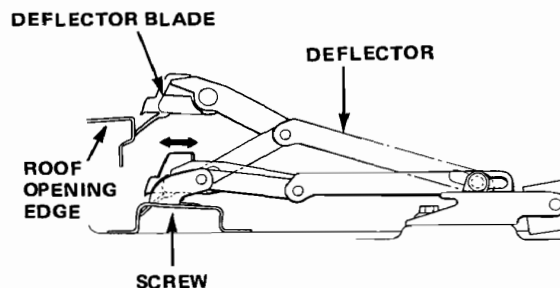

3. Adjust the deflector forward or back so the edge of its blade touches the front edge of the roof opening evenly.

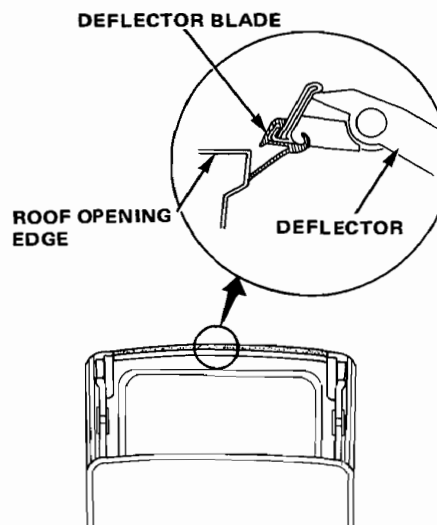


4. Check the height of the deflector.

NOTE: The height of the deflector cannot be adjusted. If damaged or deformed, replace or repair it.

Sunroof (Coupe)


Rear Slide Stay Replacement

1. Remove the sunroof panel (page 22-84).
2. Remove the wind deflector (page 22-85).
3. Remove the mount nut and screw and remove the sub guide rail (on frame); slide the rear slide stay off the guide rail.
4. Install the stay in the reverse order of removal. Before installing the rear slide stay, check that there is no excessive play between the stay and sub guide rails (on the sunroof panel and the frame.)

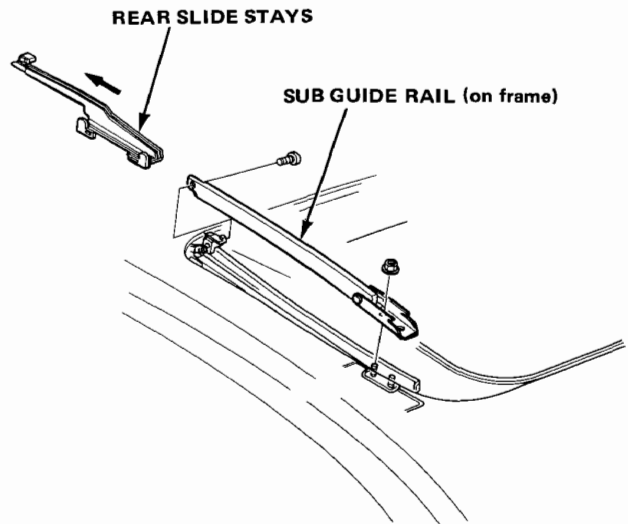

Rear Slide Stay Wear Inspection

Remove the rear slide stays. Check the sub guide rails (on the sunroof panel and the frame) and rear slide stays for excessive wear on the sliding faces. Replace the rear slide stays with new ones if worn excessively.

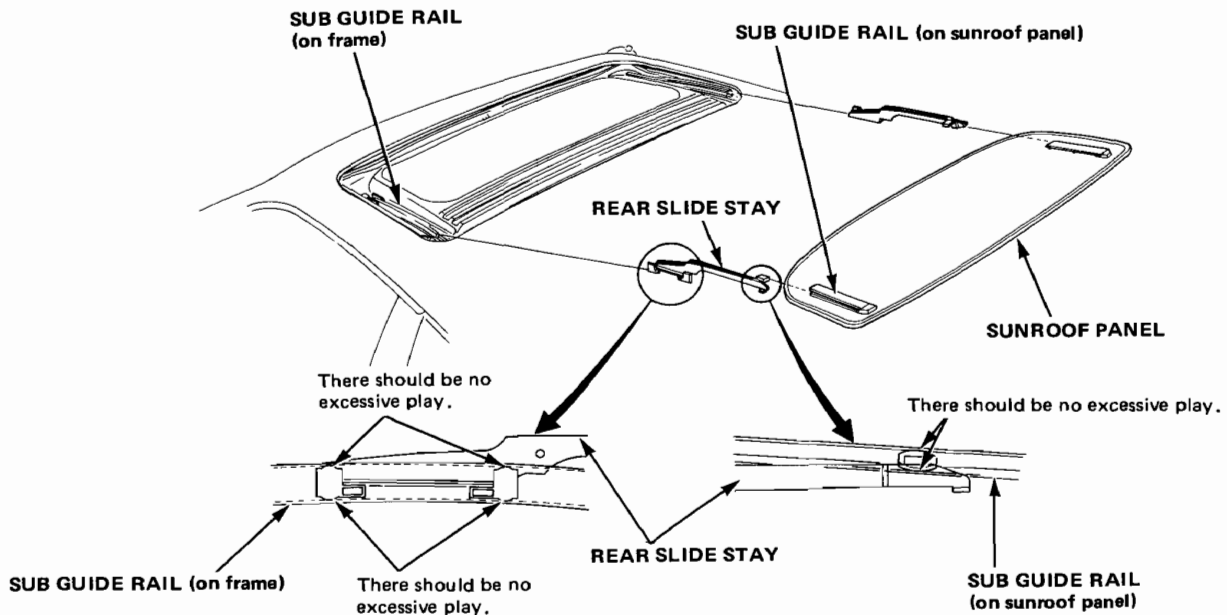




Drain Tube, Frame, and Frame Seal Replacement

1. Remove the sunroof panel (page 22-84) and the headliner (page 22-79).
2. Disconnect the motor wire harness; remove the tape securing the interior light wire harness.
3. Slide back the drain tube clamps and remove the drain tubes.
4. Remove the frame mount bolts, and remove the frame from the car.

NOTE:

- Remove the 2 front bolts last.
- Use added care not to damage the seats or other interior trim.

5. Carefully remove the frame seal.

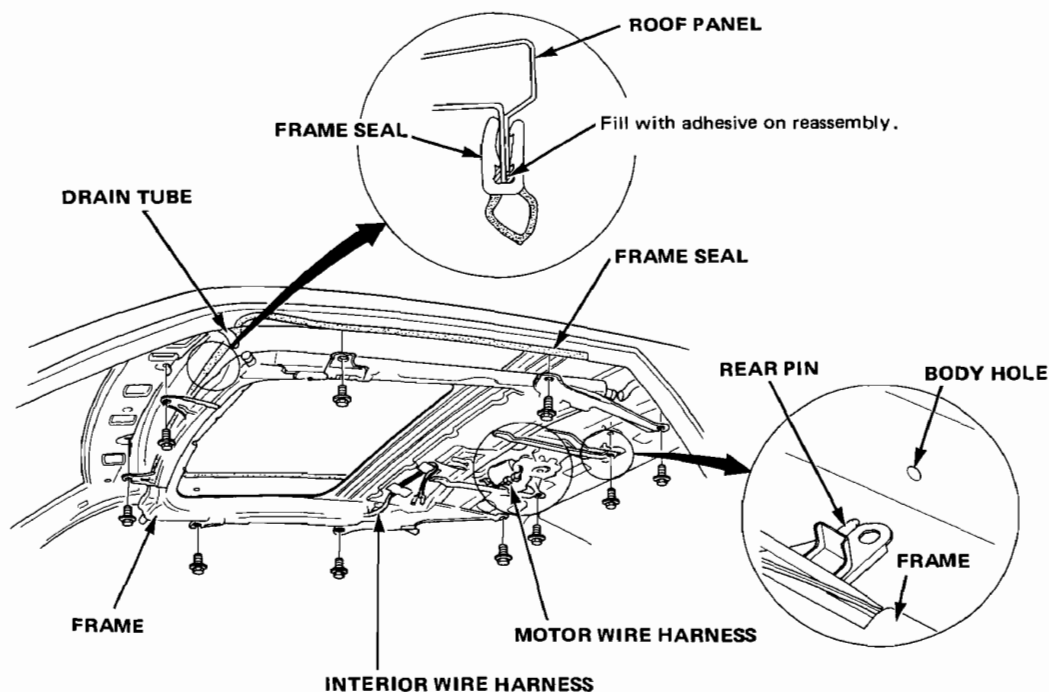

6. To install, insert the frame's rear pins into the body holes, then install parts in the reverse order of removal.


NOTE:

- When installing the frame seal, fill the groove with adhesive.
- Do not tighten the frame mount bolts before adjusting the side clearance of the sunroof (page 22-82).

Sunroof (Coupe)

Frame Sealing


Water may leak through one or more of the 4 guide rail mounts or cable pipe grommets. Use adhesive at the points shown, to avoid leaks when the guide rails or cable pipes are reinstalled.

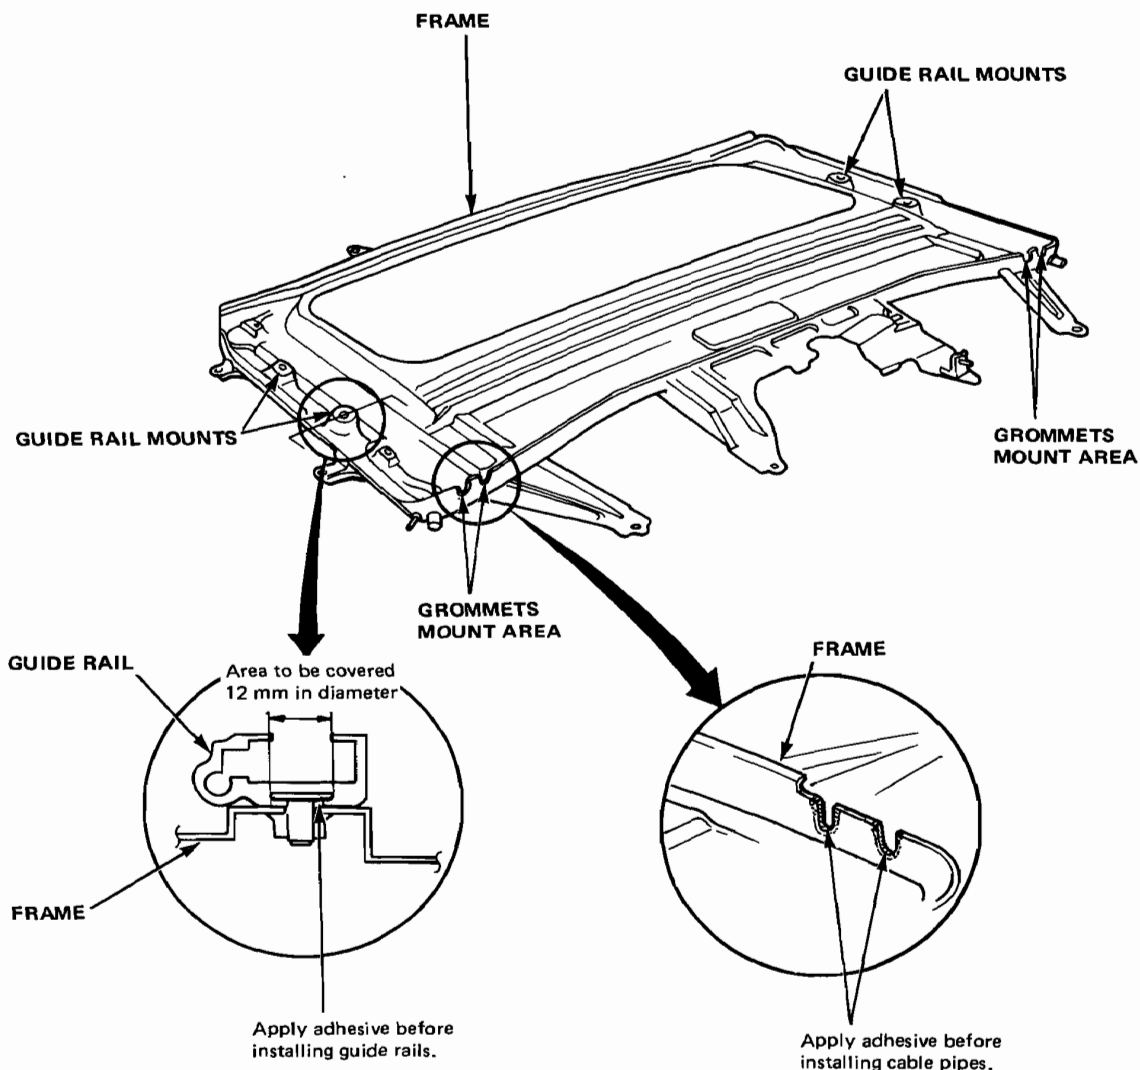



Motor Removal


1. Remove the headliner (page 22-79).
2. Disconnect the motor and the limit switch.
3. Remove the motor by removing the 2 screws and 3 nuts.

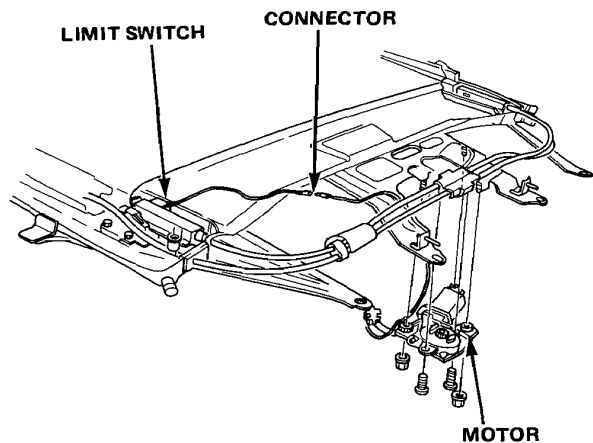

Lift-up Link Replacement


1. Remove the frame (page 22-87).
2. Remove the 2 nuts and 2 screws attaching the cable slider.
3. Raise the cable slider just enough to remove the lift-up link nuts.

NOTE: Do not force the slider up as this will deform the cable pipes. If you encounter difficulty in raising the slider, remove the motor and center bracket.

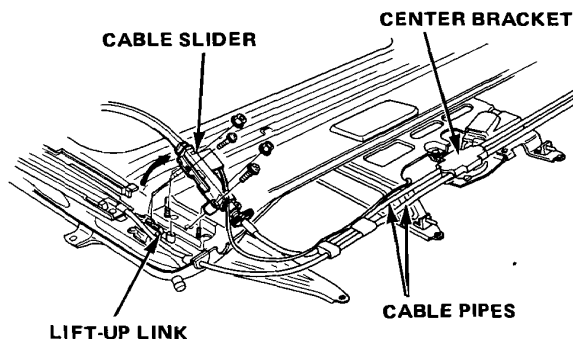


Motor Installation

1. Check that the slide links are fully forward, and cable slider arms are fully to the rear (Sunroof, completely closed).

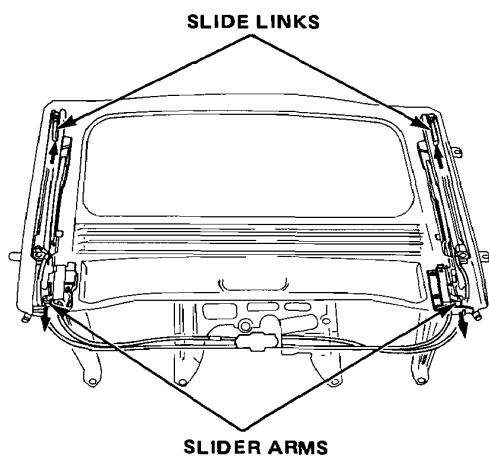

2. Check the gears for wear or damage; install the motor (Motor and limit switch is on pages 25-17 and 18).

4. Remove the lift-up link by removing the sub guide rail (on frame) screw and the 4 link nuts.

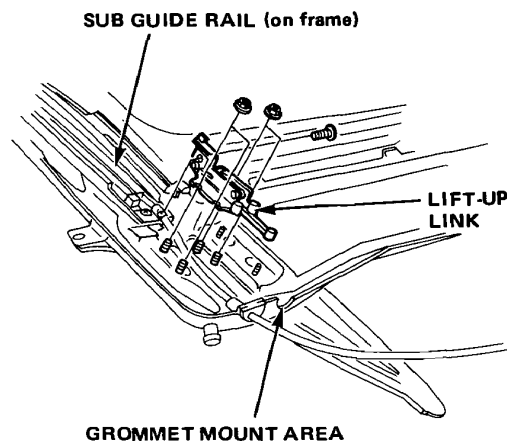

5. Install the link in the reverse order of removal. Before installing the cable pipes, apply adhesive to the grommet mount area of the frame (see page 22-88).


Sunroof (Coupe)

Guide Rail Replacement

Sub Guide Rail (on Sunroof panel):

1. Remove the sunroof panel (page 22-84).
2. Remove the nuts and sub guide rails.

SUB GUIDE RAILS (on sunroof panel)

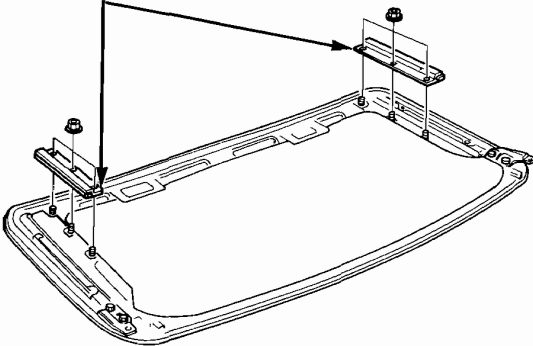


Sub Guide Rail (on frame):

- See page 22-86.


Guide Rail:

1. Remove the frame (page 22-87).
2. Remove one screw and the 3 nuts attaching the guide rail.

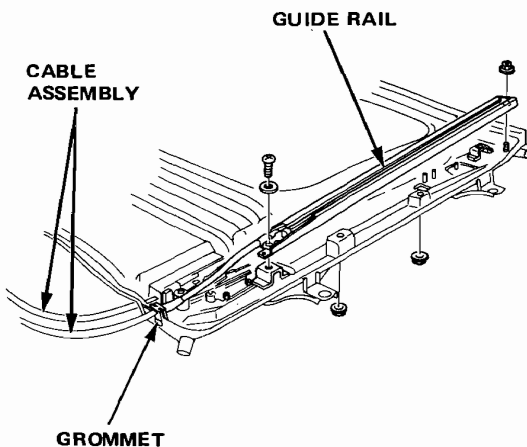


3. Pry the guide rail stopper out of the hole of the guide rail; pull out the cable.

NOTE: Remove the guide rail slowly and carefully as it is cemented to the frame.

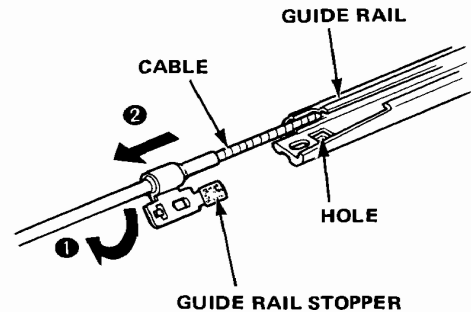

4. Install the guide rail in the reverse order of removal, and also:

- Check that the slide pin, slider and slide link are reassembled properly when installing the cable to the guide rail.

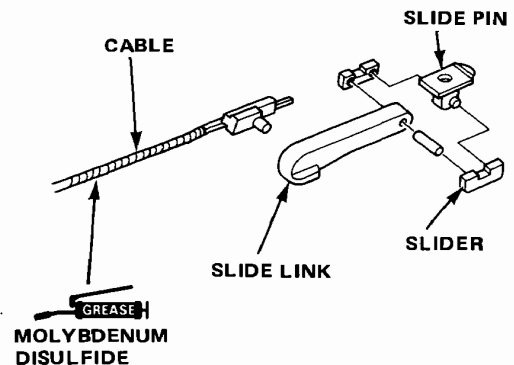


- Before installing the cable pipes and guide rails on the frame, coat the cable pipe grommets and guide rails attaching surfaces with adhesive (see page 22-88).



Cable Removal


1. Remove the frame (page 22-87) and the motor (page 22-89).
2. Remove the guide rails (page 22-90).
3. Remove the screws and center bracket, then pry off all cable clips.
4. Take the cable slider off the frame by removing the 2 nuts and 2 screws.

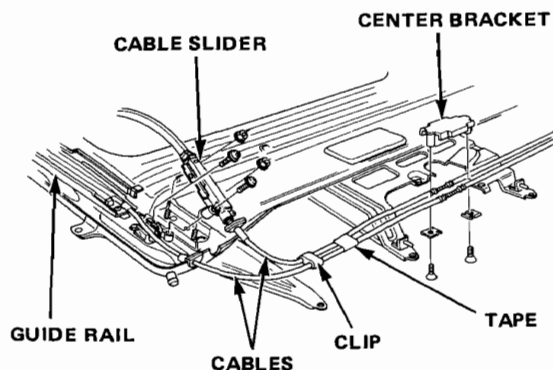


5. Carefully remove the cables being sure not to bend the cable pipes.

Cable Installation/Inspection


1. Check the cables for wear or damage.
2. Apply molybdenum disulfide grease to the cables. Route the cables through the cable pipes.
3. Check operation of the cable slider.

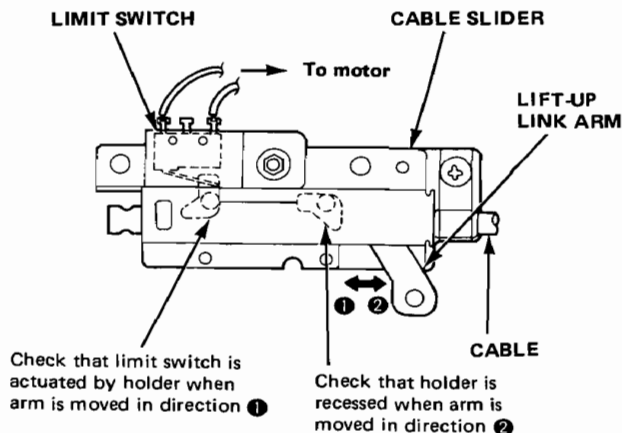

4. Apply adhesive to the cable pipe grommets and guide rail mount faces of the frame (page 22-88).
5. Attach the cables to the guide rails, then install then on the frame. Secure the cable pipes with the center bracket and clips.

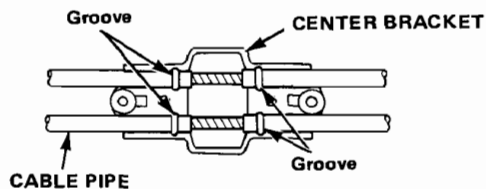


NOTE: Check that the center bracket is not tilted. If it is tilted, check the cable pipes for deformation or improper installation.

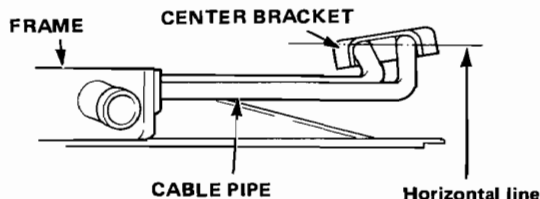

Sunroof (4D H/B)

Index

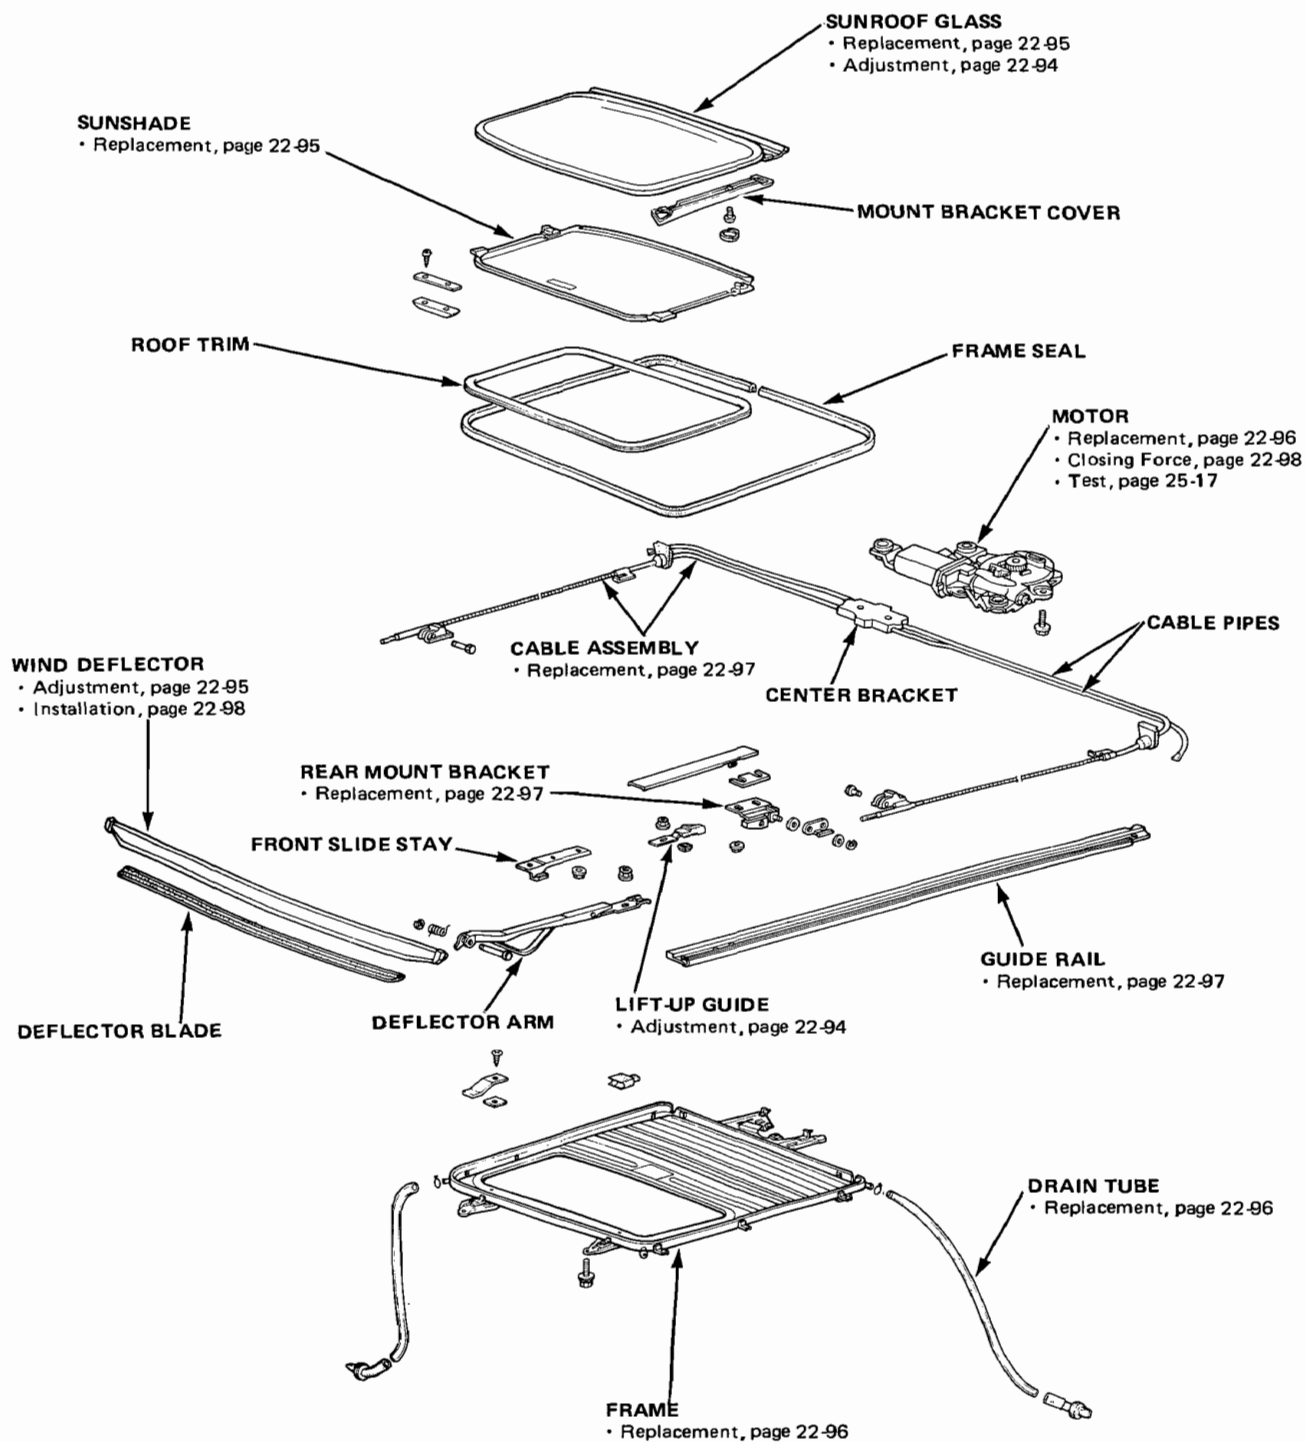



Troubleshooting


Symptom	Probable Causes
Water leak	<ol style="list-style-type: none">1. Gap between glass weatherstrip and roof panel.2. Defective or improperly installed glass weatherstrip.3. Clogged drain tube.4. Gap between glass weatherstrip and body.
Wind noise	<ol style="list-style-type: none">1. Excessive clearance between glass weatherstrip and roof panel.
Deflector noise	<ol style="list-style-type: none">1. Improper clearance between deflector blade and roof panel (page 22-95).2. Insufficient deflector extension.3. Deformed deflector.
Motor noise	<ol style="list-style-type: none">1. Loose motor.2. Worn gear or bearing.3. Cable pipe deformed.
Sunroof does not move, but motor turns	<ol style="list-style-type: none">1. Foreign matter stuck between guide rail and sliding stay.2. Interference between parts.3. Cable pipe loose.4. Cable pipe not attached properly.5. Clutch out of adjustment.
Sunroof does not move and motor does not turn (Sliding panel can be moved with sunroof wrench)	<ol style="list-style-type: none">1. Blown fuse.2. Faulty switch (page 25-17).3. Battery run down (page 27-5).4. Defective motor.

Sunroof (4D H/B)

Glass Height Adjustment

Roof panel should be even with the glass weatherstrip, to within $1 \pm 1.5 \text{ mm}$ ($0.04 \pm 0.06 \text{ in.}$) all the way around. If not, slide sunshade back, and:



1. Pry plug out of the glass mount bracket cover, remove the screw, then slide cover off to the rear.
2. Loosen mount bracket nuts and install shims between glass frame and bracket as shown.
3. Repeat on opposite side if necessary.

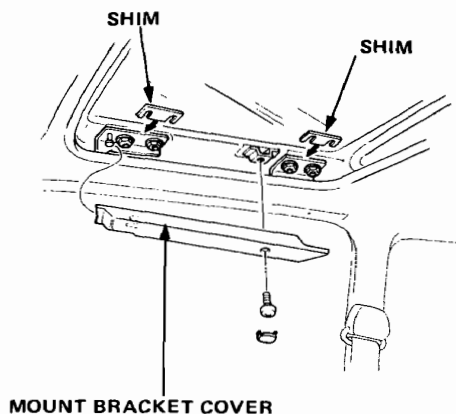

Rear Edge Closing Adjustment


Open the glass about a foot then close it to check where rear edge begins to rise. If it rises too soon and seats too tight against roof panel, or too late and does not seat tight enough, adjust it:

1. Open the glass fully.
2. Remove the rail covers from both sides, and loosen the lift-up guide nuts.

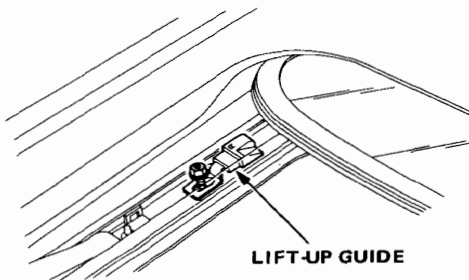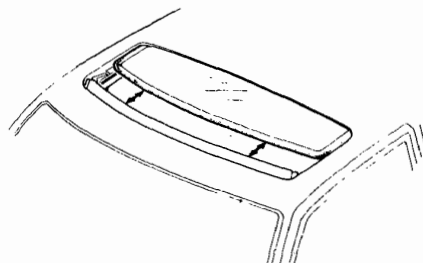

3. Move the guides forward or back, then tighten nuts and re-check roof closing.


The guides have notches of 1.5 mm (0.06 in.) each and can be adjusted 2 notches forward or back.

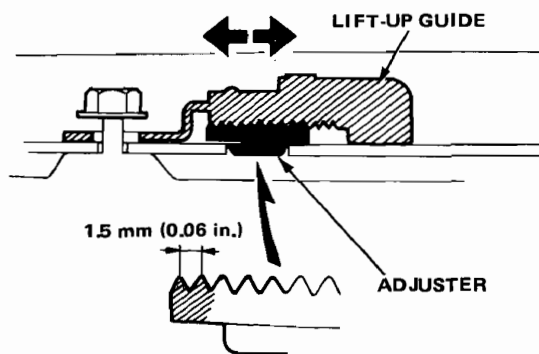

Glass Side Clearance Adjustment

If the glass weatherstrip fits too tight against the roof panel on one side when closed, slide sunshade back, then:

1. Pry plug out of each mount bracket cover, remove screw, then slide cover off to the rear.
2. Loosen all eight mount bracket nuts.
3. Move the glass right or left as necessary.
4. Tighten nuts.

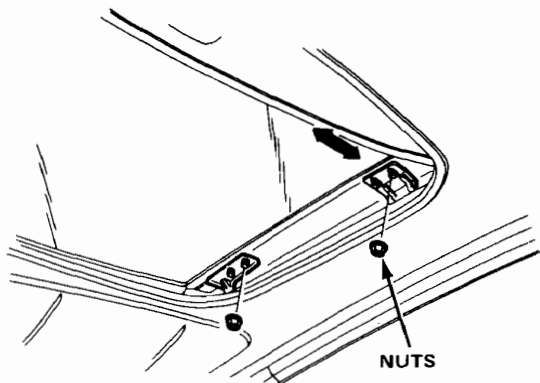




Wind Deflector Adjustment

NOTE: A gap between deflector blade and roof panel will cause wind noise when driving at high speed with the roof open.


1. Open the sunroof and pry the rail covers off both sides.
2. Loosen deflector mounting nuts.

NOTE: Wind deflector can be adjusted 2 mm (0.08 in.) forward or back.

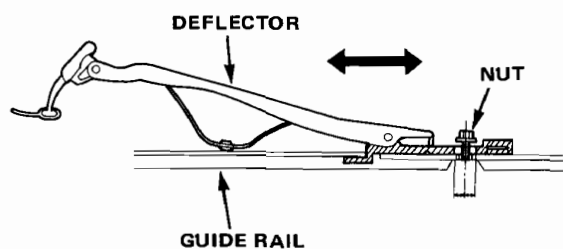

3. Adjust deflector forward or back so the edge of its blade touches the roof panel evenly.


Deflector blade should touch panel across entire front edge.

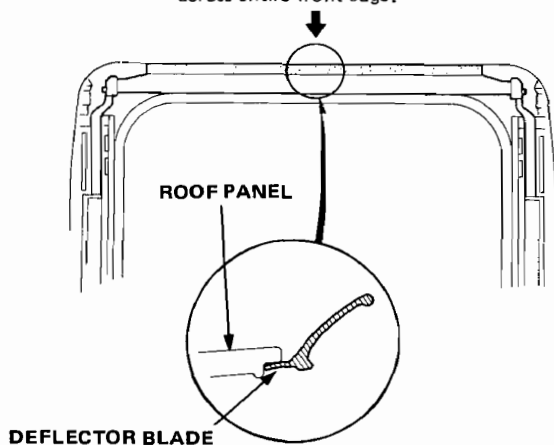


NOTE: The height of the deflector when open cannot be adjusted. If damaged or deformed, replace it.

Glass and Sunshade Replacement


1. Slide sunshade all the way back.
2. Pry plug out of each bracket cover, remove screw, and slide cover off to the rear.

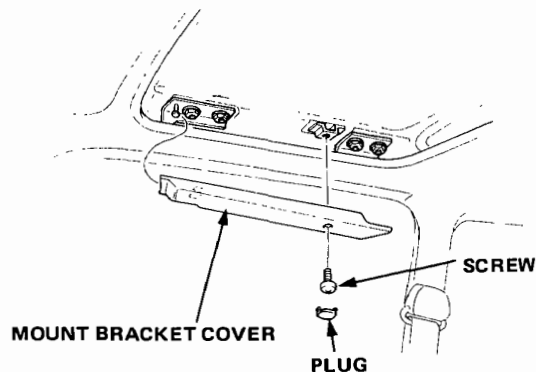

3. Close the glass fully.
4. Remove the nuts from front and rear mounts on both sides.

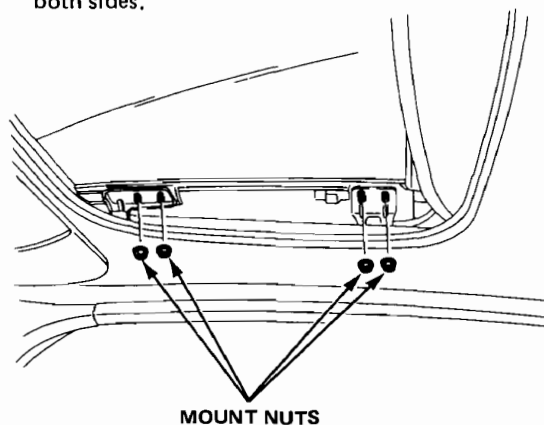

5. Remove the glass by lifting up and pulling forward as shown.

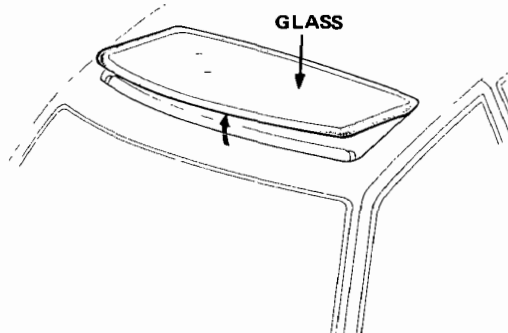


6. The sunshade may now be pulled out.

NOTE: The sunshade may be bent slightly to ease removal.

Sunroof (4D H/B)

Motor, Drain Tube, and Frame Replacement

1. Remove the headliner (page 22-79).
2. Remove the sunroof motor by removing the two bolts and three nuts.
3. Disconnect the wire harness at the connector, and remove the motor.

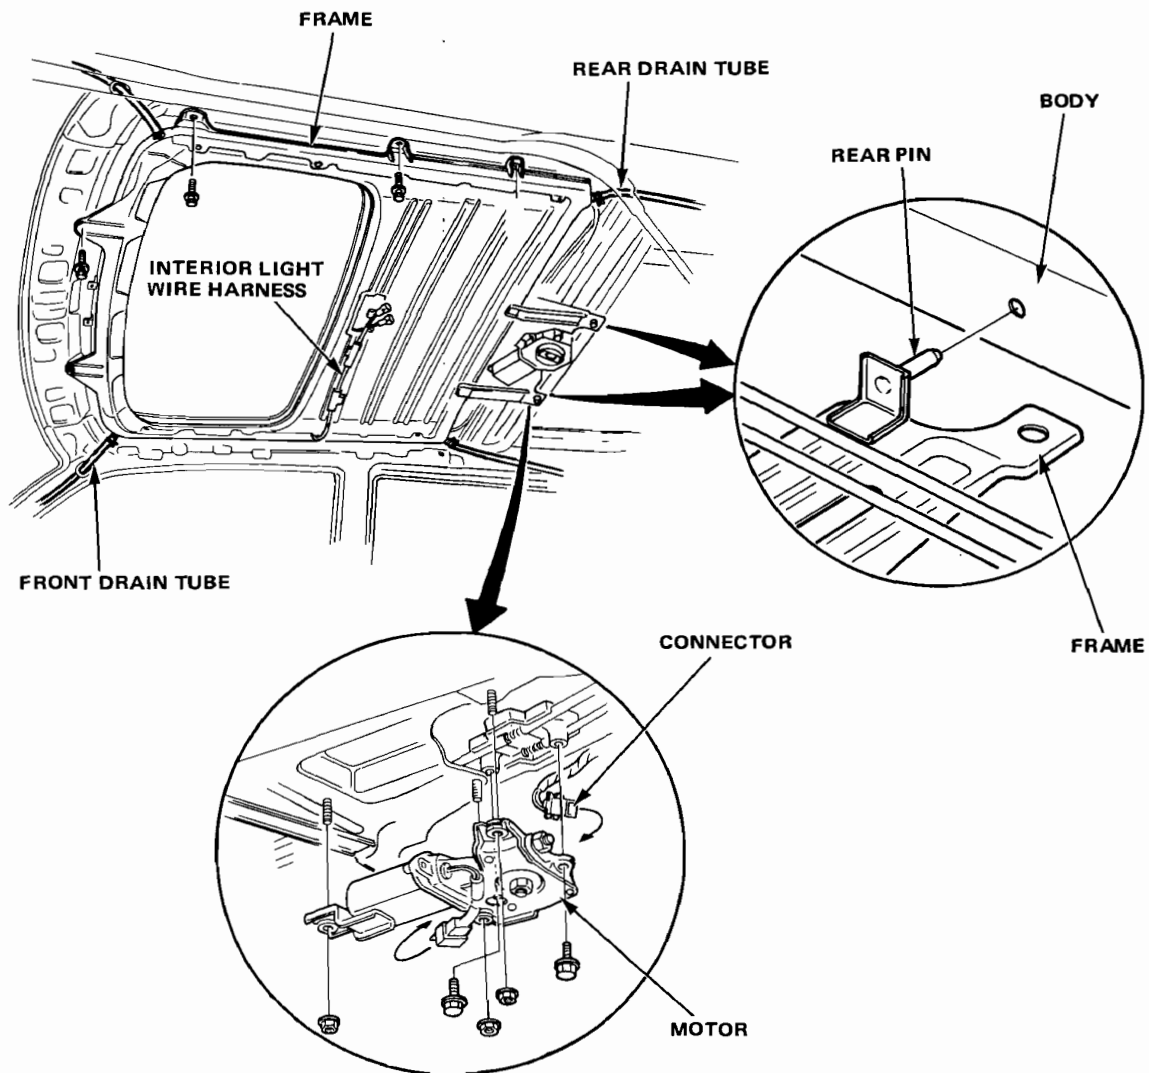


4. Slide back the drain tube clamps and remove the drain tubes.
5. Remove the 10 mounting bolts from the sunroof frame, and remove the frame from the car.
6. To install, insert the frame's rear pins into the body holes, then install parts in the reverse order of removal. (Motor test is on page 25-17).



Cable, Guide Rail, and Rear Mount Bracket Replacement

1. Remove the frame (page 22-96).
2. Remove the nuts attaching the guide rails.

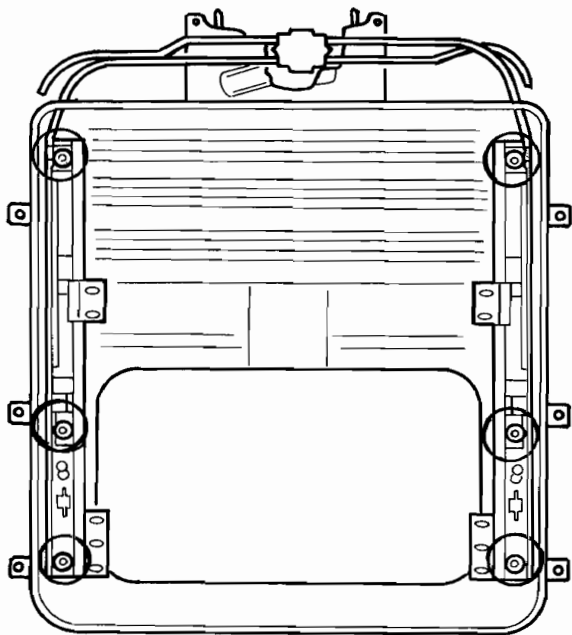


3. Lift off the guide rails and pull out the cable with the rear mount brackets.

NOTE: Remove the guide rail slowly and carefully as it is cemented to the frame.


4. Pry the E-clip off the pin, and remove the rear mount bracket from the side guide.

NOTE: Replace the E-clip with new one whenever it is disassembled.

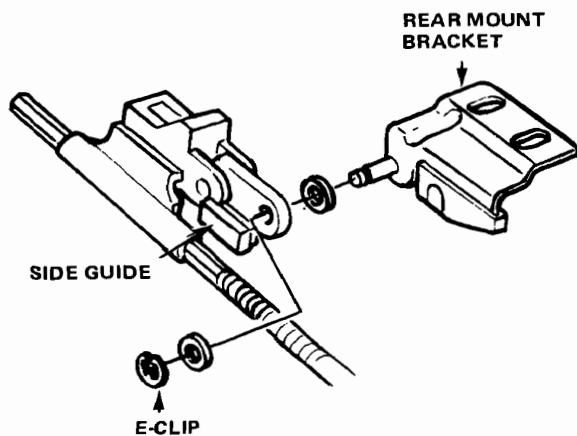

5. Install the cable and guide rail in the reverse order of removal, and also:


- Apply molybdenum grease to the inner cable.
- Before installing the cable pipes and guide rails on the frame, coat the cable pipe grommets and guide rails attaching surfaces with adhesive.

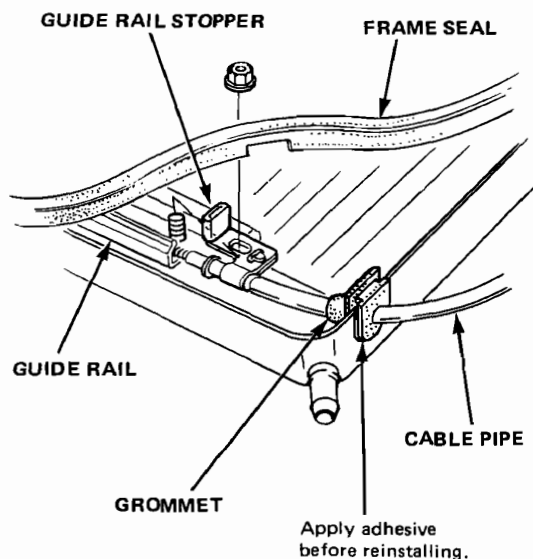

Sunroof (4D H/B)

Wind Deflector Installation

Installing is done in the reverse order of removal. When installing, make sure to insert the deflector ends tightly into the guide rails and adjust the deflector.

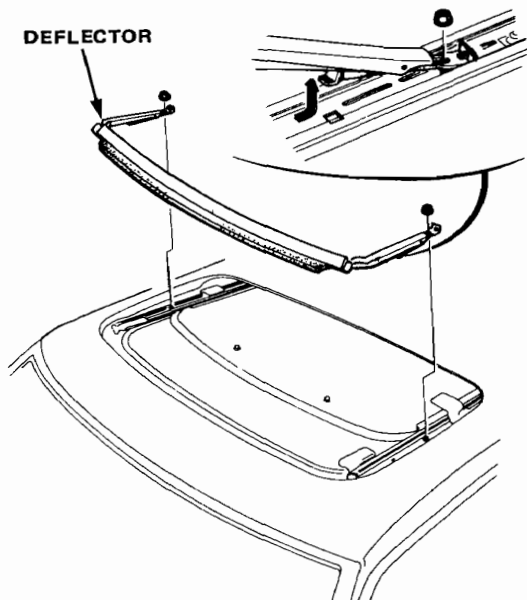


Closing Drag Check (Motor Removed)

Before installing the sunroof motor, measure effort required to close sliding panel using a spring scale as shown.

CAUTION: When using the spring scale, protect the leading edge of the sunroof with a shop rag.

If load is over 98N (10 kg, 22 lb), check side clearance and glass height adjustment (page 22-94).

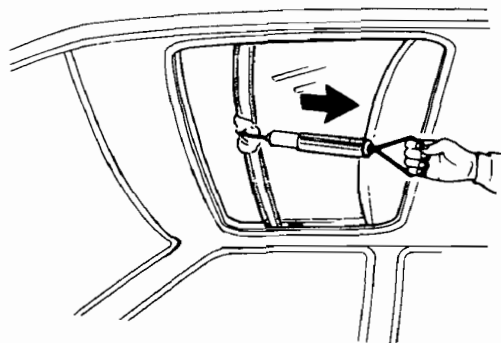


Closing Drag: Less than 98 N (10 kg, 22 lb)

Closing Force Check (Motor Installed)


1. After installing all removed parts, have a helper hold the switch to close the sunroof while you measure force required to stop it. Attach spring scale as shown. Read force as soon as glass stops moving, then immediately release the switch and spring scale.

CAUTION: When using the spring scale, protect the leading edge of the sunroof with a shop rag.


Closing Force: 196–245 N (20–30 kg, 44–66 lb)

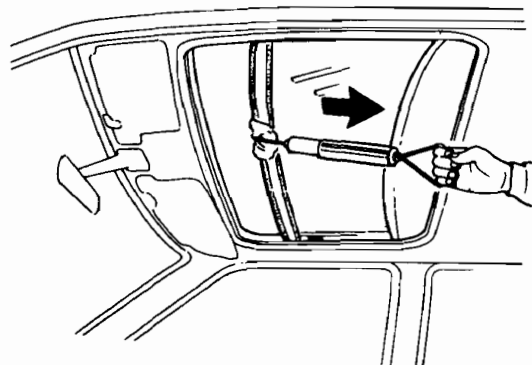

2. If force is not within specification, adjust by turning sunroof motor clutch adjusting nut.

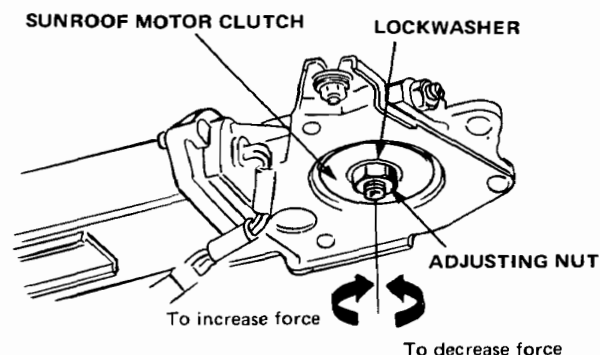

3. After adjusting, install a new lockwasher and bend it against flat on the adjusting nut.

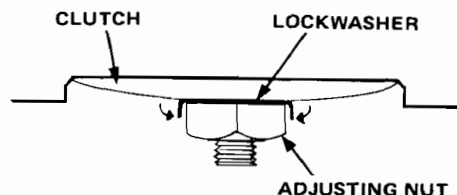


Detachable Sunroof (2D H/B)



Disassembly



NOTE: To adjust the height of the sunroof, add or remove shims between the sunroof glass and the latch, or between the sunroof glass and the male hinges.

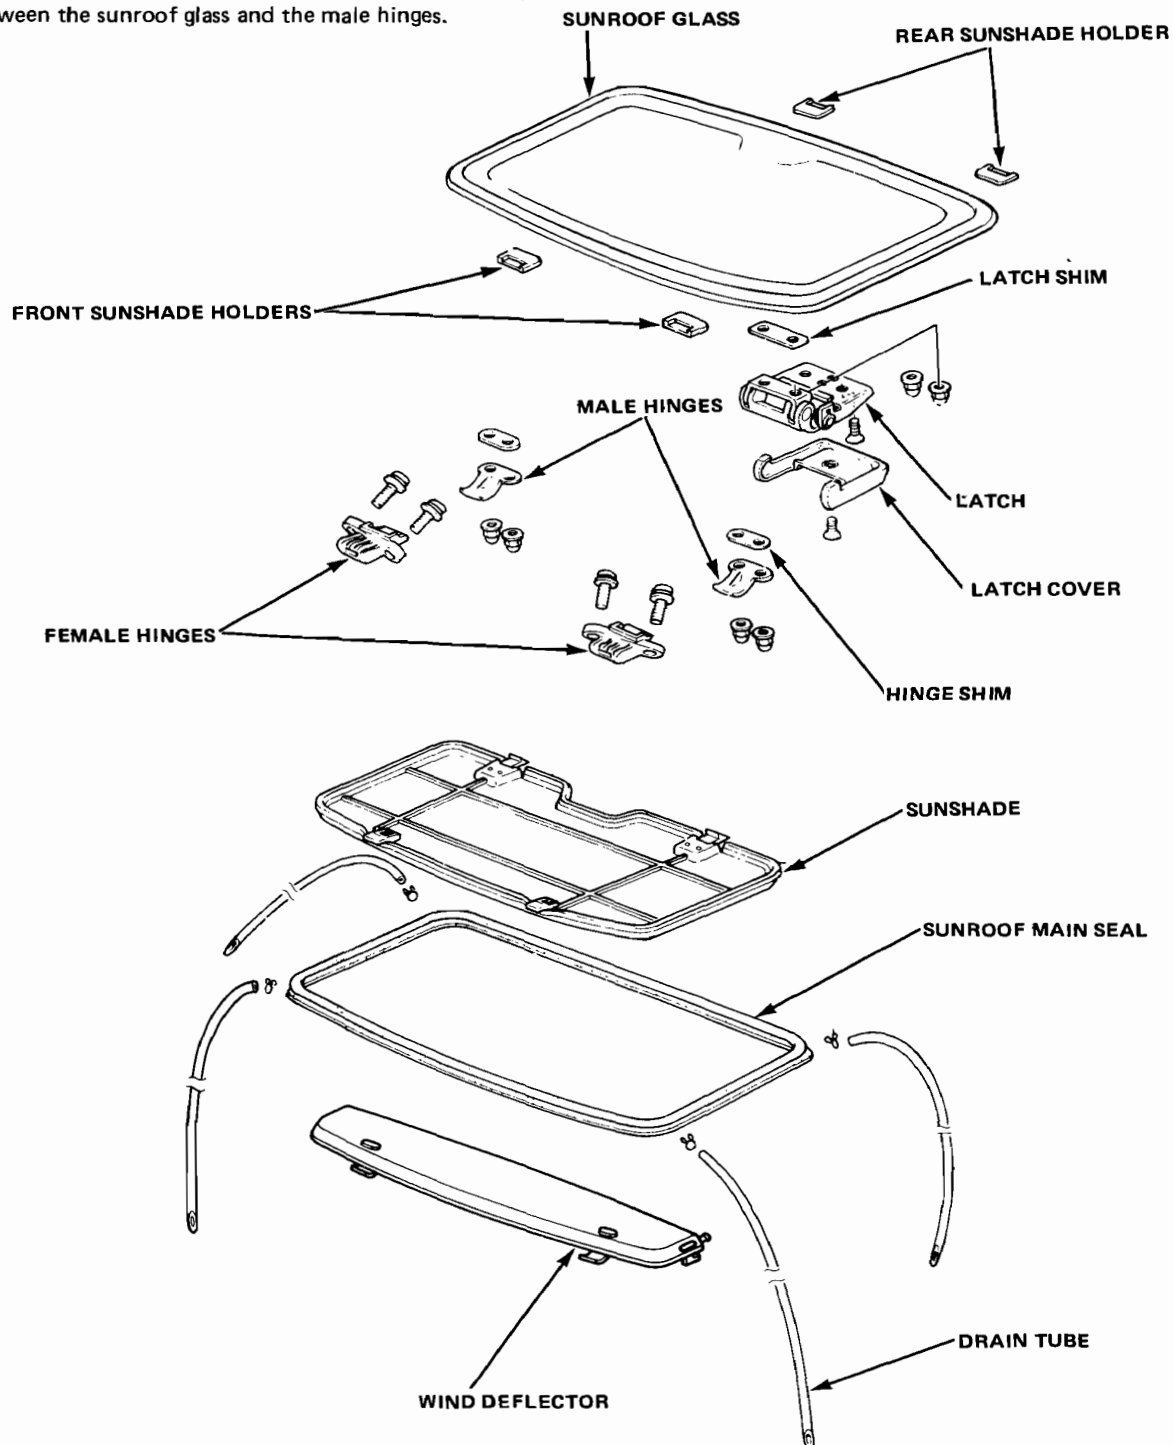

Instrument Panel

Removal (Coupe)


1. Remove the screws and clips, then remove the dashboard lower panel.
2. Remove the heater control knob and lower panel, remove the heater control mount screws.
3. Remove the upper screws.
4. Pull the instrument panel out, then disconnect the wire connectors.
5. Remove the instrument panel.

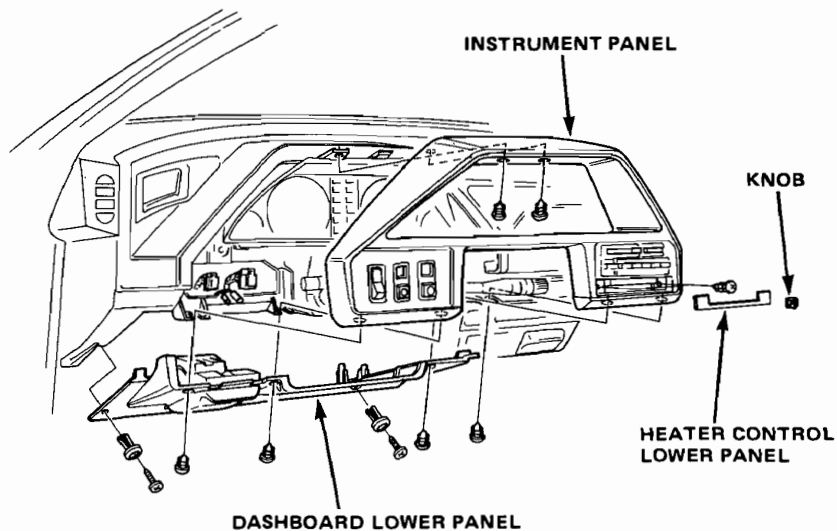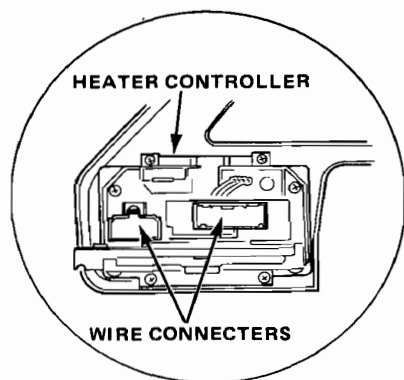

6. Remove the four screws, then lift the gauge assembly so you can reach the wire connectors.

CAUTION: Do not pull on the wires to disconnect connectors.

7. Disconnect the speedometer cable and wire connectors, then remove the gauge assembly.

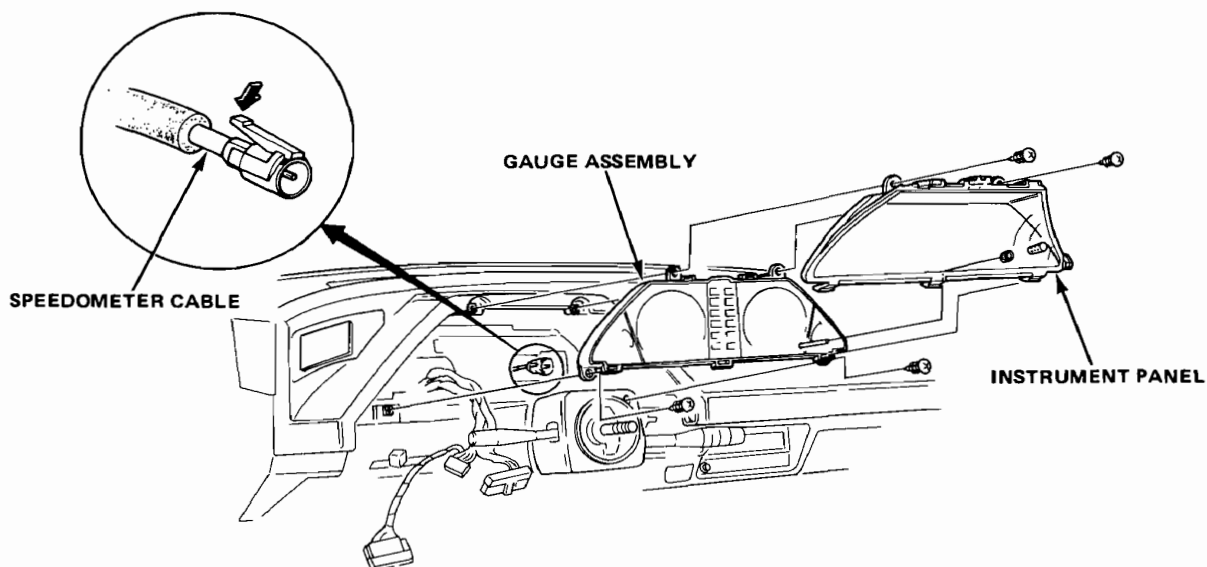




– (2D H/B, 4D, and 4D H/B)

2D H/B and 4D:


1. Remove the upper caps and the 4 screws.
2. Remove the panel.

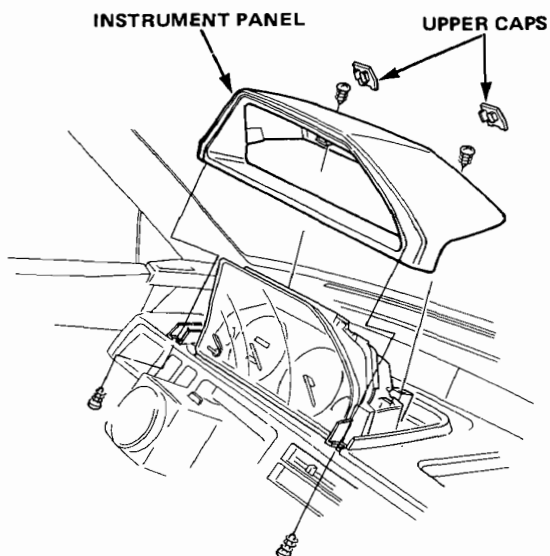

3. Remove the four screws, then lift the gauge assembly so you can reach the wire connectors.


CAUTION: Do not pull on the wires to disconnect connectors.

4. Disconnect the speedometer cable and wire connectors, then remove the gauge assembly.

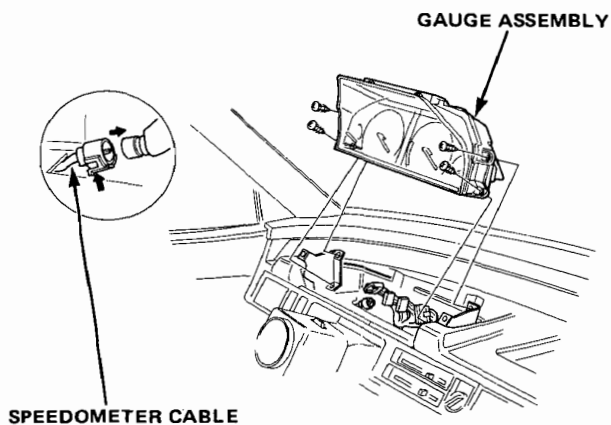


4D H/B:

1. Remove the screws and the dashboard lower panel.
2. Reaching from under the dashboard, remove the 4 bolts attaching the instrument panel to the dashboard, then disconnect the wire connectors and the speedometer cable.
3. Remove the instrument panel with the gauge assembly.

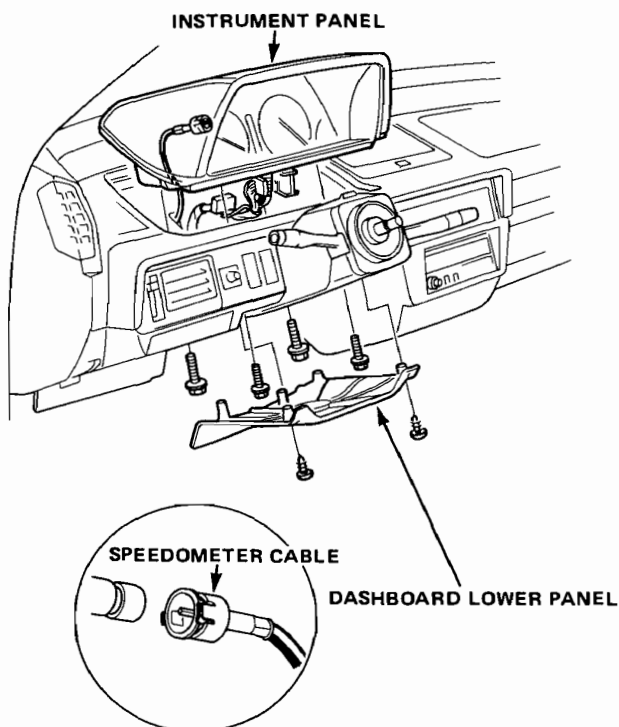

4. Separate the panel and the gauge assembly by removing the screws.

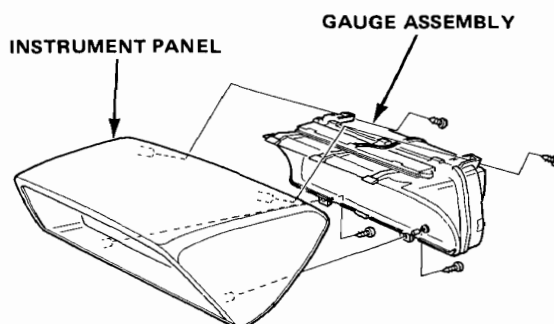


Gauges

Overhaul (Coupe)

CAUTION:

- Do not touch the printed circuits.
- Avoid damaging coupler terminals.

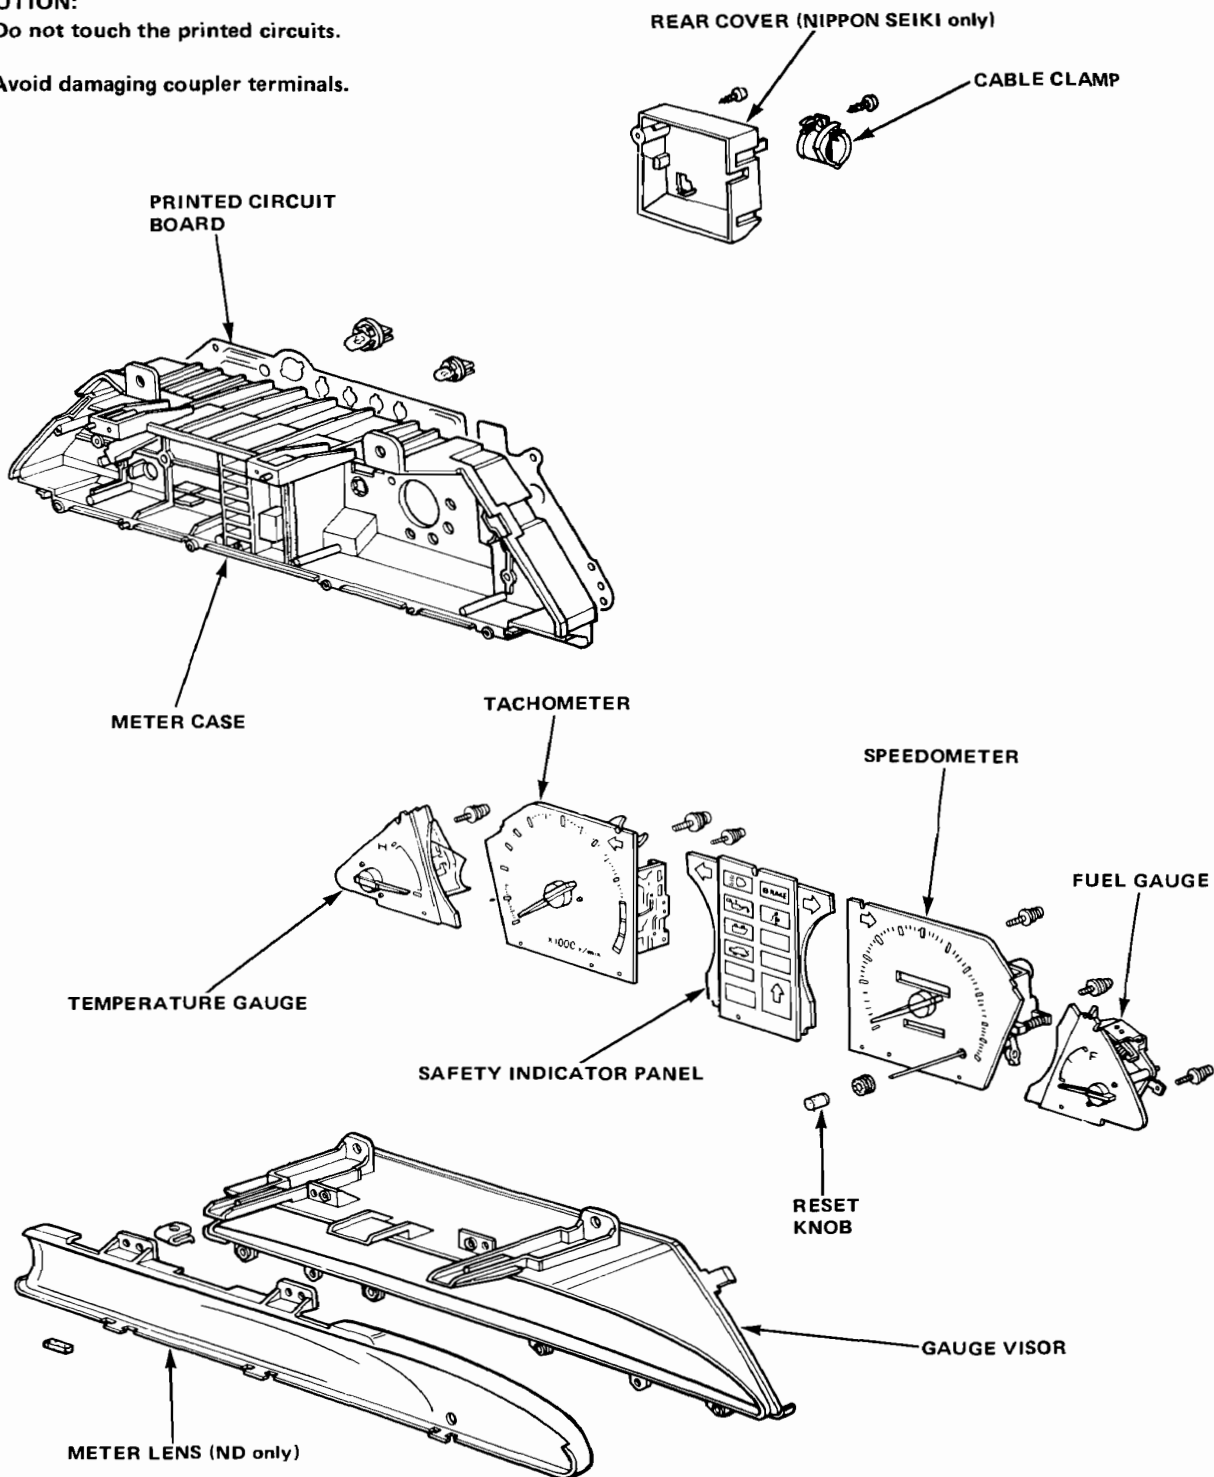




— (2D H/B and 4D)

CAUTION:

- Do not touch the printed circuits.
- Avoid damaging coupler terminals.

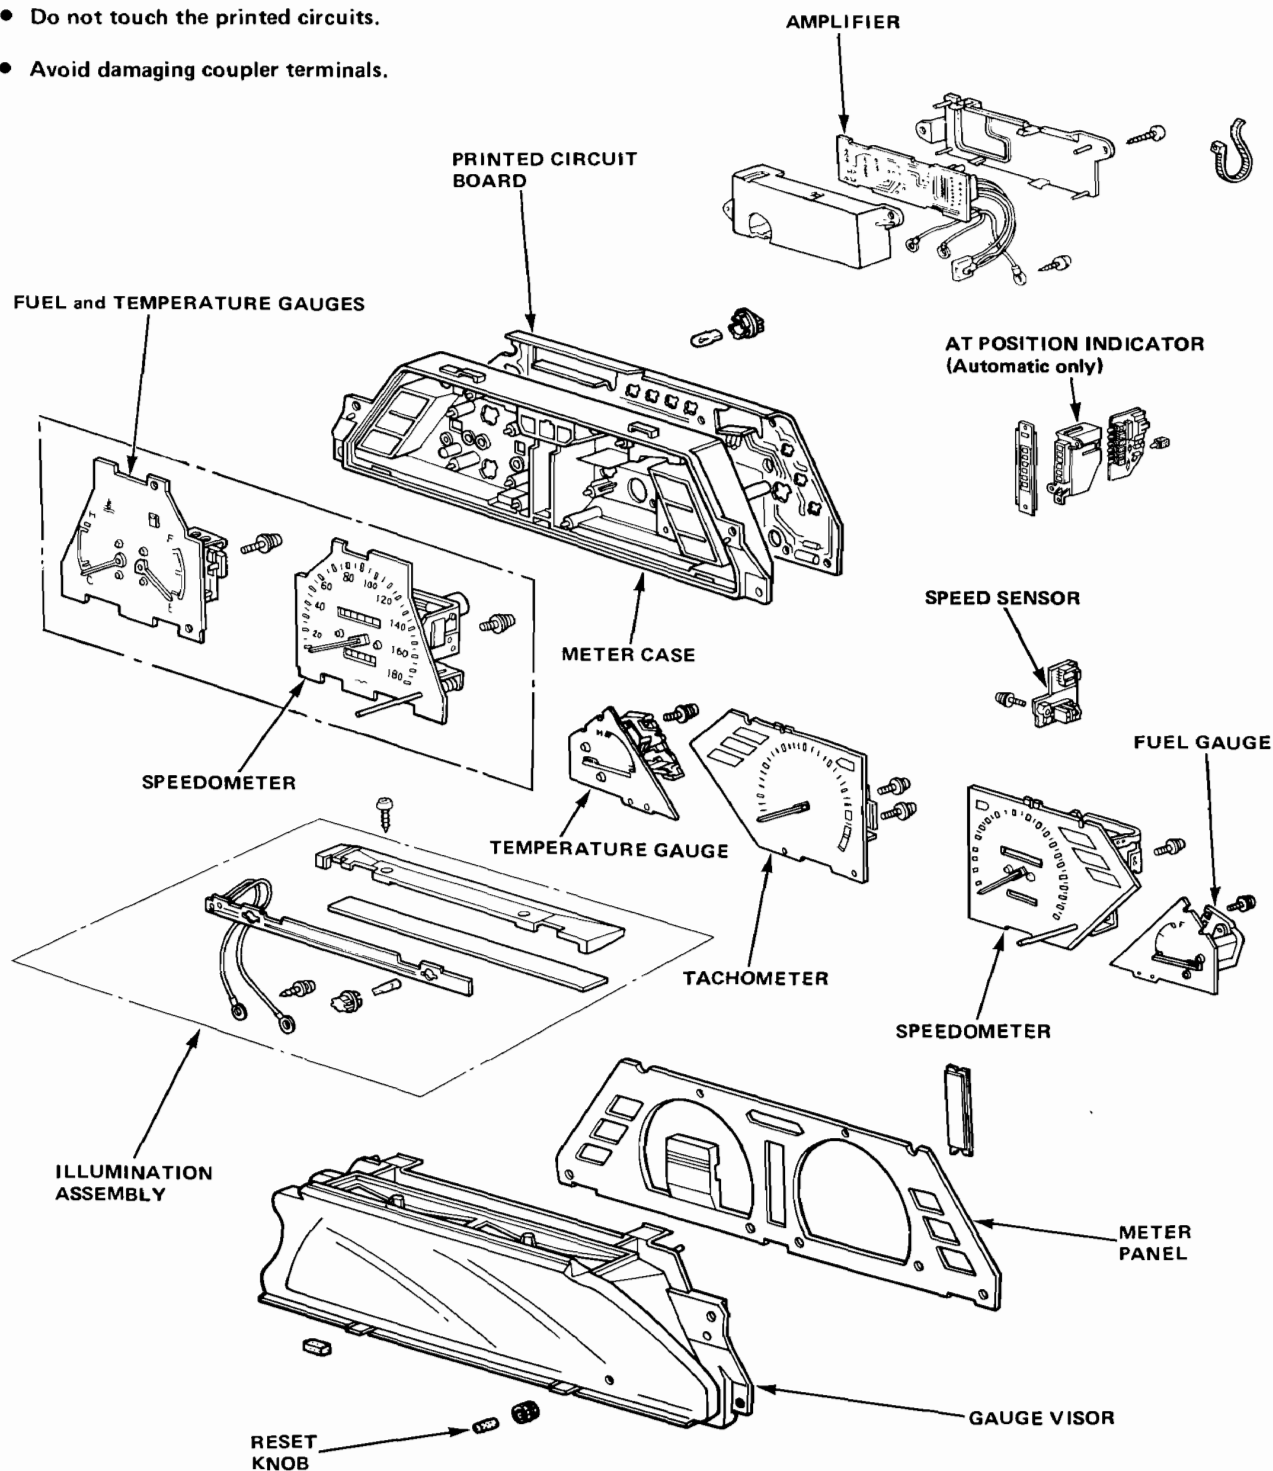


Gauges

Overhaul (4D H/B)

CAUTION:


- Do not touch the printed circuits.
- Avoid damaging coupler terminals.

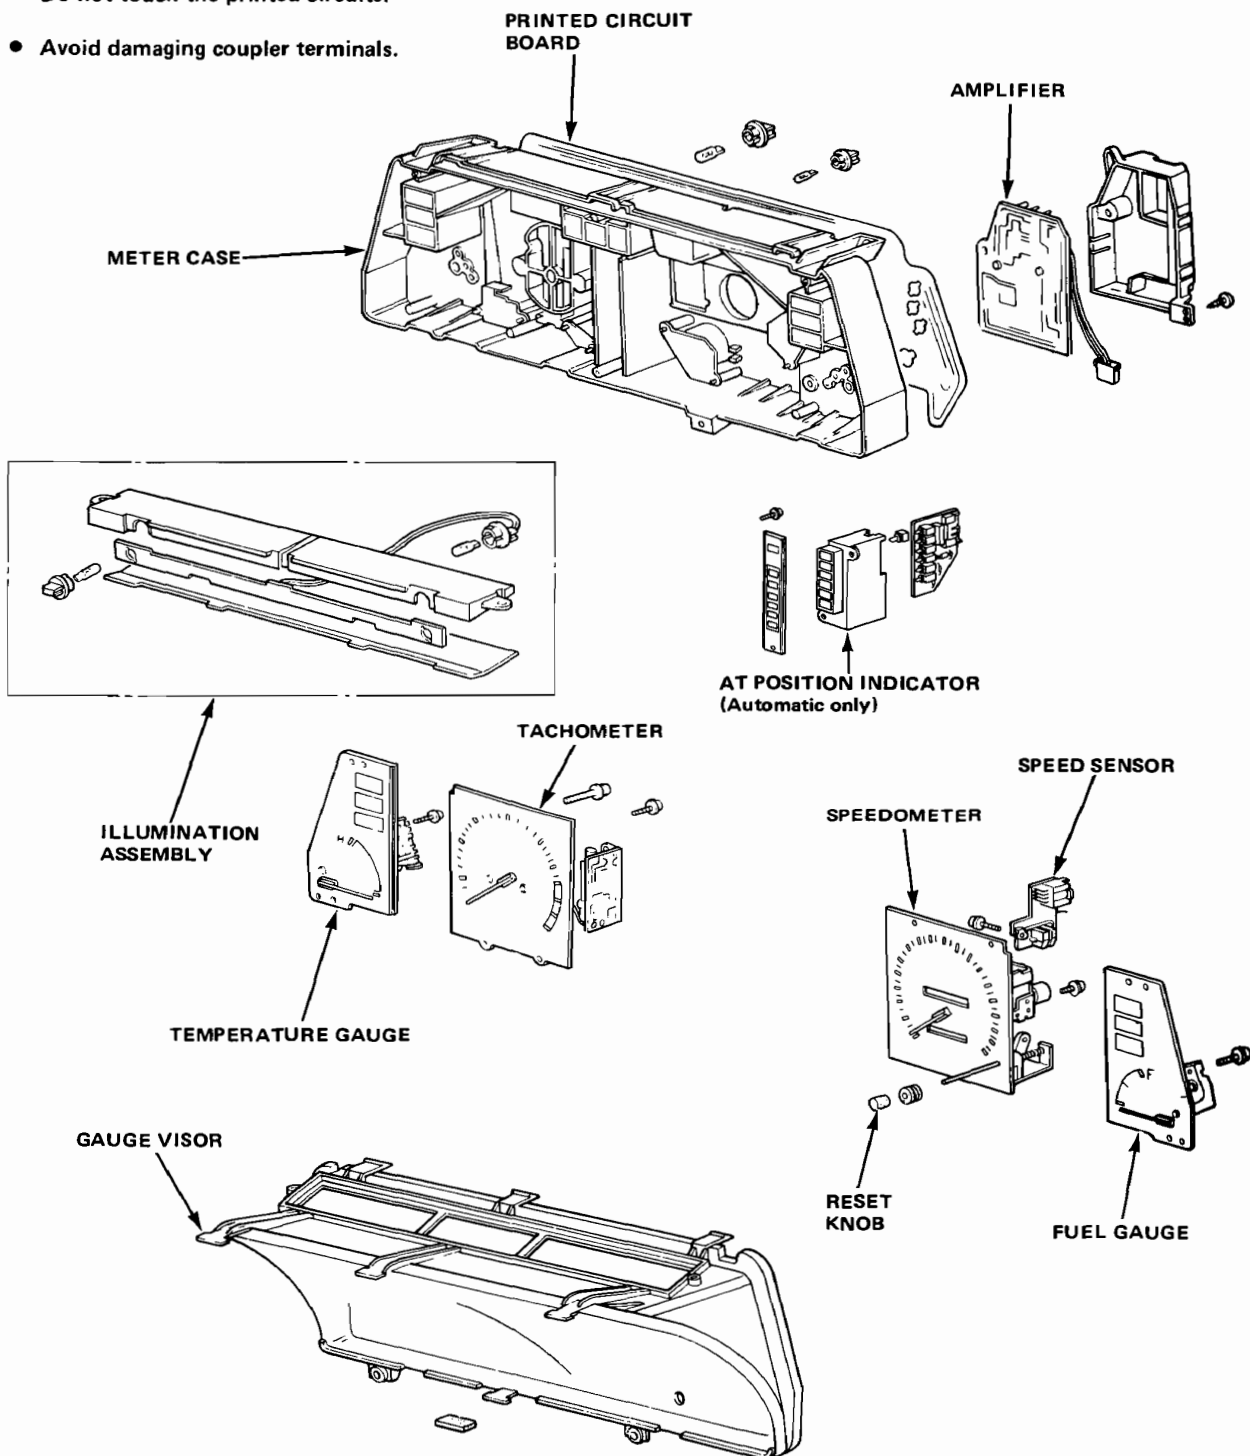

Dashboard Accessory




Removal/Installation (Coupe)

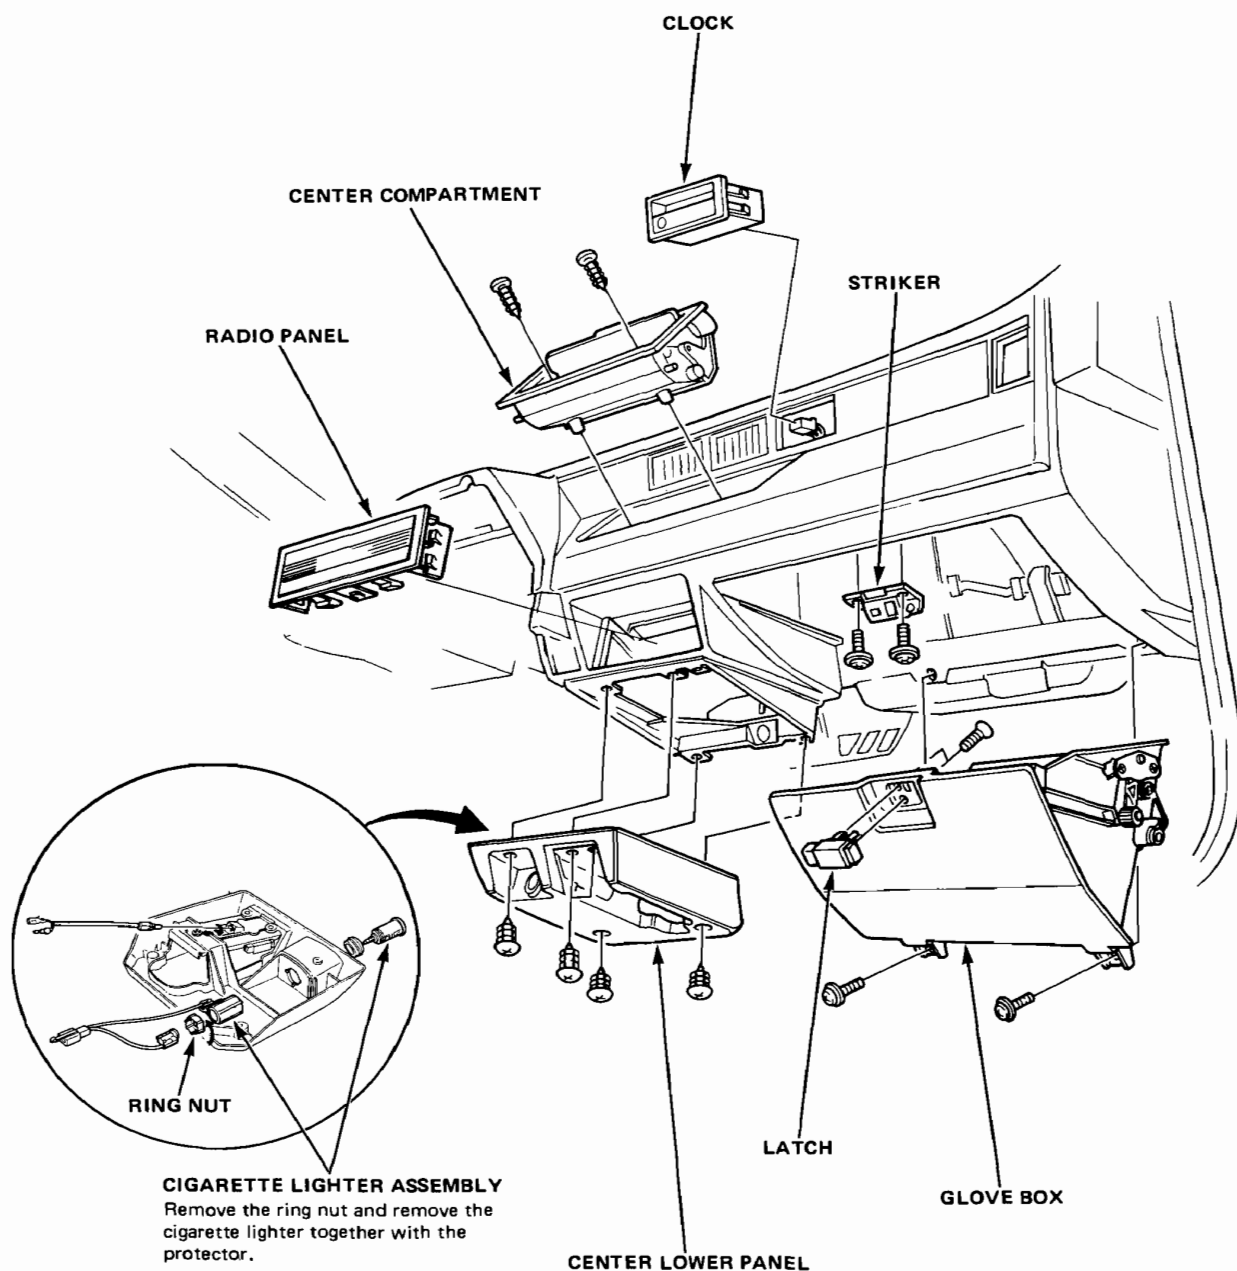


Dashboard Accessory

Removal/Installation (2D H/B and 4D)

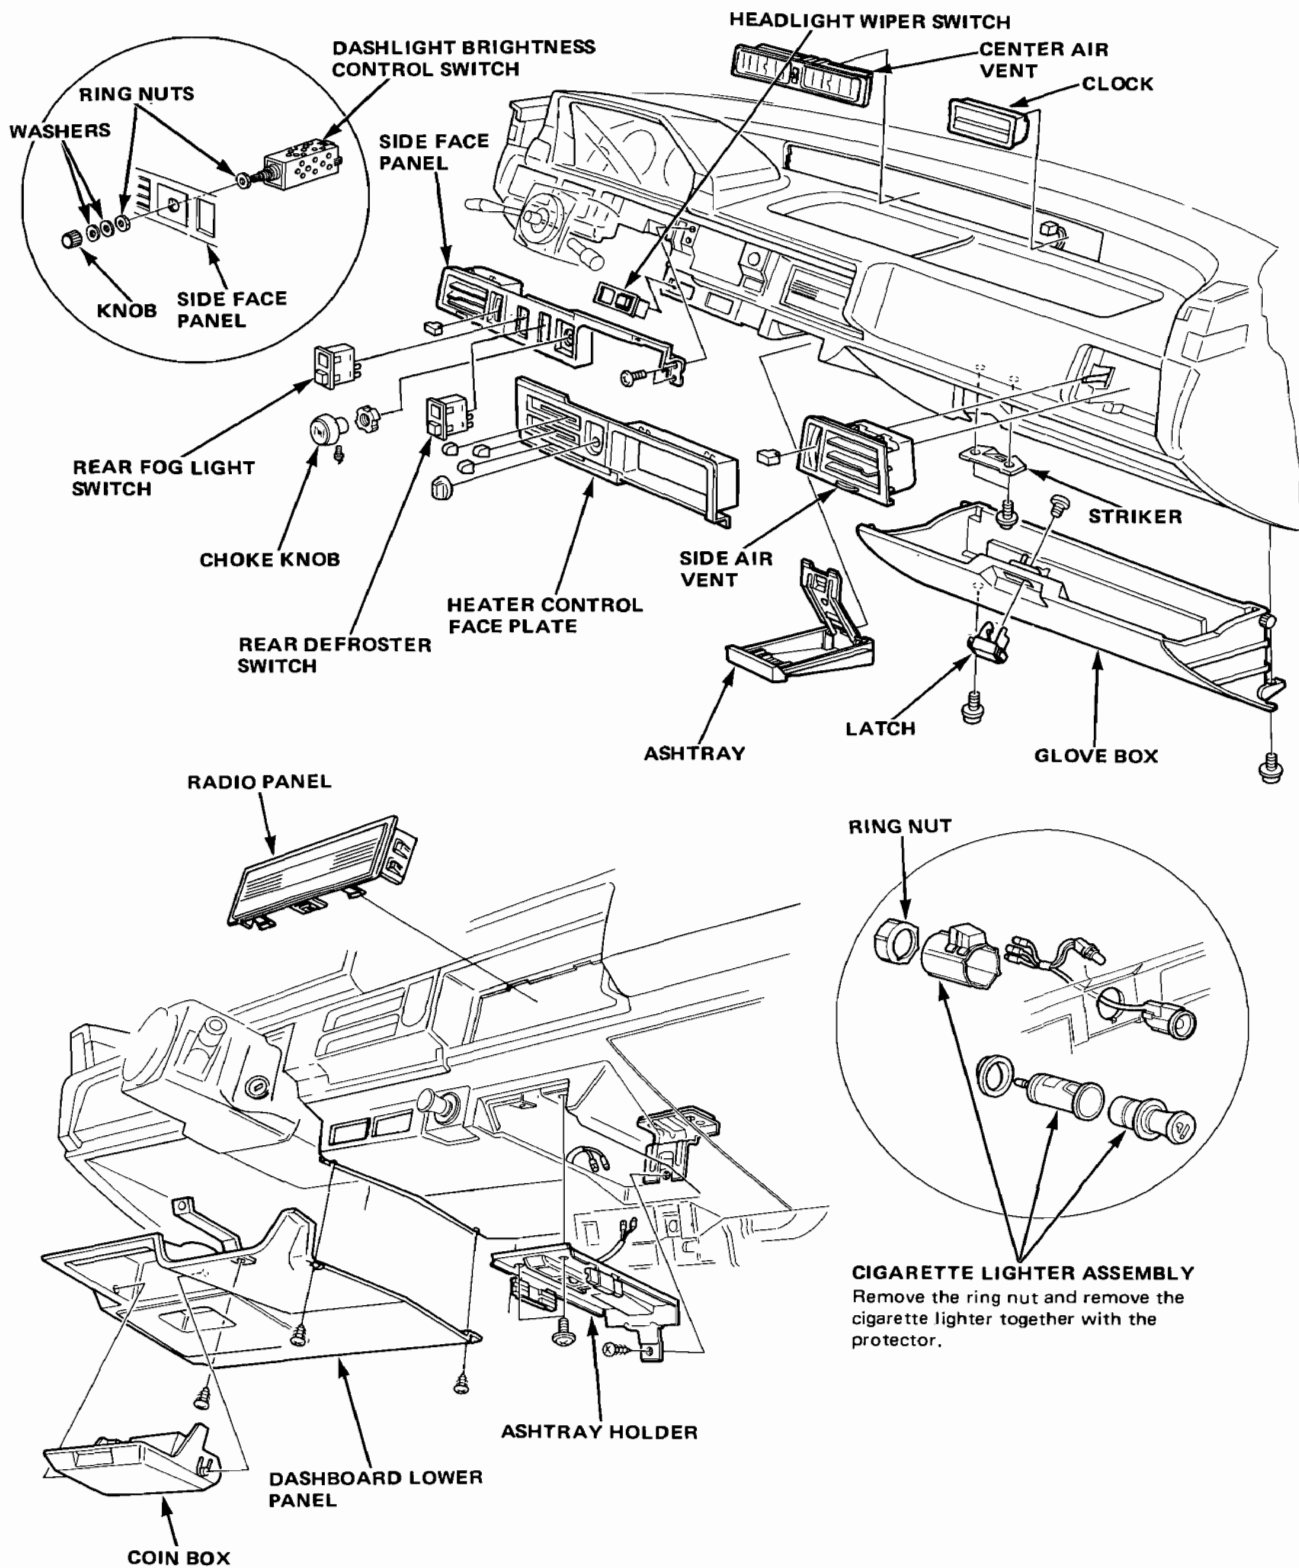




— (4D H/B) —

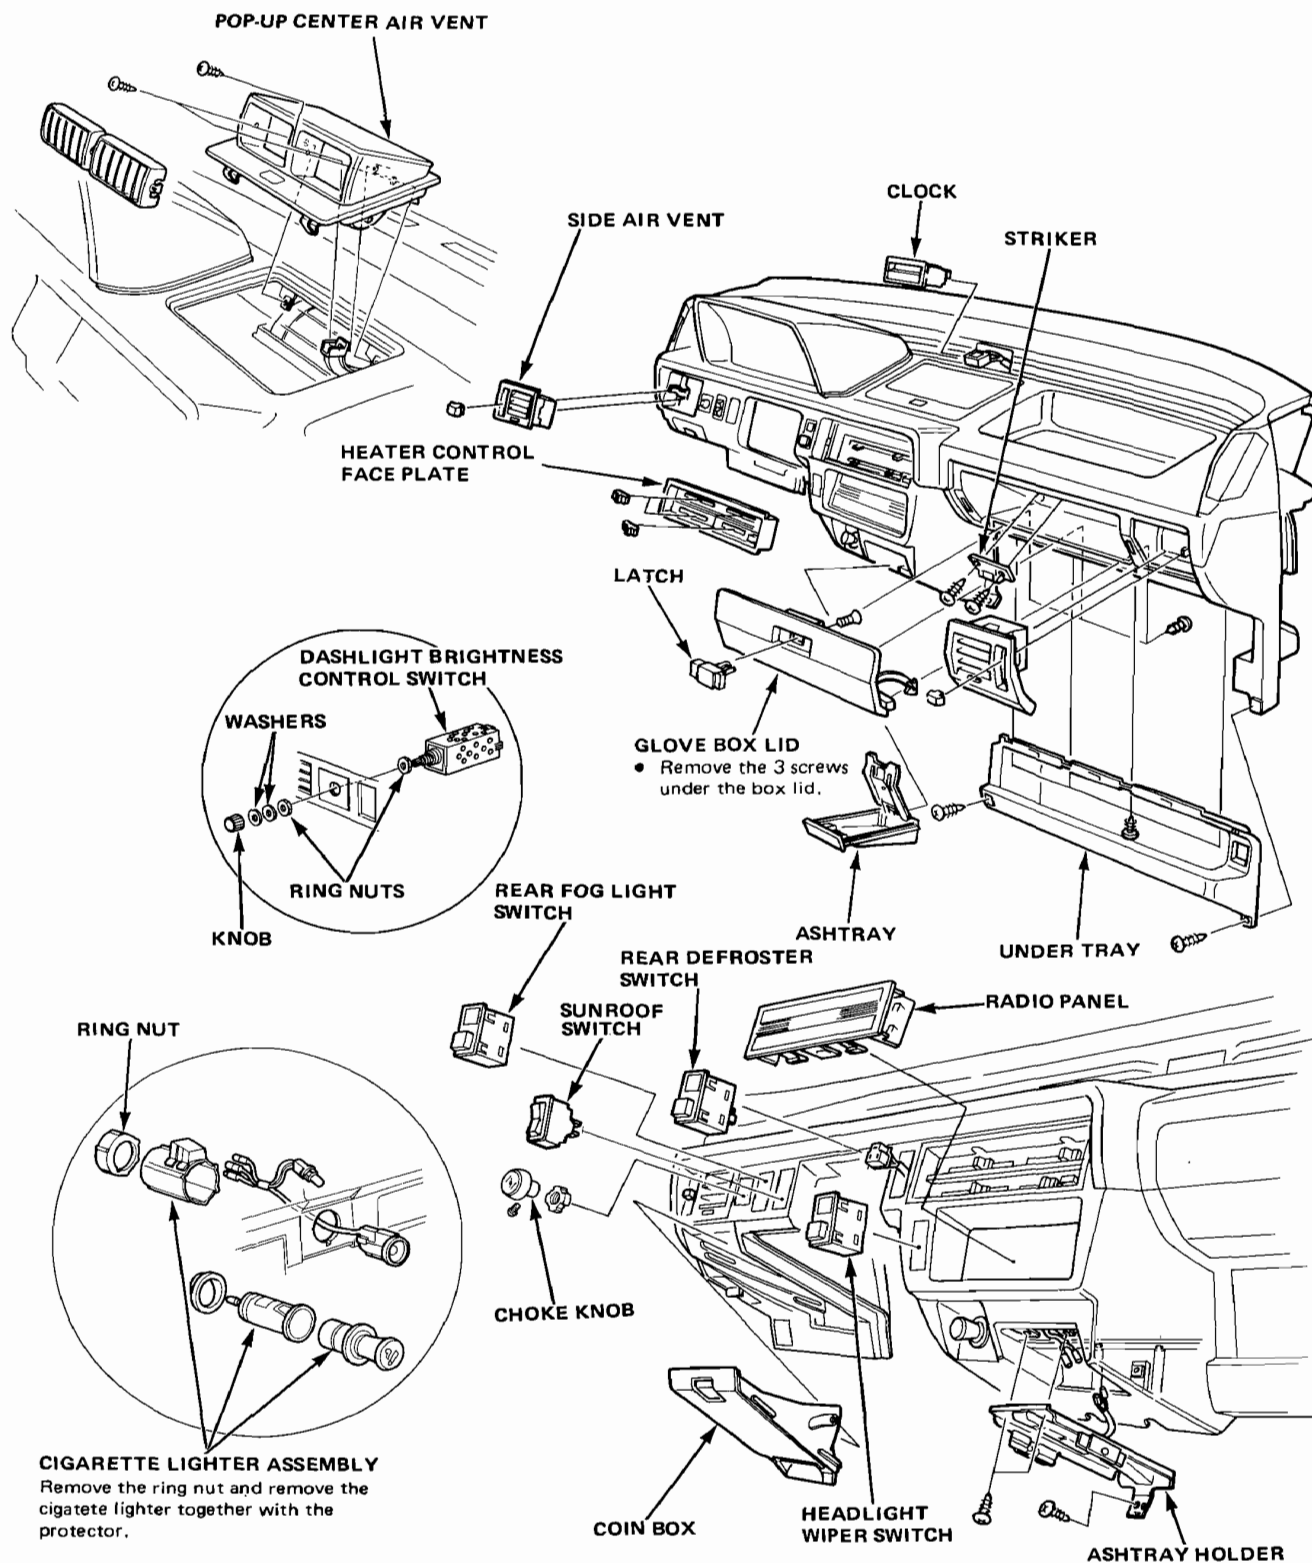

Dashboard

Replacement (Coupe)

1. To remove the dashboard, first remove the:
 - Steering wheel and column lower cover (pages 19-11 and 17).
 - Instrument panel.
 - Right and left air vents.
 - Center bolt cover.
 - Ashtray
2. Disconnect the ground and antenna cables from under the dashboard.
3. Disconnect the instrument wire harness from the fuse box. (See page 22-112 for connector locations.)
4. Remove the 9 dashboard mounting bolts.
5. Lift the dashboard as you pull so it will slide up and off the guide pin at the middle; hold it from underneath so it won't fall when it comes off the pin.

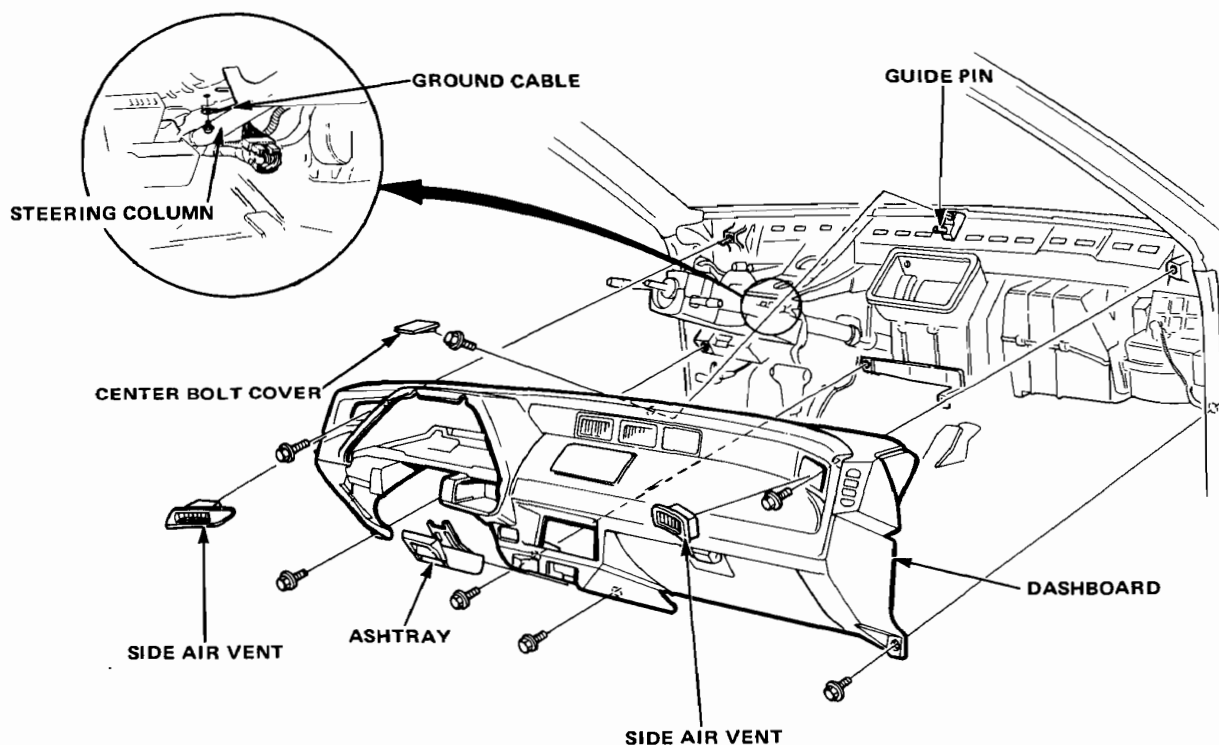

6. Install the dashboard in the reverse order of removal. Tighten the bolts gradually, in an alternating pattern, checking for dashboard fit and wire clearance.

CAUTION:


- Make sure the dashboard fits onto the guide pin correctly.
- Before tightening the dashboard bolts, make sure the instrument wire harness is not pinched.



– (2D H/B, 4D, and 4D H/B)

1. To remove the dashboard, first remove the:
 - Steering wheel (pages 19-11 and 17).
 - Hood opener.
 - Right and left side caps.
 - Right and left side defroster garnish (4D H/B)
 - Center air outlet (2D H/B and 4D).
 - Clock (4D H/B).
 - Ashtray.
2. Remove the dashboard lower panel, then disconnect the ground and speedometer cables from under the dashboard.
3. Remove the glove box (2D H/B and 4D) or the dashboard under dray (4D H/B), then disconnect the antenna cable.
4. Remove the choke cable from the dashboard panel, disconnect its wire harness.
5. Remove the heater control face plate and the 3 screws attaching the heater control panel to the dashboard.
6. Disconnect the instrument wire harness from the fuse box. (See page 22-112 for connector locations.)
7. Remove the dashboard mounting bolts.
8. Lift the dashboard as you pull so it will slide up and off the guide pin at the middle; hold it from underneath so it won't fall when it comes off the pin.

2D H/B and 4D:

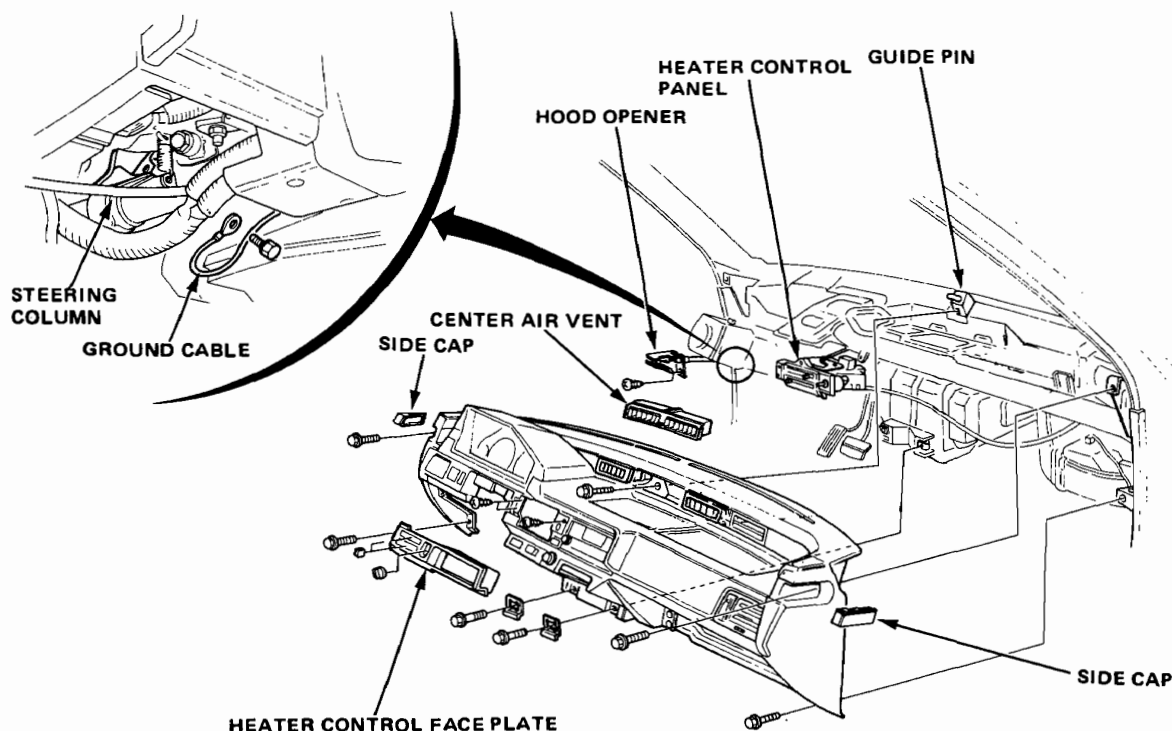


(cont'd)

Dashboard

Replacement (2D H/B, 4D, and 4D H/B Cont'd)

4D H/B:

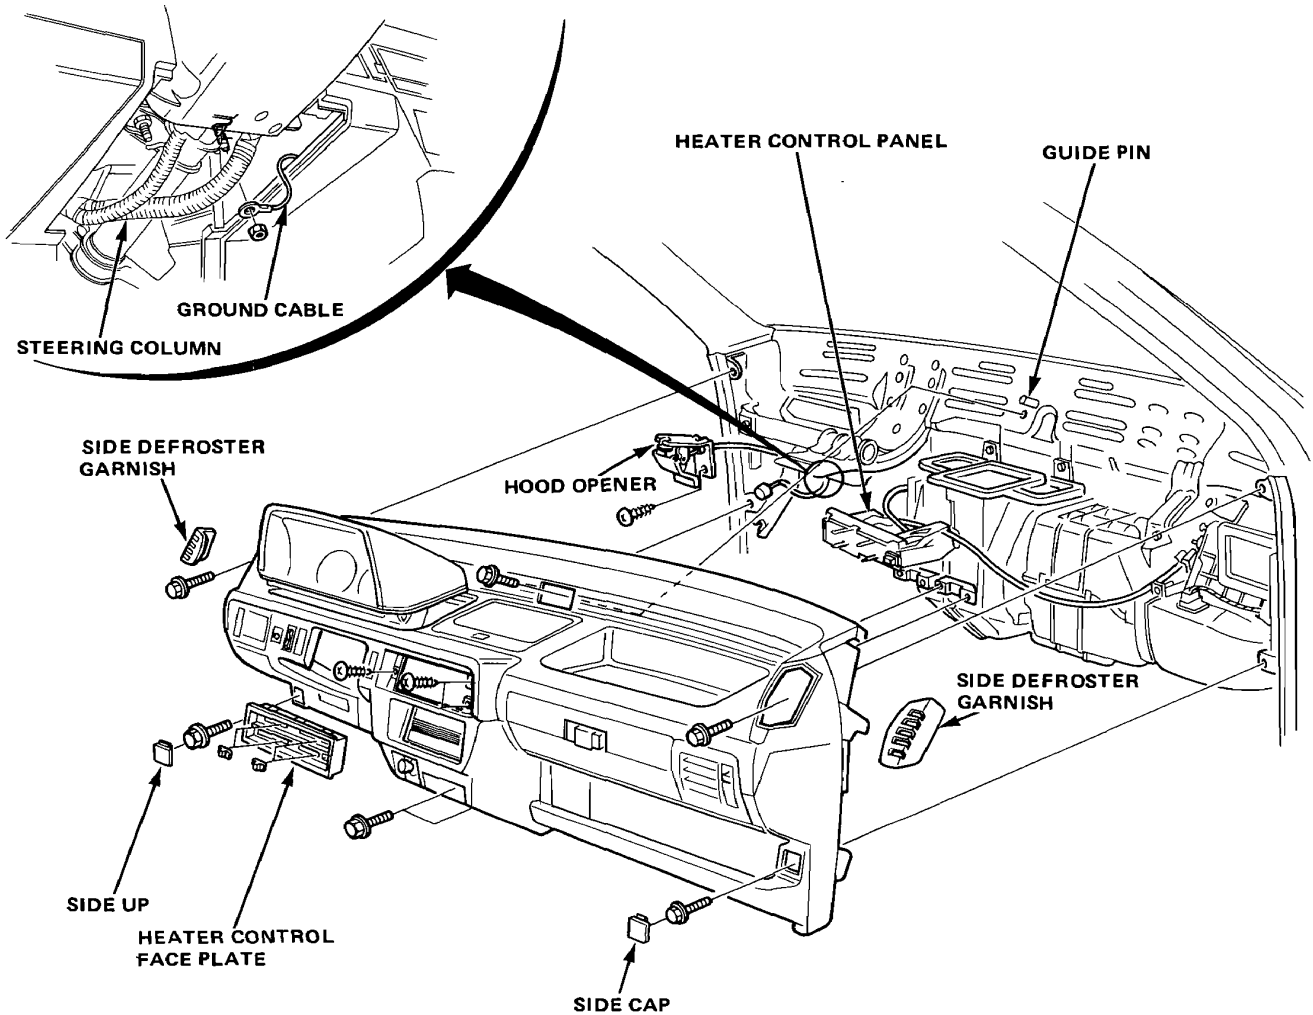

9. Install the dashboard in the reverse order of removal. Tighten the bolts gradually, in an alternating pattern, checking for dashboard fit and wire clearance.

CAUTION:


- Make sure the dashboard fits onto the guide pin correctly.
- Before tightening the dashboard bolts, make sure the instrument wire harness is not pinched.




Instrument Panel/Dashboard Wiring

Wire Harness Connections (Coupe, 2D H/B, and 4D)

Coupe:

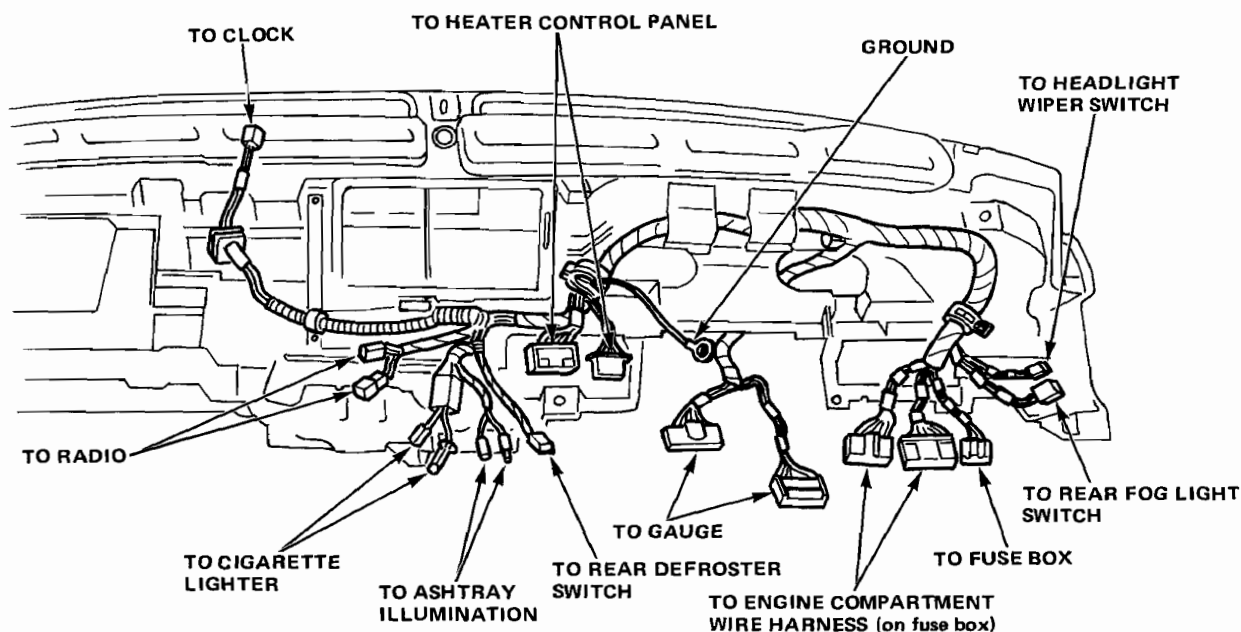


2D H/B and 4D:

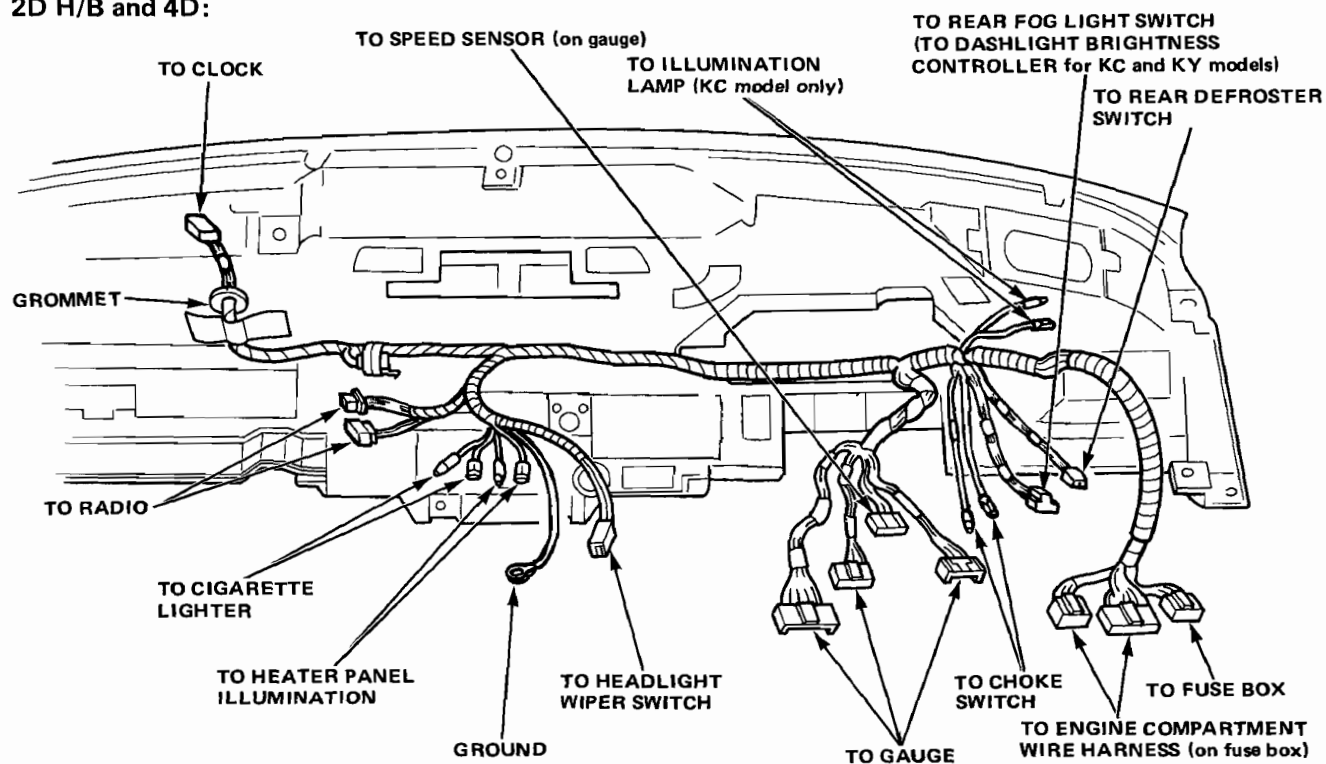



Instrument Panel/Dashboard Wiring

Wire Harness Connections (4D H/B)

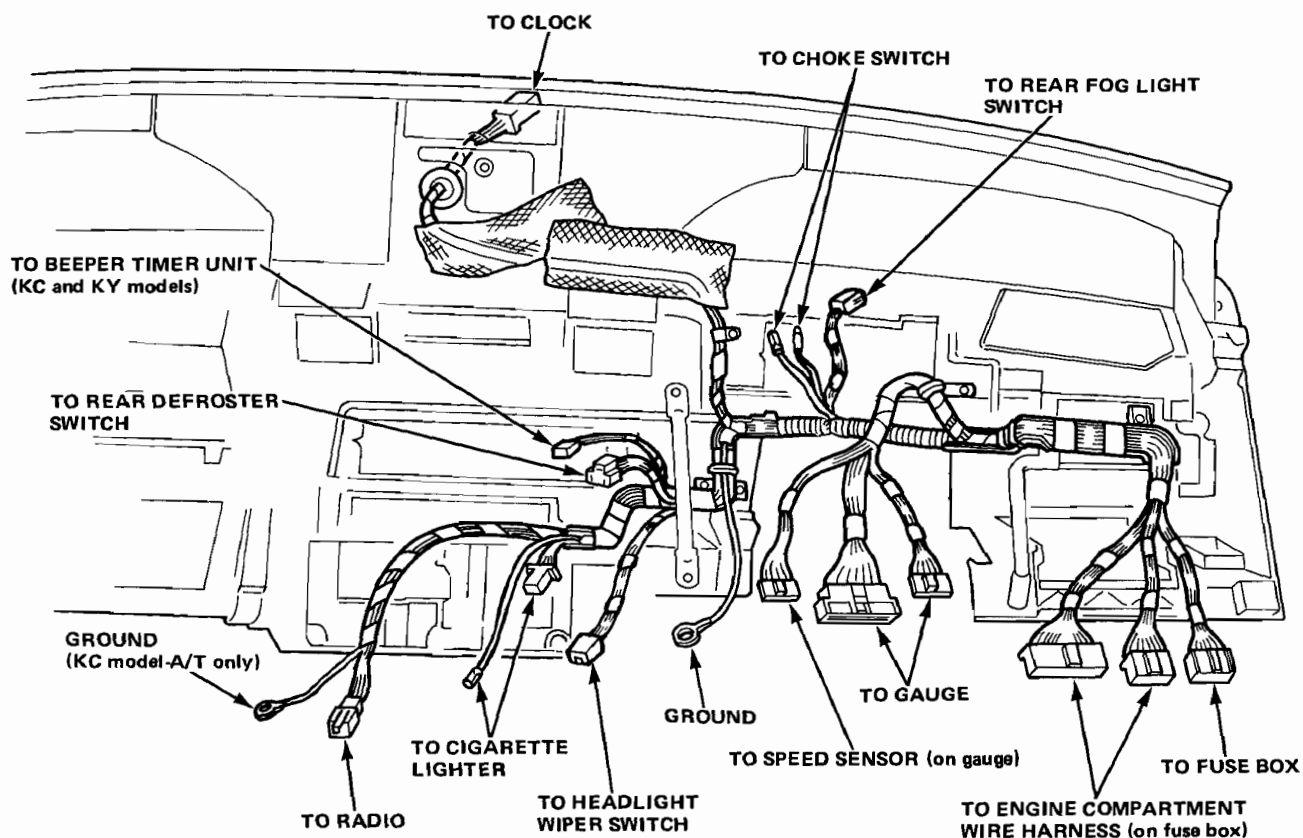

Fuse Box

NOTE: When servicing the engine compartment wire harness, note the locations of the harness couplers on the fuse box.

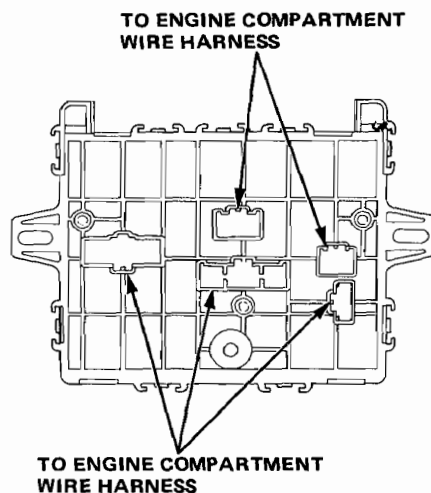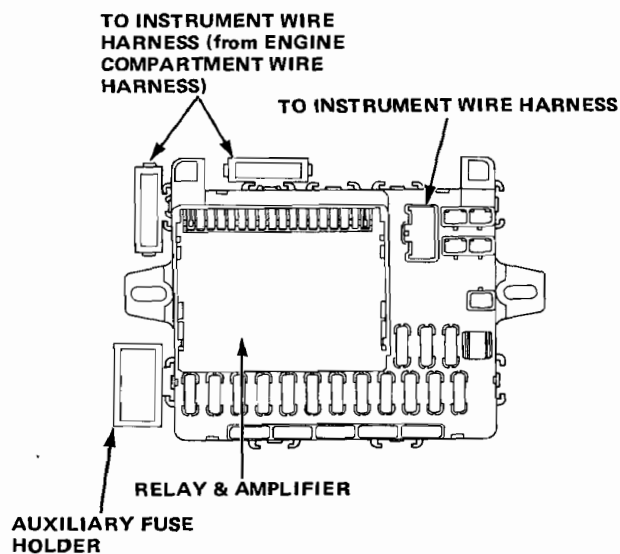


Front Grille Area




Replacement

1. Remove the 2 screws and the front grille (All except Coupe).
2. Remove the right and left front position lights.
3. Remove the screws and the headlight garnish (Canadian model only).
4. Remove the lower and side mount bolts, then remove the front panel by removing the upper bolts.

Coupe:

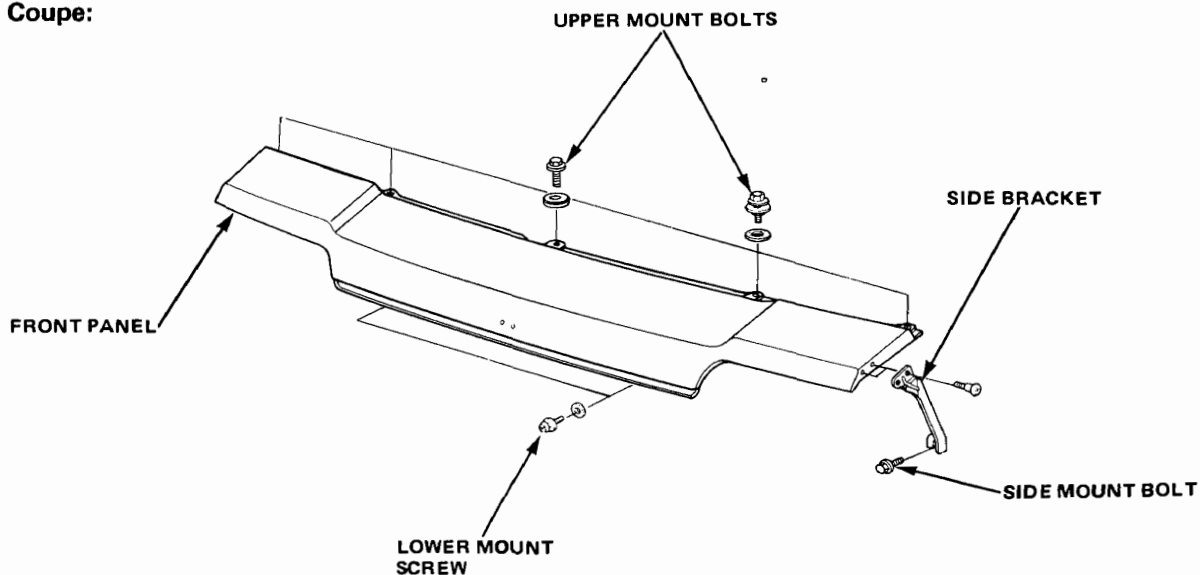

2D H/B, 4D, and 4D H/B:

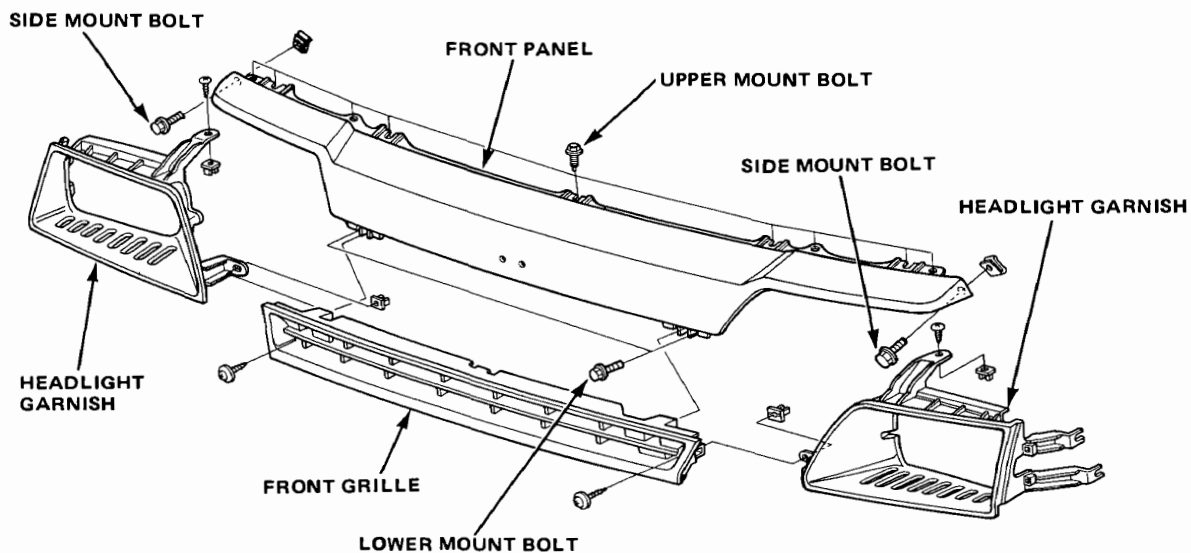


Rear Panels

Replacement

Coupe:

REAR PANEL


- Remove the rear trim, then remove the panel by removing the 2 mount nuts and 2 mount screws.

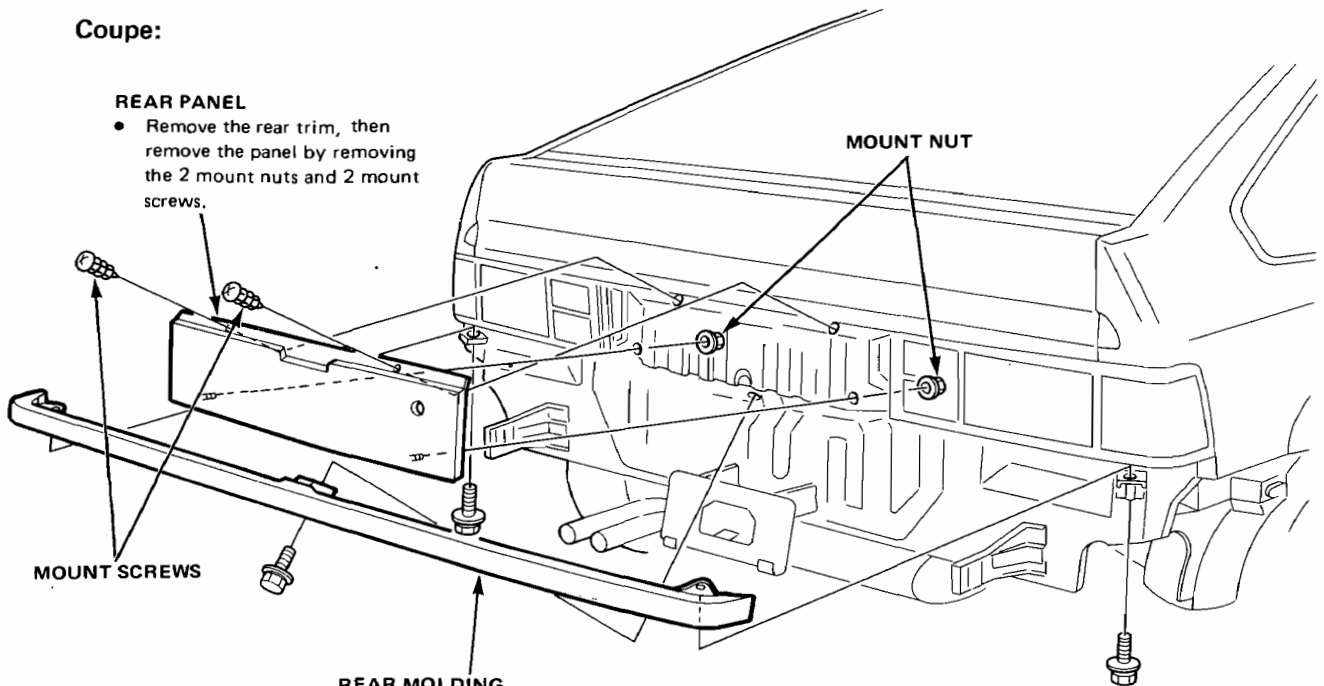

REAR MOLDING

- Remove the rear bumper, then remove the molding by removing the 3 mount bolts.


2D H/B:

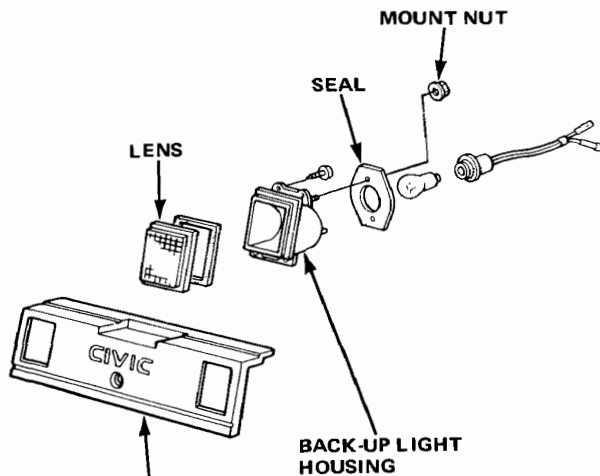

REAR PANEL

- Remove the rear trim, then remove the panel by removing the 4 mount nuts.

4D:

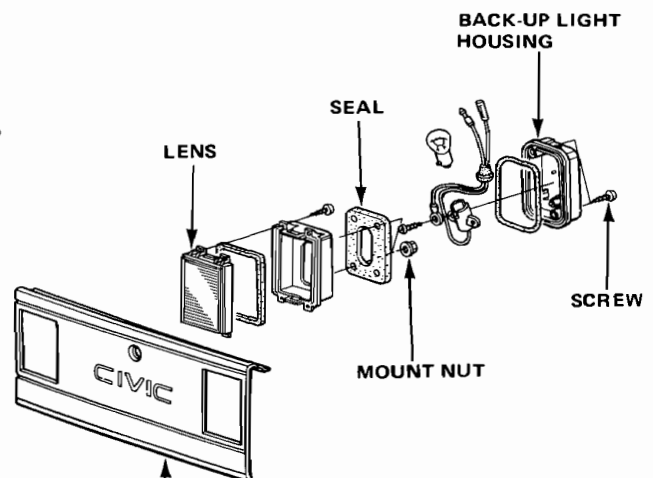

REAR PANEL


- Remove the screws and the back-up light housings, then remove the panel by removing the 4 mount nuts.

Rear Spoiler




Replacement (Coupe)

Canadian model:

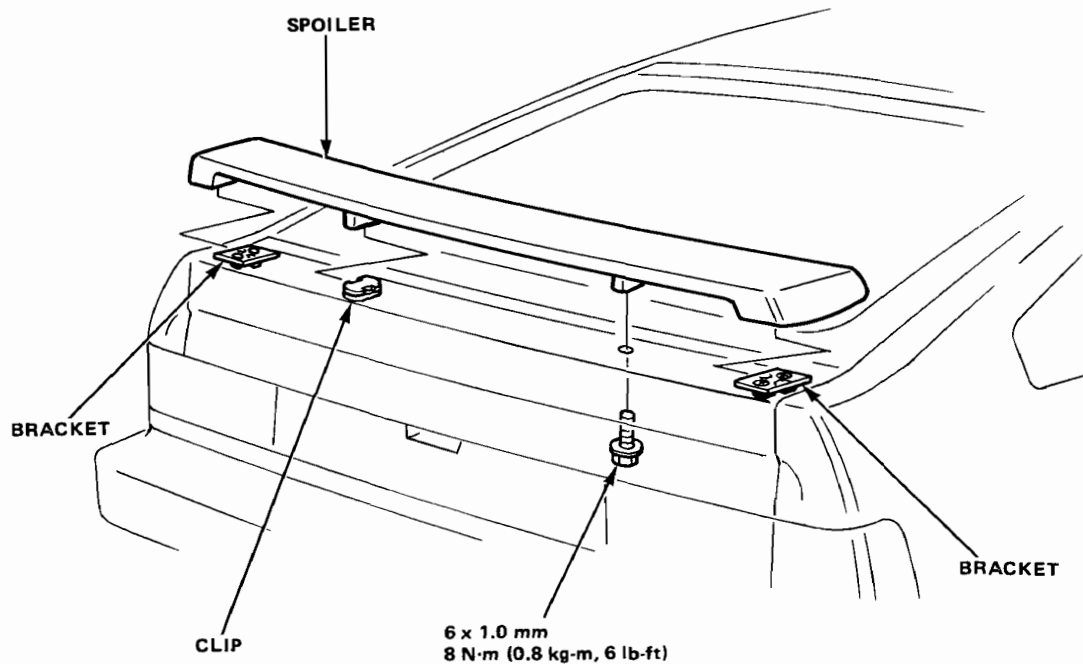


European model:

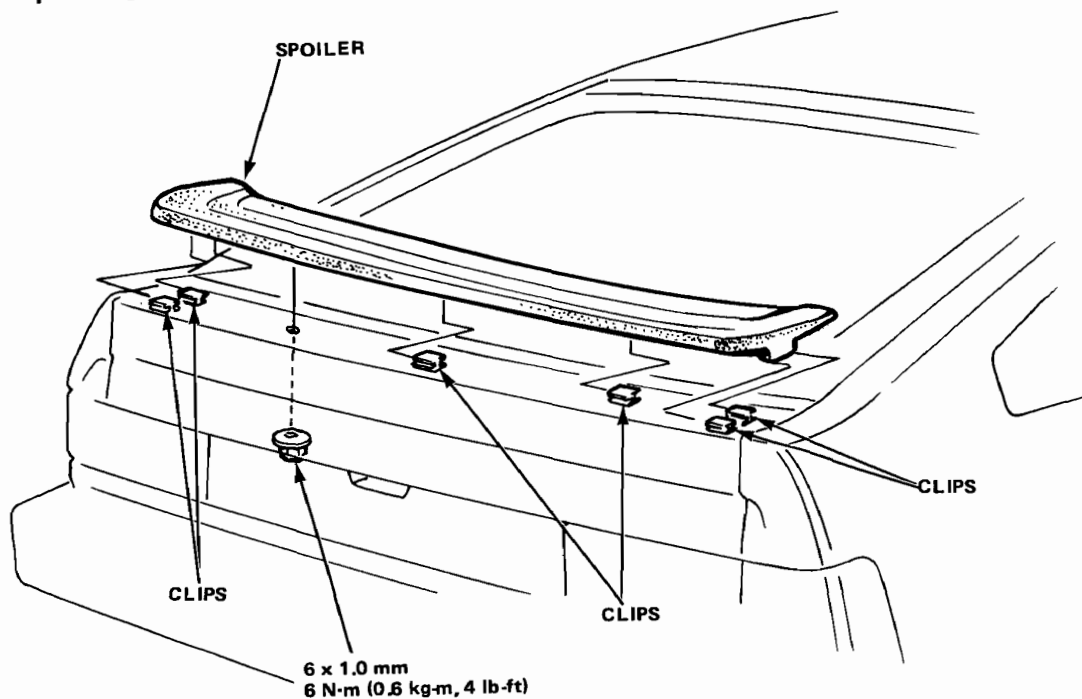


Rear Spoiler

Replacement (2D H/B, 4D, and 4D H/B)


4D:

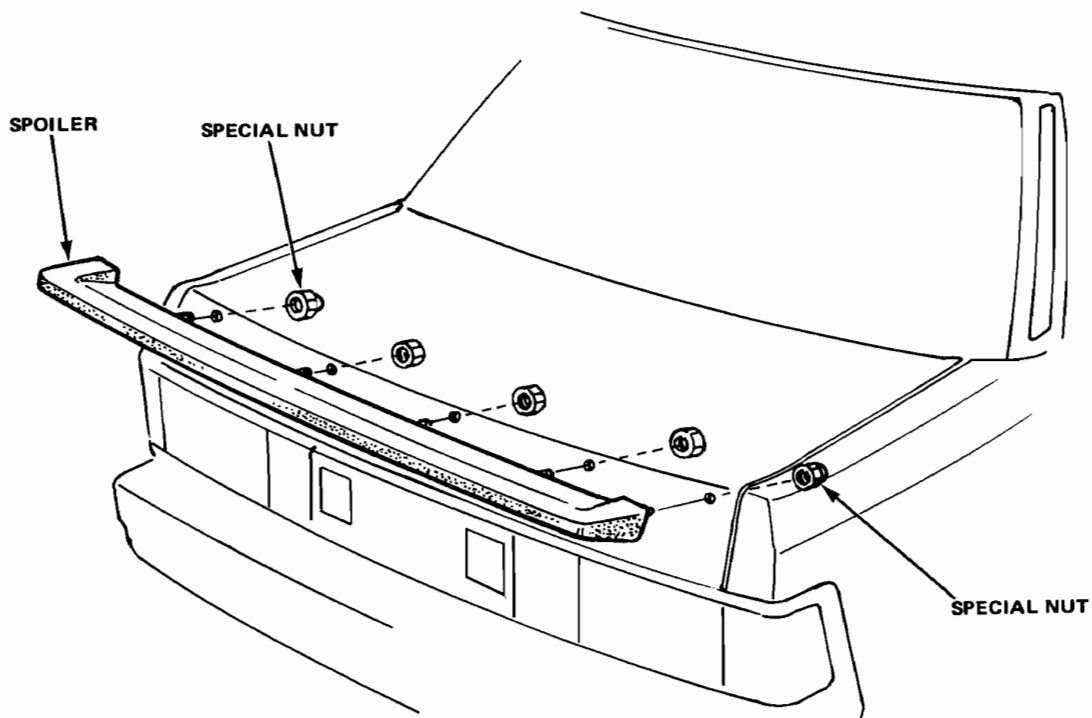

2D H/B:

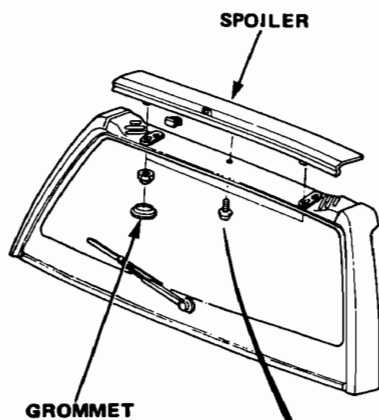

4D H/B:

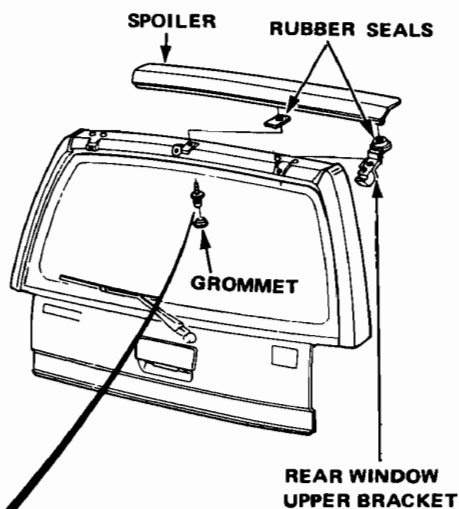


TORX DRIVER GRIP
07703-0010300

TORX DRIVER BIT (T30HD)
07703-0010600

Side Panels


Replacement (Coupe only)

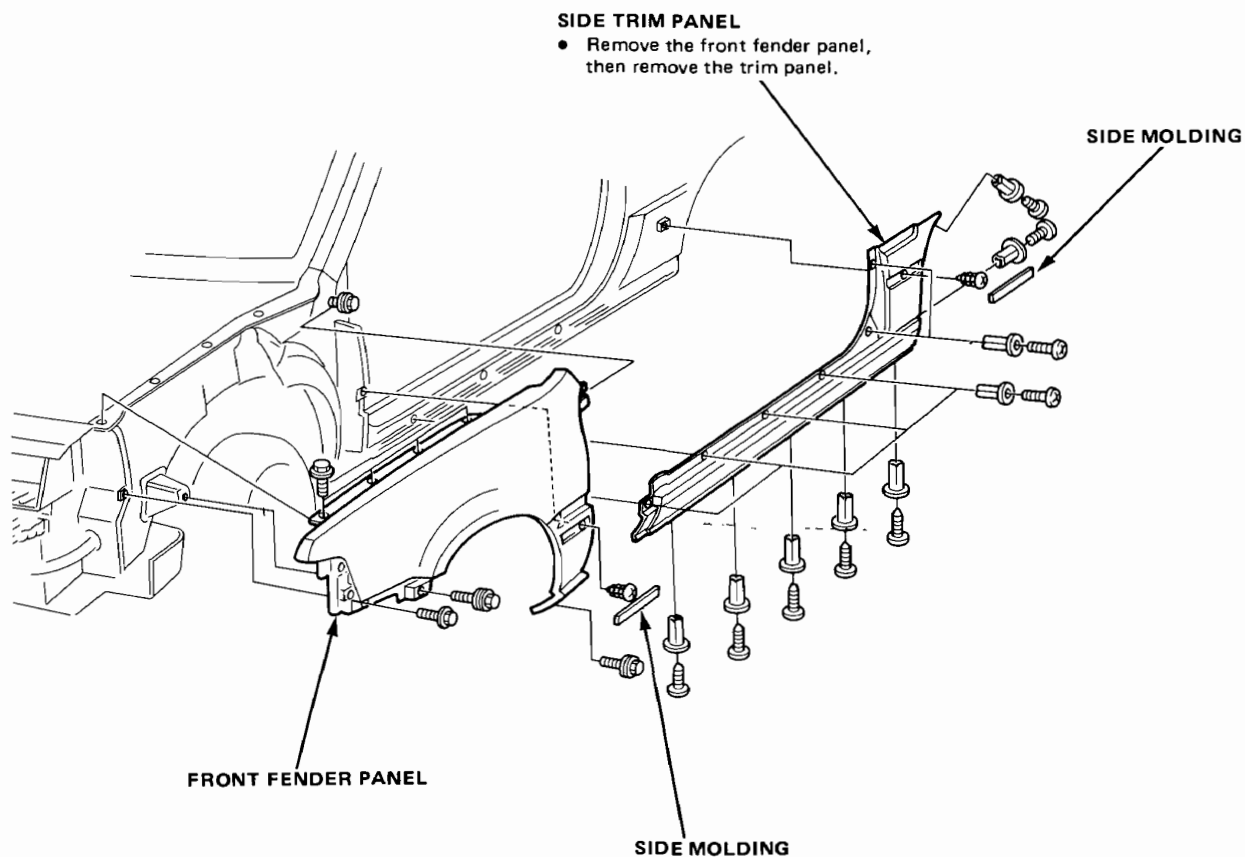

Front Bumper

Replacement


1. Remove the front turn lights, then disconnect the wire connectors.
2. Remove the bumper lower mount bolts and the bumper mount bolts.
3. Remove the bumper by sliding it to the front.

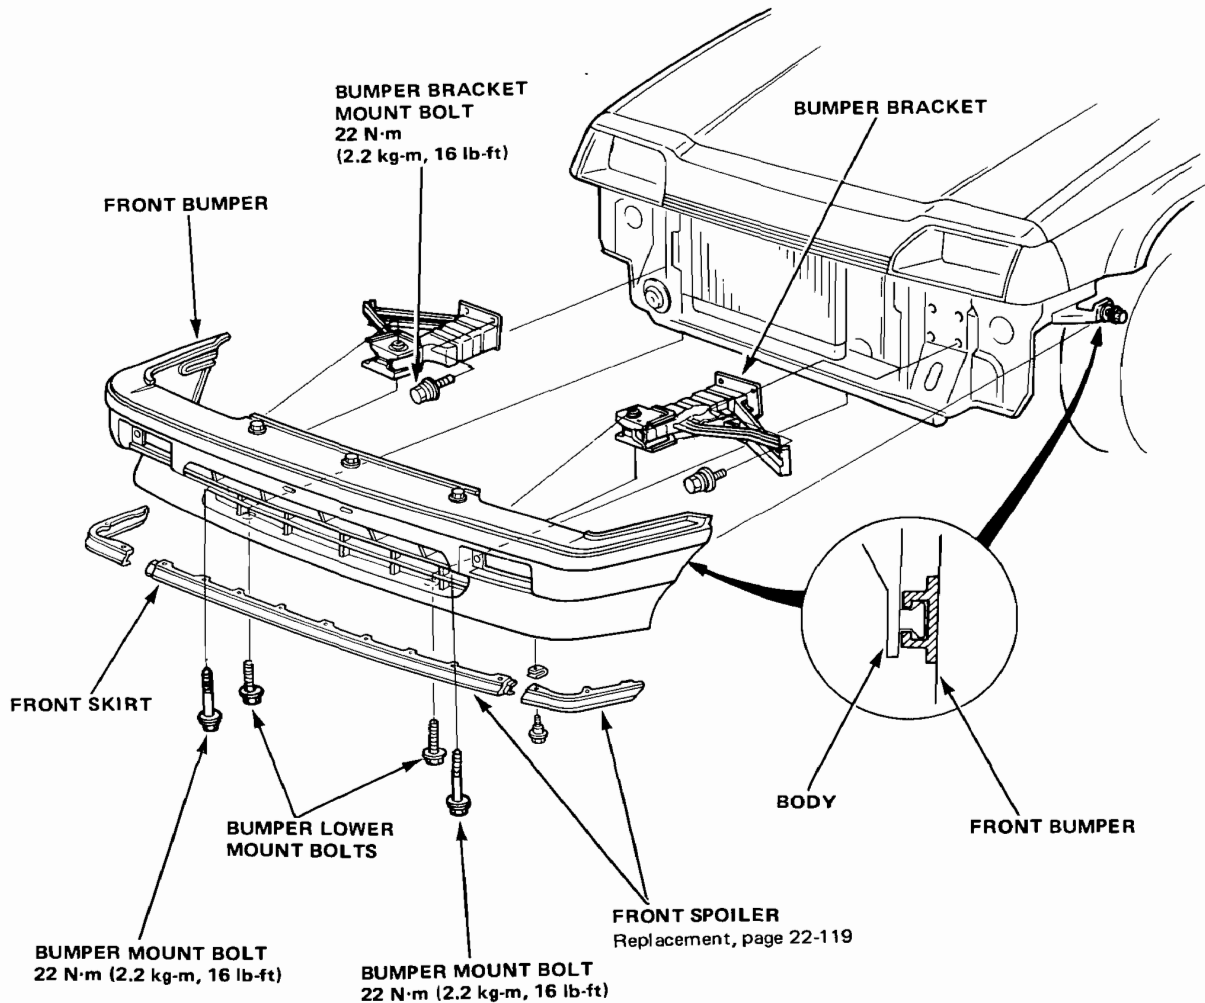




Front Spoiler Replacement


1. Remove the front spoiler by removing the 2 sus-clips and the 7 mount bolts, and cutting off the end of the 6 plastic rivets.

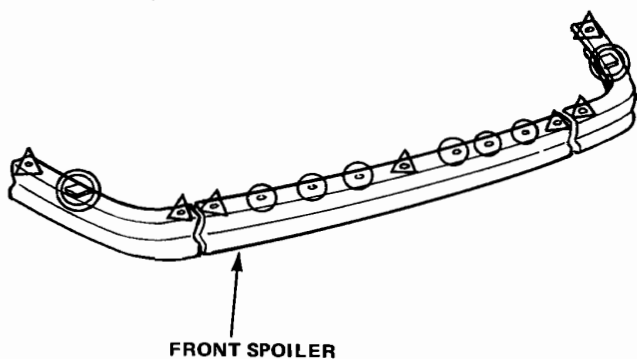


○ : Plastic rivet locations

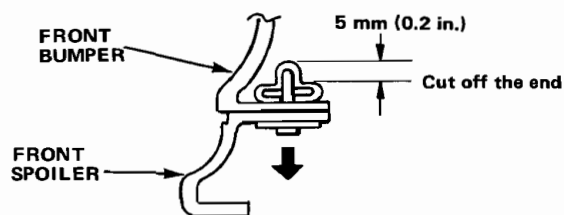


△ : Mount bolt locations

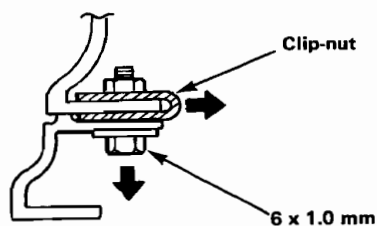

○ : Sus-clip locations

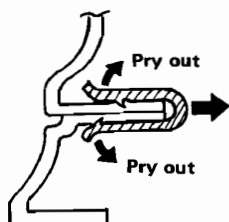

2. Install the front spoiler in the reverse order of removal. Use bolts and nuts at the points where plastic rivets were used to retain the spoiler as shown.

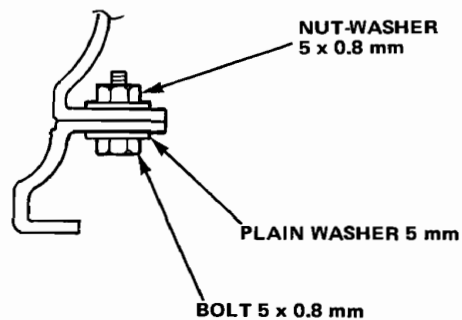


Rear Bumper


Replacement

1. Disconnect the license light wire connector.
2. For the rear fog light equipped model, remove the rear fog lights (Coupe and 4D H/B).
3. Remove the 2 bumper mount bolts (except 4D H/B) or the 8 bumper mount screws (4D H/B).
4. Remove the bumper by sliding it to the rear.

Coupe, 2D H/B, and 4D:

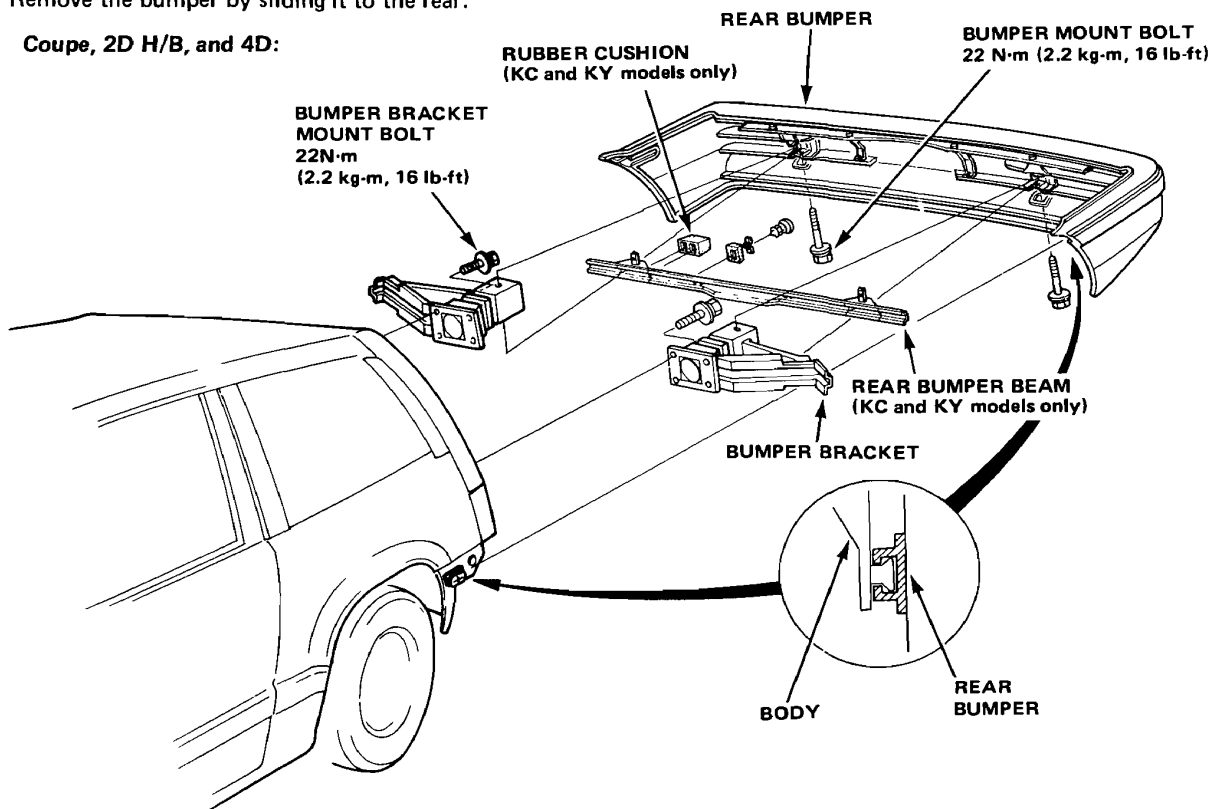

4D H/B:

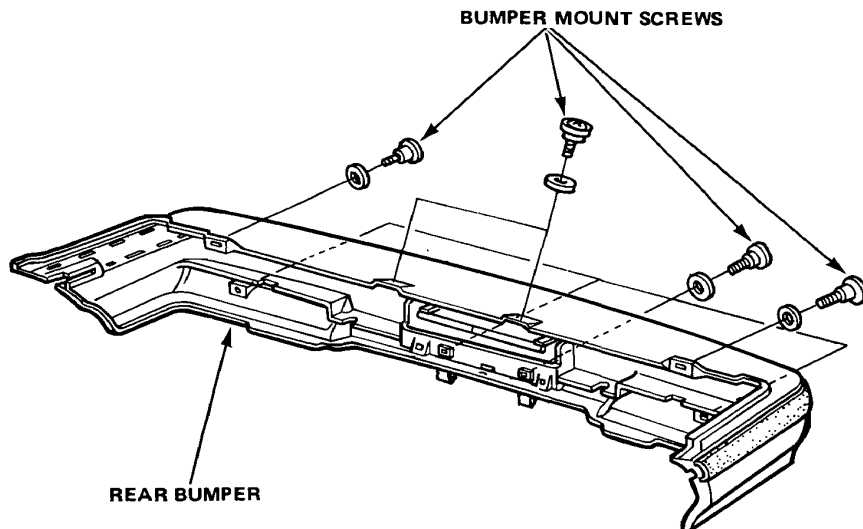


Hood



Replacement/Adjustment

1. Remove the hood by removing the hood hinge bolts.
2. When installing the hood, don't tighten the hinge bolts until you've checked the adjustments shown below.

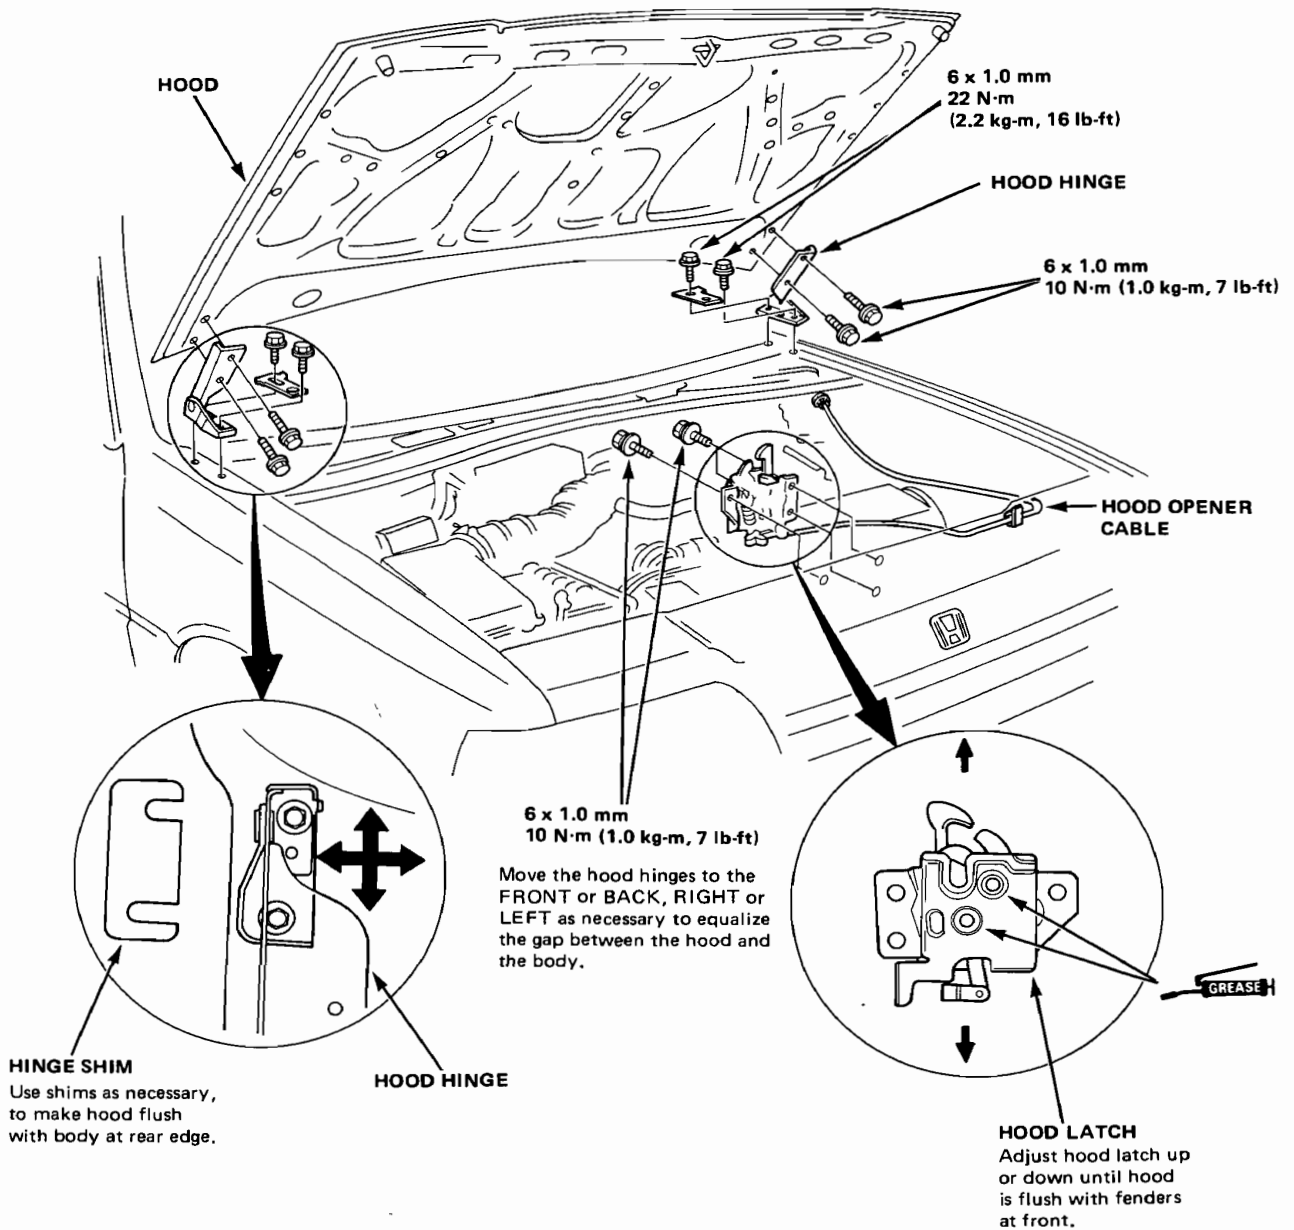


Tailgate

Replacement/Adjustment (Coupe)

1. Remove the quarter window trim and the tailgate trim panel.
2. Remove the rear trim panel, then disconnect the ground cable.
3. Pull the harness out of the body as shown.

NOTE: Before pulling out the wire harness, tie a string to the end of it so you can pull it back in when the tailgate is reinstalled.

4. Hold the tailgate up and remove the nuts from both support strut mounts.
5. Pull down the rear edge of the headliner so it will not interfere with the mount nut removal.
6. Pry the headliner off the tailgate opening flange, remove the hinge mounting bolts and then remove the tailgate.
7. Before tightening the hinge nuts, check the adjustments shown below.

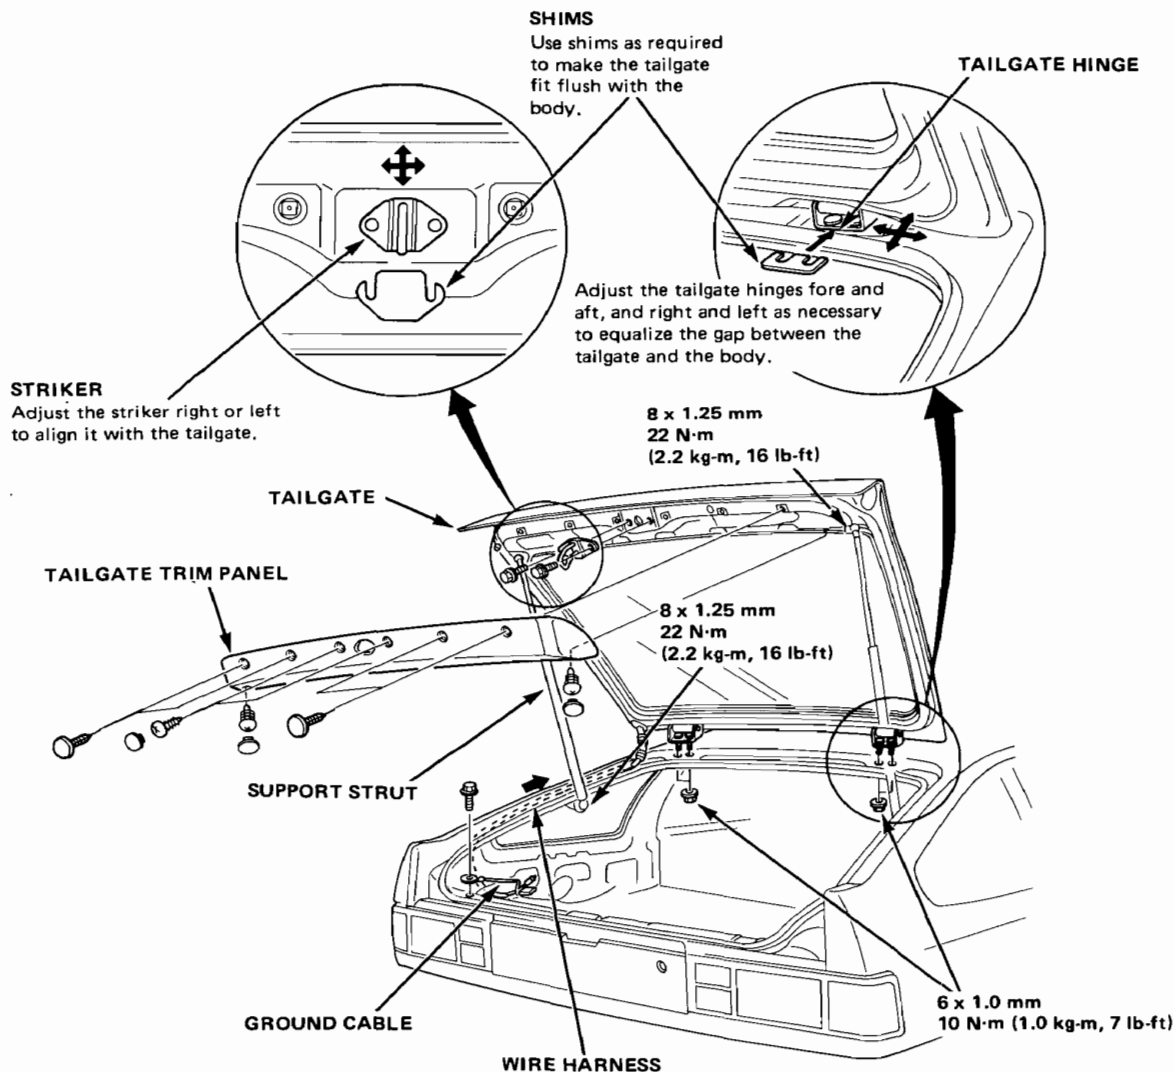




— (2D H/B and 4D H/B)

1. Remove the tailgate trim panel.
2. Disconnect the washer hose.
3. Pull the harness out of the body as shown.

NOTE: Before pulling out the wire harness, tie a string to the end of it so you can pull it back in when the tailgate is reinstalled.


4. Hold the tailgate up and remove the nuts from both support strut mounts.
5. Remove the tailgate mounting bolts and remove the tailgate.

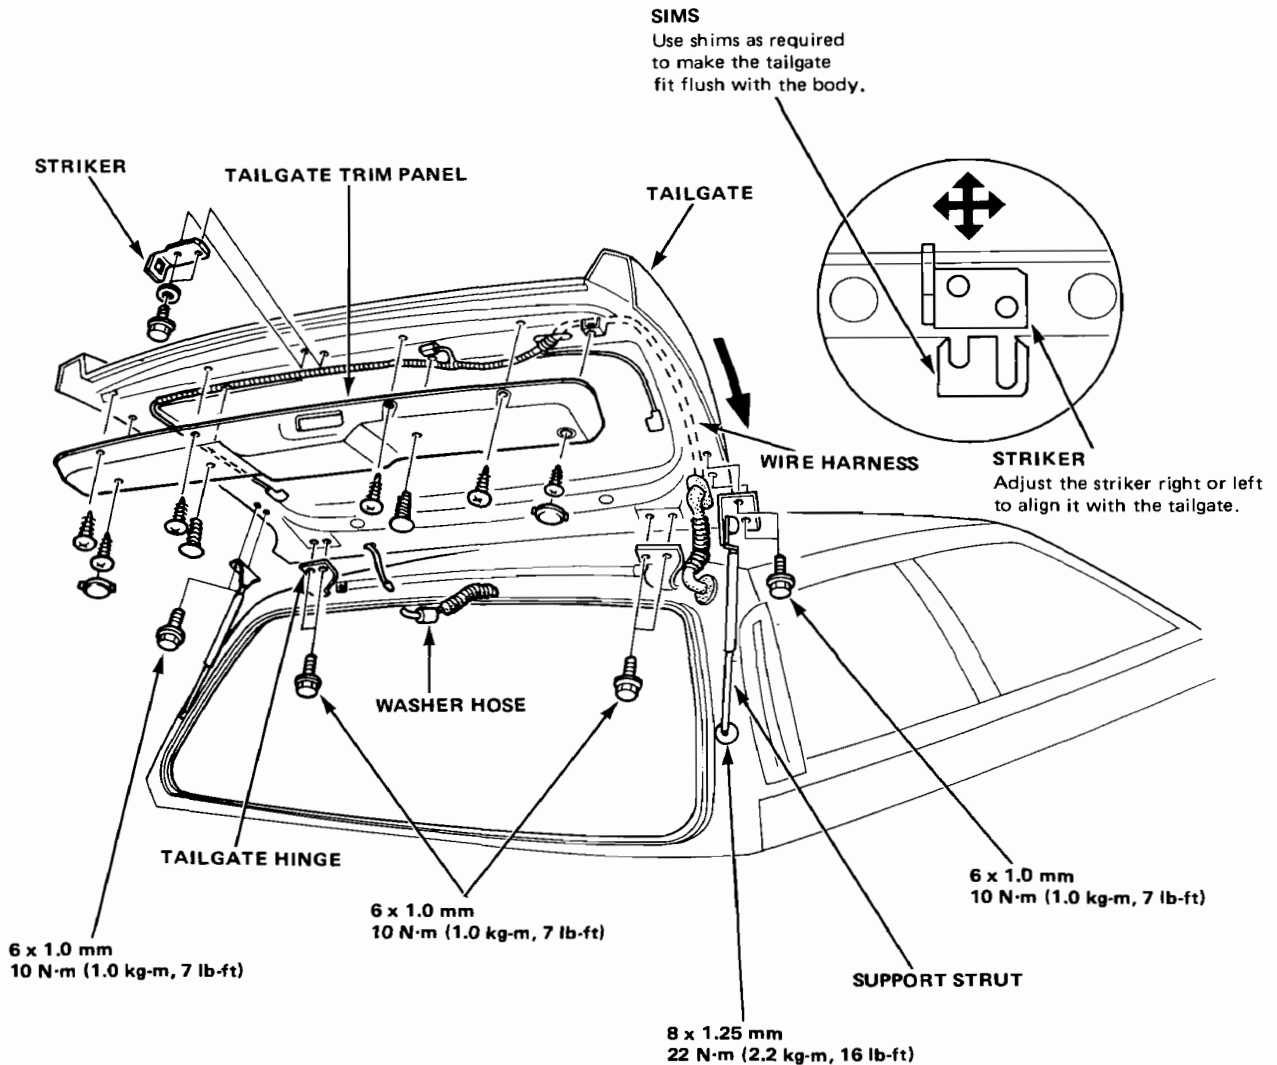

Tailgate

Opener and Latch Replacement

Disassemble in numbered sequence.

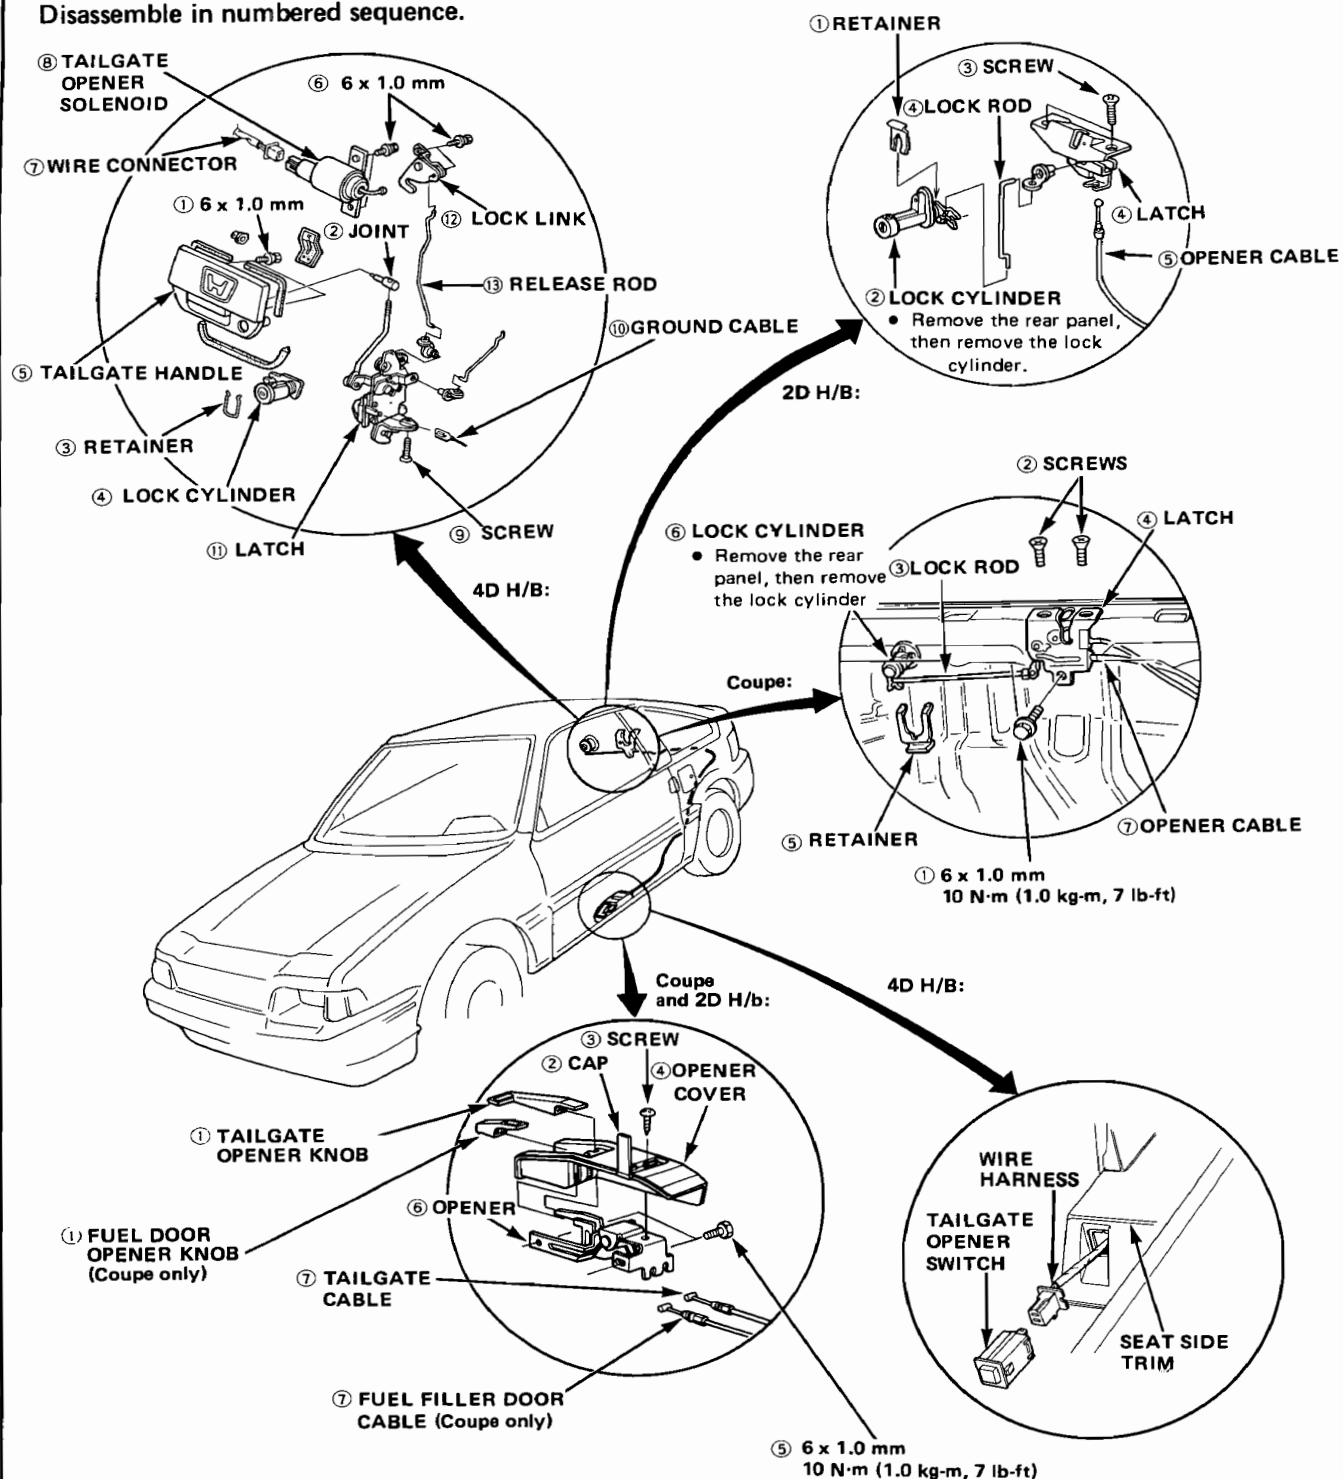




Trunk Lid

Replacement/Adjustment


1. Remove the trunk lid hinge bolts, then lift off the lid.
 2. Remove the torsion bars by hand.
- CAUTION: The torsion bars are under spring tension.**
3. Remove the rear shelf.
 4. Remove the hinge bracket mounting nuts, then remove the hinges from the trunk.
 5. Before tightening the hinge bolts, check the adjustments shown below:

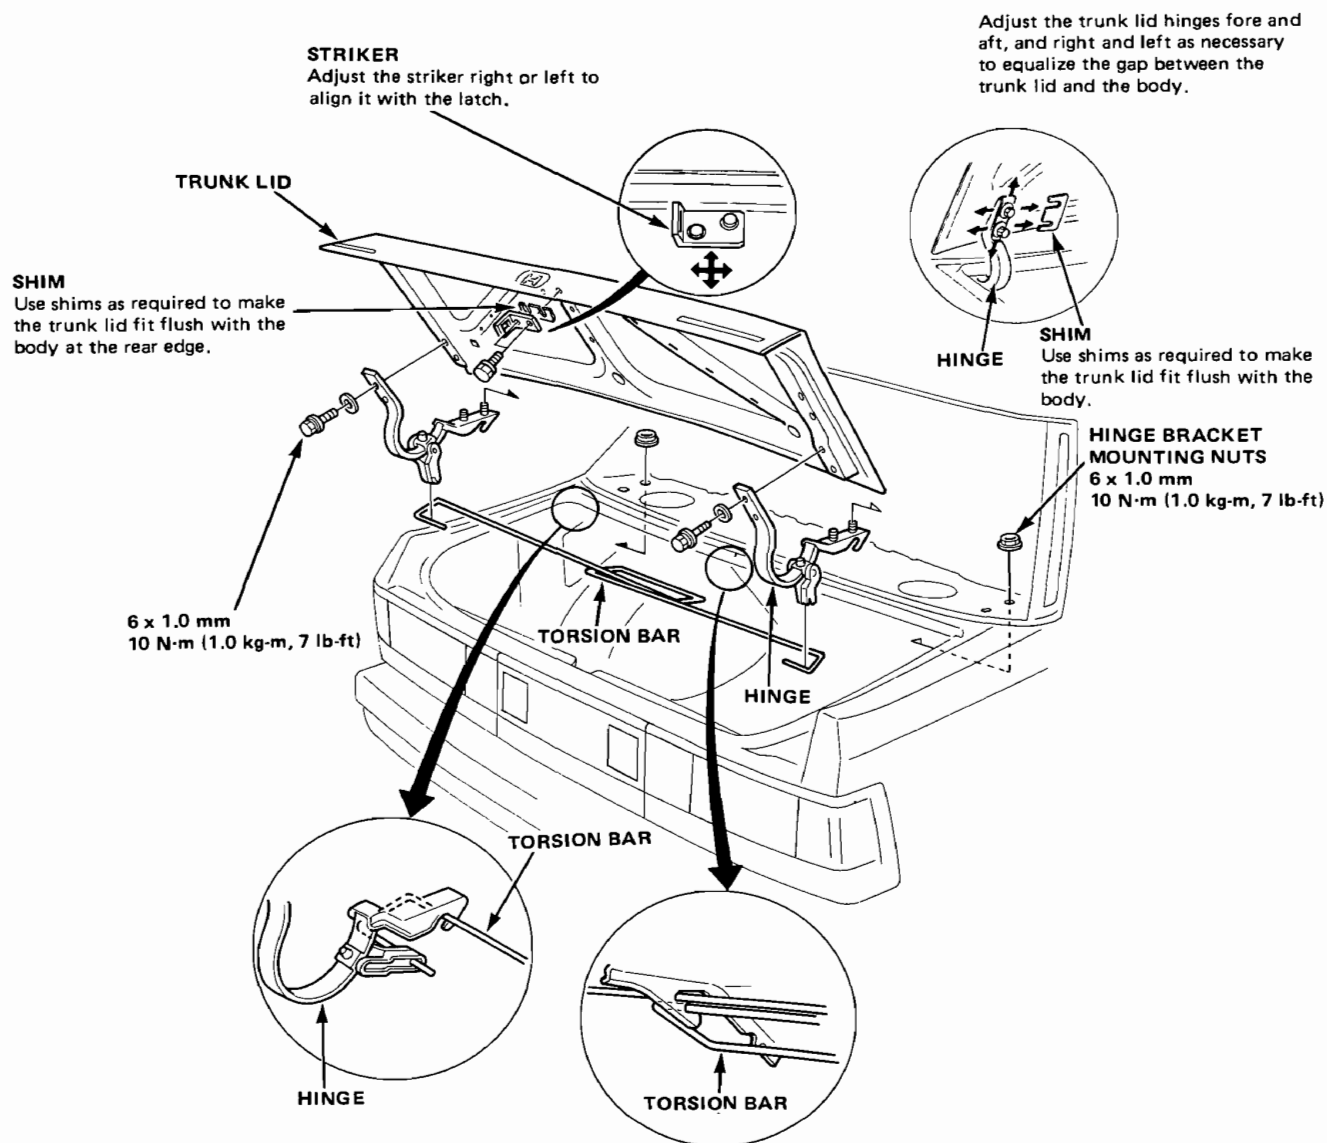

Trunk Lid

Opener and Latch Replacement

Disassemble in numbered sequence.

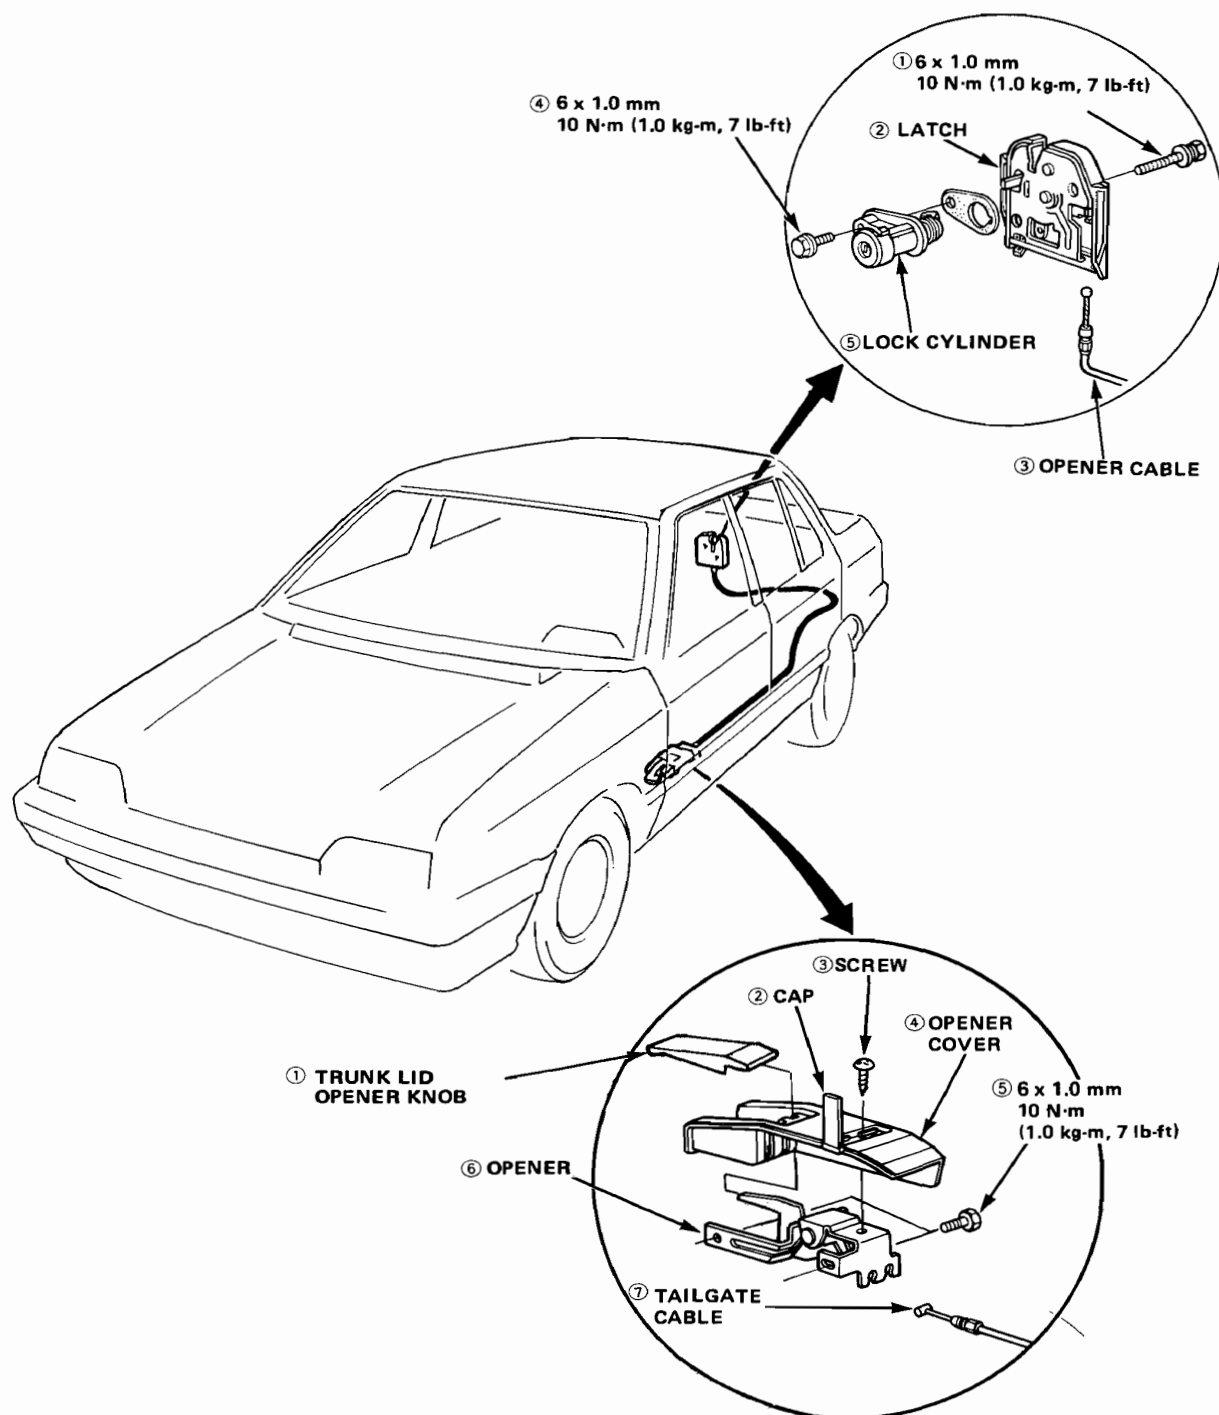


Fuel Filler Door Opener



Replacement



Disassemble in numbered sequence.

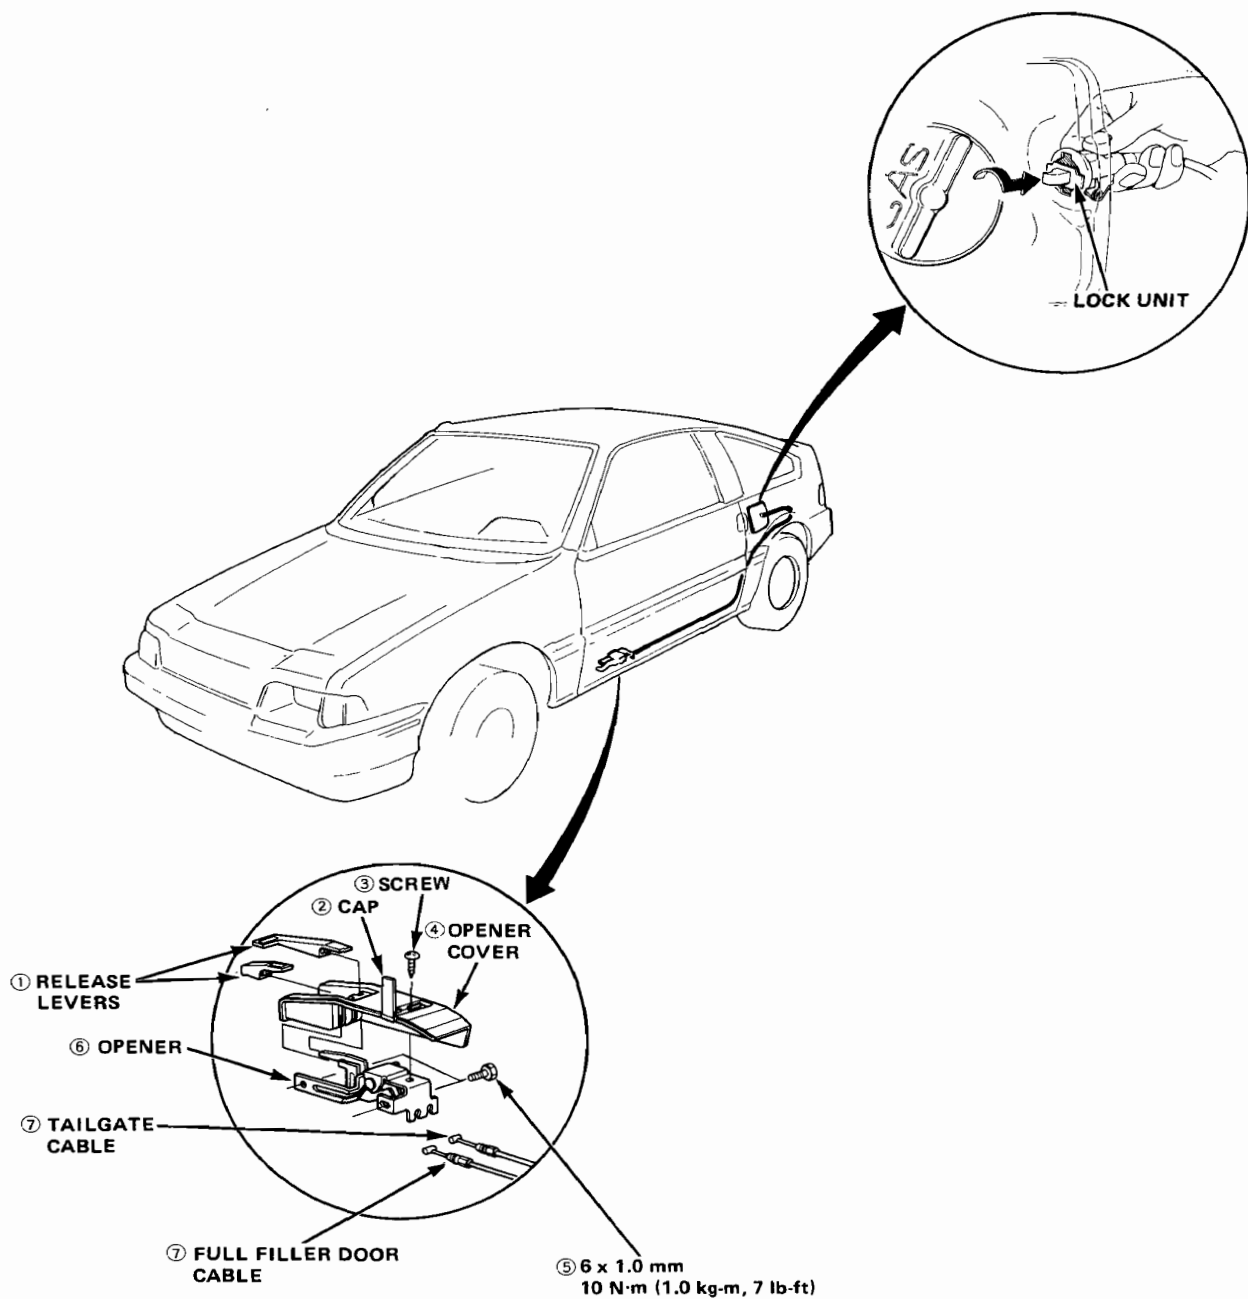

Wipers

Windshield Wiper and Motor Replacement

1. Remove the screws securing the air scoop garnish, remove the garnish (4D only).
2. Remove the nuts, raise the wiper arm and remove the wiper arms.
3. Remove the screw cover and the screws (2D H/B and 4D), and pry out the clips and remove the air scoop.
4. Disconnect the link joint to the wiper motor.
5. Remove the motor cover, and disconnect the wiper motor wire harness, then remove the motor by removing the motor mount bolts. (Wiper motor test is on page 25-9).
6. Install new wiper motor in the reverse order of removal. Coat the link joints with grease and make sure the linkage moves smoothly. (Wiper arm installation is on page 22-131).

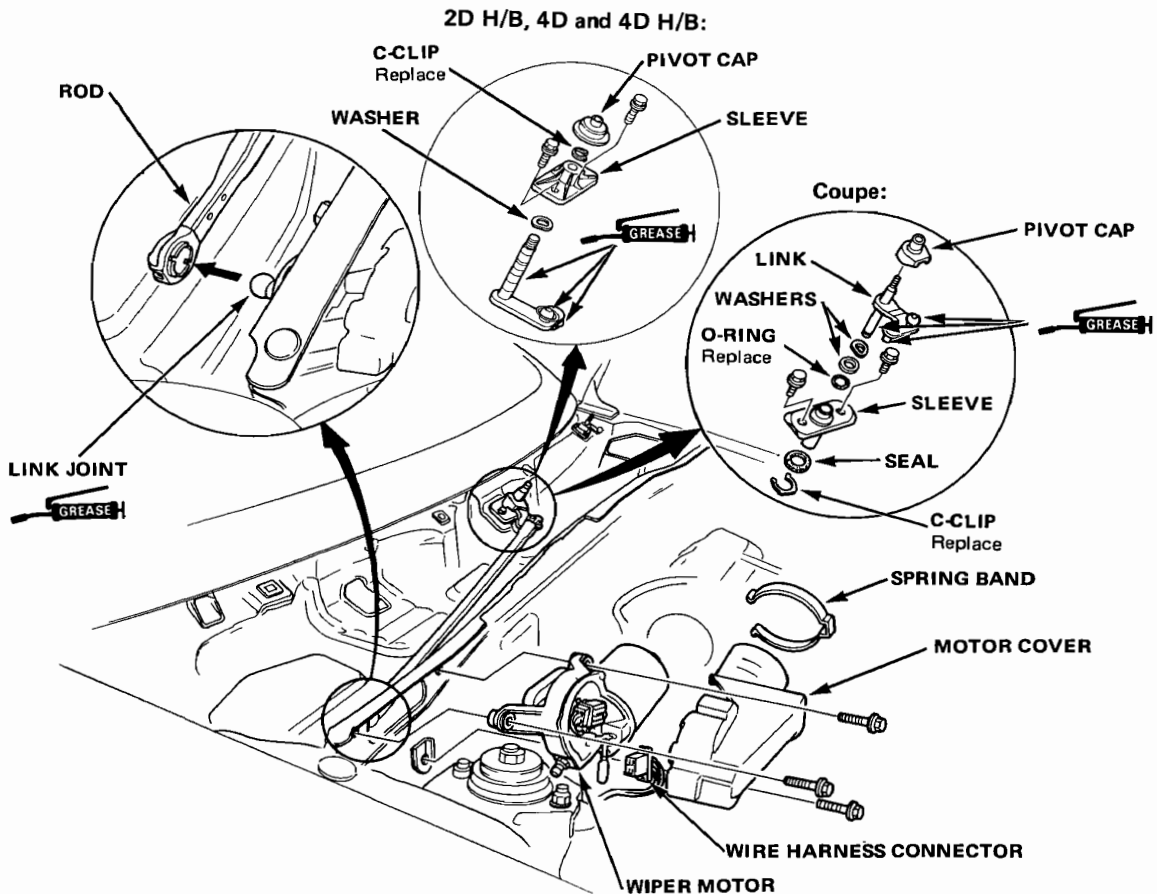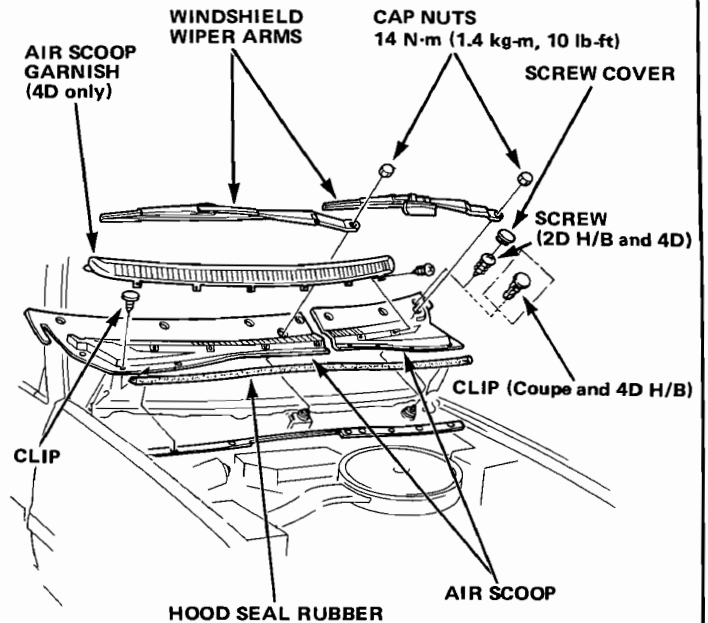





Rear Window Wiper and Motor Replacement

1. Remove the head cover and nut, remove the wiper arm.
2. Remove the pivot cap and special nut (for 2D H/B).
3. Remove the tailgate trim panel, and disconnect the wiper motor wire harness.
4. Remove the motor by removing the motor mount bolts. (Wire motor test is on page 25-10).

2D H/B:

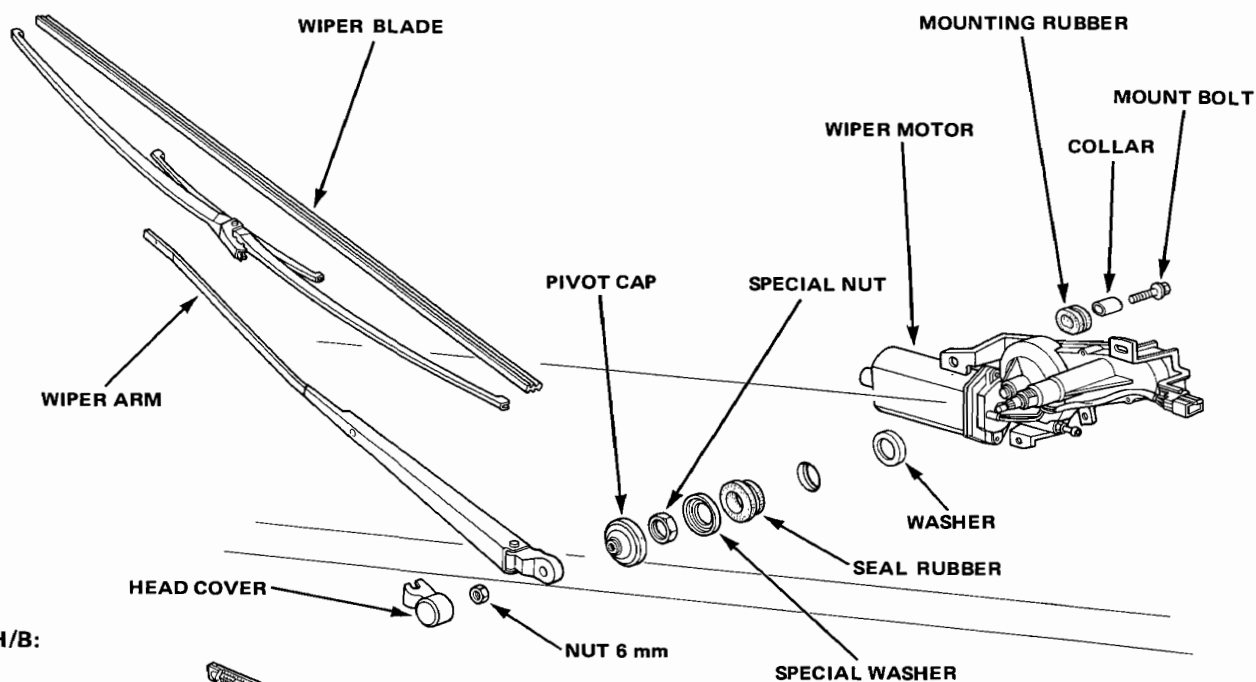


4D H/B:

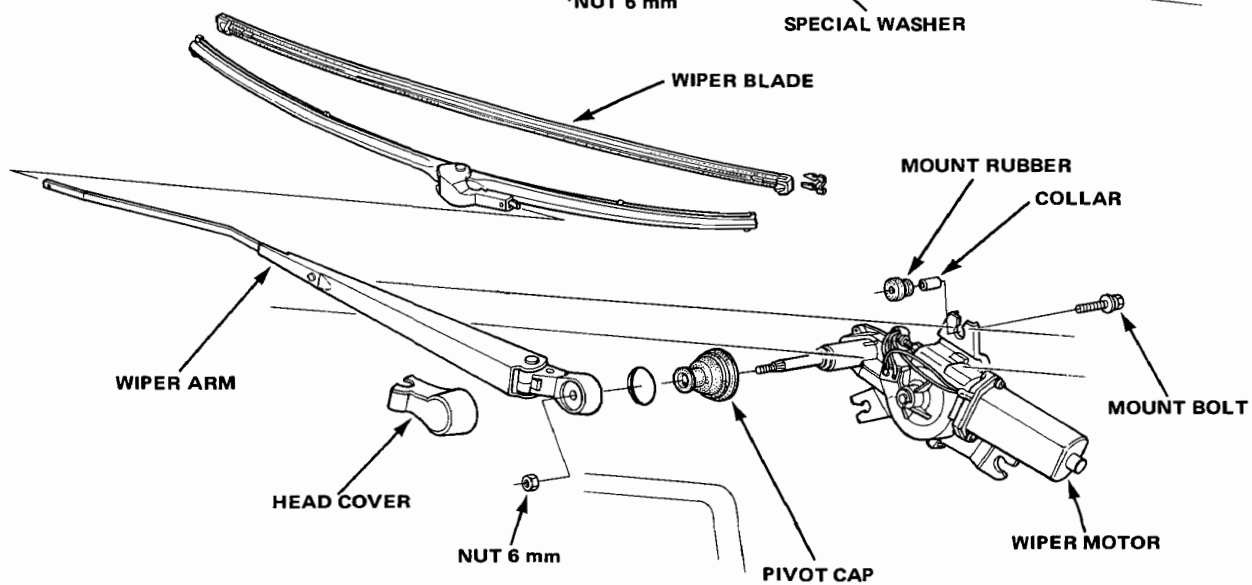

Wipers

Headlight Wiper Motor Replacement

1. Remove the front bumper (page 22-118).
2. Loosen the wiper arm nut.
3. Disconnect the washer tube at the joint.
4. Remove the arm cover and nut, then remove the wiper arm from the wiper motor as shown.
5. Disconnect the wiper motor wire harness, remove the motor by removing the mount bolts. (Wiper motor test is on page 25-21).

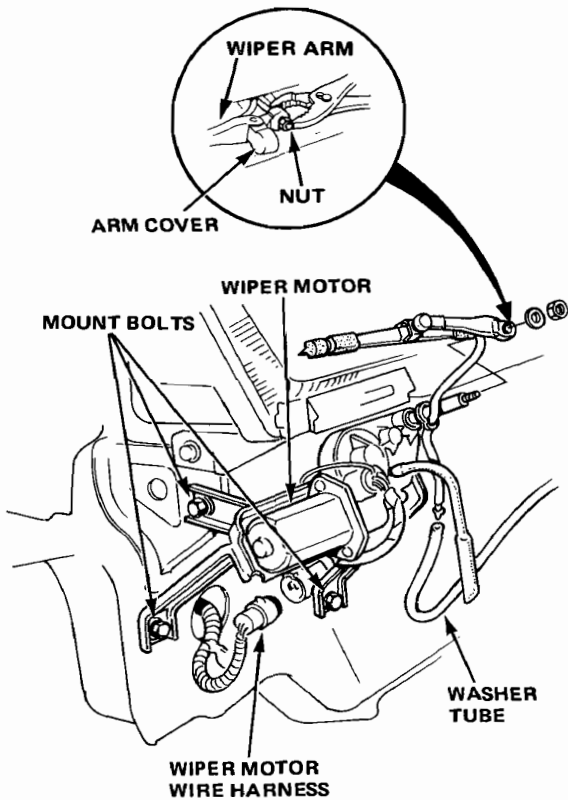

Wiper Arm Tension Check

Attach the spring scale to the end of the wiper arm and pull just enough to lift the wiper off the windshield.

Front:

Left Handle Type:

Coupe: 550±50 G (19±1.8 oz.)
650±50 G (23±1.8 oz.) for wing arm

2D H/B and 4D:

600±50 G (21±1.8 oz.)
650±50 G (23±1.8 oz.) for wing arm

4D H/B: 650±50 G (23±1.8 oz.)
700±50 G (25±1.8 oz.) for wing arm


Right Handle Type:

Coupe and 2D H/B: 650±50 G (23±1.8 oz.)

4D: 600±50 G (21±1.8 oz.)
650±50 G (23±1.8 oz.) for wing arm
4D H/B: 700±50 G (25±1.8 oz.)

Rear: 380±50 G (13±1.8 oz.)

Headlight: 200±30 (7±1.1 oz.)

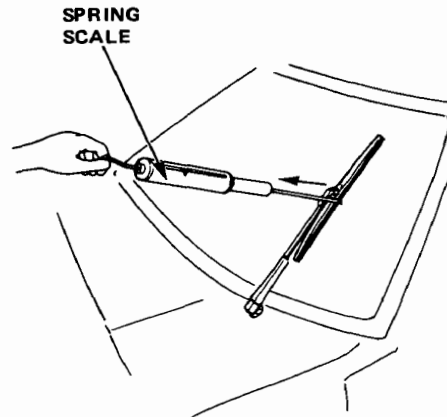



Wiper Arm Installation and Travel

Adjust the wipers so the tips are 20–30 mm (0.8–1.2 in.) from the air scoop at rest.


Wiper Blade Travel

Front:

Coupe	83°±2° on driver side
	96°±2° on passenger side
2D H/B and 4D	84.5°±2° on driver side
	95.6°±2° on passenger side
4D H/B	85°±2° on driver side
	100°30'±2° on passenger side


Rear: 170°30'±3°

Headlight: 160°±3°

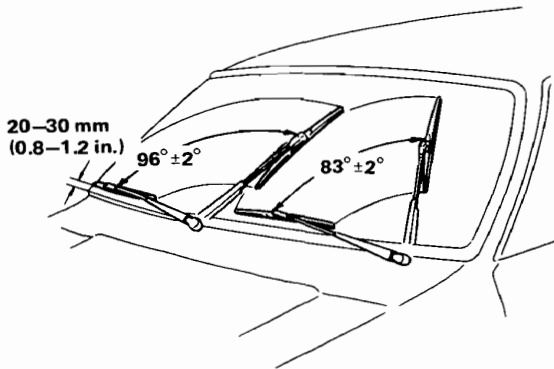


Washer motor and Tube Replacement

NOTE: Washer motor inspection is on pages 25-10 and 21.

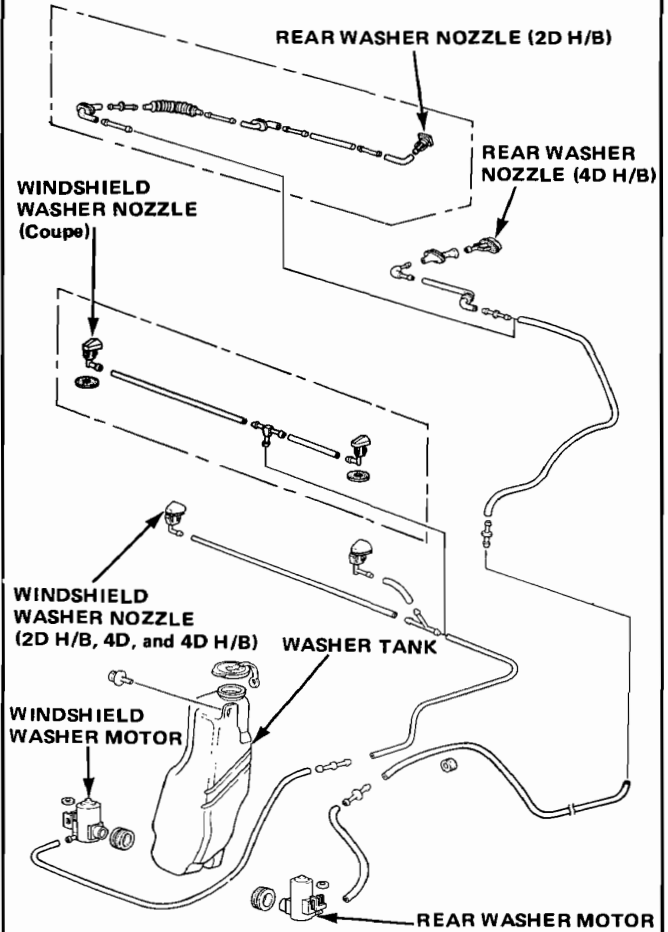

Headlight washer equipped model:

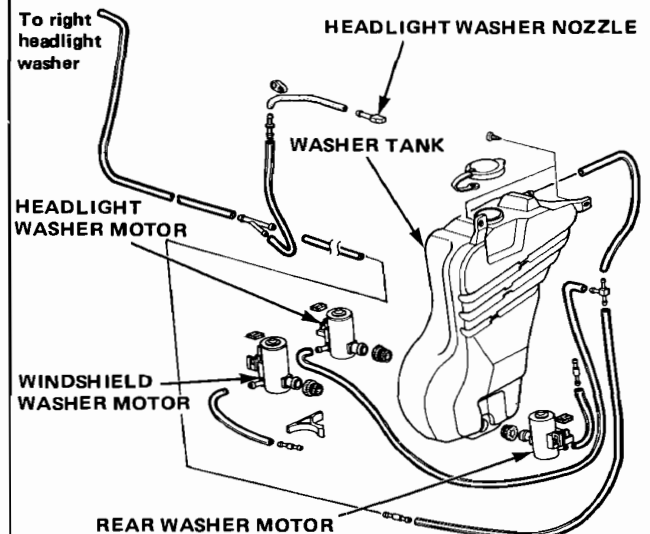

Headlight


Replacement

Canadian model:

CAUTION:

- Do not touch the units with hands or skin while they are on or just after they are put out. They are hot.
- Do not try to replace the units or clean the headlight until with lights on.
- After replacing the units, install the rubber cover while pushing it tightly to the unit.

1. Remove the parking/side marker light and the front grille, then remove the headlight garnish (see page 22-113).
2. Disconnect the wire harness connector, and remove the rubber cover from the sealed beam unit.
3. Remove the headlight assembly by removing the case mount screws.
4. If necessary, replace the sealed beam unit by removing the retaining ring.

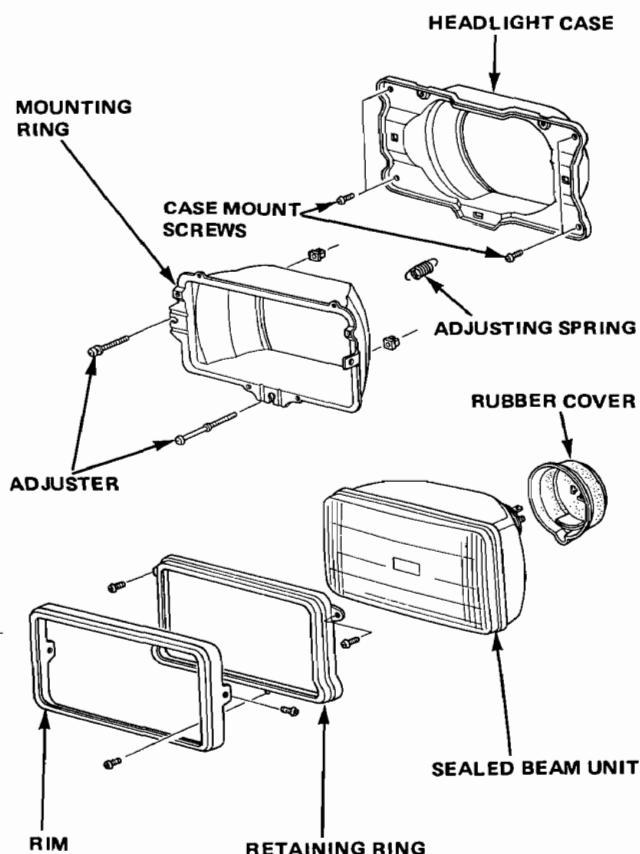


Other models:

CAUTION:

- Do not touch the glass surface of bulbs with bare hand or dirty glove. Otherwise it may cause damage their proper function.
- Do not touch bulbs with hands or skin while they are on or just after they are put out. They are hot.
- Do not try to replace bulbs or clean the headlight until with lights on.
- After replacing bulbs, install the boot while pushing it tightly to the unit.

1. Disconnect the wire harness connector.
2. To remove the headlight, first remove the:
 - Front position light.
 - Front bumper. (page 22-118)
 - Front grille. (page 22-113)
3. Remove the headlight mount bolts to remove the headlight.
4. To remove the bulb only, it is not necessary to remove the headlight.

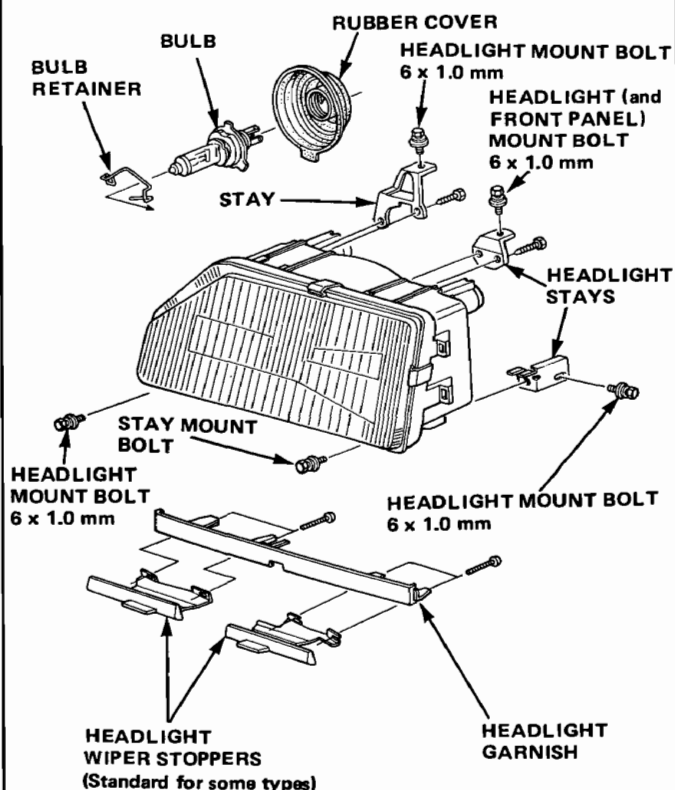




Adjustment


NOTE: Adjust headlight to local requirements.

Canadian model:

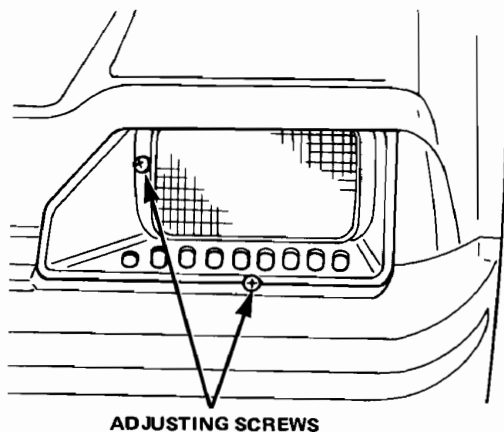

ADJUSTING SCREWS

Other models:

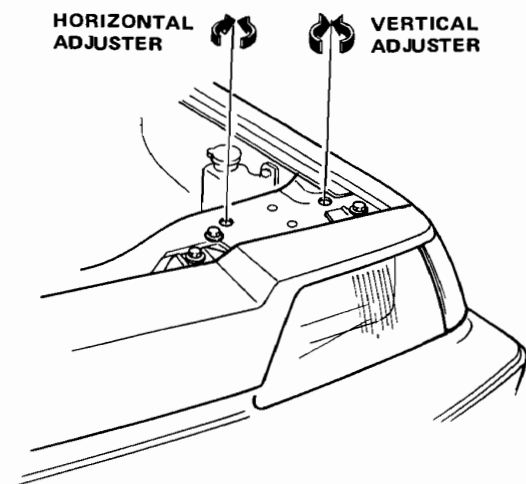


Taillight

Replacement

Coupe, 2D H/B, and 4D:


1. Remove the rear trim panel (Coupe and 2D H/B). (pages 22-61 and 62)
2. Remove the rear panel. (page 22-114)
3. Unscrew the nuts, and remove the taillight.

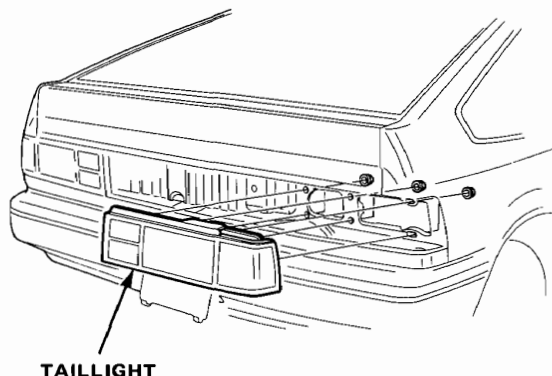

TAILLIGHT


4D H/B:

- Open the tailgate and remove the taillight by removing the screw.

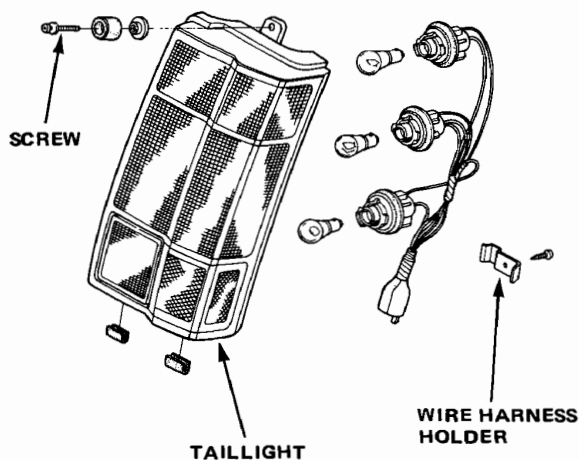

Heater


Index

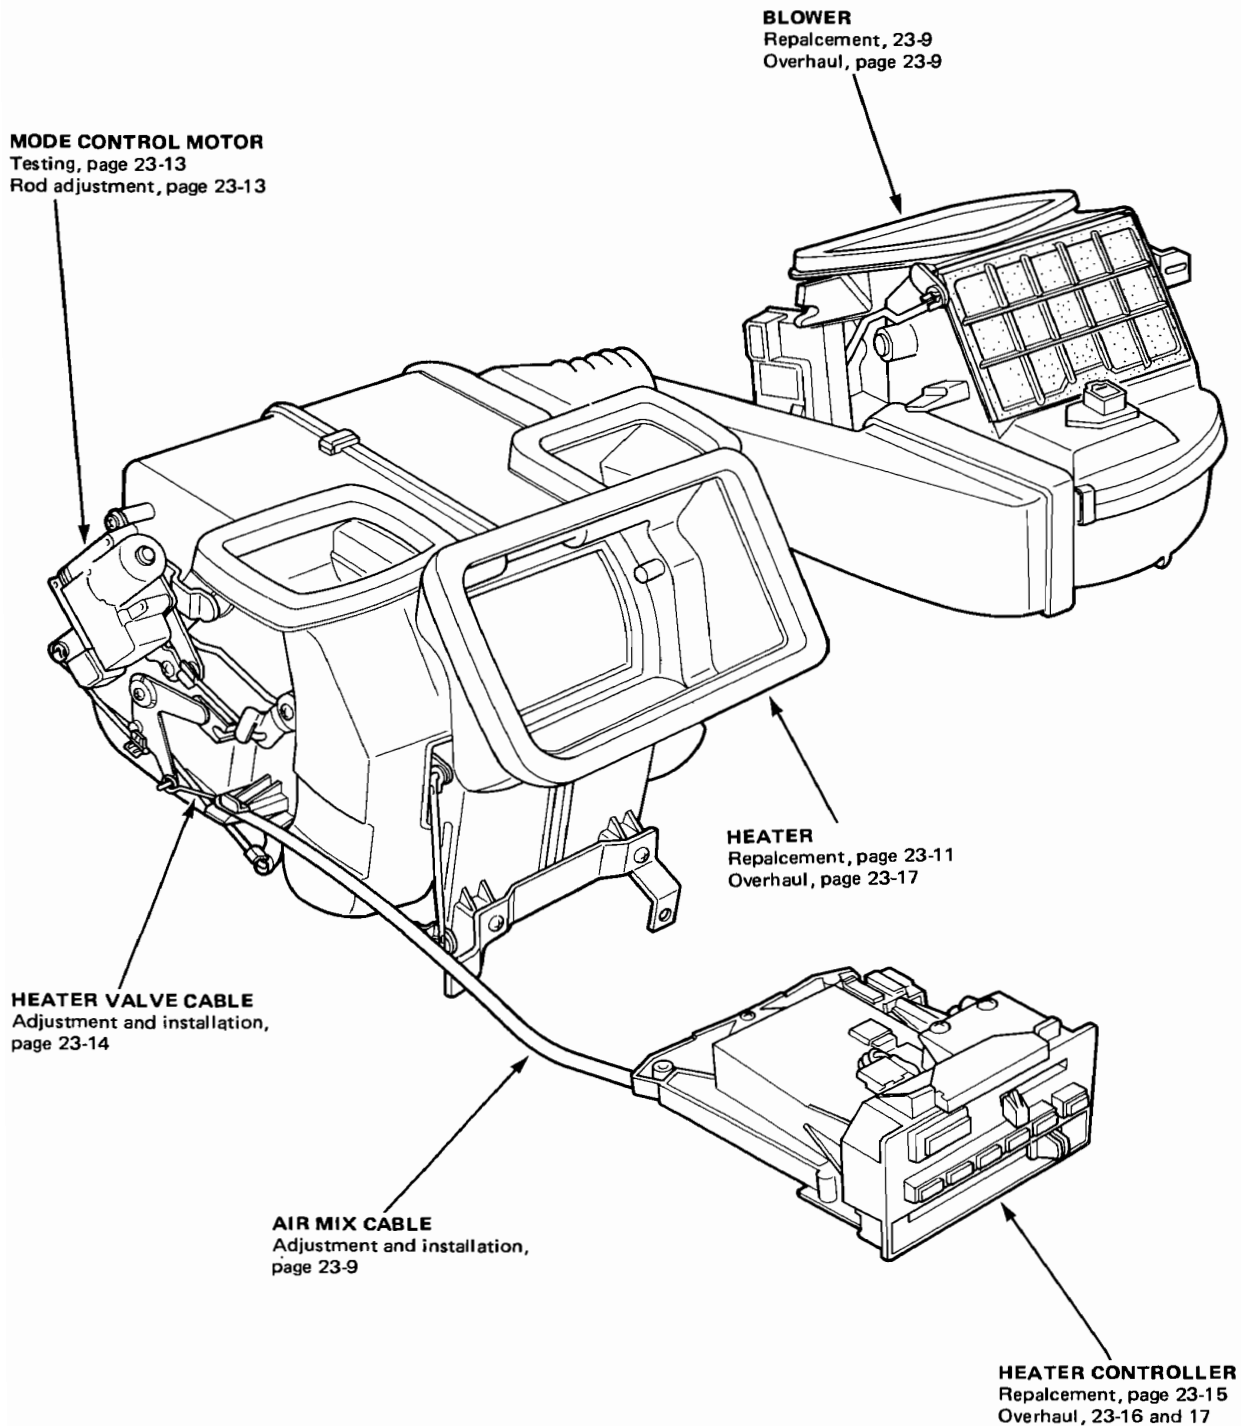


Wiring Diagram



Coupe

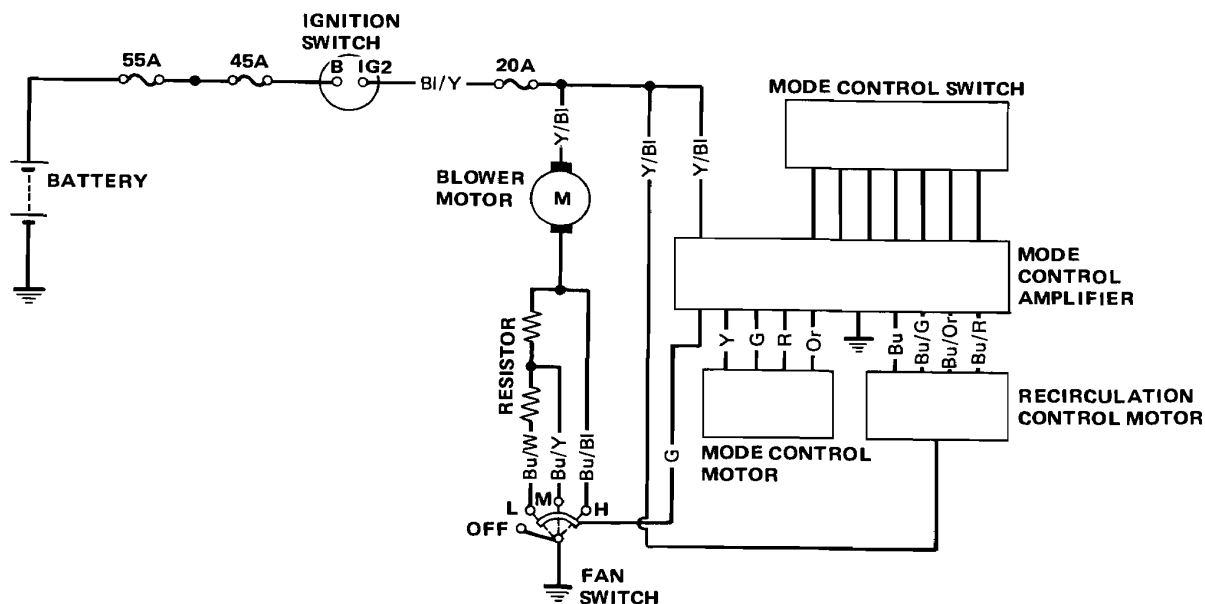

2DH/B, 4D, 4DH/B


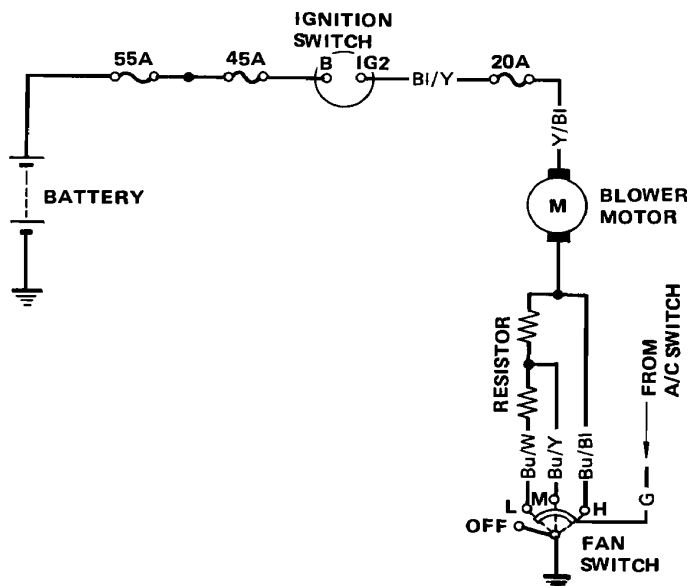


Troubleshooting

1. Insufficient heating


- Duct clogged or disconnected
- Broken air outlet
- Clogged heater valve
- Heater valve control cable misadjusted or disconnected
- Air mix control cable misadjusted or disconnected
- Faulty cooling system thermostat
- Clogged heater core
- Clogged heater hose

2. Air flow doesn't change when buttons are pushed (Coupe).

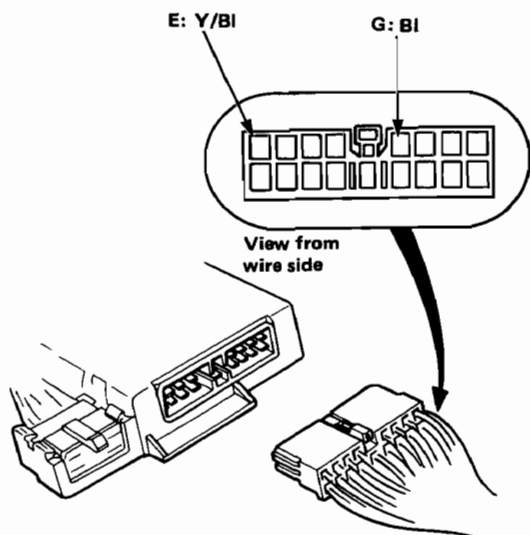
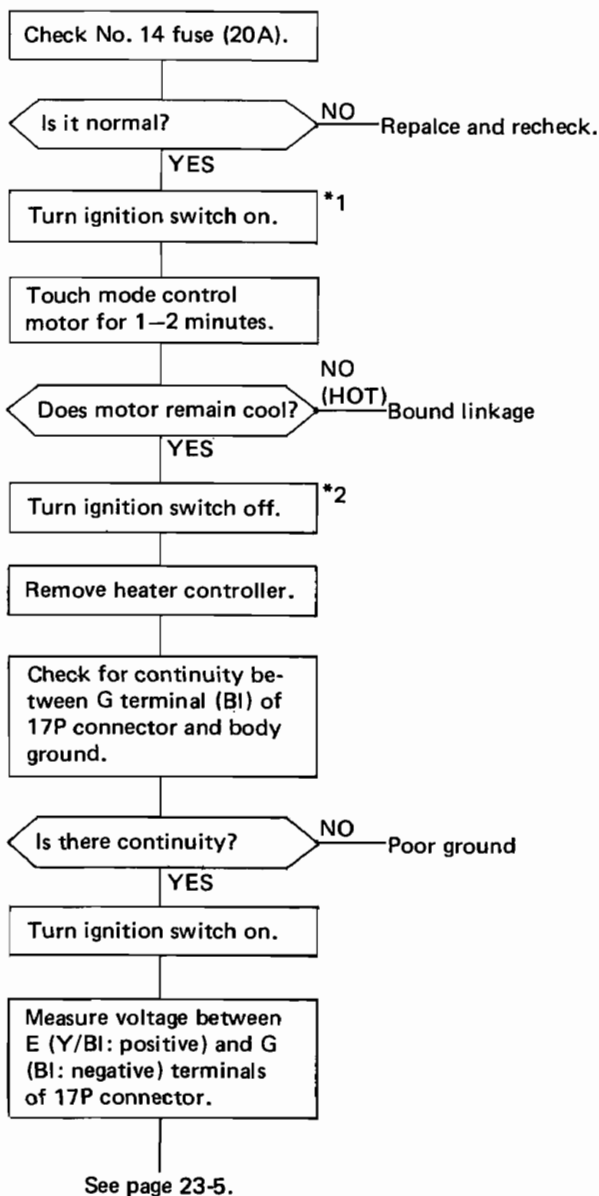




From page 23-4.


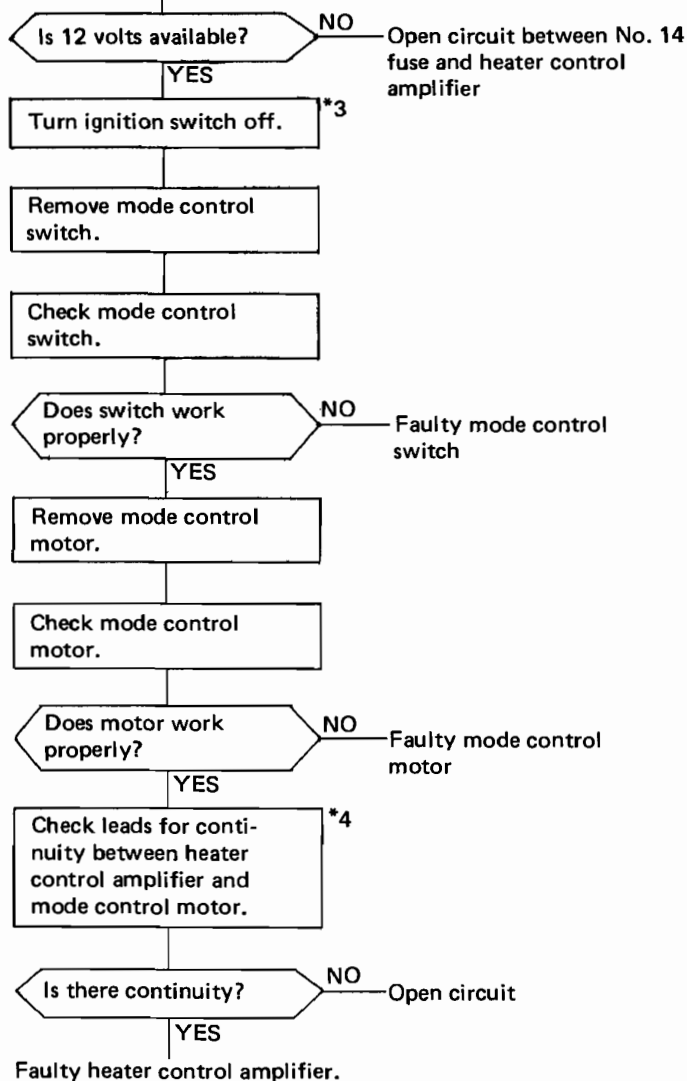


3. Abnormal air flow (Coupe)

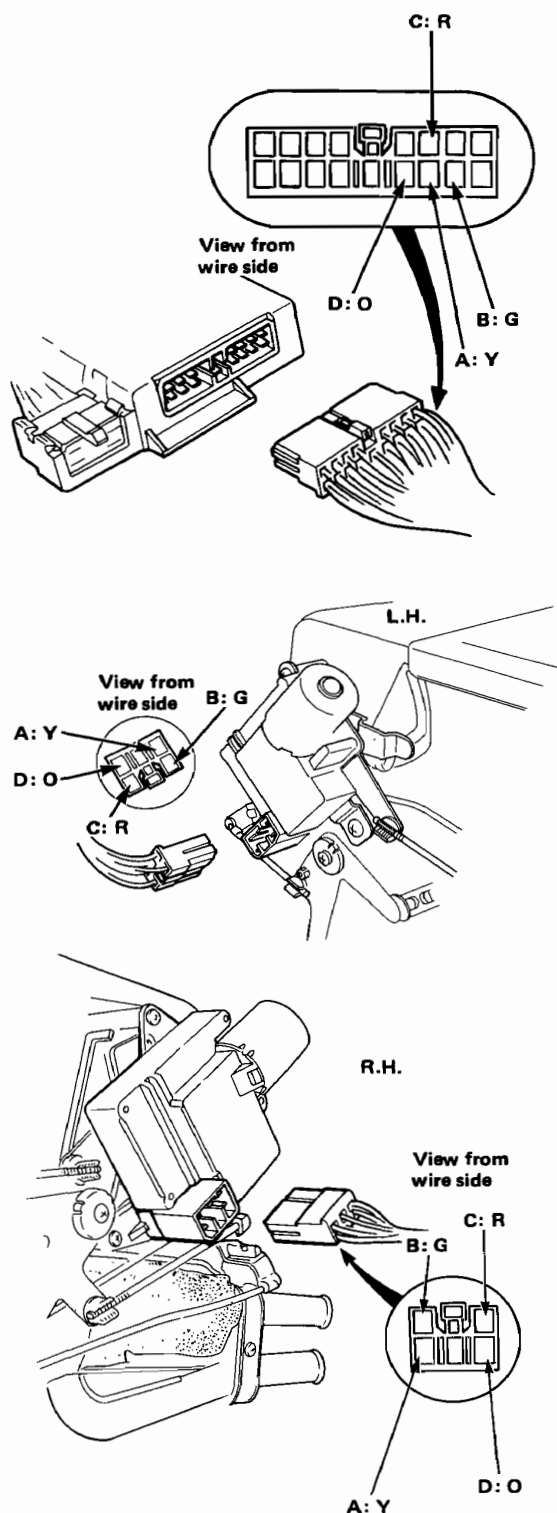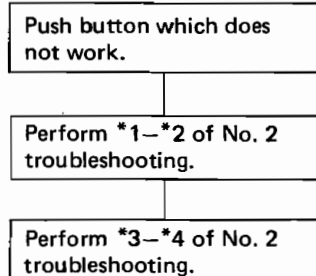

Troubleshooting


4. All LED's are not lit (Coupe)

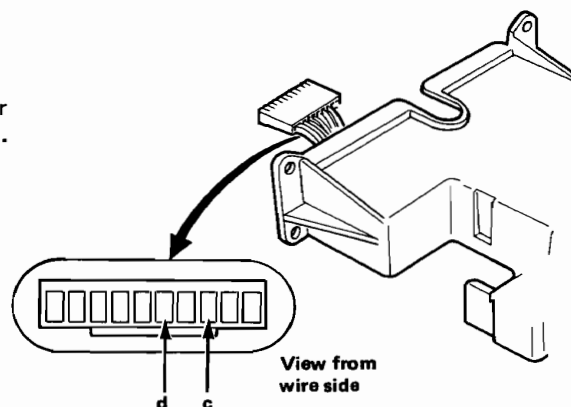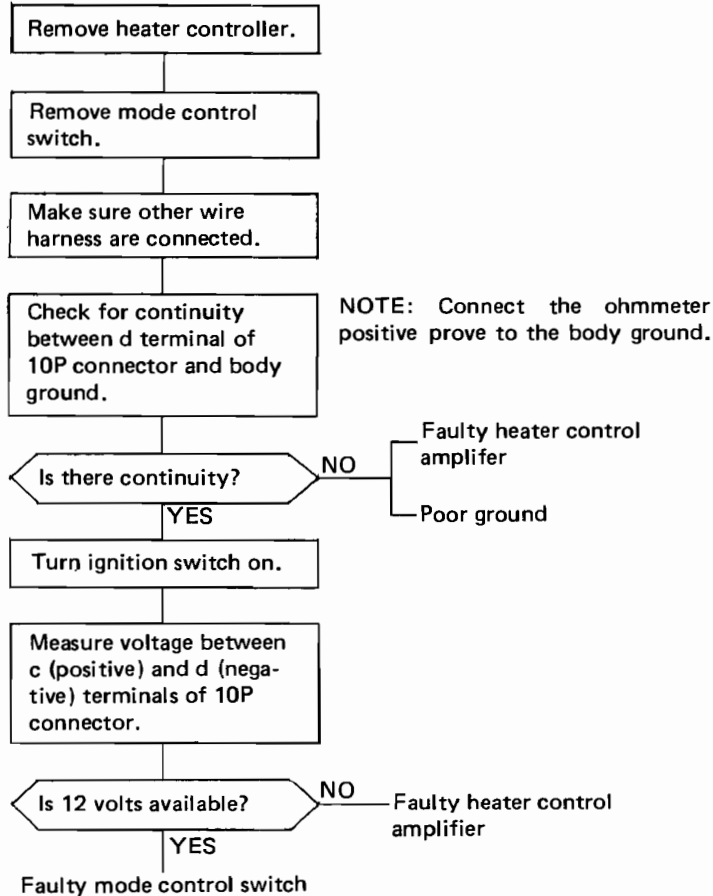

5. One LED does not light when a mode control switch is pushed. However air flow is normal (Coupe).

Faulty Mode control switch

6. Brightness of LED is not reduced when lighting switch is turned on (Coupe).

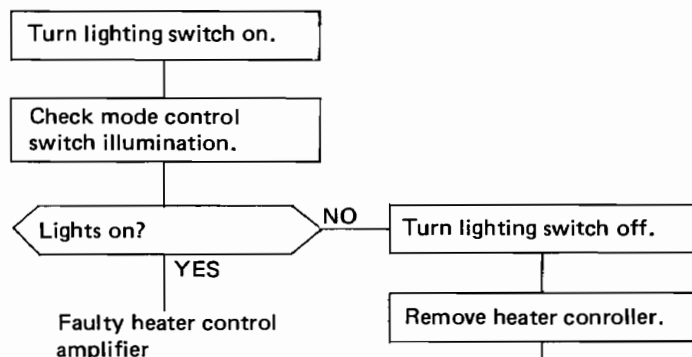

See page 23-7.

From page 23-6.

Check bulb.

Is it normal?

NO — Replace and recheck.

YES

Faulty mode control switch

7. Recirculation door malfunction (Coupe)

Turn ignition switch on.

Touch recirculation control motor and wait for 1–2 minutes.

Does motor remains cool?

NO (HOT) — Bound linkage

YES

Turn ignition switch off.

Remove heater controller.

Check mode control switch.

Does switch work properly?

NO — Faulty mode control switch

YES

Check for continuity between f and Y terminals of heater control amplifier.

Is there continuity?

NO — Faulty heater control amplifier

YES


Check for continuity between g and W terminals of heater control amplifier.

Is there continuity?

NO — Faulty heater control amplifier

YES

See page 23-8.

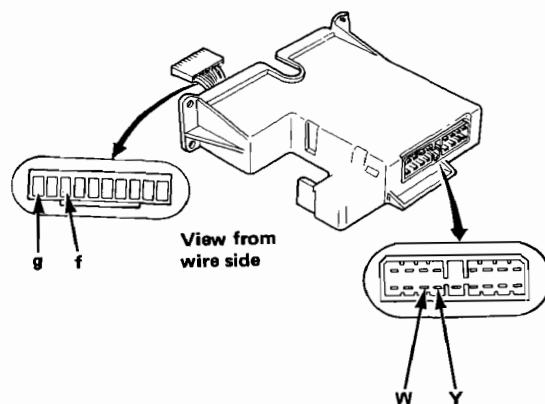

Troubleshooting

From page 23-7.

Remove recirculation control motor.

Check recirculation control motor.

Does motor work properly?

NO

Faulty recirculation control motor.

YES

Check leads for continuity between recirculation control motor and heater control amplifier.

Is there continuity?


NO

Open circuit

YES

Faulty heater control amplifier

NOTE: On cars with an air conditioner, remove the heater controller and check operation of the recirculation motor by applying 12 volts and checking for continuity between terminals of 17P connector of the wire harness. If the motor does not operate, the motor or wire harness may be faulty.

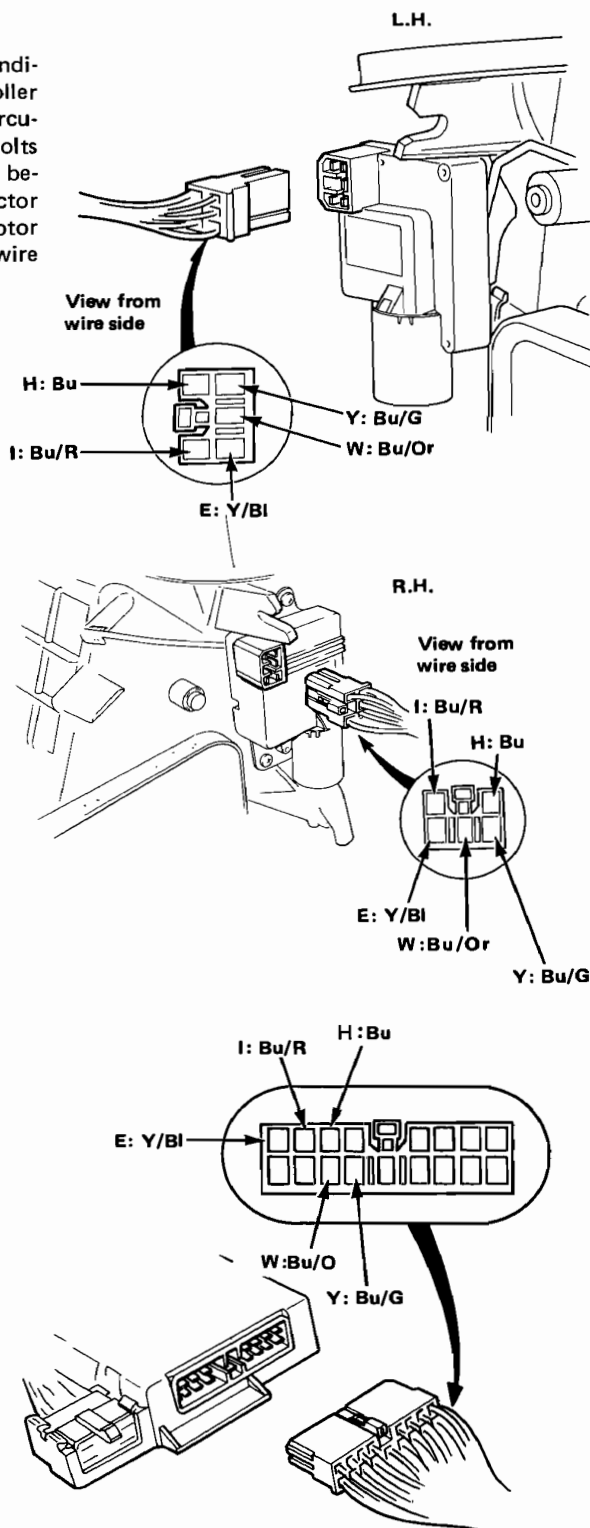

Blower




Replacement

1. Remove the glove box (2DH/B,4D) or passenger's tray (4D H/B).
2. Remove the glove box frame (2DH/B, 4D).
3. Remove the air duct.
4. Disconnect the wire harness from the blower.
5. Remove the three mounting bolts and remove the blower.

Install the blower in the reverse order of removal and make sure that there is no air leakage at mating surface between the blower and the duct.

NOTE: On coupe's with an air conditioner, remove the evaporator unit before removing the blower.

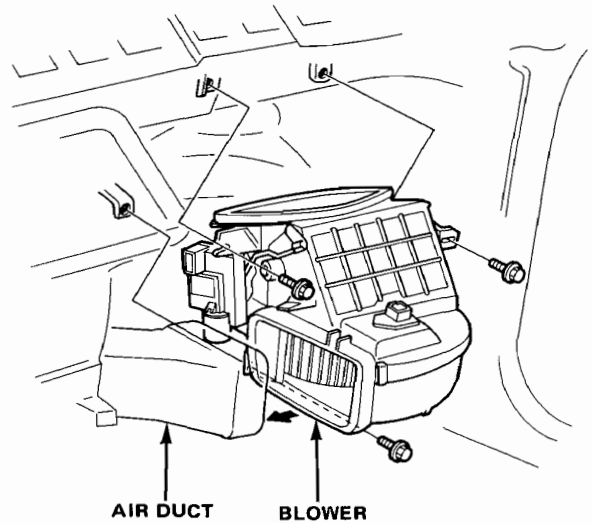


Overhaul



CAUTION: Do not disassemble the linkage on the recirculation control motor.

RECIRCULATION
CONTROL MOTOR


RESISTOR

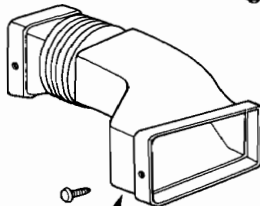

AIR DUCT

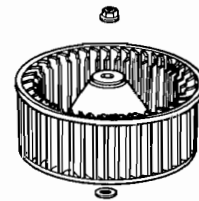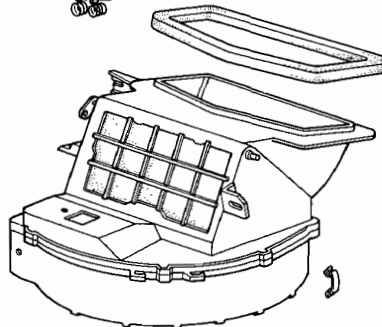

FAN



BLOWER
MOTOR




NOTE: 2D shown.

Blower

Recirculation Control Motor Testing (Coupe)


- Connect a battery positive lead to the E terminal of the recirculation control motor, and negative lead to the I terminal. The motor should run.
- Connect a battery and bulb as shown. Connect the ohmmeter probes to the Y and H terminals. The ohmmeter should constantly cycle between indicating continuity and no continuity. The connect the ohmmeter to terminals W and H. The ohmmeter should continue to cycle back and forth but hesitate slightly longer when indicating continuity.

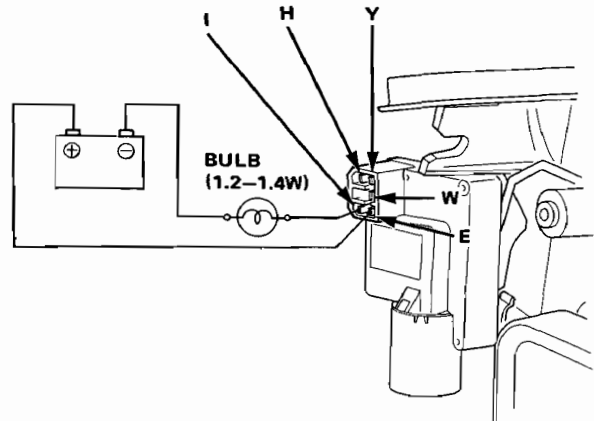

Recirculation Control Rod Adjustment (Coupe)

1. Connect the wire harness and turn on the ignition switch. Push in the REC button.
2. Move the recirculation door to the REC position.
3. Insert the rod into the clip.

NOTE: Check that the motor remains cool if the door is left in each position for 2 minutes.

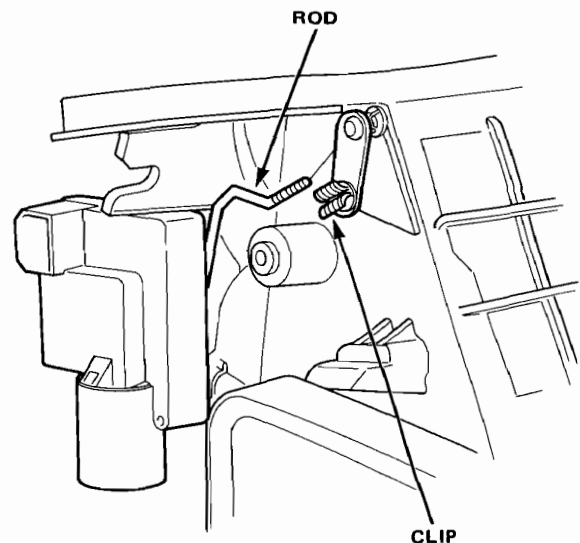


Heater

Replacement




1. Drain coolant at the radiator.
2. Disconnect the heater hoses at the firewall.
NOTE: Coolant will run out when the hoses are disconnected, drain it into a clean drip pan.
3. Disconnect the heater valve cable from the heater valve.
4. Remove the heater lower mounting nut.

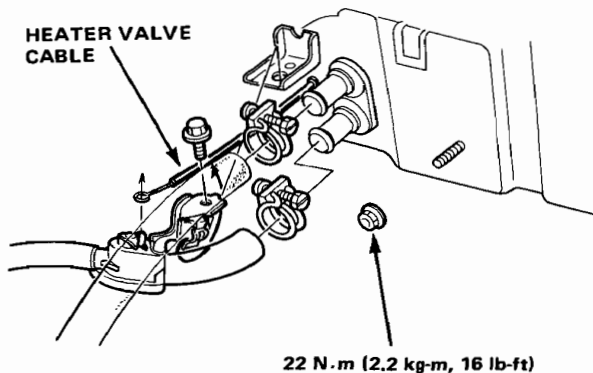

5. Remove the dashboard. (Pages 22 - 108 to 110)

6. Remove the heater mounting bolts (2), then pull the heater away from the body and remove it.

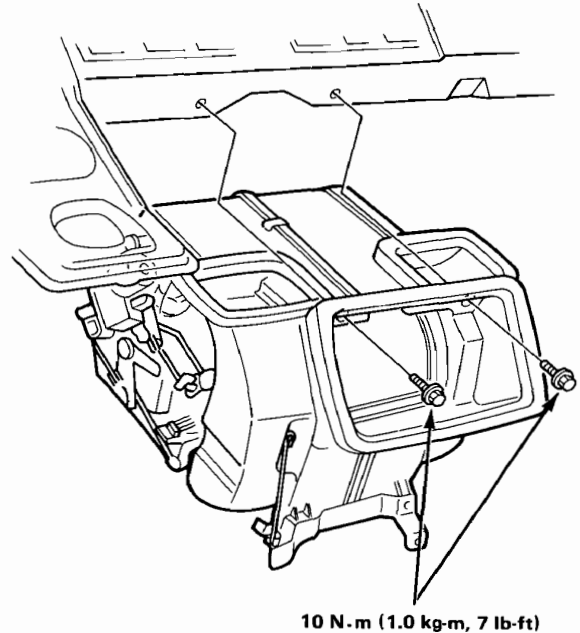


Install in reverse order of removal, and:

- Apply a sealant to the grommets.
- Do not interchange the inlet and outlet hoses. Make sure that hose clamps are secure.
- Loosen the bleed bolt on the engine and refill the radiator and reservoir tank with the proper coolant mixture.
Tighten the bleed bolt when all trapped air has escaped and coolant begins to flow from it.
- Connect all cables so they are properly adjusted (see page 23-14).


Heater

Replacement



Coupe

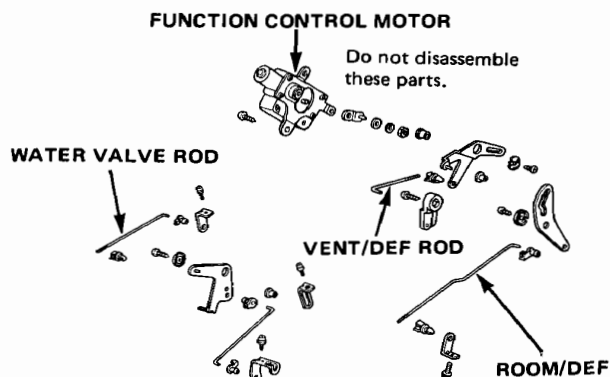

CAUTION: Do not remove the linkage which is installed on the function control motor.

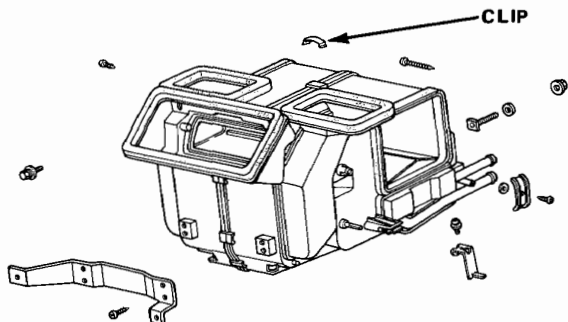


2DH/B, 4D, 4DH/B

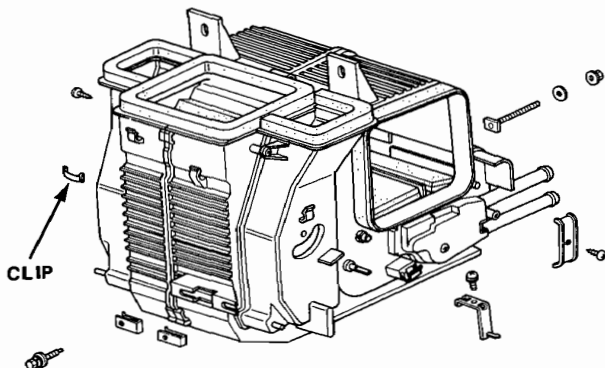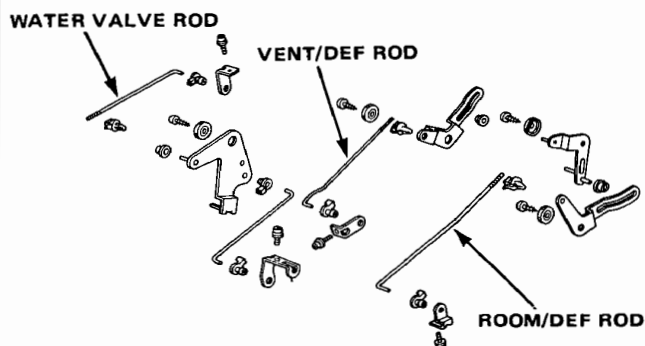


To adjust the door,

1. Set the function control arm to the DEF position.
2. Set the doors to the DEF position.
3. Insert the rods into the clips.
4. Move the function control arm to the VENT position to be certain that the doors operate smoothly.

Coupe:

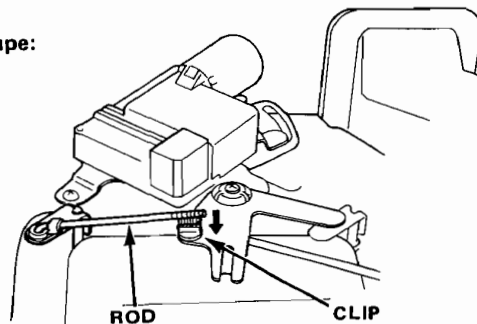

2DH/B, 4D, 4DH/B

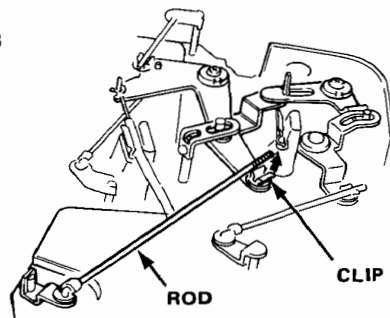

If the air mix control rod*¹ is disconnected from the air mix control arm, move the air mix control arm to the COLD position. Then move the control rod to the COLD position and insert the rod into the clip.

*¹ L.H.: Air mix control rod

R.H.: Heater valve control rod

Heater



Mode Control Motor Testing (Coupe)

- Measure the resistance between D and no marked terminals.


Resistance: 5 k Ω

- Check motor operation by connecting a wire from the battery positive terminal to the A terminal, and a battery ground to the B terminal. Reverse the wires to be sure the motor will run in both directions.



NOTE: The motor will be blocked externally. Be sure to disconnect the battery from the motor as soon as the motor is stopped. Failure to do so will damage the motor.

- Hook up a battery and bulb to the motor terminals as shown, and measure the resistance between the terminals C and D. The motor is normal if the resistances measured agree with those shown in the table on the right. Also check the resistances with the battery polarity reversed.

L.H.

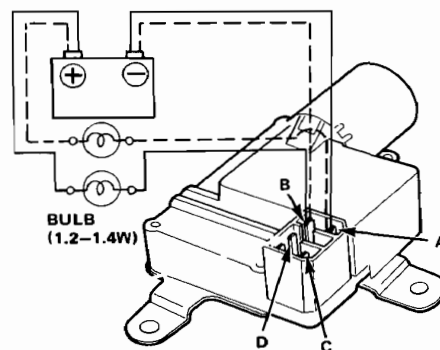


R.H.

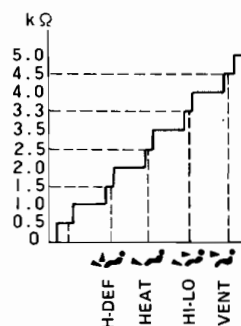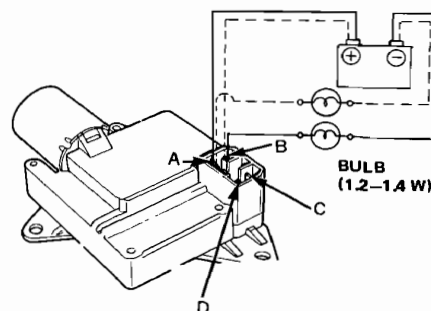

Rod Adjustment(Coupe)

1. Attach the mode control motor to the heater.
2. Connect the wire harness to the motor and turn the ignition switch on. Push in the (DEF) button.
3. Move the VENT/DEF door to the DEF position and insert the rod into the clip.
4. Move the ROOM/DEF door to the DEF position and insert the rod into the clip.

NOTE: Check that the motor remains cool when the doors are held in each position for 2 minutes.

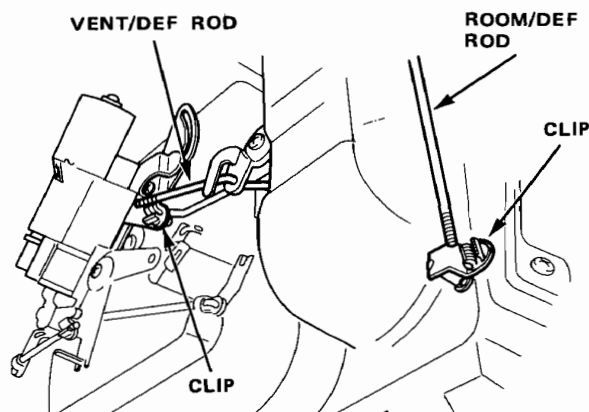


Heater Control Cable

Adjustment and Installation

Air Mix Cable

1. Slide the temperature control lever to COLD.
2. Close the air mix door, then connect the end of the cable to the arm and secure the cable housing with the clamp.

AIR MIX CABLE

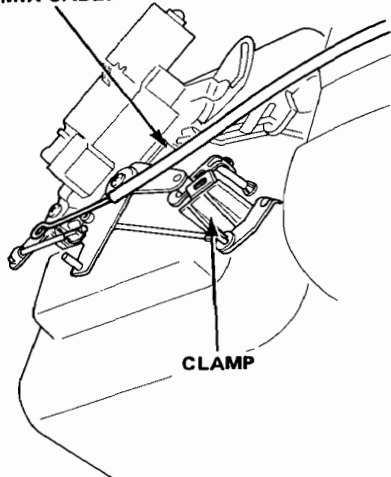


3. While looking through the heater duct opening, slide the temperature lever to HOT and make sure the air mix doors open fully, then slide the lever back to COLD. Make sure they close fully.

Mode Control Cable

1. Slide the mode control lever to the DEF position.
2. Move the mode control arm to the DEF position.
3. Connect the cable end to the function control arm, then secure the cable housing with the clamp.

MODE CONTROL CABLE

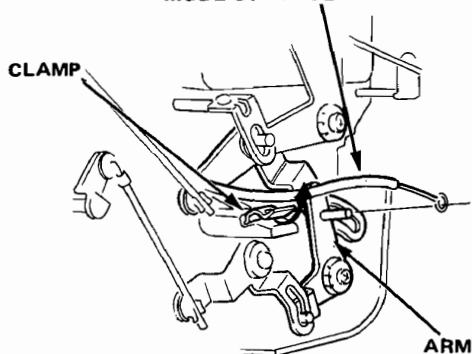


4. Move the mode control lever to the VENT position and check that the linkage operates smoothly.

Heater Valve Cable


1. Extend the end of the cable housing 5 mm (1/5 in.) from the end of the clamp boss and secure the housing with the clamp.
2. Connect the cable end to the heater valve control arm.

HEATER VALVE CABLE

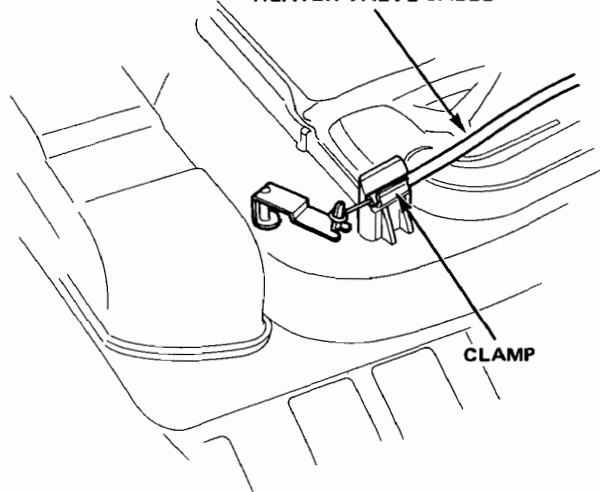

3. Slide the temperature control lever to COLD. Close the heater valve fully, then connect the end of the heater cable to the valve arm, and secure the cable housing with the clamp as shown.

HEATER VALVE CABLE

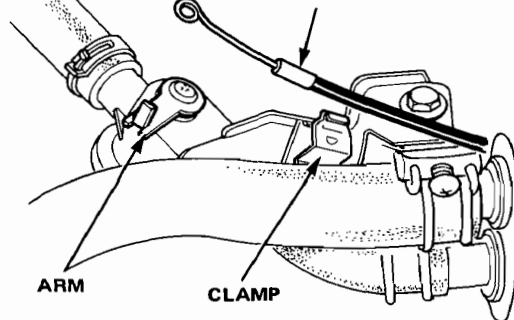


Heater Control Cable

Adjustment and Installation

Recirculation Cable

1. Slide the recirculation lever to the FRESH position.
2. Open the recirculation door.
3. Connect the recirculation cable to the recirculation arm and secure the cable housing with the clamp.

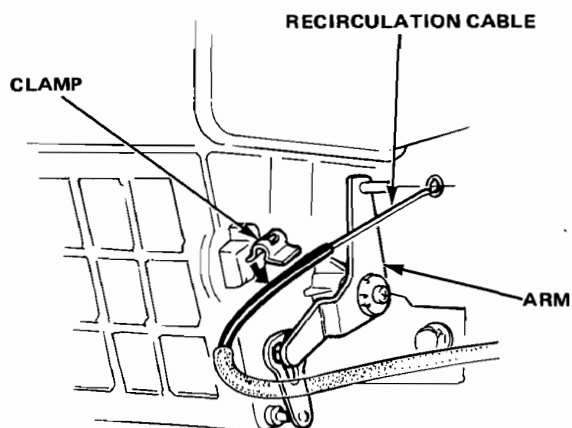

4. Move the recirculation lever to the REC position to be certain that the linkage operates smoothly.


Heater Control Panel



Replacement

Coupe

1. Disconnect the air mix cable from the heater.
2. Remove the trim panel.
3. Remove the temperature control lever knob and four screws, then remove the heater control panel from trim panel.

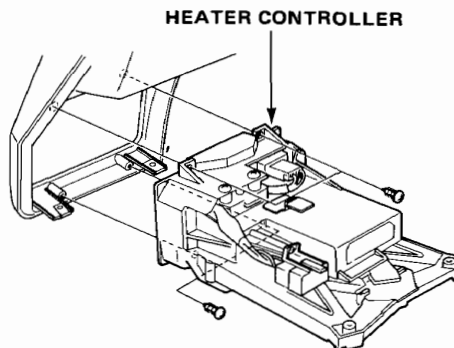

2DH/B, 4D, 4DH/B

1. Disconnect the temperature control cable, the function control cable and the recirculation cable.
2. Remove the heater control knobs and the fan switch knob.


2DH/B and 4D

3. Remove the center face panel.
4. Remove the heater control attaching screws.

4DH/B

3. Remove the illumination panel.
4. Remove the steering column mounting bolts and drop the steering column.
5. Remove the steering column mounting bolts, and drop the steering column.
6. Pull out the heater control panel from the side post the steering column.


NOTE: On the hatchback and sedan, the fan switch can be serviced separately. Remove the ashtray and heat shield. Remove the heater control knob and panel. Then remove the fan switch by removing the nut.

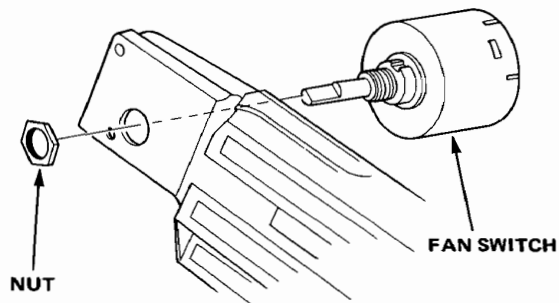


Heater Controller

Overhaul

Coupe

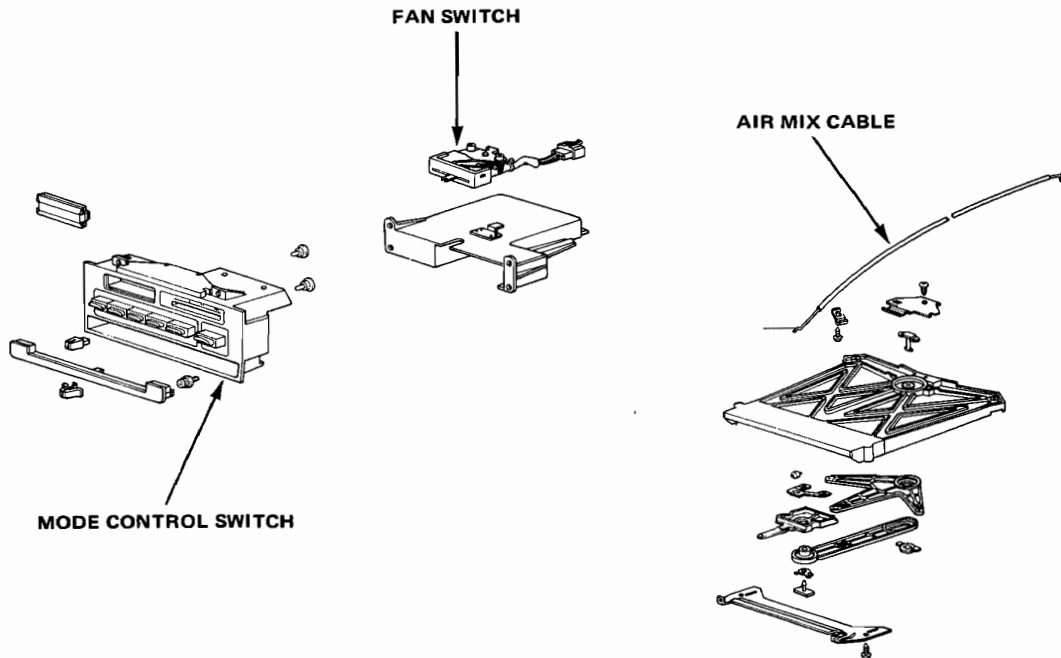

2DH/B, 4D

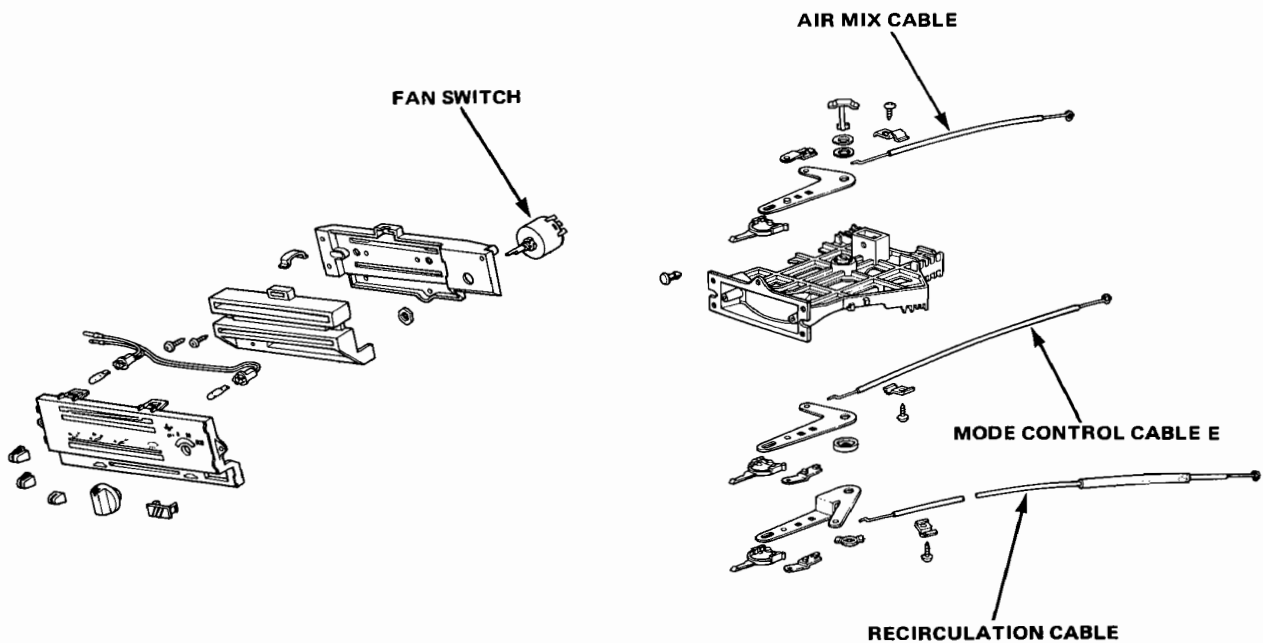


Heater Controller



Overhaul

4DH/B

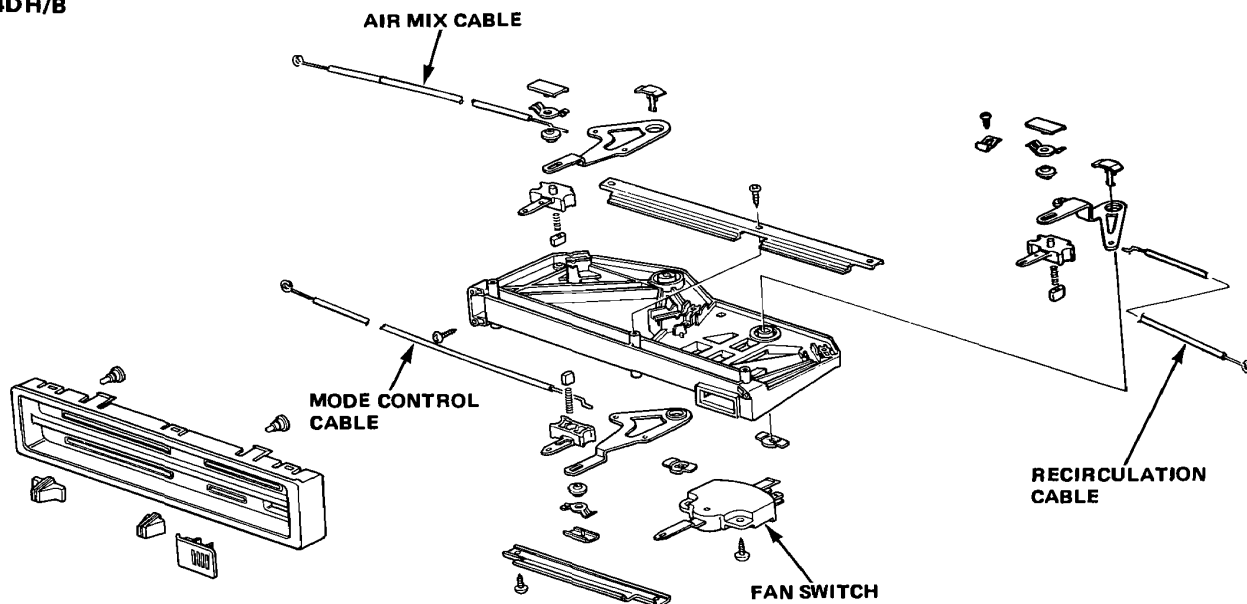

Mode Control Switch Testing


- Check the resistances between a and b terminals when pushing the buttons.

Resistances:	VENT		: 0kΩ
	HI-LO		: 1kΩ
	HEAT		: 2kΩ
	H-DEF		: 3kΩ
	DEF		: 4kΩ

- There should be continuity between the e and g terminals when the REC button is pushed in, and no continuity when released. There should be no continuity between e and f terminals when the REC button is pushed, in and continuity when released.

NOTE:

- The "c" terminal is the positive terminal to the LED and the "d" terminal is negative. The LED can not be tested with ordinary circuit testers. If there is any abnormality in the LED, refer to troubleshooting to determine the cause of trouble.
- The "h" terminal is the positive terminal of the LED and "i" terminal is negative.

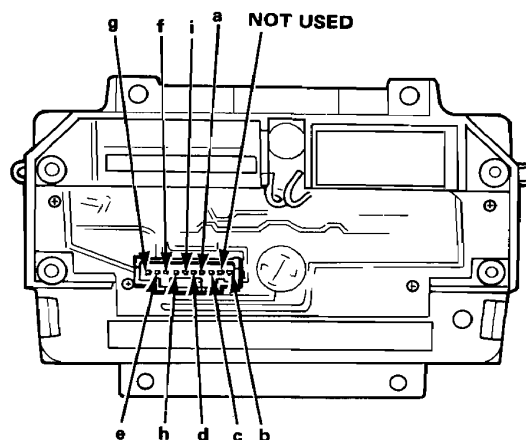


Heater Controller

Fan Switch Testing


Check for continuity according to the table.

Terminal Position	E	L	M	H	C
OFF					
I	○	○			○
II	○		○		○
III	○			○	○


Coupe

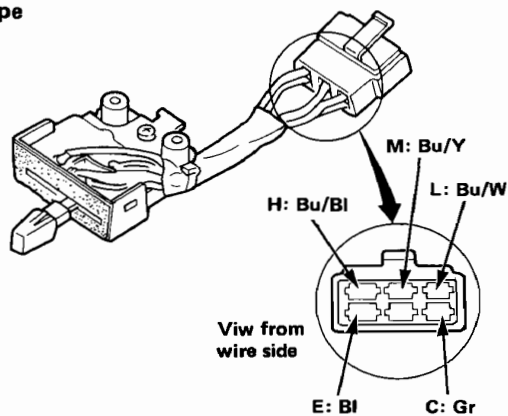

2DH/B, 4D

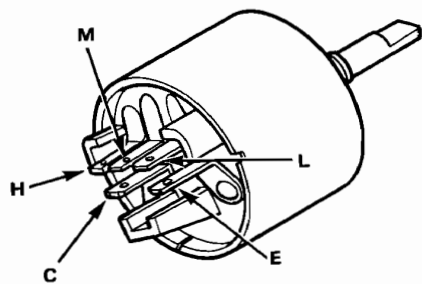

4DH/B

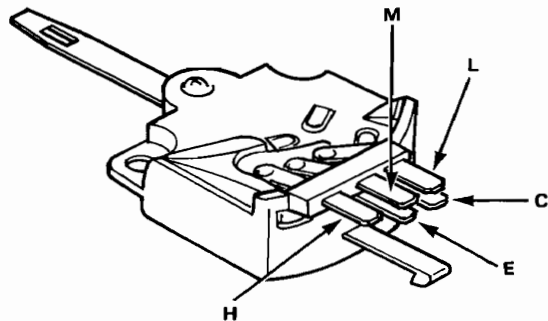


Index

System


HEATER AND AIR CONDITIONING CONTROL PANEL

Activates compressor and
controls heater and air conditioner
air mix.
Removal, page 23-15

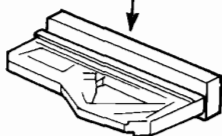

BLOWER

Forces air thru the evaporator.
Removal, page 23-9

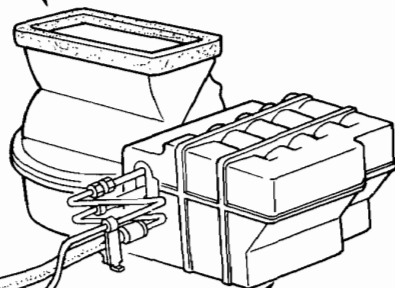

EVAPORATOR

As refrigerant circulates, heat
is absorbed from the surrounding
passenger compartment air.
Replacement, page 24-18
Overhaul, page 24-19

IDLE BOOST DIAPHRAGM

Increases the idle speed to
compensate for RPM drop due
to compressor load.
Replacement, page 24-30
Idle adjustment, page 24-30



IDLE CONTROL SOLENOID

Activates the Control
Diaphragm when
compressor is running.
Replacement, page 24-30

CONDENSER

Dissipates the heat which
was absorbed by the refrigerant.
Replacement, page 24-17

COMPRESSOR

Compresses the refrigerant and
then forces it thru the condenser.
Compressor troubleshooting, page 24-13
Clutch inspection, page 24-22
Overhaul, page 24-23


RECEIVER AND FILTER/DRYER

Serves as a reservoir which filters and
removes moisture from the refrigerant.



Evaporator

Overhaul, page 24-19
Replacement, page 24-18

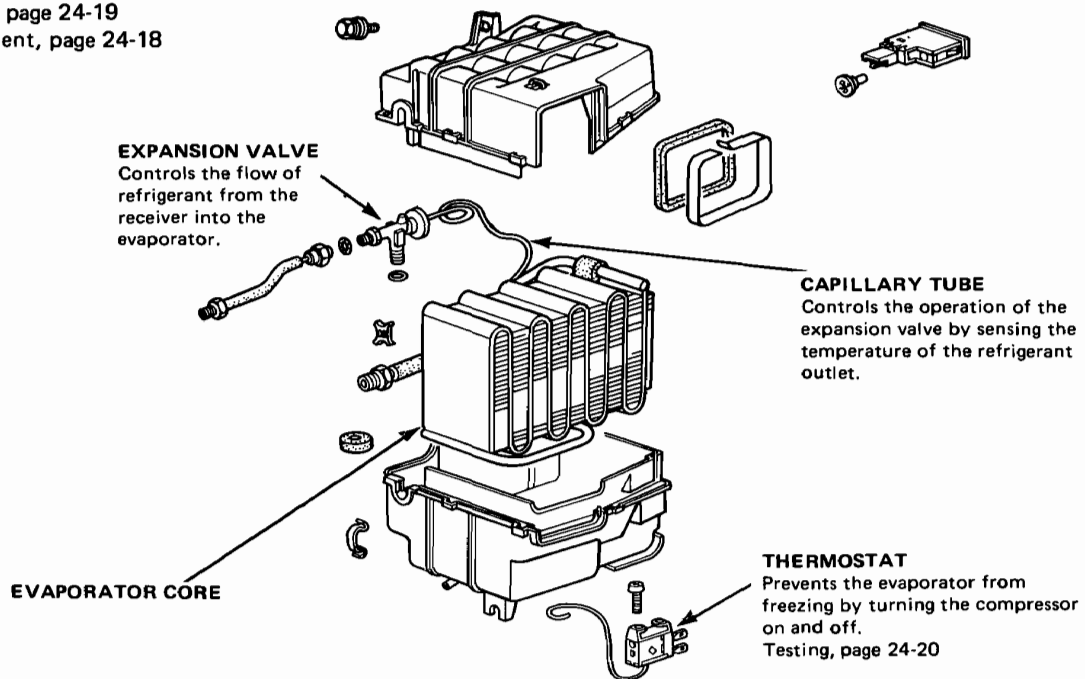


Condenser

CHARGING and TESTING VALVES


System charging, page 24-29
Pressure testing, page 24-27



CONDENSER
Replacement, page 24-17

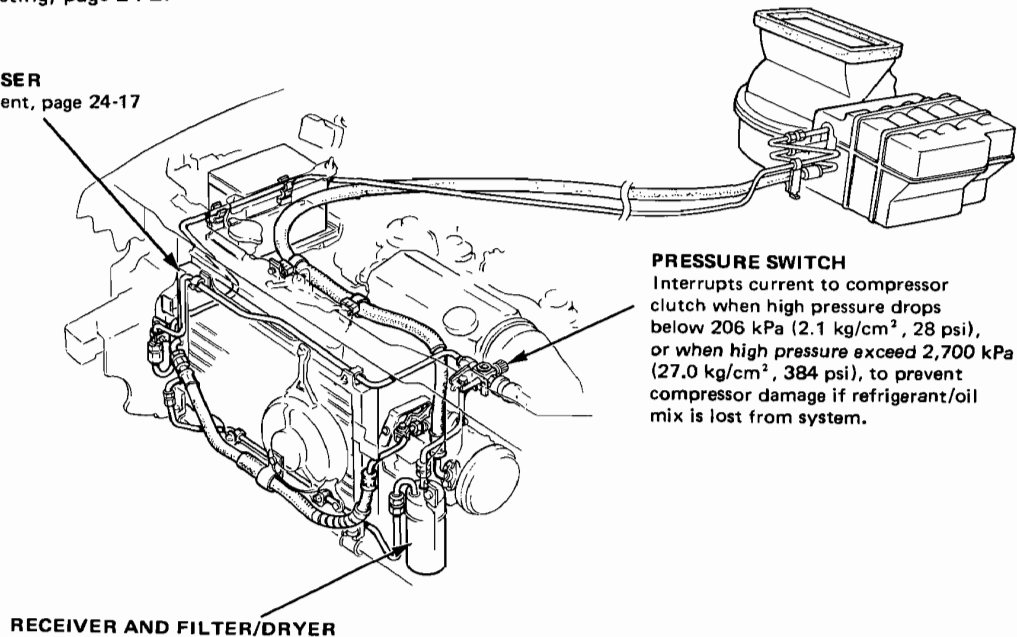

Wiring Diagram

Coupe (Canadian Model)

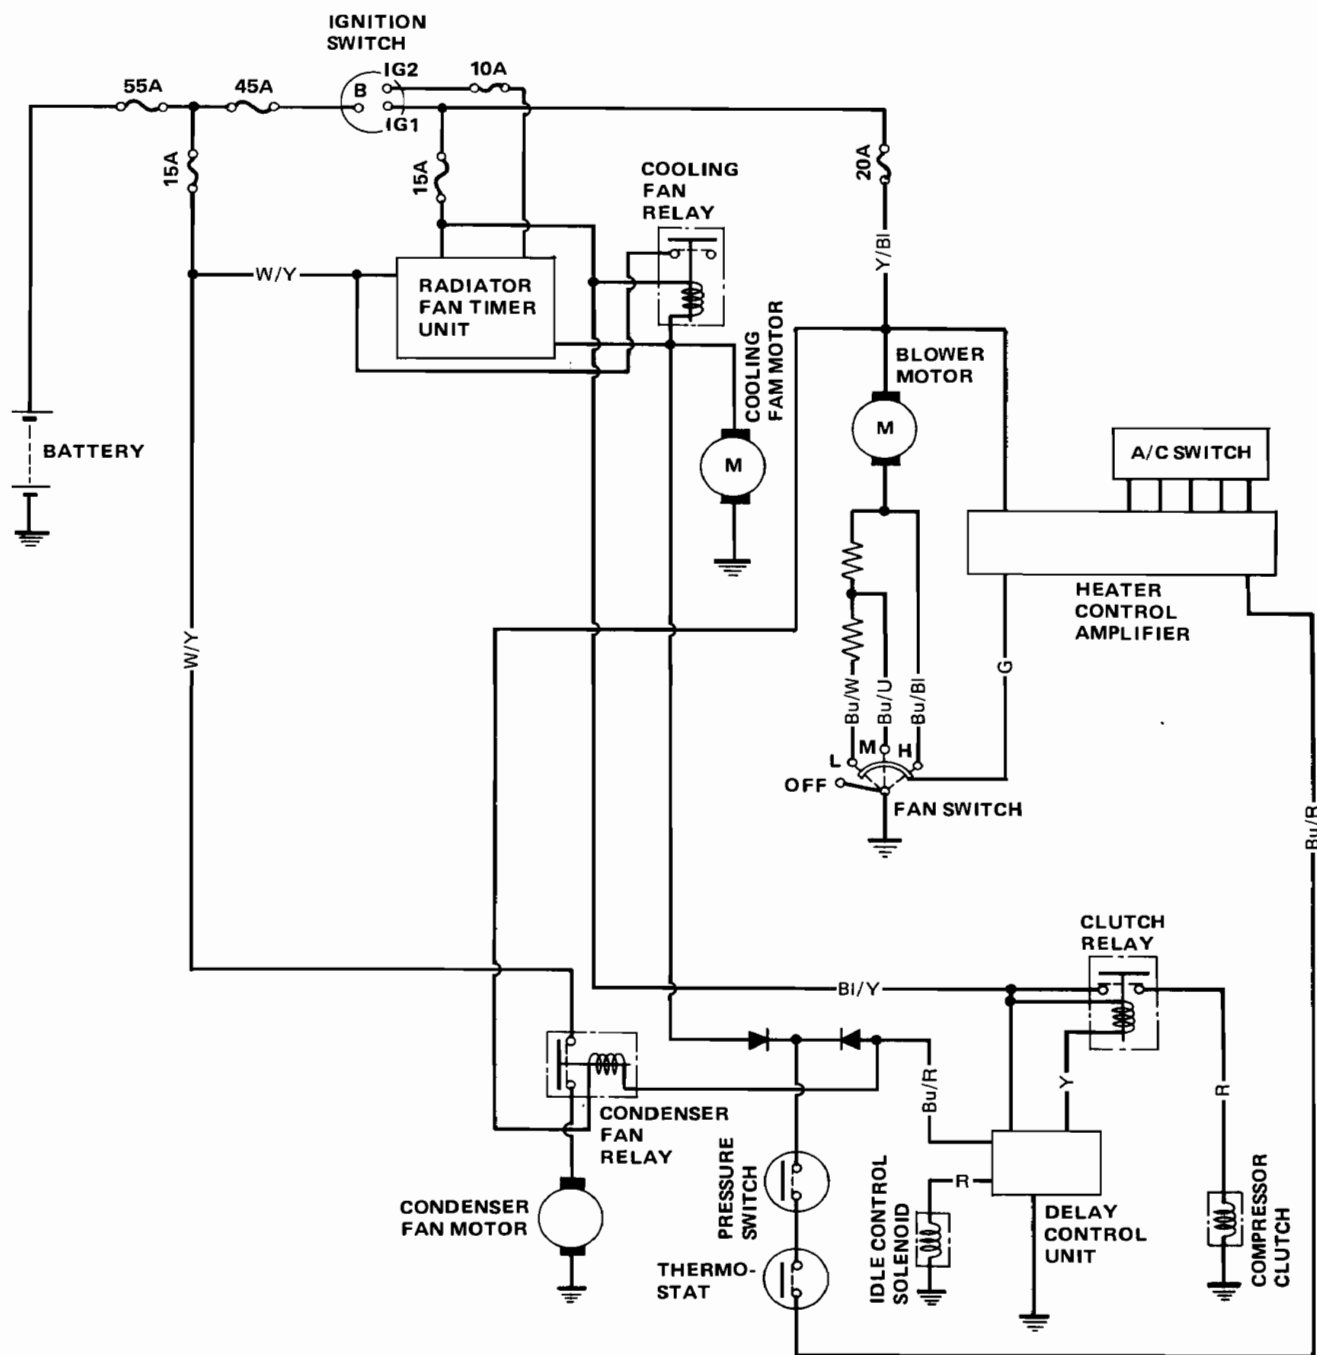

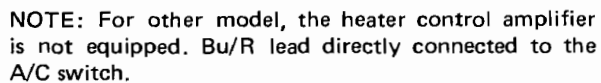


Specifications

Item		Specification
Cooling capacity — Conditions:		3,700 K cal/h (14,680 Btu/h)
Compressor rpm		1,800 rpm
Outside air temperature		27.5°C (81.5°F)
Outside air humidity		50%
Condenser air temperature		35°C (95°F)
Condenser air velocity		4.5 m/sec.
Blower capacity		340 m ³ /h (12,006 cu.ft/h)
Compressor	Type No. of cylinders Piston Displacement Max. rpm Lubricant/capacity	Radial type 4 150 cc/rev. (9.15 cu.in/rev.) 7,000 rpm SUNISO No. 5 GS/80 cc (2.7 US oz., 2.3 Imp. oz.)
Receiver Dryer	With dessicant	
Condenser		Corrugated fin type
Evaporator		Corrugated fin type
Blower	Type Motor input Speed control Max. capacity	Sirocco fan 165 W (12 V) 3 steps 400 m ³ /h (14,125 cu.ft/h)
Temp. Control		Air-mix type
Compressor Clutch	Type Power consumption	Dry, single plate, V-belt-1A 48 W max. (12 V)
Refrigerant	Type Quantity	R-12 0.8 ± 0.05 kg (1.76 ± 0.11 lbs)

Troubleshooting





Faulty Cooling System

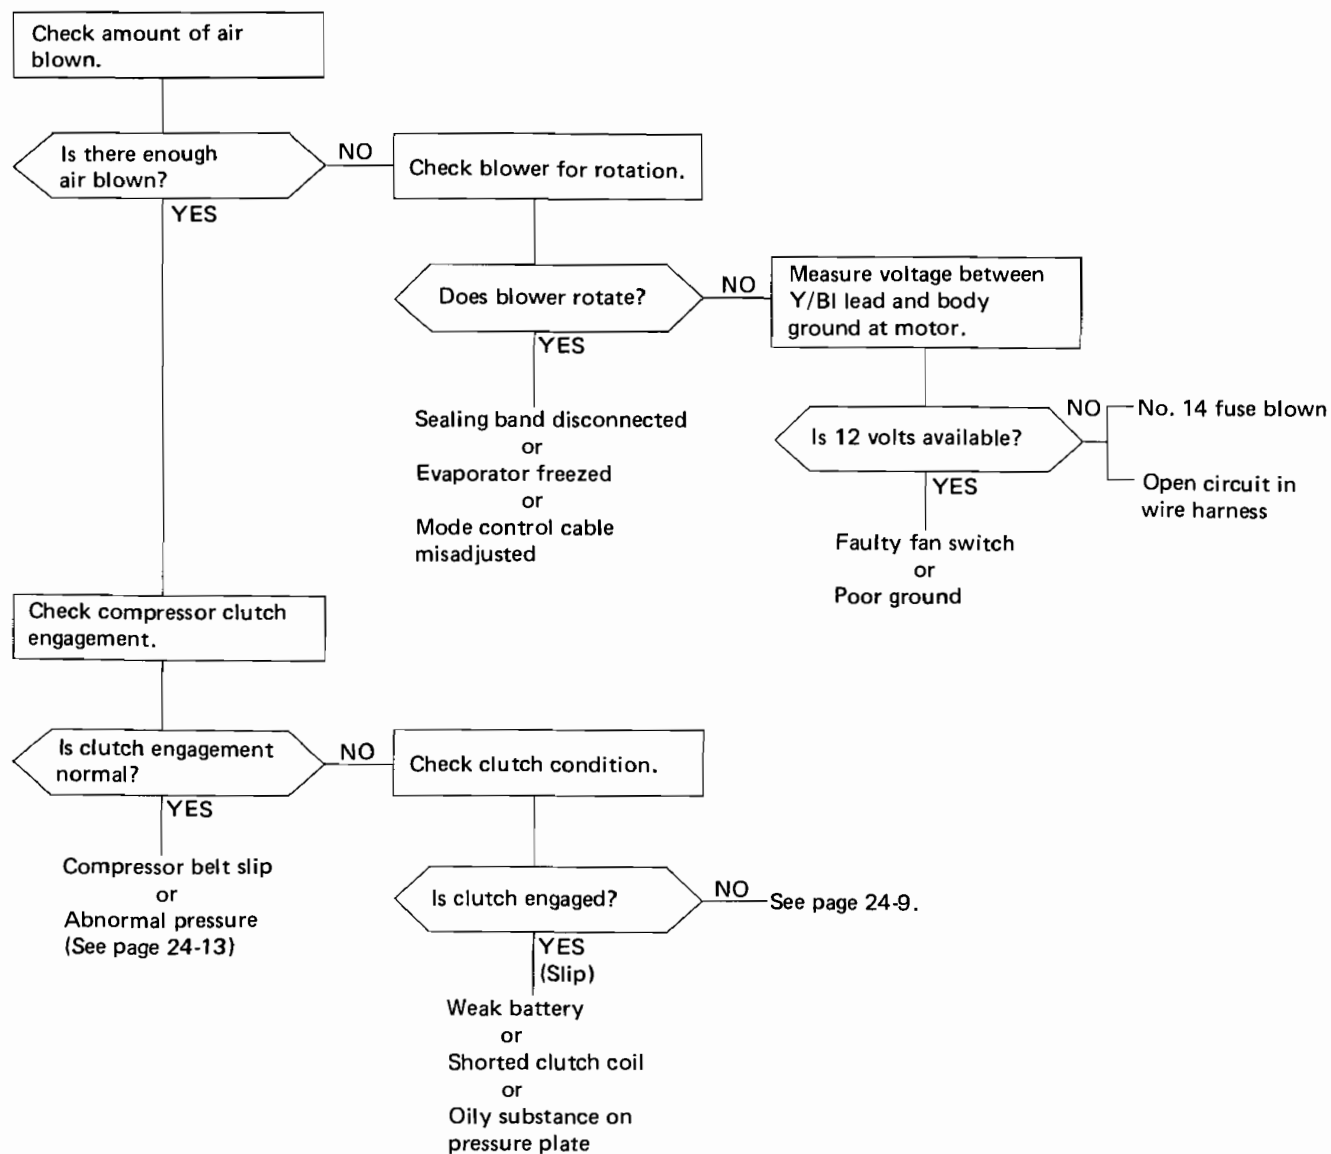

Troubleshooting

Electrical Troubleshooting

1. Compressor clutch isn't engaged, when A/C switch is turned on.

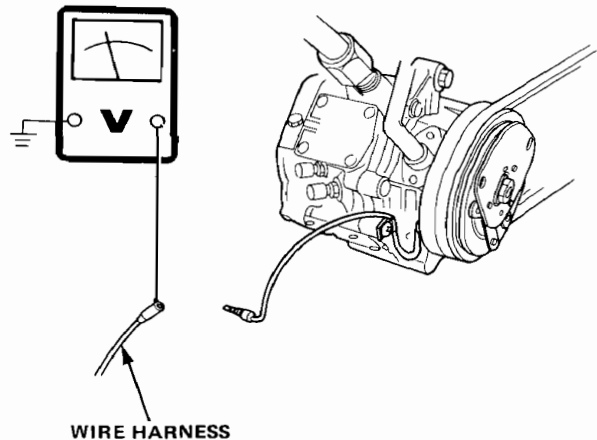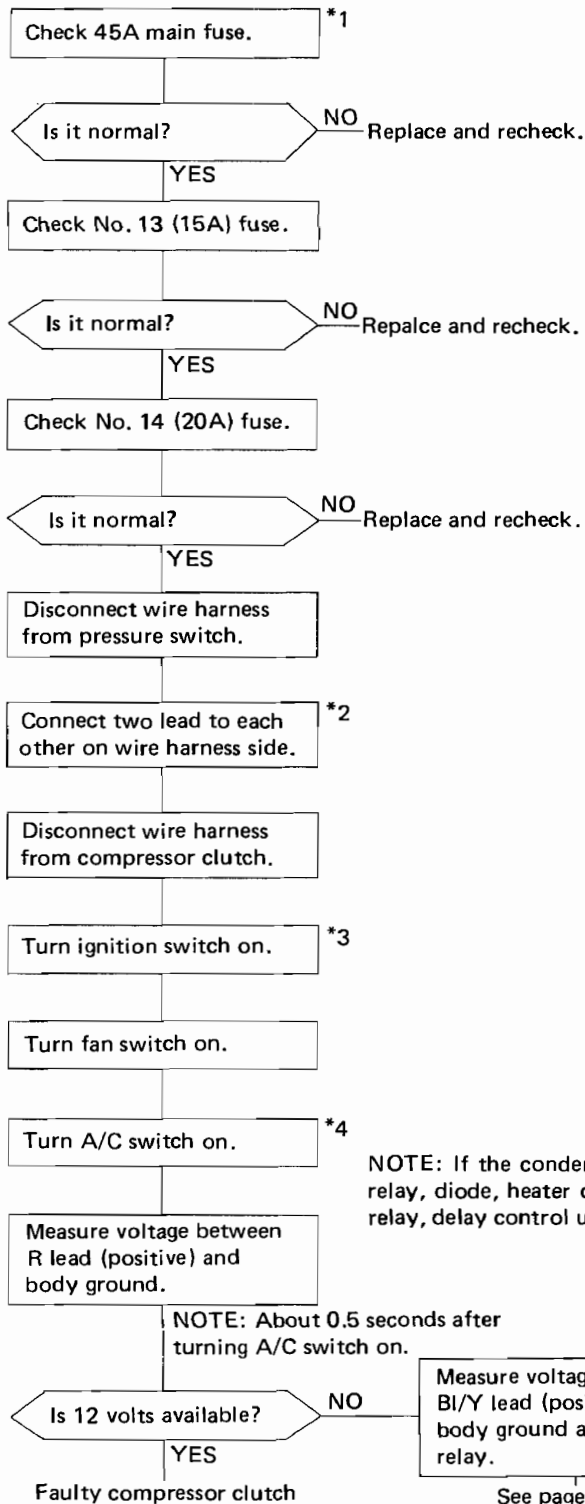



From page 24-8

Is 12 volts available? NO Open circuit between No. 13 fuse and clutch relay

YES

Measure voltage between R lead (positive) and body ground at clutch relay.

Is 12 volts available? NO Measure voltage between BI/Y lead (positive) and body ground at clutch relay.

YES

Open circuit between clutch relay and compressor clutch.

Is 12 volts available? NO Open circuit between No. 13 fuse and clutch relay

YES

Measure voltage between Y lead (positive) and body ground at clutch relay.

Is voltage below about 1 volt? NO Turn off all switches.

YES

Faulty clutch relay

Disconnect wire harness from delay control unit.

Turn ignition switch on.

Measure voltage between Y lead (positive) of wire harness and body ground.

Is 12 volts available? NO Open circuit between clutch relay and delay control unit


YES

Measure voltage between BI/Y lead (positive) of wire harness and body ground.

Is 12 volts available? NO Open circuit between No. 13 fuse and delay control unit.

YES

See page 24-10.

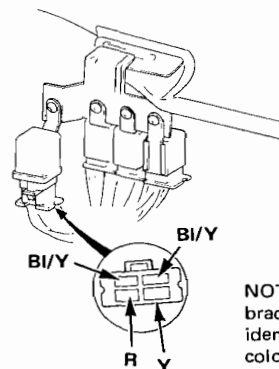


NOTE: The relays on the brackets are identical. To identify, observe the lead colors.

Troubleshooting



Electrical Troubleshooting

From page 24-9.

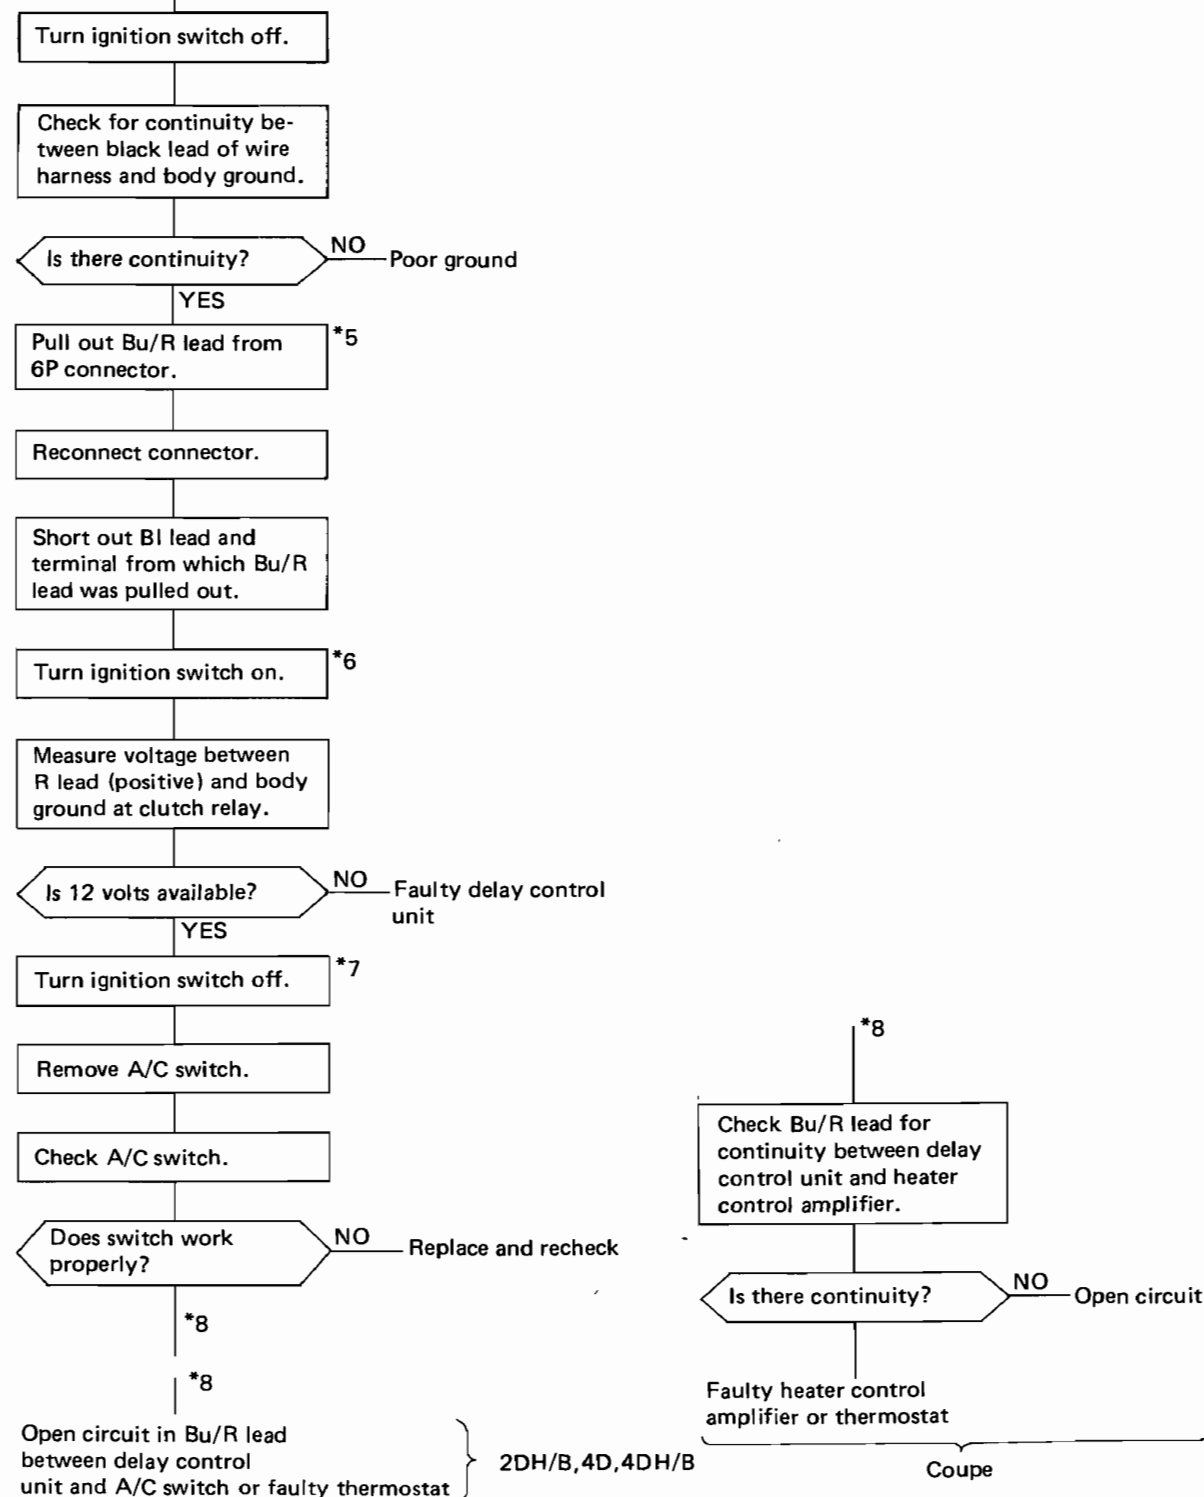



2. Idle control solenoid doesn't operate, when A/C switch is turned on.

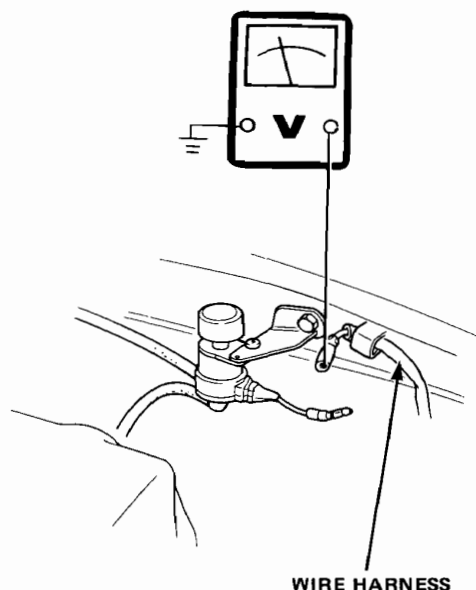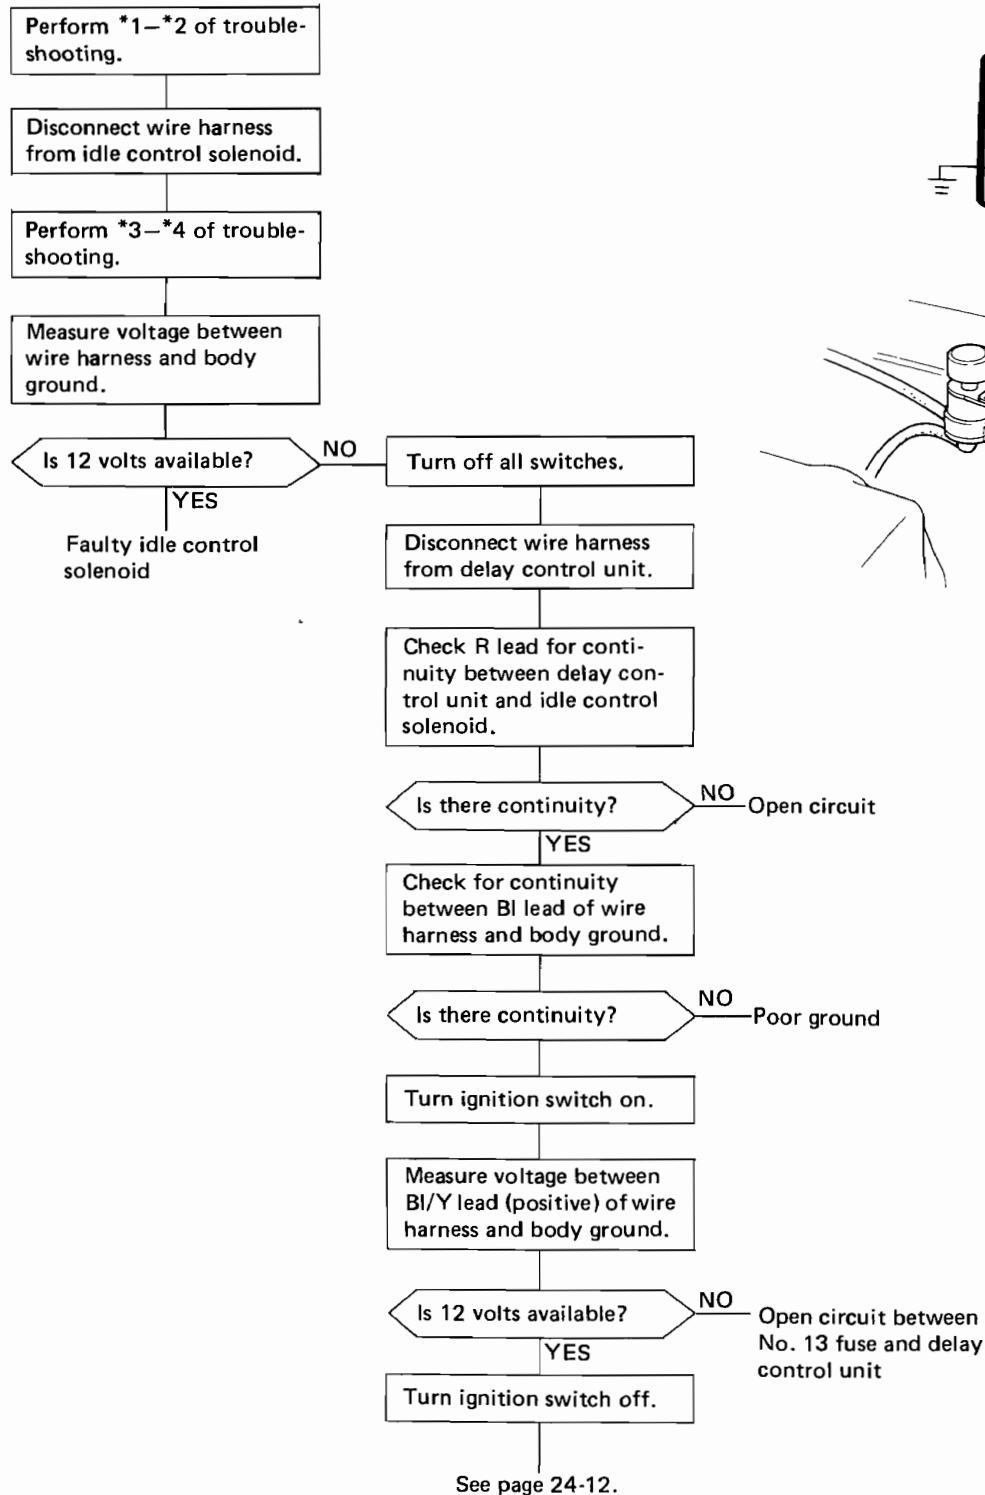

WIRE HARNESS

Troubleshooting

Electrical Troubleshooting

From page 24-11.

Perform *5—*6 of troubleshooting.


Measure voltage between wire harness (positive) and body ground.

Is 12 volts available?

NO

Faulty delay control unit

Perform *7—*8 of No. 1 troubleshooting.

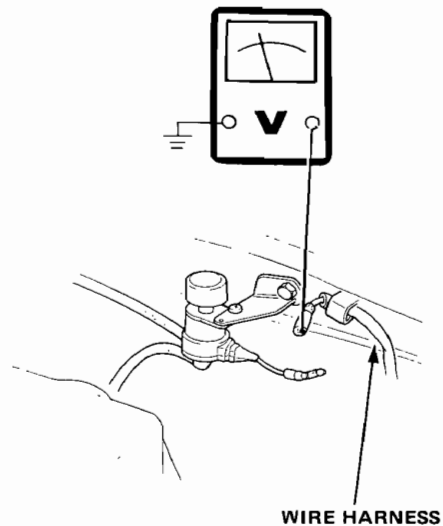

3. A/C switch LED doesn't go on when A/C switch is turned on. However, air conditioner works properly (Coupe).

Remove A/C switch from heater control amplifier.

Make sure other wire harnesses are connected.

Turn ignition switch on.

Measure voltage between R terminal of 5P connector (positive) and body ground.


Is 12 volts available?

NO

Faulty heater control amplifier

YES

Faulty A/C switch

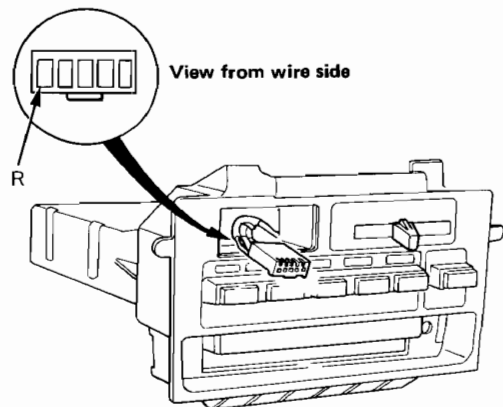



Compressor Troubleshooting

TEST RESULTS	RELATED SYMPTOMS	PROBABLE CASE	REMEDY
Discharge (high) pressure abnormally high (Test on page 24-27)	After stopping compressor, pressure drops to about 195 kPa (2 kg/cm ² , 28 psi) quickly, and then falls gradually.	Air in system	Evacuate system; then recharge. Evacuation: page 24-28 Recharging: page 24-29
	Pressure does not return to normal when condenser is cooled by water.	Excessive refrigerant in system	Discharge refrigerant as required
	Reduced air flow through condenser	<ul style="list-style-type: none"> • Clogged condenser or radiator fins • Original and air conditioner fans not working properly 	<ul style="list-style-type: none"> • Clean. • Check voltage and fan rpm.
	Line to condenser is excessively hot.	Restricted flow of refrigerant in system	Repair.
Discharge pressure abnormally low (Test on page 24-27)	Excessive bubbles in sight glass; condenser is not hot.	Insufficient refrigerant in system	Charge system.
	High and low pressures are balanced soon after stopping compressor.	<ul style="list-style-type: none"> • Faulty compressor discharge or inlet valve. • Faulty compressor seal 	Replace compressor. Repair
	Outlet of expansion valve is not frosted; low pressure gauge indicates vacuum.	<ul style="list-style-type: none"> • Leaking thermostat • Frozen expansion valve • Faulty expansion valve 	Repair or replace.
Suction (low) pressure abnormally low (Test on page 24-27)	Excessive bubbles in sight glass; condenser is not heated.	Insufficient refrigerant	Check for leaks. Charge as required.
	Expansion valve is not frosted and low pressure line is not cooled. Low pressure gauge indicates vacuum.	<ul style="list-style-type: none"> • Leaking thermostat • Frozen expansion valve • Faulty expansion valve 	Replace expansion valve.
	Outlet temperature is low; no air flow.	Frozen evaporator	Run the fan with compressor off.
	Expansion valve frosted	Clogged expansion valve	Clean or replace
	Low pressure hose is cooler than expansion valve outlet and evaporator.	Collapsed or restricted low pressure hose	Clean, repair or replace.
Suction (low) pressure abnormally high (Test on page 24-27)	Low pressure hose and check joint are cooler than around evaporator.	<ul style="list-style-type: none"> • Expansion valve open too long • Loose thermostat (poor contact) 	Repair or replace.
	Suction pressure is lowered when condenser is cooled by water (High pressure side also heated.)	Excessive refrigerant in system	Discharge refrigerant as necessary.
	High and low pressures are balanced too early when compressor is stopped.	<ul style="list-style-type: none"> • Faulty gasket • Faulty high pressure valve • Foreign particle stuck in high pressure valve 	Replace compressor.

Service Tips

Service Tips

WARNING When handling refrigerant (R-12):

- Always wear eye protection.
 - Do not let refrigerant get on your skin or in your eyes. If it does:
 - Do not rub your eyes or skin.
 - Splash large quantities of cool water in your eyes or on your skin.
 - Rush to a physician or hospital for immediate treatment. Do not attempt to treat it yourself.
 - Keep refrigerant containers (cans of R-12) stored below 40°C (100°F).
 - Do not handle or discharge refrigerant in an enclosed area near an open flame: it may ignite and produce a poisonous gas.
1. Always disconnect the negative cable from the battery whenever replacing air conditioner parts.
 2. Keep moisture and dust out of the system. When disconnecting any lines, plug or cap the fittings immediately; don't remove the caps or plugs until just before the lines are reconnected.
 3. Before connecting any hose or line, apply a few drops of refrigerant oil to the seat of the O-ring or flare nut.
 4. When tightening or loosening a fitting, use a second wrench to support the matching fitting.
 5. When discharging the system, don't let refrigerant escape too fast; it will draw the compressor oil out of the system.
 6. Add refrigerant oil after replacing the following parts:

Condenser	10 cm ³ (cc) (1/3 fl oz)
Evaporator	30 cm ³ (cc) (1 fl oz)
Line or hose	10 cm ³ (cc) (1/3 fl oz)
Receiver	10 cm ³ (cc) (1/3 fl oz)

NOTE: When a new compressor is installed, drain 30 cm³ (cc) (1 fl oz) of refrigerant oil thru the suction fitting on the compressor, unless you are also installing any of the above parts. Then, drain 30 cc for the compressor minus the amount shown for the other parts.

7. Tighten nuts to the following torque:

Line or hose dia. in (mm)	Torque N·m (kg·m, lb·ft)	Application
3/8 (9.53)	17 (1.7, 12)	• Sight glass • Condenser • Receiver • Receiver pipe
1/2 (12.7)	22 (2.2, 16)	• Discharge hose
5/8 (15.88)	32 (3.2, 23)	• Suction hose
(8 x 1.25 bolt)	30 (3.0, 21)	• Suction hose



Performance Testing



Performance Testing

NOTE: Performance should be tested when humidity is 60–80%. If below 60%, the temperature and pressure readings will be lower than the range on the graph below; if above 80%, readings will be higher.

1. Connect gauges as shown.
2. Insert a dry bulb thermometer in the cool air outlet, and place the psychrometer (dry and wet bulb thermometer) close to the inlet of blower.
3. Test conditions:
 - Avoid direct sunlight.
 - Open engine hood.
 - Open front doors and windows.
 - Set the temperature control lever to COLD (left end). Set the mode control to VENT. Set the recirculation control to REC.
 - Turn the fan switch to HI (right end).
 - Turn the A/C switch on.
 - Run the engine at 1,500 rpm.
 - No driver and passengers in car.
4. After running the system for about 10 minutes under the above conditions, read the thermometer and pressure valve.
5. The performance of the system is satisfactory if the measurements are within the range bands shown on the Performance Chart.

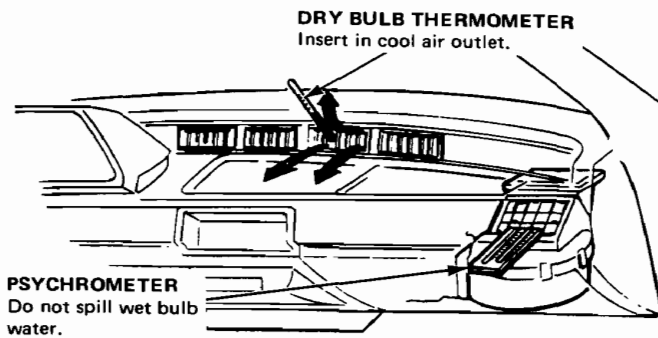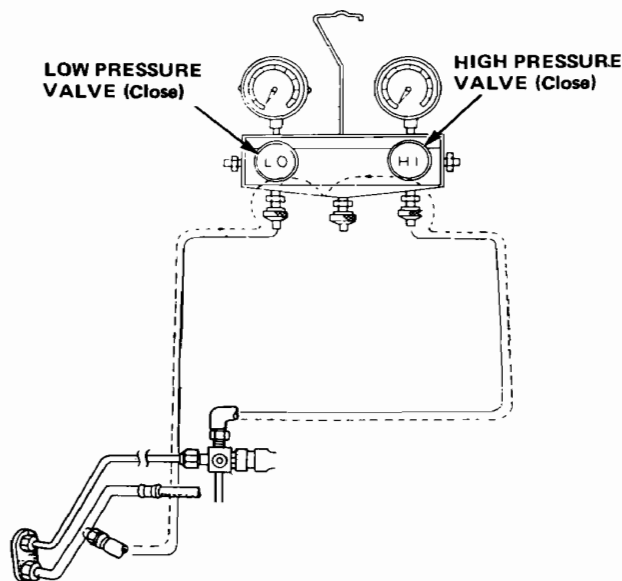

Examples

Measurements.


Intake temperature (Wet bulb): 25.5°C (78°F)

Intake temperature (Dry bulb): 30°C (86°F)
70% humidity

Delivery temperature: 17°C (63°F)

Delivery pressure: 2,250 kPa (22.5 kg/cm², 320 psi)

Intake pressure: 250 kPa (2.5 kg/cm², 36 psi)

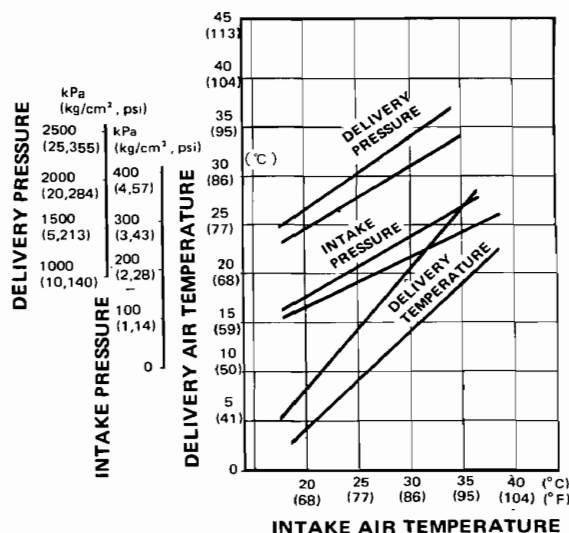

Proper intake/delivery pressure, and temperature ranges are shown on the chart at right.

Find your intake temperature across the bottom, and the relative intake and delivery pressures up the side: Lines down at right angles to your measurements should cross within the range bands on the graph.


Compressor

Replacement


1. Run the engine at idle speed and turn on the air conditioner for a few minutes.
2. Disconnect the battery negative terminal.
3. Disconnect the compressor clutch lead.
4. Remove the left front under cover and the engine lower grille cowl.
5. Discharge the refrigerant very slowly from the system. (page 24-27).
6. Remove the receiver by disconnecting pipes.

CAUTION: Cap the open fittings immediately to keep moisture and dirt out of the system.


7. Disconnect the discharge hose and suction hose from compressor.

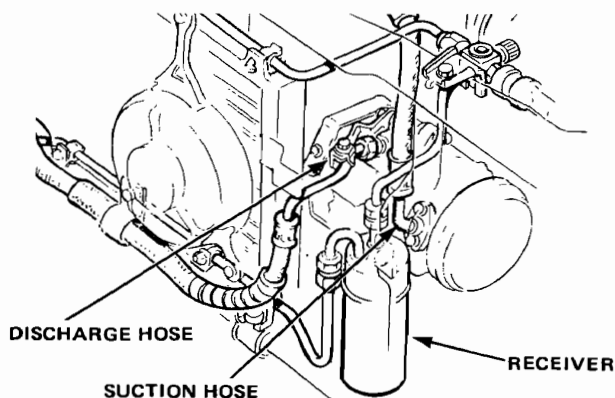

8. Loosen the belt adjusting bolt and pulley nut then lift the belt off the pulley.
9. Remove the nut and compressor mounting bolts.

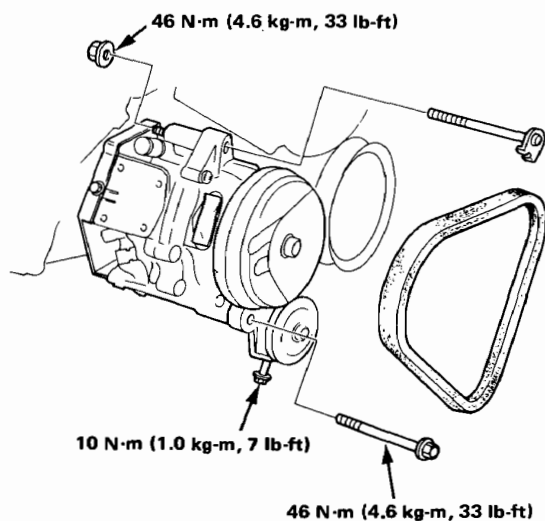

10. Remove the pulley bracket and remove the compressor from between the radiator and engine.

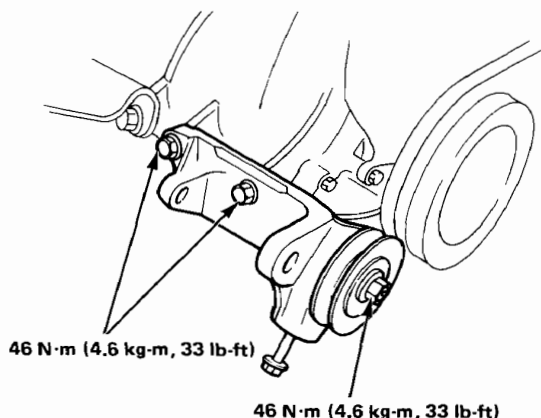

Install the compressor in the reverse order of removal, and:

- If a new compressor is installed, drain 30 cm³ (cc) (1 fl oz.) of refrigerant oil through the suction fitting on the compressor.
- Adjust the belt
Belt tension: 7–9 mm (9/32–11/32 in.) deflection when 98N (10 kg, 22 lbs) force is applied between pulleys.
- Charge the system (page 24-29).
- Test the performance (page 24-15)

CAUTION: Do not loosen the cylinder cover bolts on the compressor.

Condenser

Replacement




1. Disconnect the battery negative terminal.
2. Discharge the refrigerant (page 24-27)
3. Remove the front bumper and front grille (all except coupe).
4. Disconnect the discharge hose from the condenser.


CAUTION:

- Cap the open fittings immediately to keep moisture and dirt out of the system.
- Be careful not to damage the condenser fins and tubes.


5. Remove the discharge hose clamp.
6. Disconnect the receiver hose.
7. Disconnect the wire harness from the condenser.

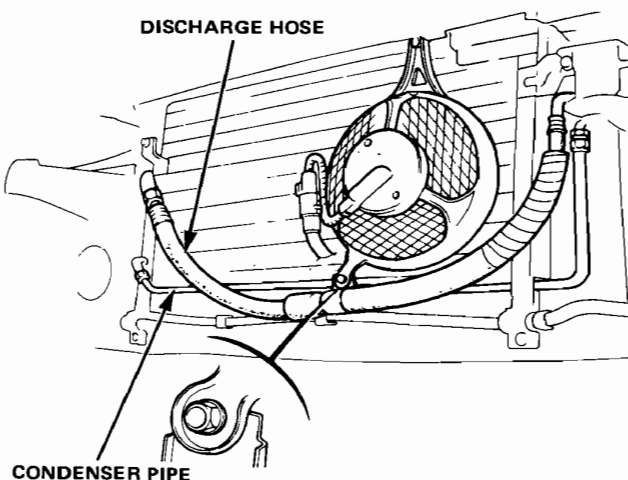

8. Remove the four 6 mm bolts and condenser.

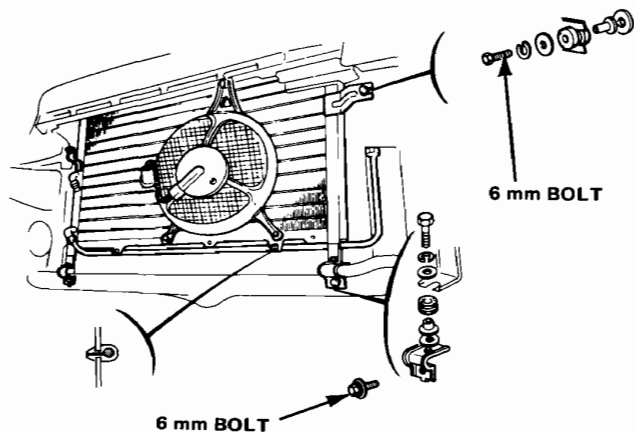

Remove the condenser fan motor if necessary.

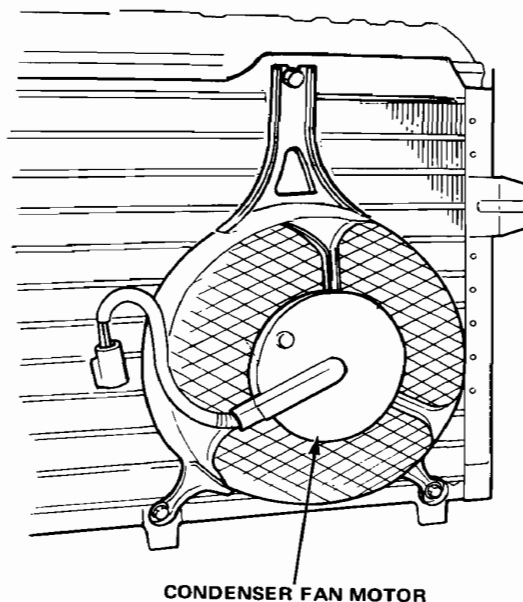

Install the condenser in the reverse order of removal, and:

- If a new condenser is installed, add 10 cm³ (cc) (1/3 fl oz.) of refrigerant oil to it.
- Charge the system (page 24-29).
- Test the performance (page 24-15)


Evaporator

Replacement


1. Disconnect the battery negative terminal.
2. Discharge the refrigerant (page 24-27)
3. Disconnect the receiver hose and suction hose from the evaporator.

CAUTION: Cap the open fittings immediately to keep moisture and dirt out of the system.


4. Remove the grommets.

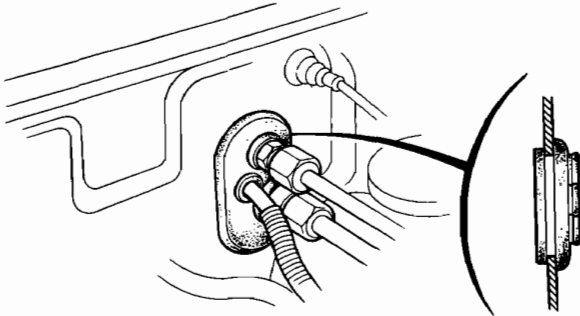

5. Remove the glove box (2DH/B,4D) or passenger's tray (4DH/B).
6. Remove the glove box frame (2D H/B, 4D).
7. Disconnect the wire harness from the thermostat.
8. Loosen the sealing band screw and slide the
9. Remove the blower mounting bolts and remove the blower.

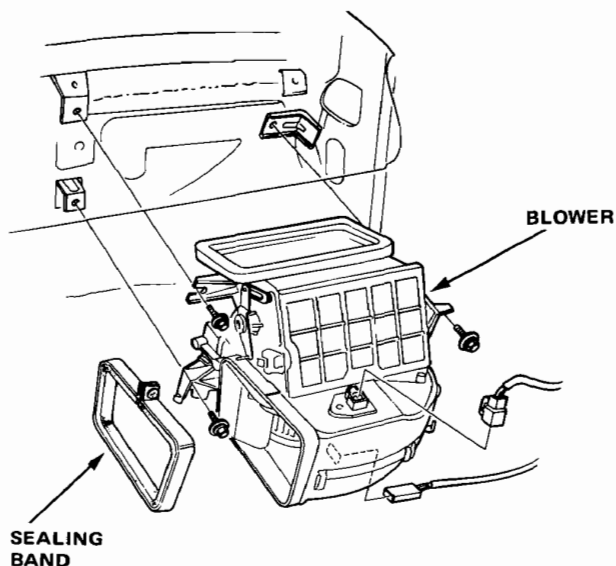

10. Remove the evaporator.

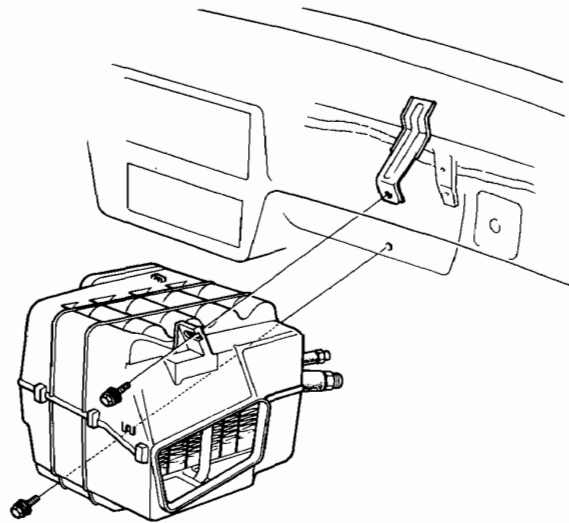

Install the evaporator in the reverse of removal, and:

- If a new evaporator is installed, add 30 cm³ (cc) (1 fl oz) of refrigerant oil to it before charging.
- Tighten the sealing band securely to prevent air leaks.
- Apply a sealant to the grommets.
- Reute the drain tube correctly.
- Charge the system (page 24-29).
- Test the performance (page 24-15).




Overhaul

1. Remove the self-tapping screws and clips from the housing.
2. Remove the capillary tube of the thermostat from the evaporator fins.
3. Separate the housings and remove the evaporator covers.
4. Remove the expansion valve, if necessary.

Assemble the evaporator in the reverse of disassembly, and:

- Install the expansion valve capillary tube against the suction line, and wrap it with a tape.
- Reinstall the thermostat capillary tube in its original position.
- Reassemble the upper and lower housings with the clips and screws, making sure there are no gaps between them.

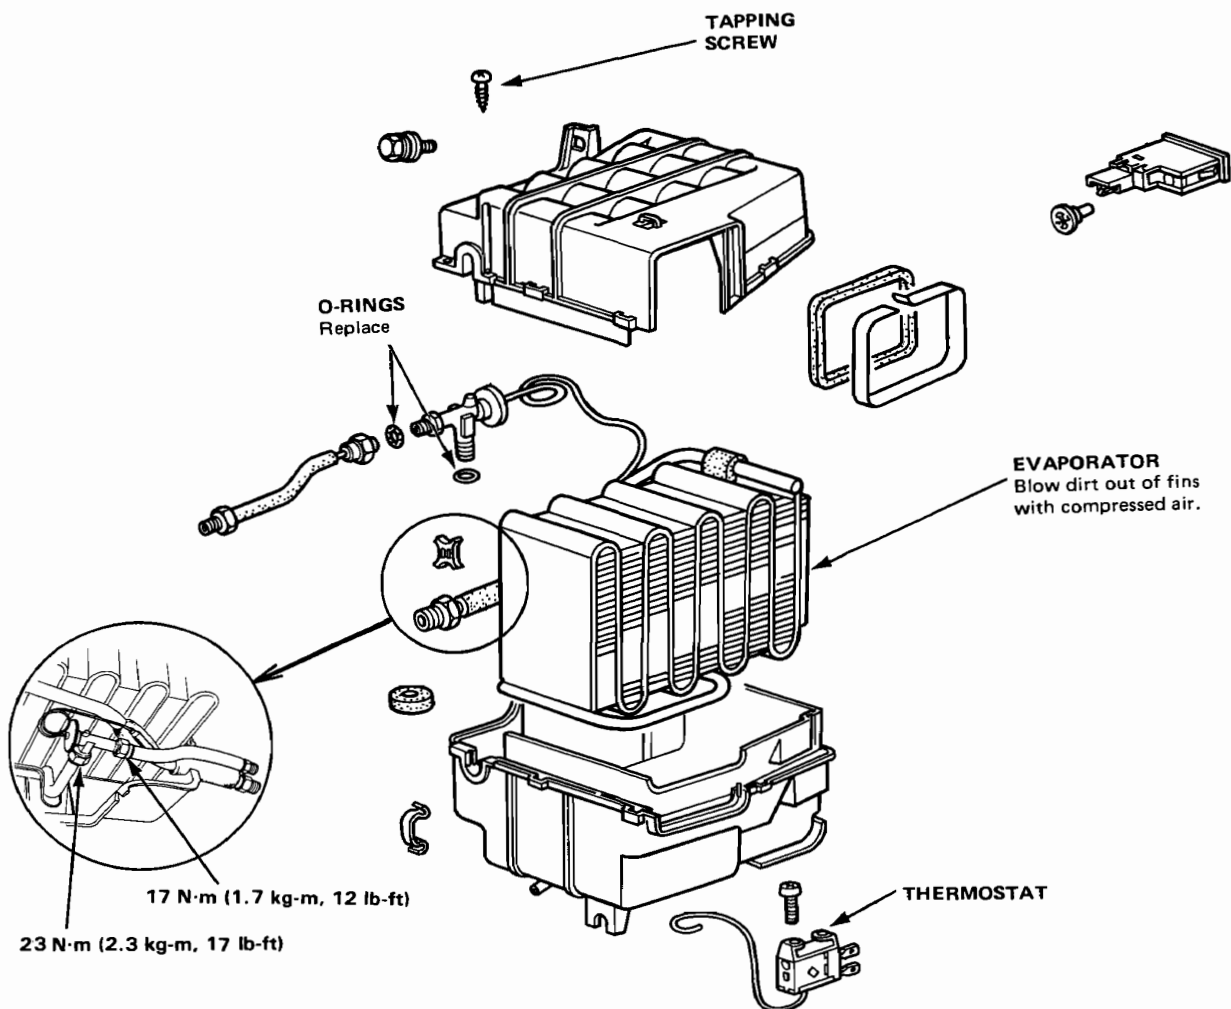


Thermostat Relay

Thermostat Testing

Dip the thermostat's capillary tube into a pan filled with ice water, and check for continuity.


Cut-off $-0.5^{\circ}\text{C} - 1.5^{\circ}\text{C}$ ($31^{\circ} - 35^{\circ}\text{F}$)
Cut-in $2.5^{\circ}\text{C} - 5^{\circ}\text{C}$ ($37^{\circ} - 41^{\circ}\text{F}$)

If cut-off or cut-in temperature is too low or too high, replace the thermostat.

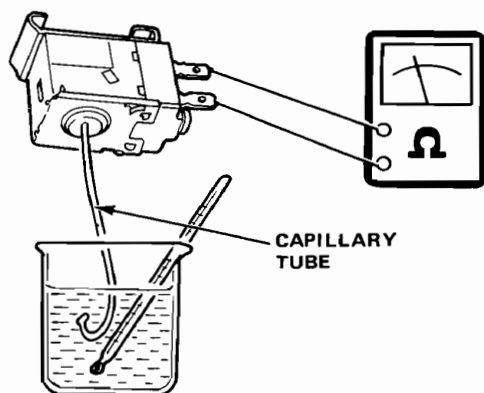

Relay Testing

1. Check for continuity between terminals A and B. There should be no continuity.
2. Connect a 12V battery across terminals C and D. There should be continuity between terminals A and B.

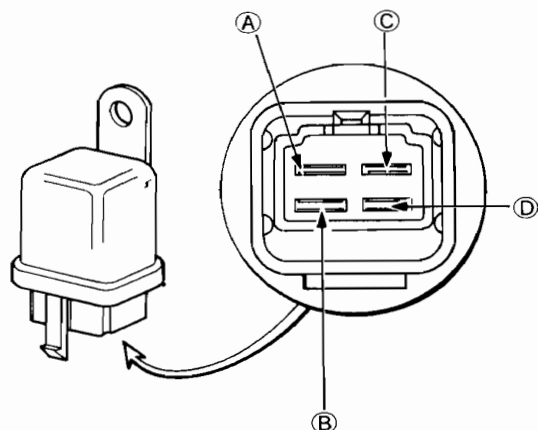


A/C Switch

Testing

Coupe

There should be continuity between S and T terminals when the switch is pushed in. There should be no continuity when the switch button is released (off).


NOTE: The A/C switch contains an LED circuit and cannot be tested with ordinary circuit testers.

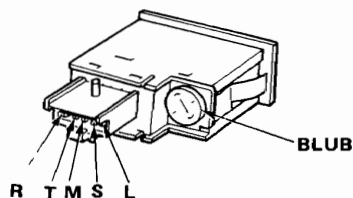


2DH/B, 4D, 4DH/B

Check for continuity according to the table below.

TERMINAL POSITION	C	T		B
OFF		○	⊗	○
ON	○	○	⊗	○
WIRE COLOR	G	Bu/R		Y/BI

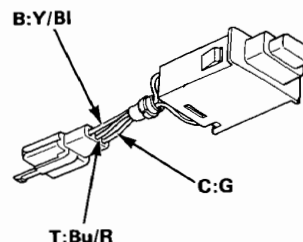


Delay Control Unit



Testing


1. Connect a 12V battery, resistor and switch to the delay control unit, as shown below.
2. Connect the positive probe of a voltmeter to the OUT1 terminal and the negative probe to E terminal. Check that 12 volts is available when the switch is turned on.
3. Turn off the switch.
4. Connect the positive probe of the voltmeter to the OUT2 terminal and the negative probe to E terminal. Check that 12 volts appear the moment the switch is turned on, and that this voltage is lowered to 1 volt after approximately 0.5 seconds.

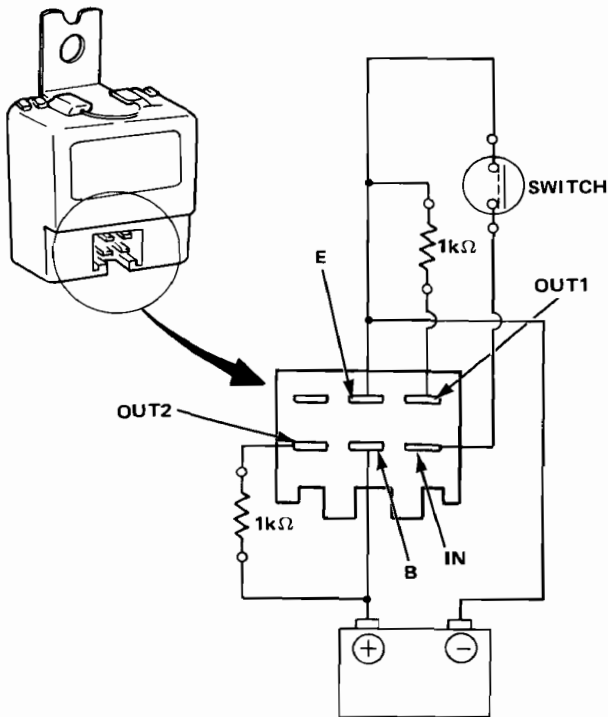

Compressor Clutch

Inspection

Check pulley bearing play and drag by rotating the pulley by hand. Replace the pulley with a new one if it is noisy or has excessive play and drag.

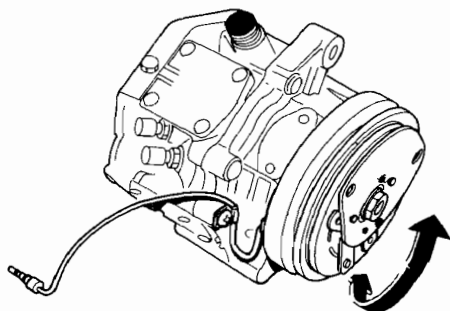


Check the resistance of coil.

Coil Resistance:

$3.0 \pm 0.3\Omega$ at 20°C (68°F)


If the resistance is not within specifications, replace the clutch coil with a new one.

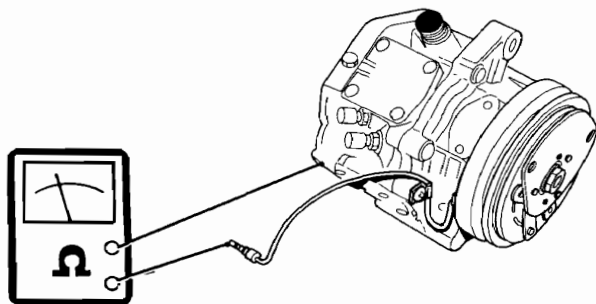


Measure the clearance between the pulley and pressure plate all the way around. If the clearance is not within specified limits, the pressure plate must be removed and shims added or removed as required.

Pulley to Pressure Plate Clearance:

0.3–0.6 mm (0.012–0.024 in.)

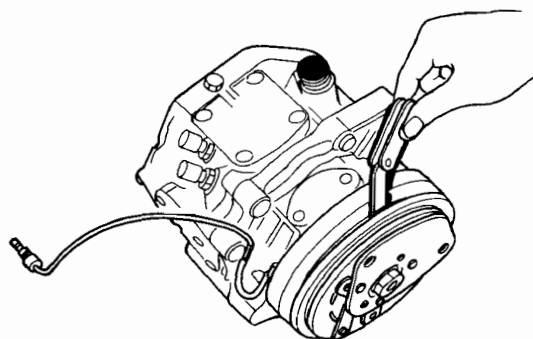

NOTE: The shims are available in six sizes: 0.1 mm, 1.0 mm, 1.25 mm, 1.5 mm, 1.75 mm and 2.0 mm of thickness. 0.1 mm shim is used for minor adjustment.

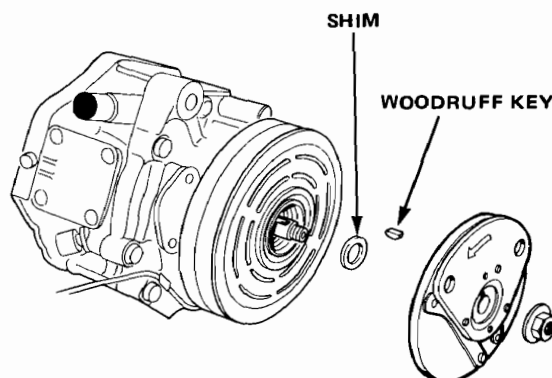




Overhaul

1. Remove the nut while holding the pressure plate with the tool shown.

CAUTION: Be careful not to compress the spring excessively.


Use the tool to hold the pressure plate.

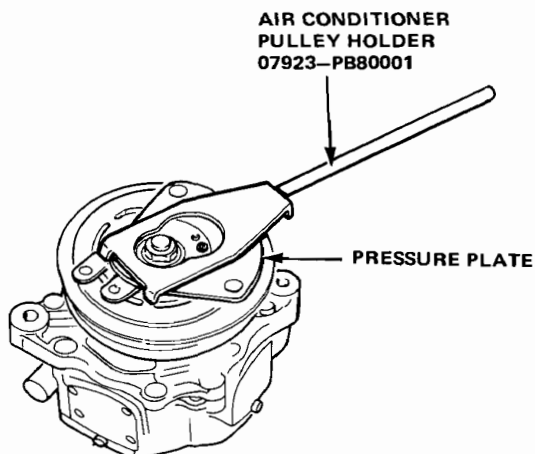

2. Install the clutch remover tool and two 6 mm bolts on the pressure plate, and remove it by screwing the center bolt.

CAUTION: Use only special tool to remove the pressure plate. If it is not used the clutch damage may result.

NOTE: Tighten the 6 mm bolts equally, so the tool is installed parallel to the pressure plate.

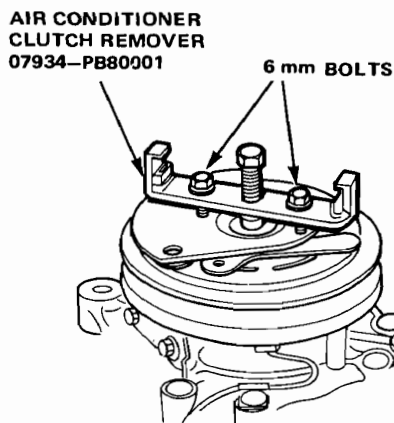


3. Use snap ring pliers to take off the snap ring, then remove the pulley from the shaft with a 2 or 3 jaw puller.

CAUTION: When removing the snap ring, be careful not to damage the aluminum compressor snout.


4. Unscrew the clutch coil mounting bolt by using a TORX DRIVER BIT (07703-0010200), then remove the clutch coil.

NOTE: It's not necessary to remove the clutch wire clamp; just pry it up enough to remove the wire.

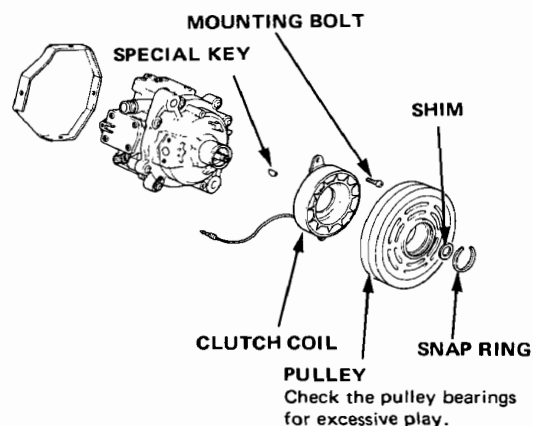

Assemble the clutch in the reverse order of disassembly, and also:

- Install the snap ring with its chamfered side facing out.
- When installing the snap ring, be careful not to damage the aluminum compressor snout.

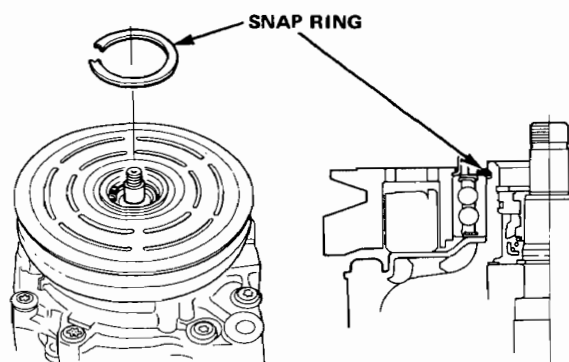


- Tighten the hub nut to specified torque.
TORQUE: 4.0–4.5 kg-m (32–35 ft-lb)
- Recheck the pulley to pressure plate clearance and adjust if necessary.

Compressor Shaft Seal


Shaft Seal Assembly Removal

NOTE: Make sure that the suction and discharge joints are plugged with the caps.

1. Remove the pressure plate.
NOTE: Removal of the clutch pulley and coil is not necessary.
2. Remove the 32 mm snap ring.

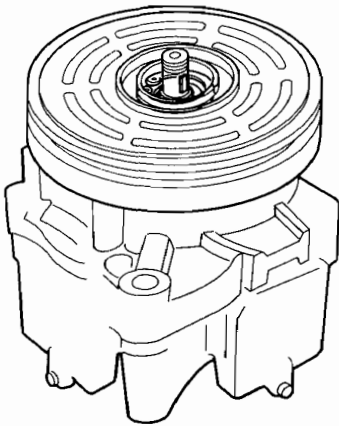


3. Remove the woodruff key from the key way.
NOTE: If the woodruff key is reused, be careful not to damage the key.
4. Remove the shim(s).
NOTE: After removing the shim(s), place it in a parts rack so it not scattered and lost.

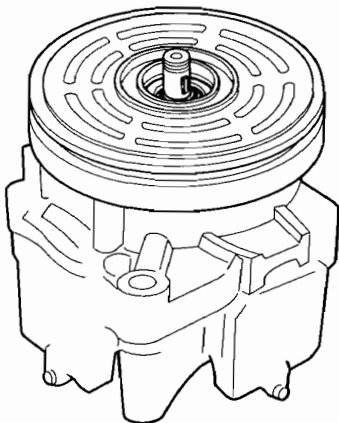


5. Hook the tip of the special tool (modified snap ring pliers) on the slot of the seal seat.
6. Pull out the seal seat.

CAUTION: Move the tool in parallel with the compressor shaft. Do not damage the compressor.

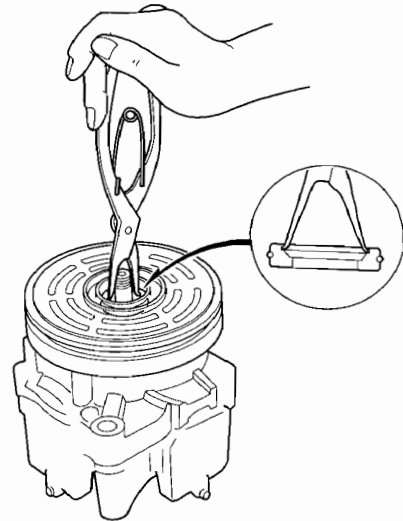

7. Insert the shaft seal remover into the compressor aligning the cutout of the remover with the metal pawl of the seal case.
8. Rotate the remover clockwise or counterclockwise to make sure that the cutout is engaged with the metal pawl.

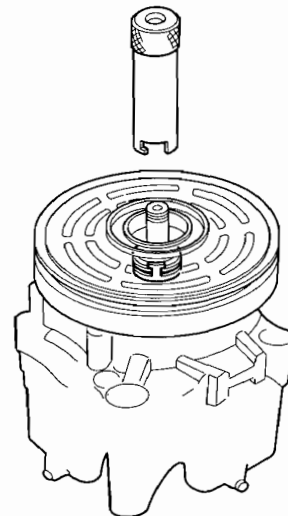




9. Press the remover until bottoms, then turn it counterclockwise as far as it will go.
10. Withdraw the remover.
11. Lay down the compressor and clean the shaft seal contacting face of the compressor with cleaning solvent.

CAUTION:

- Keep the cleaning solvent and dirt out of the compressor.
- Do not use the lint free cloth for cleaning.
- Do not use a compressed air for cleaning.
- Do not spill the refrigerator oil from the compressor. Refill the same amount of the oil if the oil is spilled out.

NOTE: Install the shaft seal assembly after the cleaning solvent is dried out.

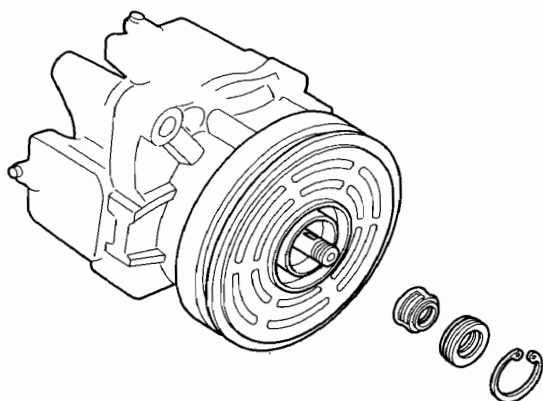


Shaft Seal Assembly Installation

1. Clean the new shaft seal with cleaning solvent thoroughly.

2. Lubricate the shaft seal with refrigerator oil (SUNISO 5GS) and install it on the shaft seal remover.


NOTE:

- Use only clean refrigerator oil.
- Do not touch the sealing surfaces of the shaft seal after lubricated.

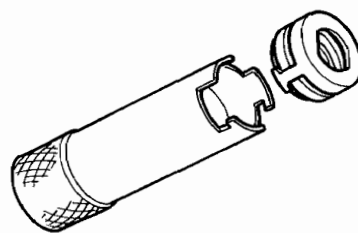

3. Liberally lubricate the compressor shaft with refrigerator oil.

4. Install the shaft seal onto the compressor shaft aligning the seal case flats with the shaft flats.

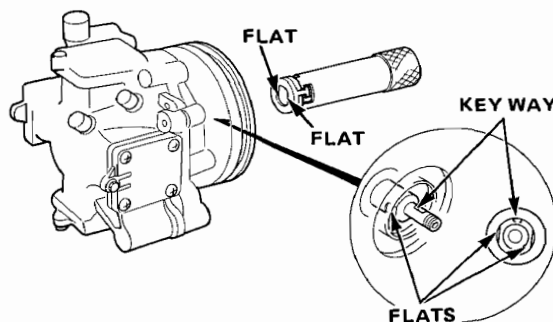

(cont'd)


Compressor Shaft Seal

Shaft Seal Assembly Installation (cont'd)

5. Press the remover until bottoms, then turn it counterclockwise as far as it will go.
NOTE: The remover will be lowered when the falts are aligned.


6. Turn the remover clockwise, then pull out.

7. Make sure that the metal pawl of the seal case is approx. 0.5 mm below the compressor shoulder at least as shown.

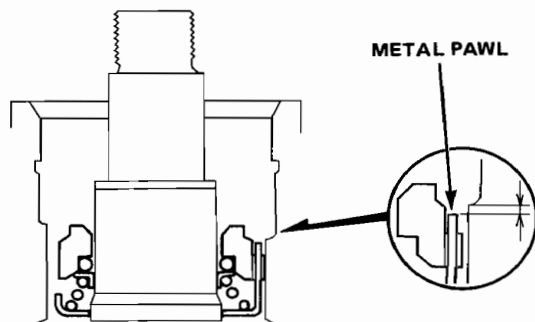


12. Install the snap ring with the chamfered side inside.

13. Press the snap ring with the grip side of the remover.

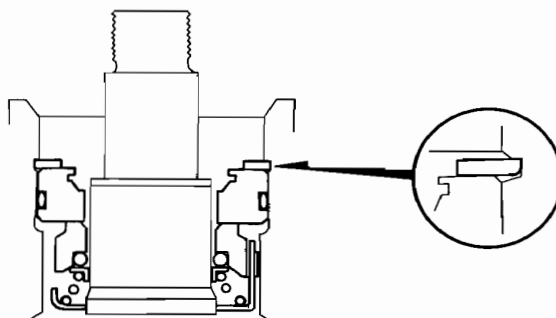

14. Install the shim and woodruff key.

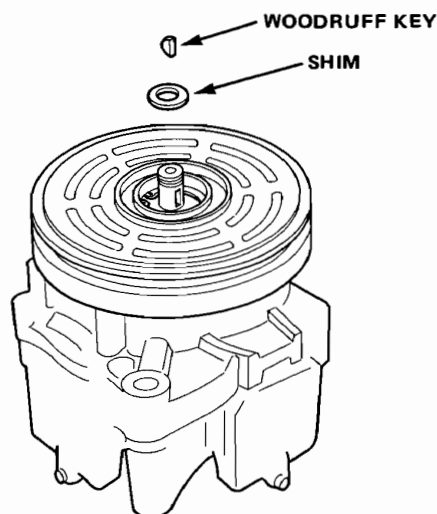

15. Evacuate and charge the compressor, then perform the leak test.

16. Install the pressure plate. Measure the clearance between the pulley and pressure plate all the way around. If the clearance is not within the specified limits, the shim(s) must be added or removed as required.

8. Check the inside diameter of the compressor for freedom of score marks or foreign particles.

9. Clean the seal seat with cleaning solvent, then lubricate the seal seat with refrigerator oil (SUNISO 5GS).


NOTE:

- Use only clean refrigerator oil.
- Do not touch the sealing surface of the seal seat after lubricated.

10. First slide the seal seat into the compressor by hand as far as possible.

11. Press the seal seat with the grip side of the remover.

CAUTION: Be careful not to damage the compressor.

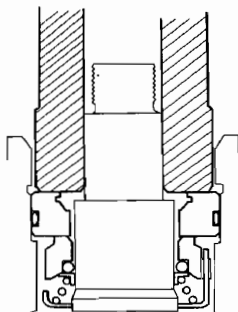




Pressur Test, Discharge Procedure

Pressure Test

1. Connect the gauges as shown.
2. Close both high and low pressure valves.
3. Test with the hood up, doors and windows open, temperature lever on COLD (left end), VENT button on and fan maximum high speed.
4. Leave the air conditioner on about 10 min. The sight glass should be free of bubbles.

NOTE: Run the engine at 1,500 rpm.

5. The high pressure reading should be about 2,250 kPa (22.5 kg/cm², 320 psi).
Low pressure reading: about 250 kPa (2.5 kg/cm², 36 psi)
If the readings are not correct, refer to the troubleshooting chart on page 24-00.

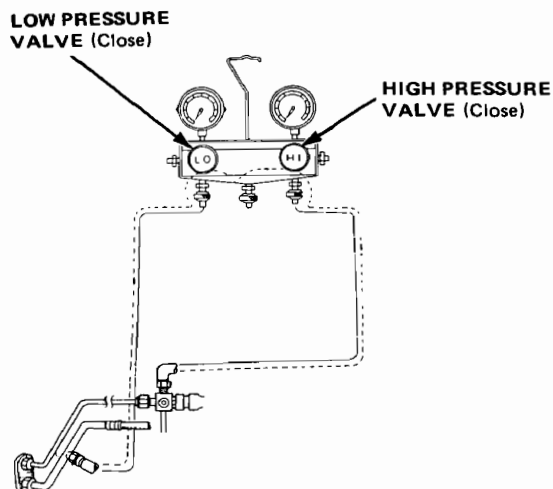

Discharge Procedure


WARNING

- Keep away from open flames. The refrigerant, although nonflammable, will produce a poisonous gas if burned.
- Work in a well-ventilated area. Refrigerant evaporates quickly, and can force all the air out of a small enclosed area.

1. Connect the gauges as shown.
2. Disconnect the center hose of the gauge set and place the free end in a shop towel.
3. Slowly open the high side manifold valve slightly to let refrigerant flow from the center hose only. Do not open the valve too wide. Check the shop towel to make sure no oil is being discharged with the refrigerant.

CAUTION: If refrigerant is allowed to escape too fast, compressor oil will be drawn out of the system.

4. After the high pressure gauge reading has dropped below 1,000 kPa (10.0 kg/cm², 142 psi), open the low side valve to discharge both high and low sides of the system.
5. Note the gauge readings and, as system pressure drops, gradually open both high and low side valves fully until both gauges indicate 0 kPa (0 kg/cm², 0 psi).

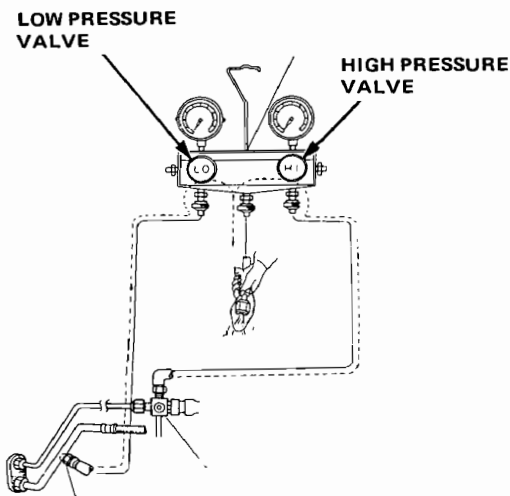

System Evacuation, Leak Testing


System Evacuation

NOTE: When an A/C System has been opened to the atmosphere, such as during installation or repair, it must be evacuated using a vacuum pump. (If the system has been open for several days, the receiver-dryer should be replaced).

1. Attach a gauge set and pump as shown, connecting the center charging hose to the pump inlet.
2. Start the pump, then open both gauge valves. Run the pump for about 15 minutes. Close the valves and stop the pump. The low gauge should indicate above 700 mm Hg (27 in-Hg) and remain steady with the valves closed.

NOTE: If low pressure does not reach more than 700 mm Hg (27 in-Hg) in 15 minutes, there is probably a leak in the system. Check for leaks, and repair (see Leak Test below).


3. If there are no leaks, open the valves and continue pumping for at least another 15 minutes, then close both valves, stop the pump and disconnect it from the center charging hose.

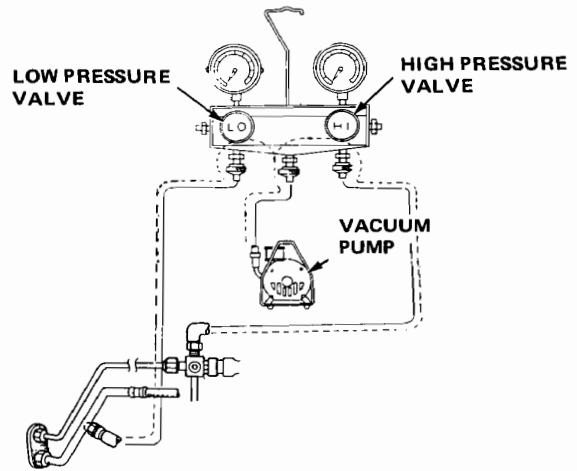

Leak Testing

WARNING When handling refrigerant (R-12):

- Always wear eye protection.
 - Do not let refrigerant get on your skin or in your eyes. If it does:
 - Do not rub your eyes or skin.
 - Splash large quantities of cool water in your eyes or on your skin.
 - Rush to a physician or hospital for immediate treatment. Do not attempt to treat it yourself.
 - Keep refrigerant containers (cans of R-12) stored below 40°C (100°F).
 - Keep away from open flame. Refrigerant, although non-flammable, will produce poisonous gas if burned.
 - Work in well ventilated area. Refrigerant evaporates quickly, and can force all the air out of a small, enclosed area.
1. Attach a refrigerant supply and gauge set as shown, with all valves closed. Then open the refrigerant supply valve on the can.
 2. Loosen the center charging hose fitting at the gauge to purge any air from the hose, until it hisses for a few seconds, then tighten it again.
 3. Open both gauge valves to charge the system to about 100 kPa (1.0 kg/cm², 14 psi), then close the supply valve.
 4. Check the system for leaks using a leak detector.
 5. If you find leaks that require the system to be opened (to repair or replace hoses, fittings, etc.), release any charge in the system according to the Discharge Procedure on the previous page.
 6. After checking and repairing leaks, the system must be evacuated (see System Evacuation above).

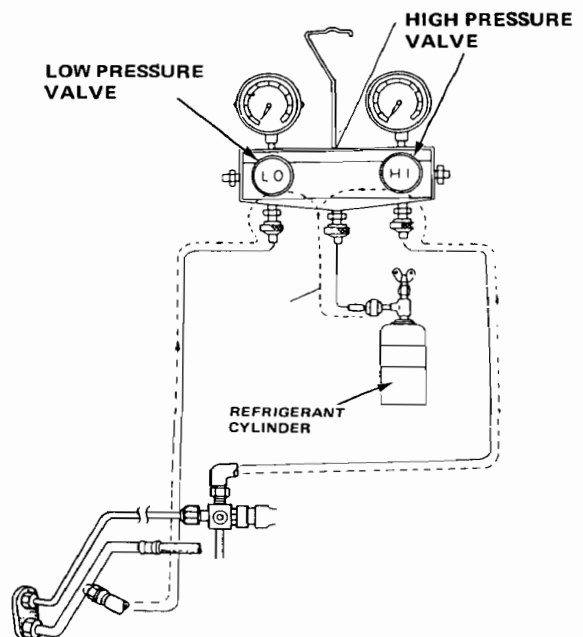

System Charging



WARNING Always wear eye protection when charging the system.

The A/C system may be charged with refrigerant by either Vapor or Liquid method:

CAUTION: If you overcharge the system, the compressor will be damaged.

VAPOR CHARGING, through the low side:

1. Connect a gauge set and refrigerant can (right side up) as shown, with the gauge valves closed. Purge air from the charging hose by opening the refrigerant valve, then, loosening the center connector at the gauge, letting it hiss for a few seconds, and tightening it.
2. Open the low gauge valve [adjust it as necessary so pressure does not exceed 415 kPa (4.15 kg/cm², 60 psi) while charging].
3. Start the engine and switch the air conditioner fan on high.

NOTE: Run the engine below 1,500 rpm.


4. Keep the refrigerant can right side-up. Charge the system with 750–850 g (26–30 oz.) of refrigerant until sight glass is free of any bubbles, indicating a full charge. Do not exceed 1,336 kPa (13.4 kg/cm², 190 psi).
5. When fully charged, close the gauge valves, then the valve on the can. Slowly disconnect the refrigerant hose from the center gauge connection to allow excess refrigerant to escape. Quickly remove the gauges from the system to minimize refrigerant loss.

LIQUID CHARGE through the high pressure side:

Following the charging station manufacturer's instructions, charge the system with 750–850 g (26–30 oz.) of refrigerant.

WARNING Do not use disposable cans to charge through the high pressure side of the system. System pressure could transfer into the can causing it to explode. Use only the bulk supply of refrigerant from the charging station.


CAUTION: If you run the engine during liquid charge, the compressor will be damaged.

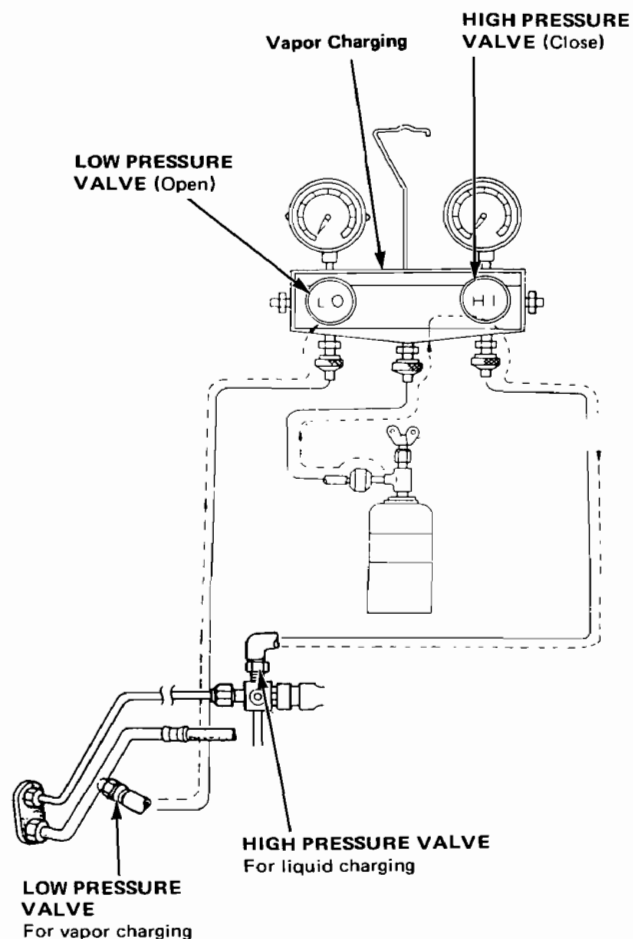

Idle Boost

Replacement

PGM-FI Model shown

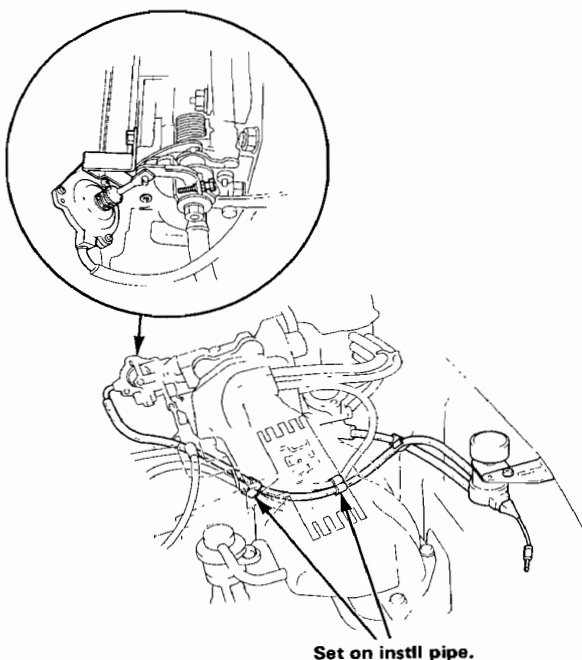

Set on instll pipe.

Idle Adjustment

After charging, adjust the idle speed with the air conditioner on:


- Apply the parking brake and block the wheels.
- Headlights OFF
- A/C temperature lever COLD (left end)
- Vent and RECIRC buttons . . . ON
- Fan switch HI (right end)
- Gearshift — Manual Neutral
Automatic In gear

1. Start the engine and warm it up to normal operating temperature (when radiator fan comes on). Check the idle speed with the A/C OFF, and adjust it, if necessary.


IDLE SPEED: Manual — 750 ± 50 rpm
Automatic — 750 ± 50 rpm (in gear)

2. Turn the fan on HI, and check the idle speed again; it should be the same as with the fan OFF; if not, adjust it by turning the adjusting screw.
3. Turn the fan switch OFF and ON several times and make sure the idle speed does not change.

PGM-FI Model shown

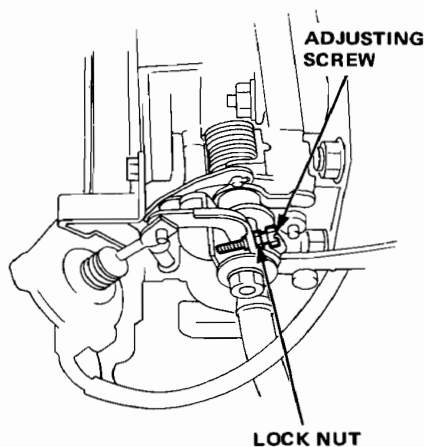

Index

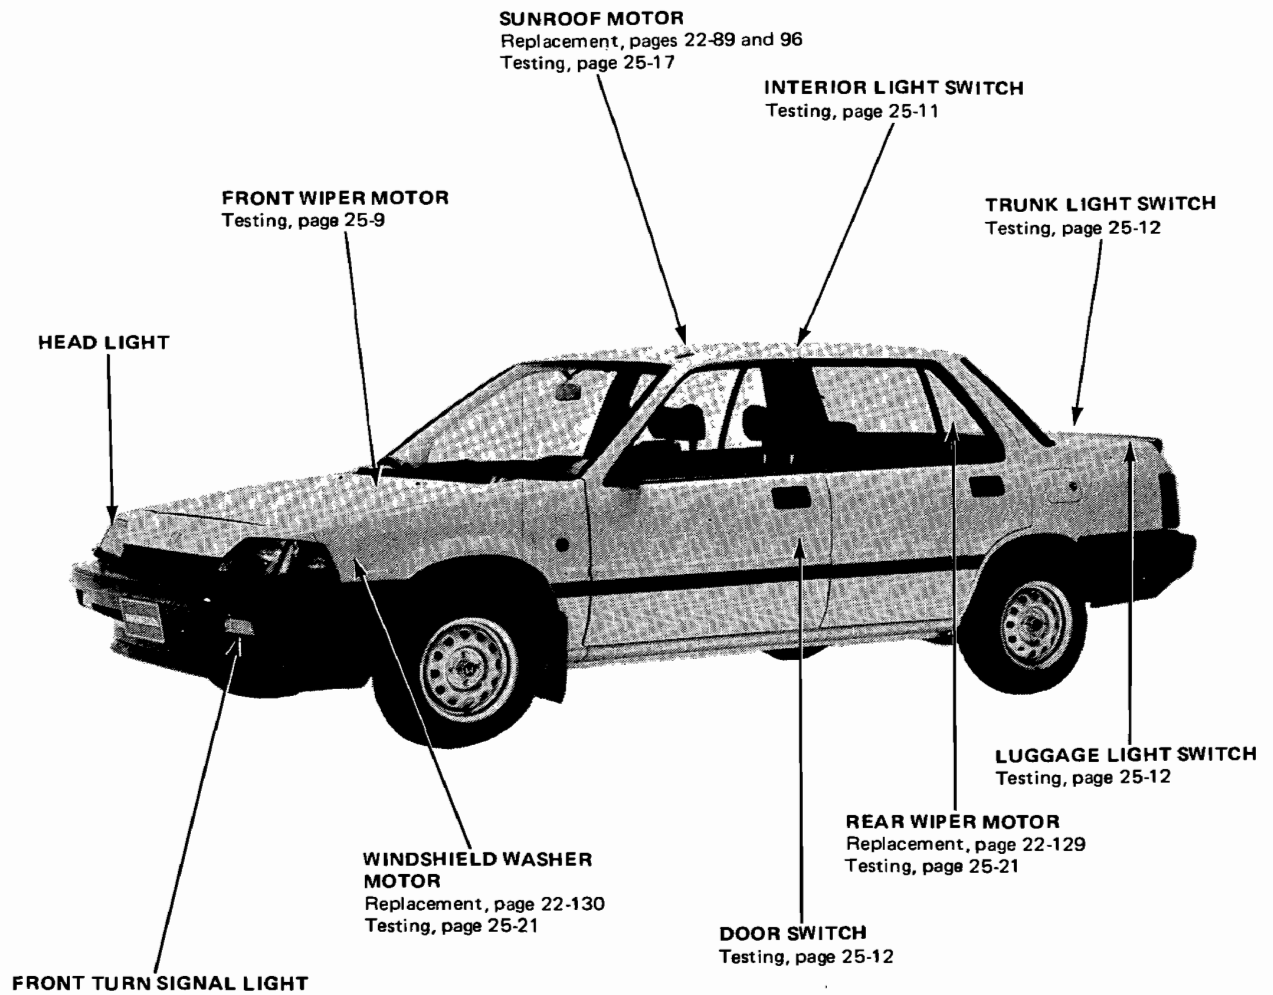




REAR FOG LIGHT
Testing, page 25-19

DEFROSTER SWITCH
Testing, page 25-11

HORN SWITCH
Testing, page 25-10

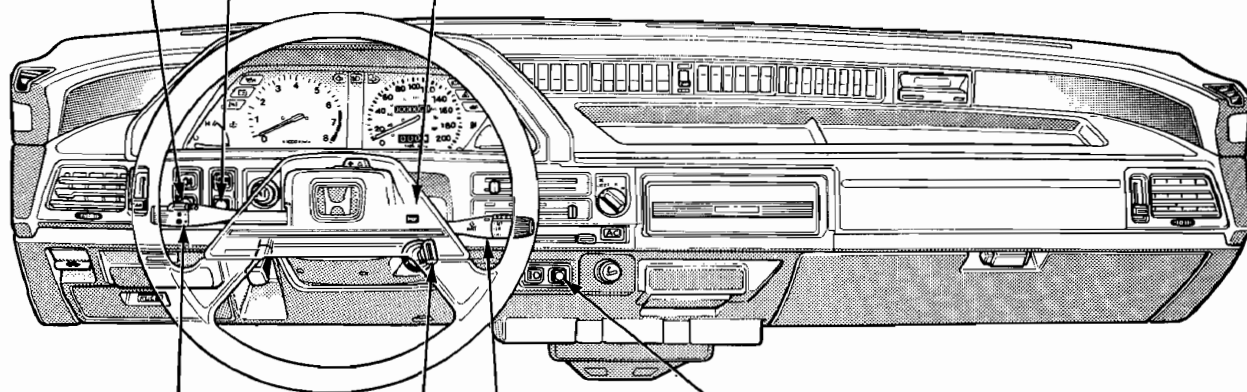

**WIPER/WASHER
SWITCH**
Testing, page 25-8

HEADLIGHT WASHER & WIPER SWITCH
Testing, page 25-20

IGNITION SWITCH
Replacement, page 25-7
Overhaul, page 25-7
Testing, page 25-7

**COMBINATION SWITCH
(LIGHTING, TURN SIGNAL/
DIMMER)**
Testing, page 25-8

SUNROOF SWITCH
Testing, page 25-17

**DASH LIGHT BRIGHT-
NESS CONTROL**
Replacement, pages 22-106 and 107
Testing, page 25-15

LIGHTS-ON WARNING SYSTEM
Troubleshooting, page 25-13


SEAT BELT WARNING SYSTEM
Troubleshooting, page 25-22

KEY-ON WARNING SYSTEM
Troubleshooting, page 25-25

**DAY TIME RUNNING LIGHT
SYSTEM**
Testing, page 25-20

Wire Harness


- Insert couplers fully until they will no longer go.
- Some couplers have locking tabs that must be aligned and engaged securely.
- Don't use wire harnesses with a loose wire or coupler.

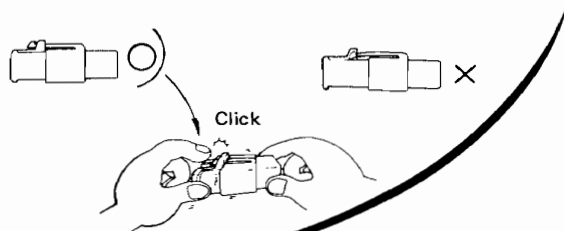

- Secure wires and wire harnesses to the frame with their respective wire bands at the designated locations.
- Tighten the bands so that only the insulated surfaces contact the wires or wire harnesses.



- Do not bring wire harnesses in direct contact with sharp edges or corners.
- Also avoid contact with the projected ends of bolts, screws and other fasteners.

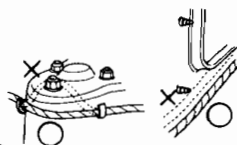


INSTRUMENT WIRE HARNESS


ENGINE COMPARTMENT WIRE HARNESS

REAR WIRE HARNESS

- Keep wire harnesses away from the exhaust pipes and other hot parts.

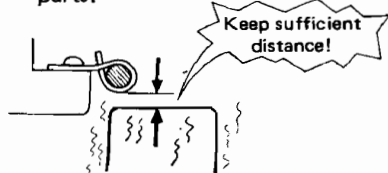

- Insert male connectors into the female connectors fully until they will no longer go.
- Be sure that plastic cover is placed over the connection.
- Don't place the opening of each plastic cover facing up.

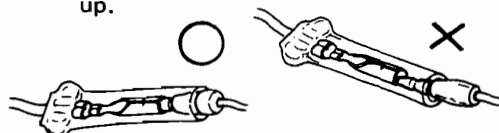

Relays and Control Unit Locations






Coupe:

<KW (Finland)>


- ① Wiper Control Unit
- ② Light on Warning Unit
- ③ Sunroof Relay
- ④ Main Relay

Air conditioner
Relay: 3 Diode: 1

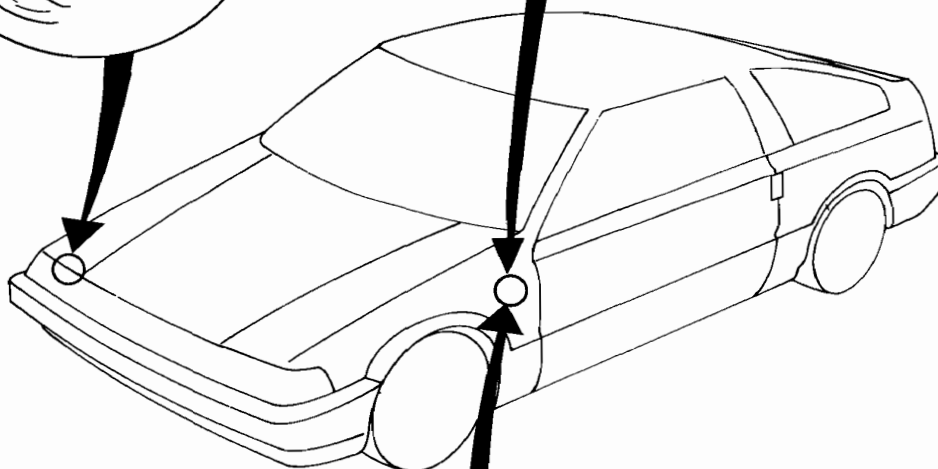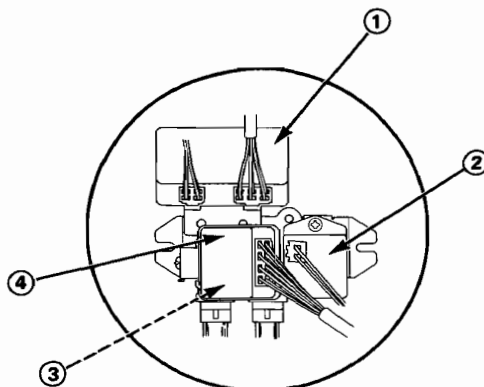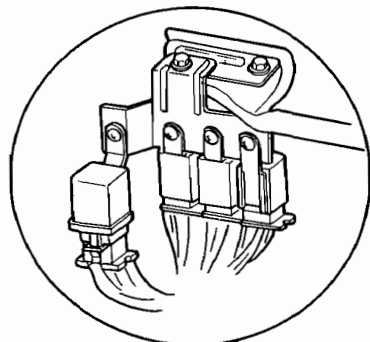


<KS>

- ① Wiper Control Unit
- ② Running Light Relay
- ③ Sunroof Relay
- ④ Main Relay

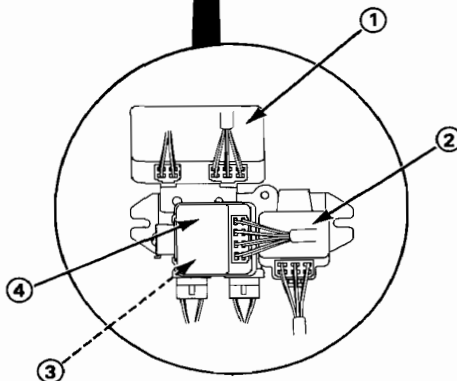


Relays and Control Unit Locations

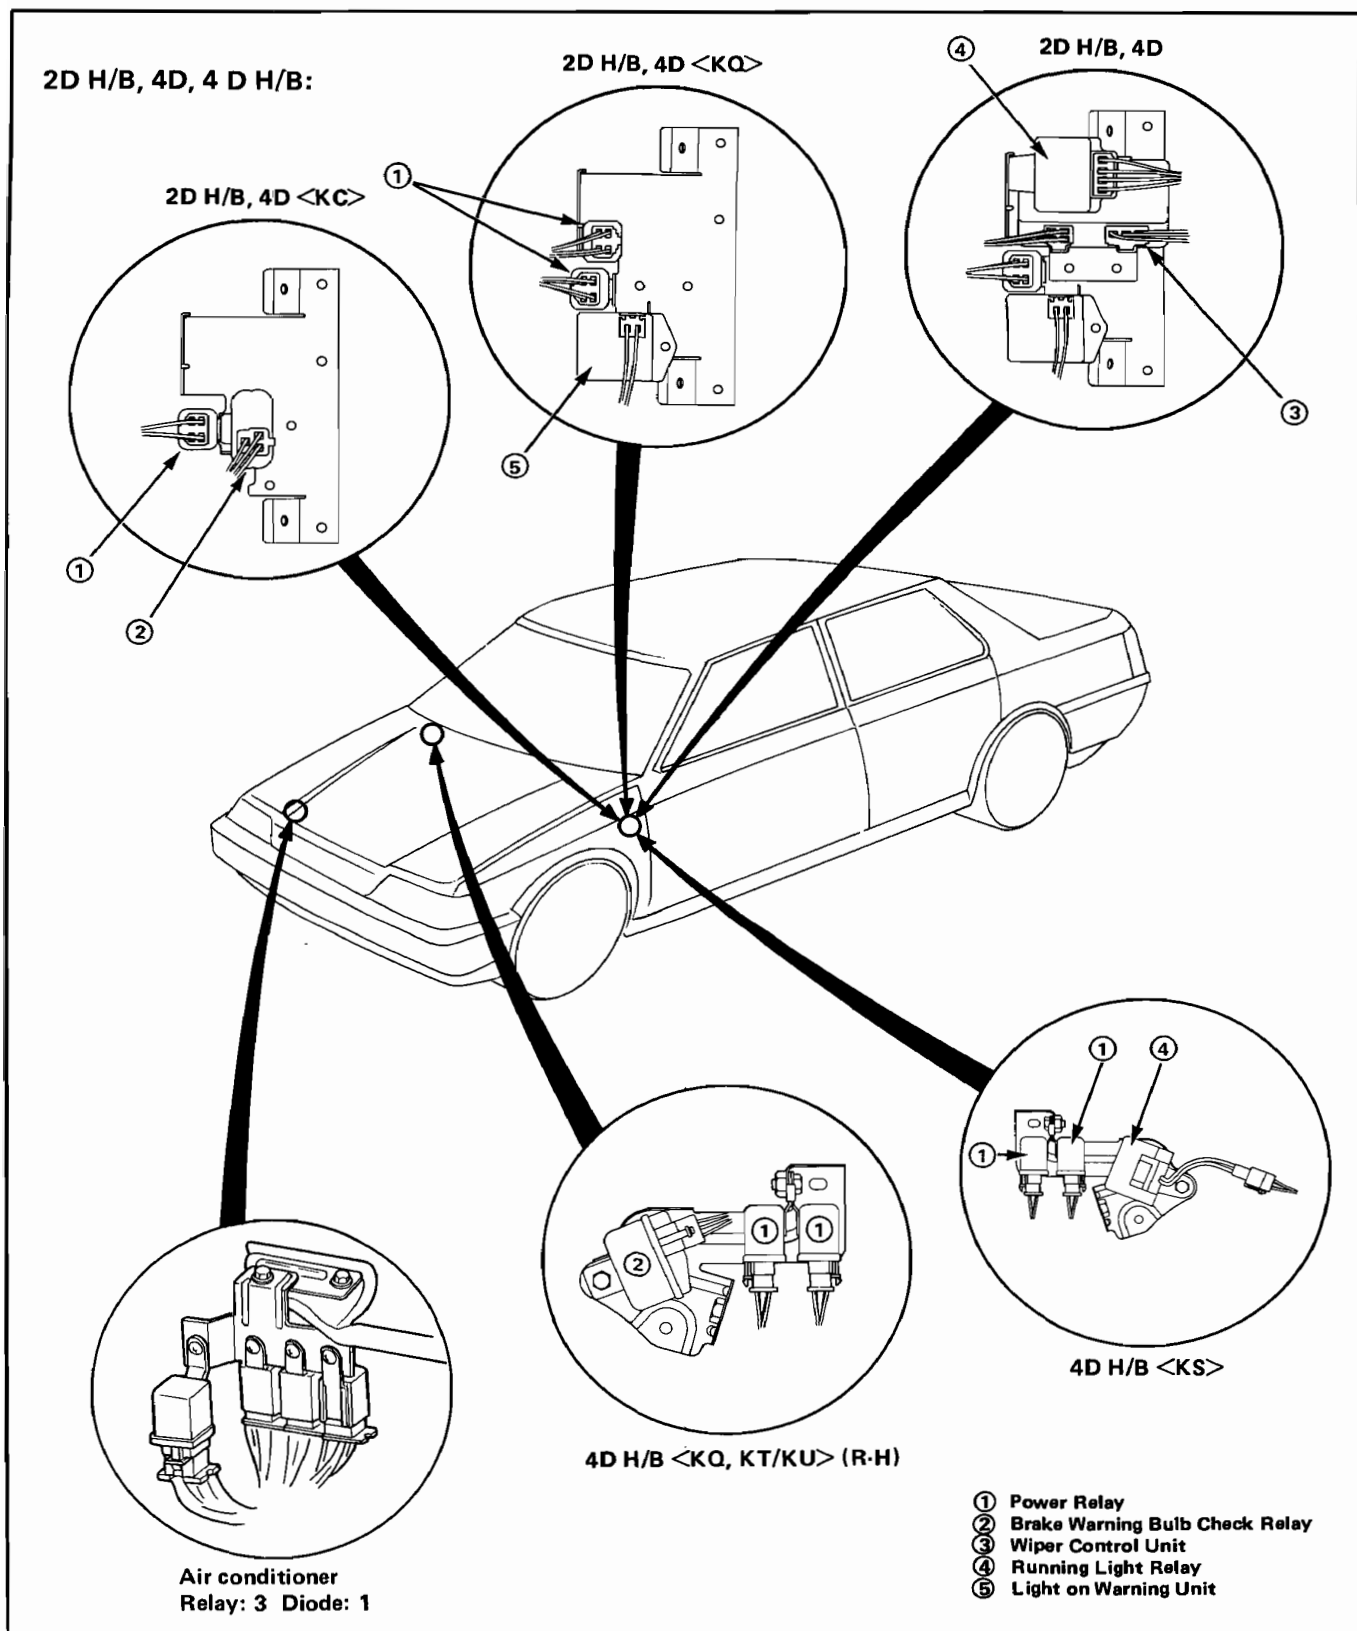

Ignition Switch

Replacement


1. Remove the steering column covers.
2. Disconnect the ignition switch connector.
3. Center punch each of the 2 shear screws and drill their heads off with a 3/8 in. drill bit.

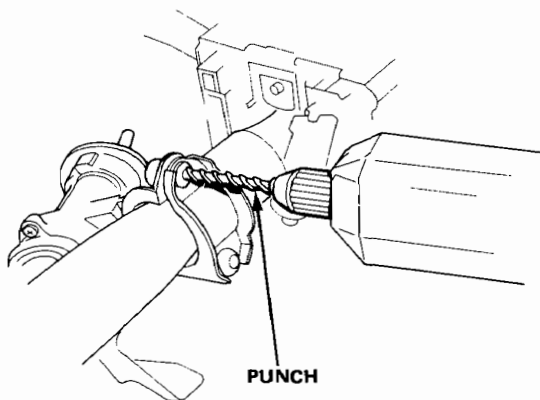

4. Install the new ignition switch without the key inserted.
5. Hand tighten the new shear screws.

NOTE: Make sure the projection of the ignition switch is aligned with the hole of the steering column.


6. Insert the ignition key and check for proper operation of the steering wheel lock.
7. Tighten the shear screws until the hex heads twist off.

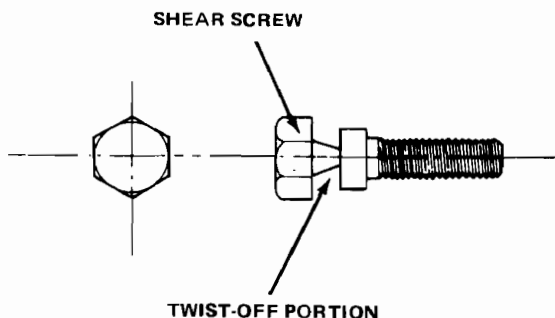

Overhaul (Electrical Switch Replacement)

NOTE: The mechanical part of the switch should be removed to replace the electrical part.

1. Remove the steering column lower cover.
2. Disconnect the ignition switch connector.
3. Insert the key and turn it to 0.
4. Remove two screws and replace the base of the switch.

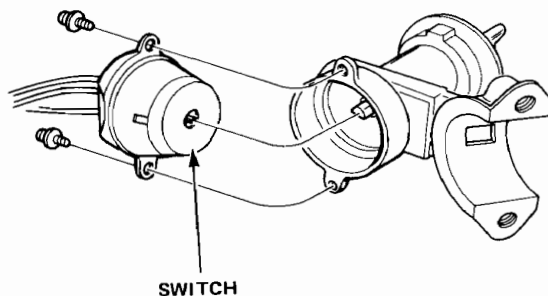


NOTE: Make sure the recess of the switch is aligned with the projection of the lock when installing.

Testing

Check for continuity according to the table.

TERMINAL POSITION	ACC	BAT	IG1	IG2	ST
0					
I	○	○			
II	○	○	○	○	
III		○	○		○
WIRE COLOR	W/R	W	BI/Y	BI/Y	BI/W

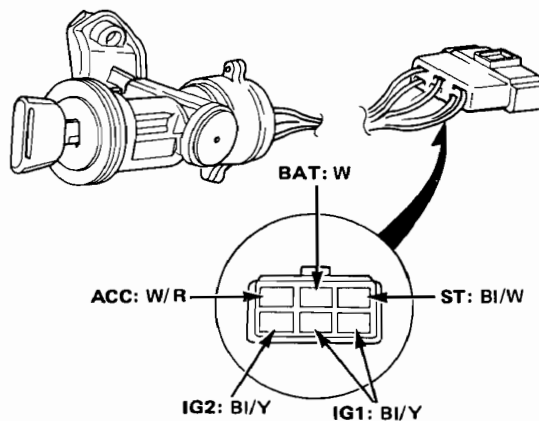


Combination Switch

Testing

Check for continuity between the terminals in each switch position according to the table.

CAUTION:

- Make sure the wire leads are not pulled when the lever is moved.
- Check that the lever works freely without binding.

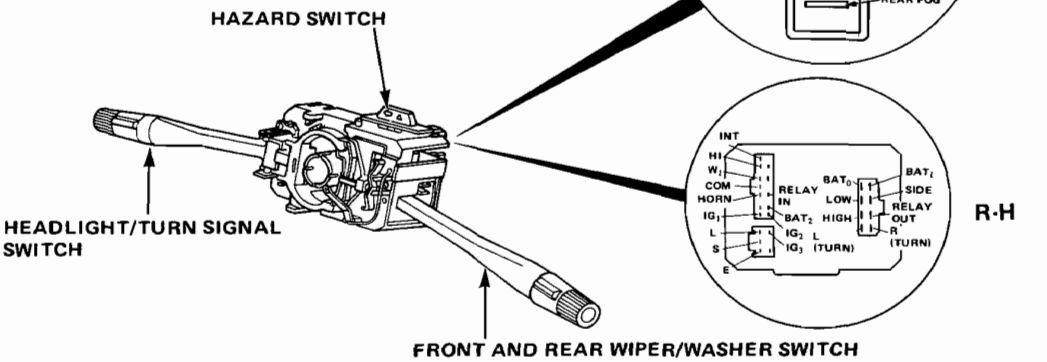

Hazard/Turn Signal Switch

Hazard	BAT ₂	IG ₂	RELAY IN	RELAY OUT	R	L	HZ-PL	TURN SIGNAL
OFF		○	○	○	○			R
		○	○	○				NEUTRAL
		○	○	○		○		L
ON	○		○	○	○	○	○	R
	○		○	○	○	○	○	NEUTRAL
	○		○	○	○	○	○	L

Headlight Switch

Terminal Position	BAT ₁	SIDE	BAT ₀	(HEAD)	RRFOG
OFF					
•	○	○			
●	○	○	○	○	○

Front Wiper Switch

Terminal Position	HI	L ₀	E	COM	IG ₁	INT	MIST
OFF	○	○	○	○			OFF
INT	○	○	○	○	○	○	OFF
L ₀	○	○	○	○			OFF
H ₁	○	○	○	○			OFF

Terminal Position	W ₁	IG ₁
OFF		
ON	○	○

Dimmer Switch

Terminal Position	(HEAD)	HIGH	LOW
HIGH	○	○	
↑ ↓	○	○	○
LOW	○		○

Terminal Position	BAT ₀	HIGH
OFF		
ON	○	○

Rear Washer Switch Rear Wiper Switch

Terminal Position	IG ₃	W
OFF		
ON	○	○


	L	S	E
OFF	○	○	
ON	○		○

Front Wiper Moter




Testing

1. Check for continuity with the motor automatically stopped position.
There should be continuity between the S(Bu/W) and B(G/BI), and no continuity between S(Bu/W) and E (BI) leads.
2. Test motor low speed by applying battery voltage: Positive to the B(G/BI) lead and negative to the L(Bu) lead.
3. Test motor high speed by applying battery voltage: Positive to the B(G/BI) lead and negative to the H(Bu/Y) lead.
4. If motor fails to run smoothly, replace the motor assembly.

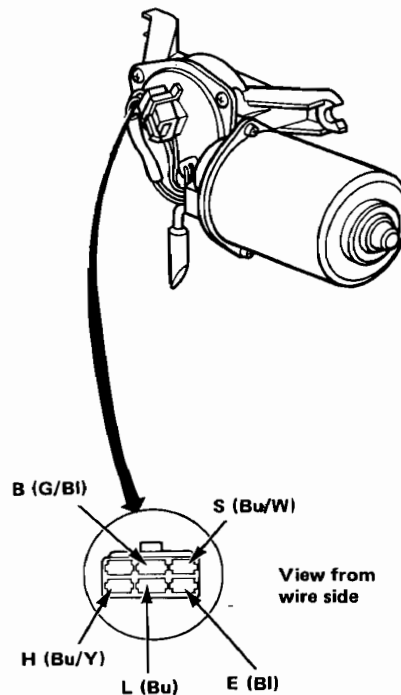


Wiring Diagram

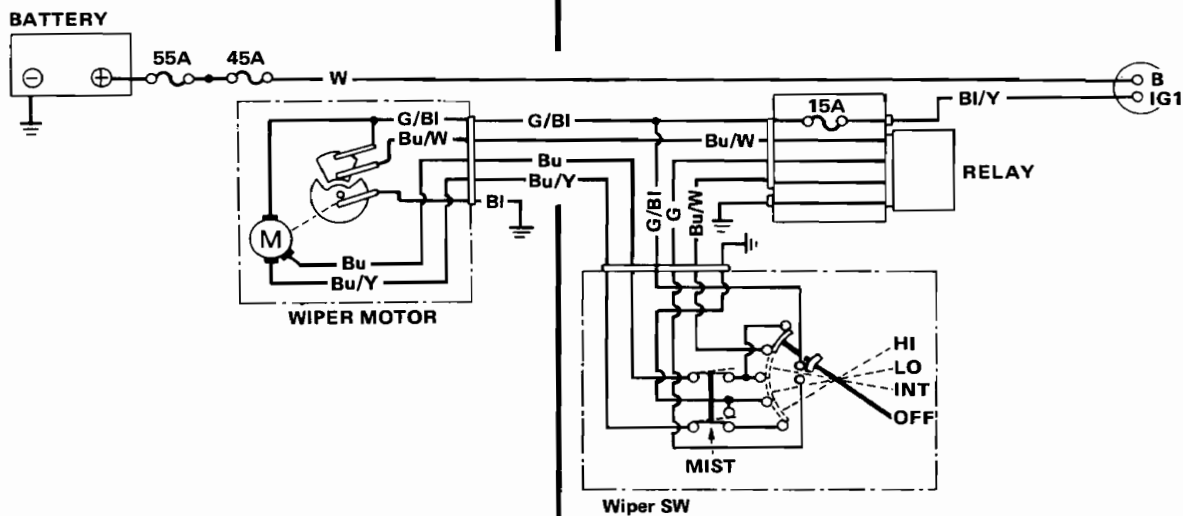

Rear Wiper Moter

Rear Wiper Motor Testing

1. Test the wiper motor by applying battery voltage to the G/BI lead (positive) and G (negative) lead.
2. If the motor fails to turn smoothly, replace it.

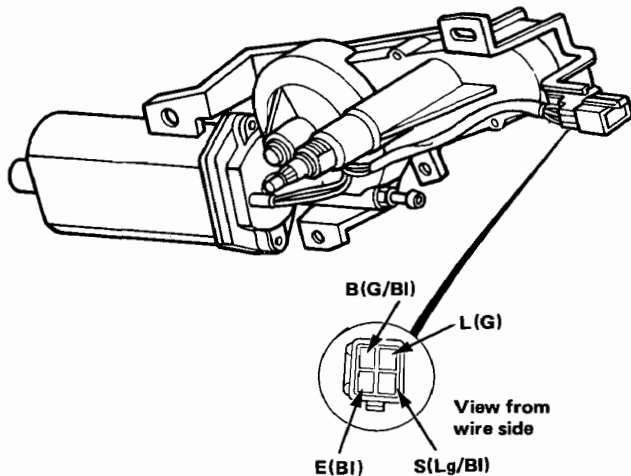


Washer Motor Horn Switch


Washer Motor Testing

Test motor speed by applying the battery voltage to its terminals.

NOTE: Connect the battery positive cable to the lock side terminal of the motor.

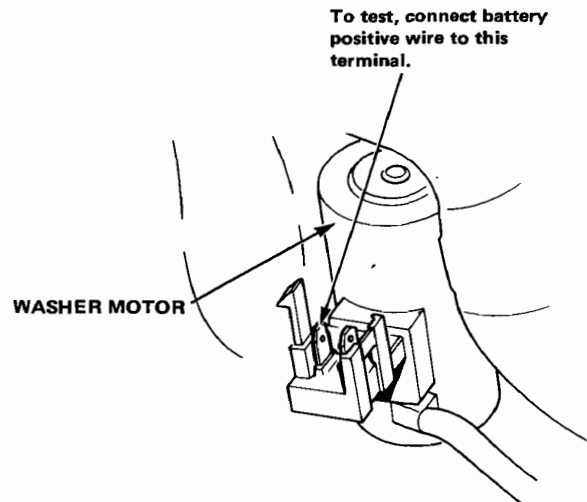


Wiring Diagram

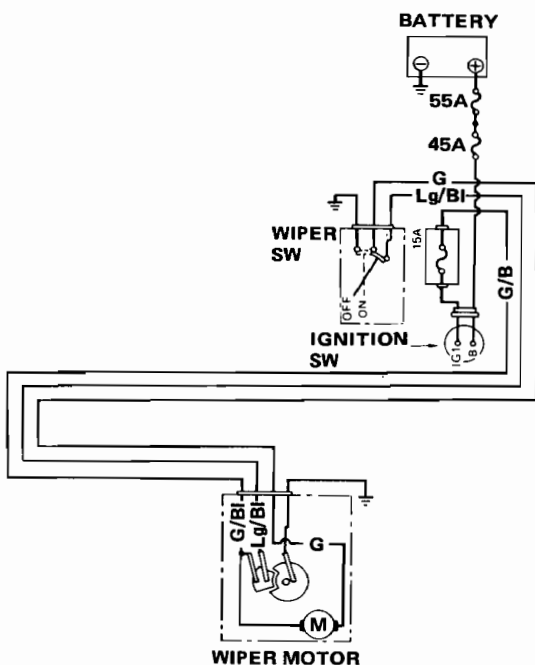

Horn Switch Testing

Use an ohmmeter.

There should be continuity between the contact ring and hub core when the horn switch is depressed, and no continuity when released.

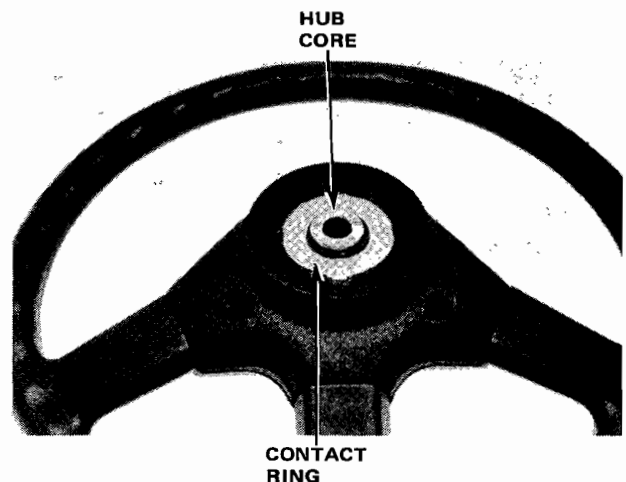


Defroster

Switch Testing

Check for continuity

Terminal Position	B	D		E
OFF		○	⊗	○
ON	○	○	⊗	○

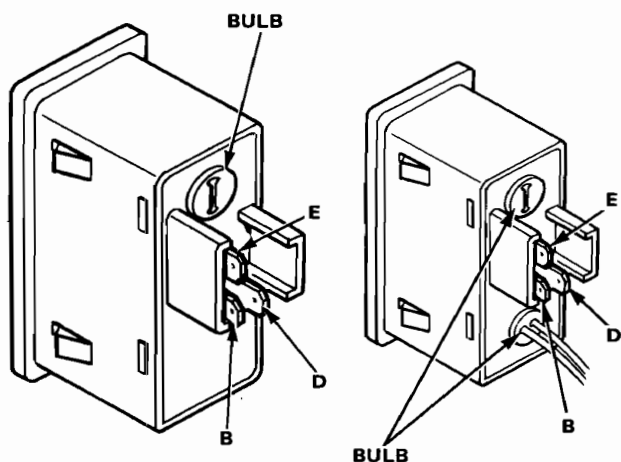


Defroster Interior Light Switch




Defroster Relay Testing

There should be continuity between A and B terminals, when applying battery voltage to C (positive) and D (negative) terminals. There should be no continuity when the battery is disconnected.

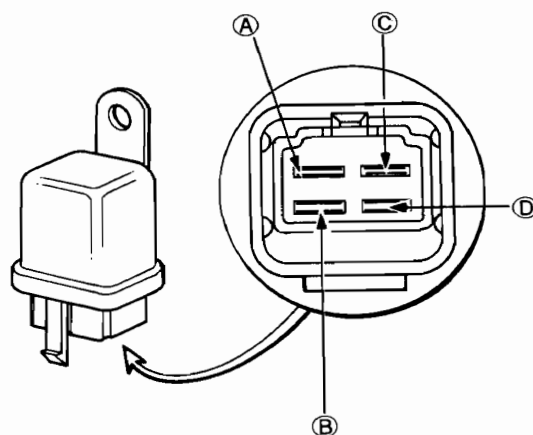


Wiring Diagram

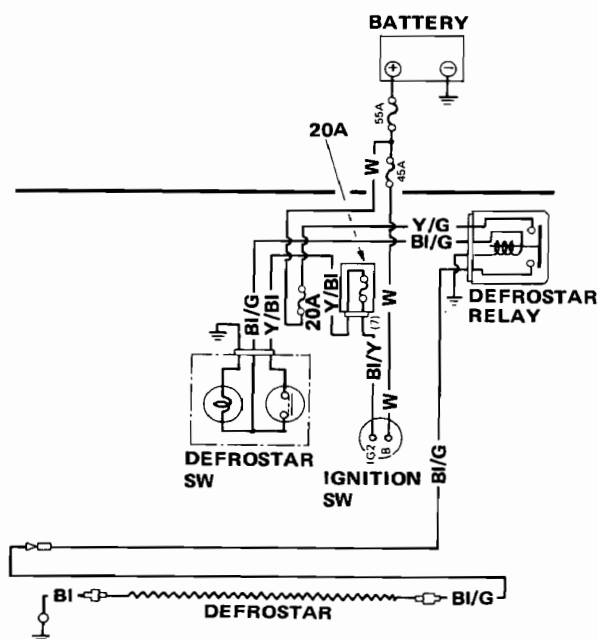

Interior Light Switch Testing

Check for continuity according to the table.

TERMINAL POSITION	A	B	C	
OFF				
MID.		○	○	
ON	○	○		

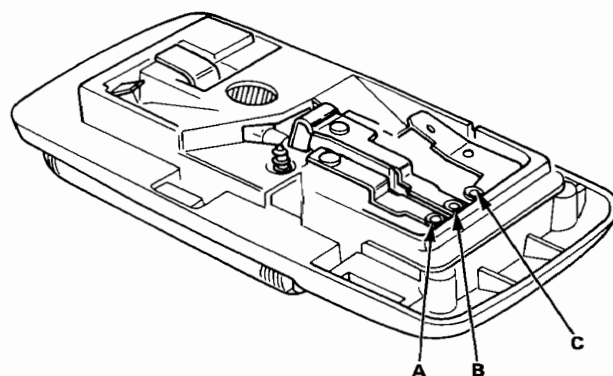

Door Switch Trunk Light Switch


Door Switch Testing

There should be no continuity when the switch is pulled (door is closed), and continuity when the switch is released (door is open).



Trunk Light Switch Testing


Make sure that the bulb is in good condition.
Set the trunk light switch in the ON position and check for continuity between terminals.

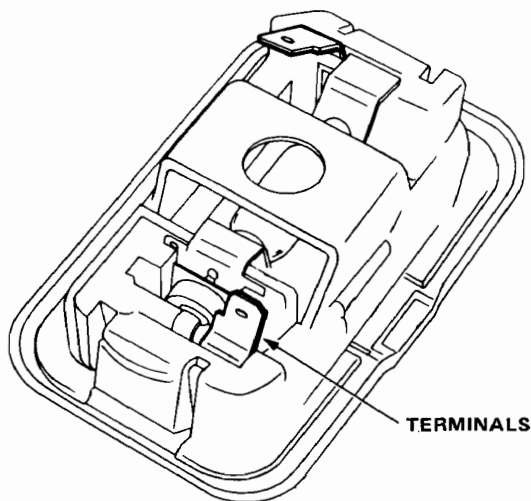

Luggage Light Switch

Testing


There should be continuity between G/BI lead and ground when the trunk lid is open, and no continuity when the trunk lid is closed.

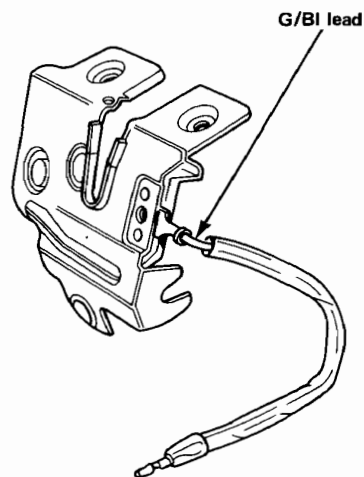

Light-on Warning System



Wiring Diagram

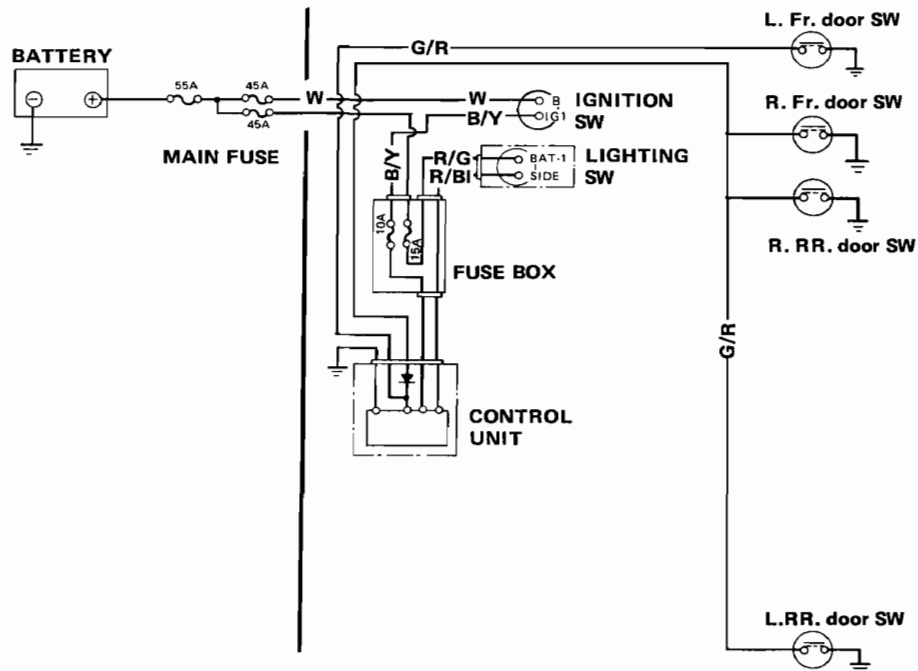

Troubleshooting

1. Buzzer does not sound.

Open driver's door.

Check room lamp.

OK?

YES

See page 25-14

NO

- ① R. door SW
- ② Ignition SW
- ③ Driver's door SW
- ④ GND
- ⑤ Light

Check for continuity between driver's door switch harness wire and body ground.

Is there continuity?


NO

Faulty door switch.

YES


Check for continuity between ③ terminal and driver's door switch harness wire.

See page 25-14

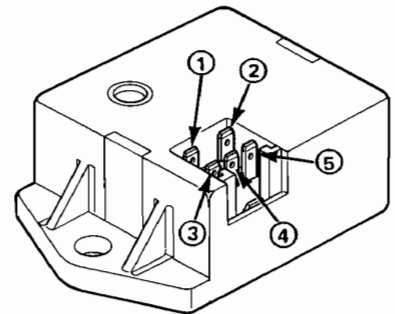

Light-on Warning System

Troubleshooting (cont'd)

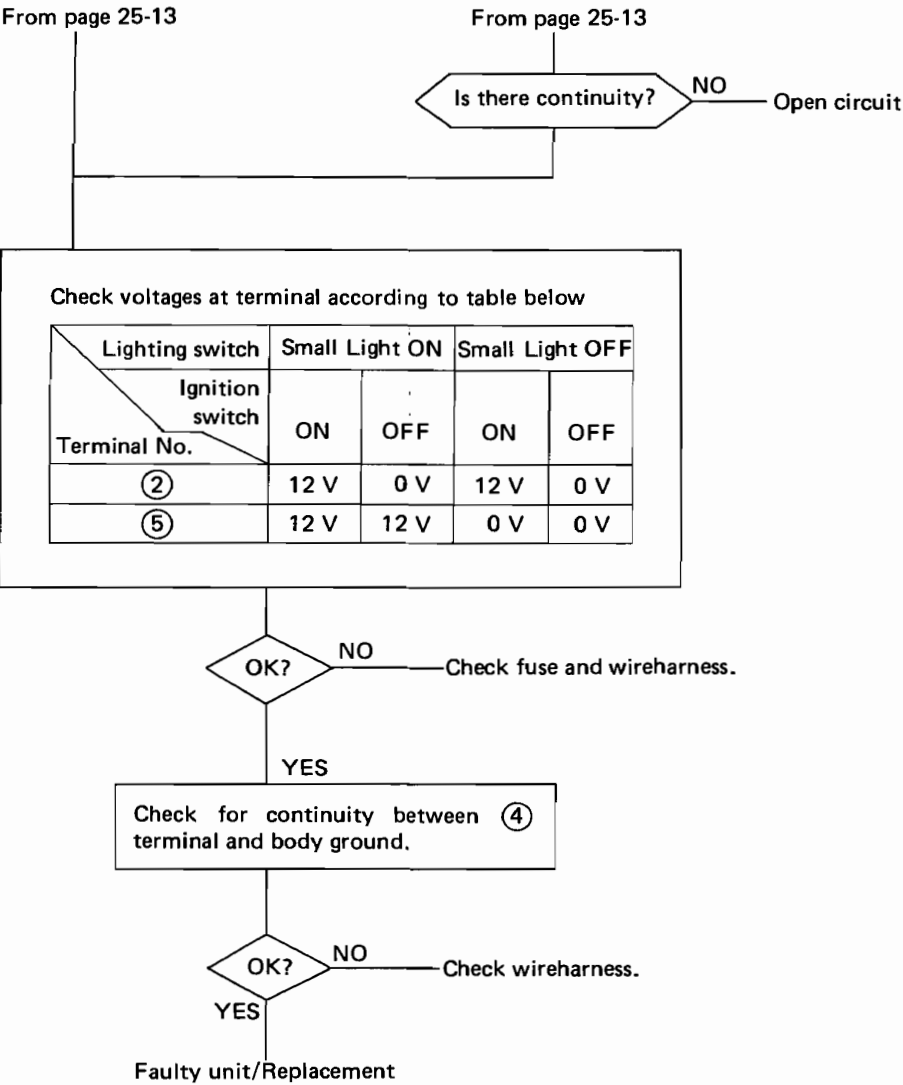


- 2. The room lamp won't light even when the driver's door is opened (the buzzer sounds): Replace the unit.
- 3. The buzzer sounds when the assistants door is opened: Replace the unit.

Dash Light Brightness Control




Wiring Diagram

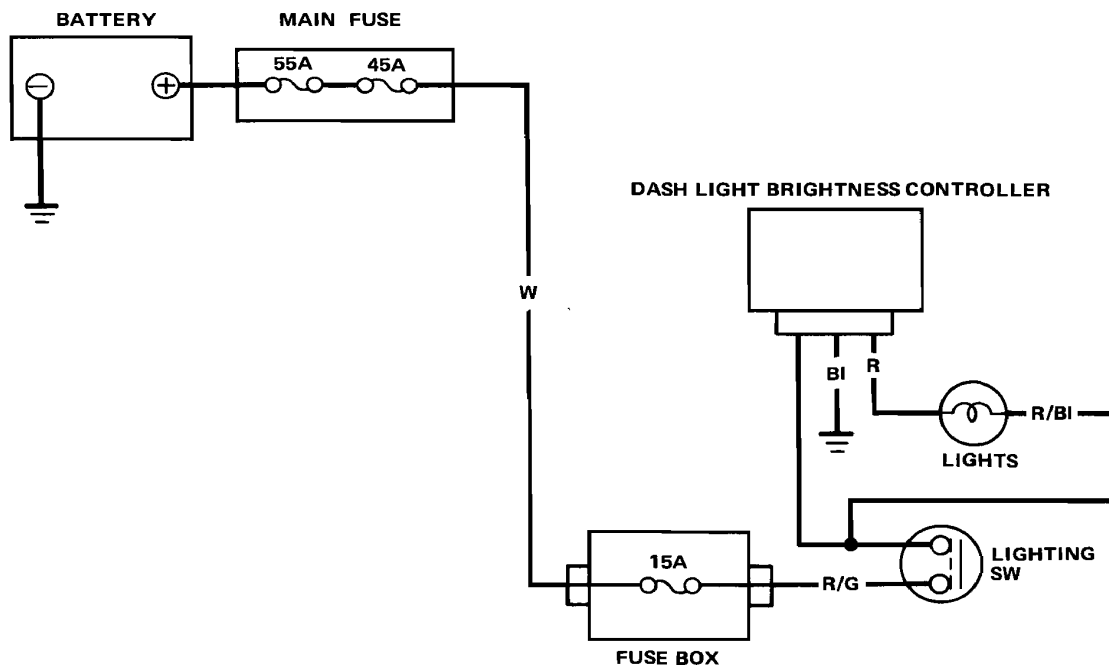

Controller Testing


1. Turn the lighting switch on.
2. Connect the volt meter positive probe to (a) terminal and negative probe to (b) terminal.
3. Turn the controller volume.
4. The controller is normal if the voltage varies.

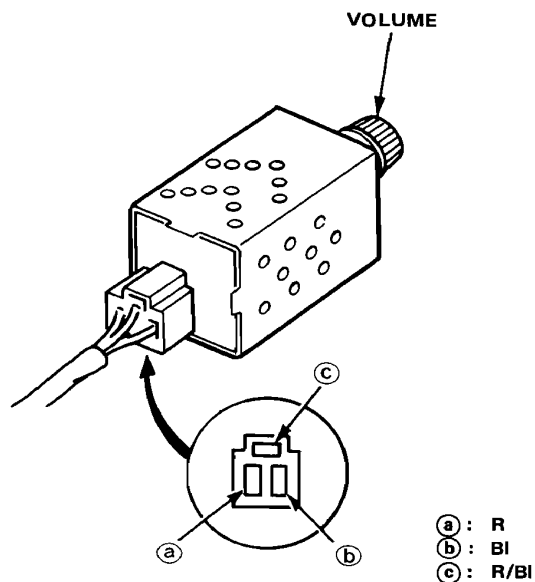


Sunroof

Wiring Diagram

Coupe:

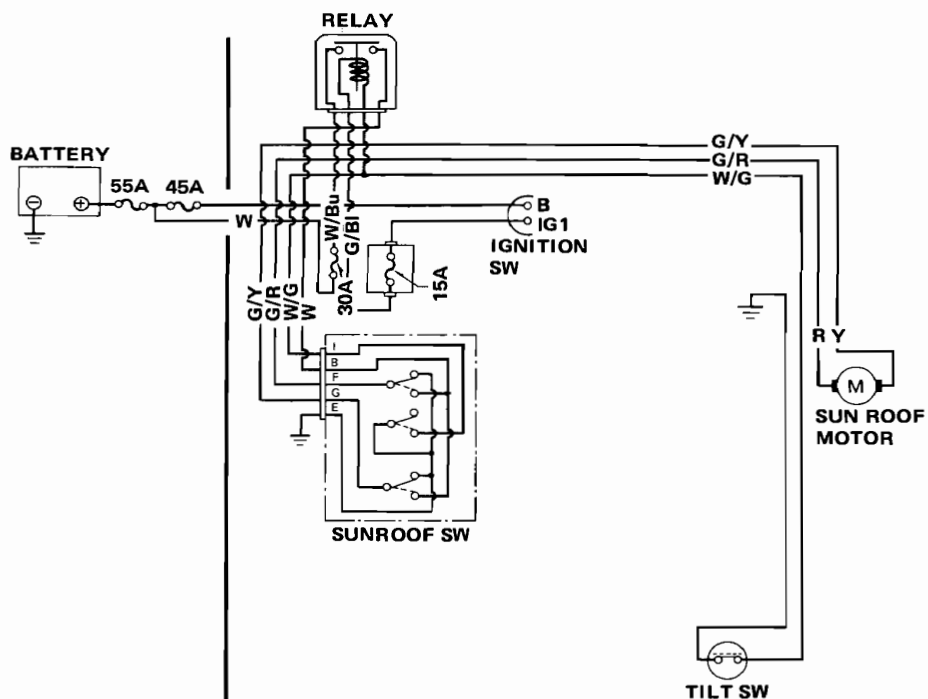

4D H/B:

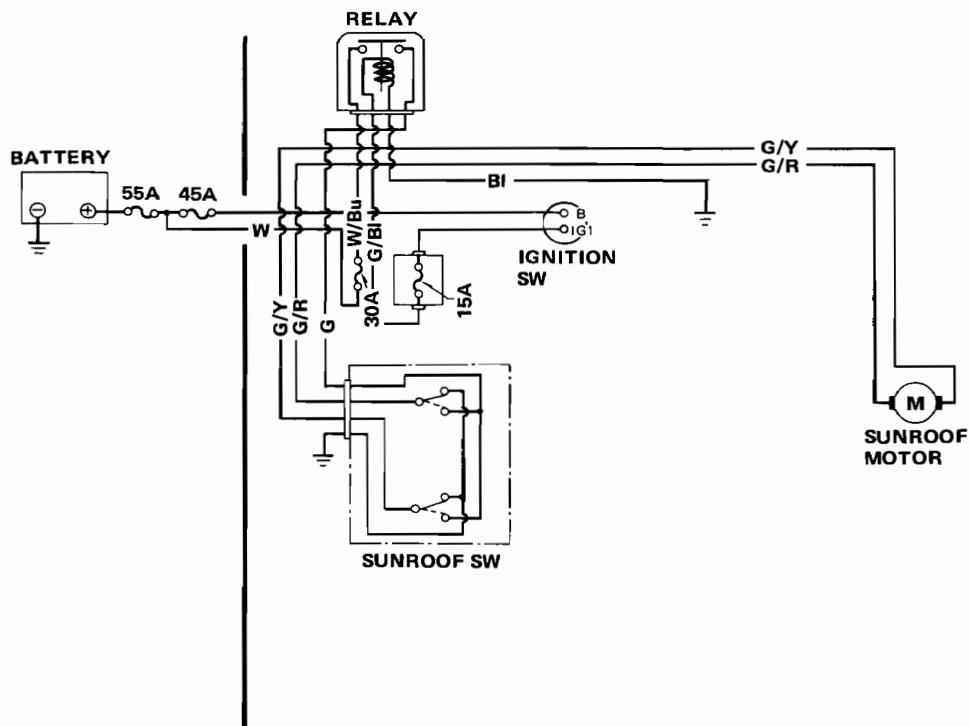




Switch Testing (Coupe)

Check for continuity according to the table.


TERMINAL POSITION	B	F	G	I	E
CLOSE	○	○	○	○	○
OFF		○	○		○
TILT	○	○			○
OPEN	○	○	○	○	○

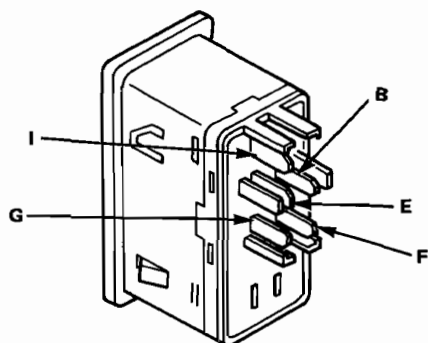

Switch Testing (4D H/B)

Check for continuity according to table.


TERMINAL POSITION	V	O	S	G
OPEN	○	○		
OFF		○	○	○
CLOSE	○	○	○	○

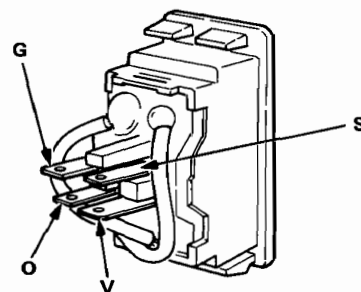


Motor Testing

Check motor operation by connecting a wire from the battery positive terminal to one of the motor leads, and a battery ground to the other. Reverse the wires to be sure the motor will run in both directions.

(Coupe)

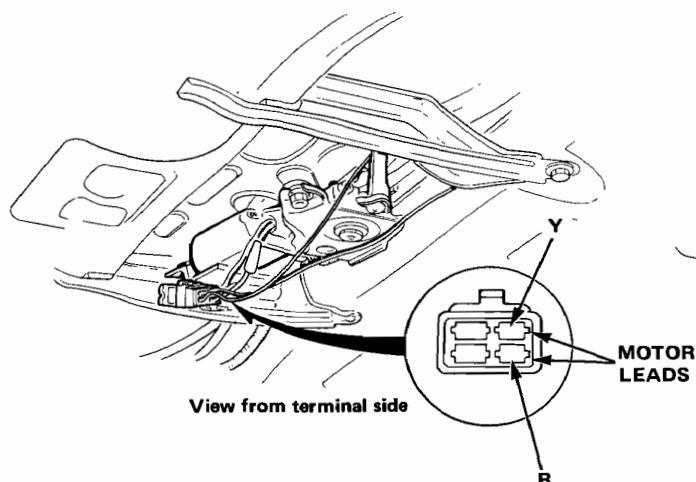

(4D H/B)

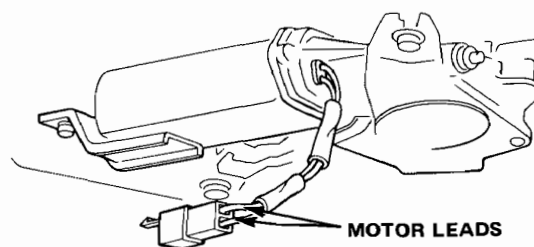


Sunroof

Rear Fog Light


Sunroof Relay Testing

There should be continuity between A and B terminals, when applying battery voltage to C (positive) and D (negative) terminals. There should be no continuity when the battery is disconnected.

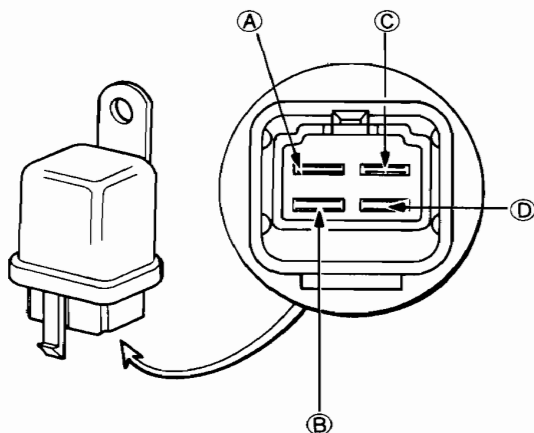


Tilt Switch Testing (Coupe)

Check for continuity between the terminals. There should be continuity when the sunroof is not tilted. There should be no continuity when the sunroof is tilted.

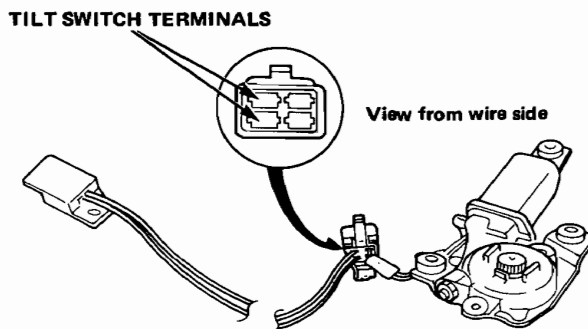

Rear Fog Light Wiring Diagram

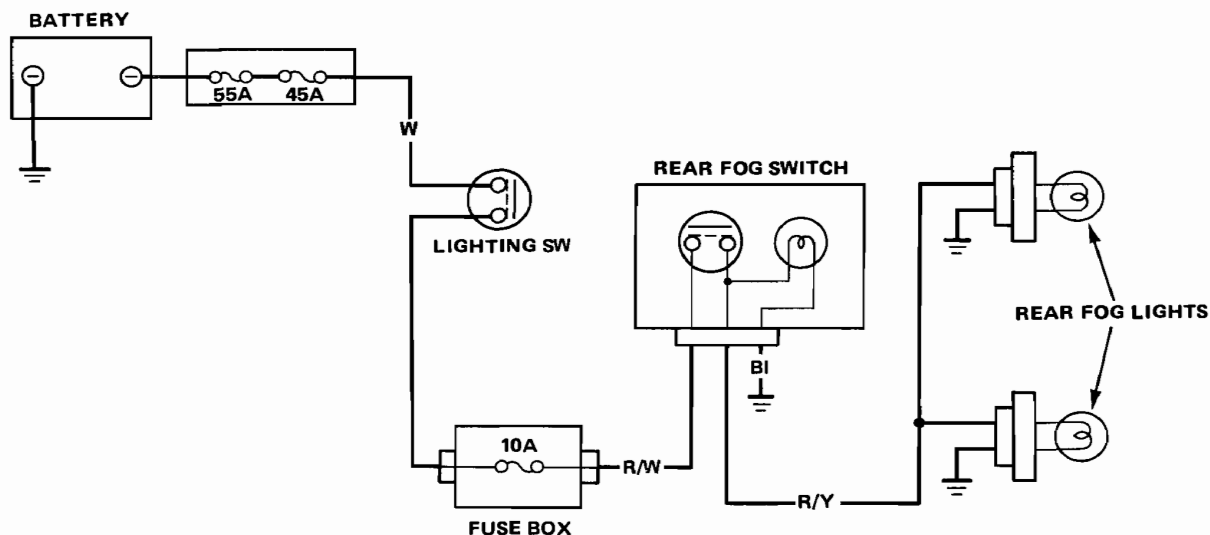


Rear Fog Light, Day Time Running Light




Rear Fog Light Switch Testing

Check for continuity according to the table below.

	B	D		E
OFF				
ON				

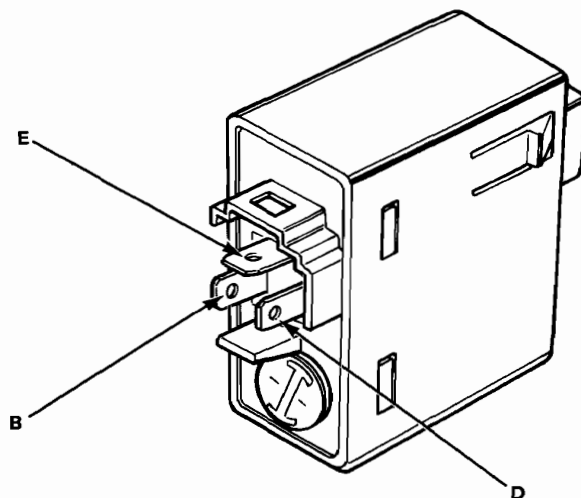


Day Time Running Light Wiring Diagram

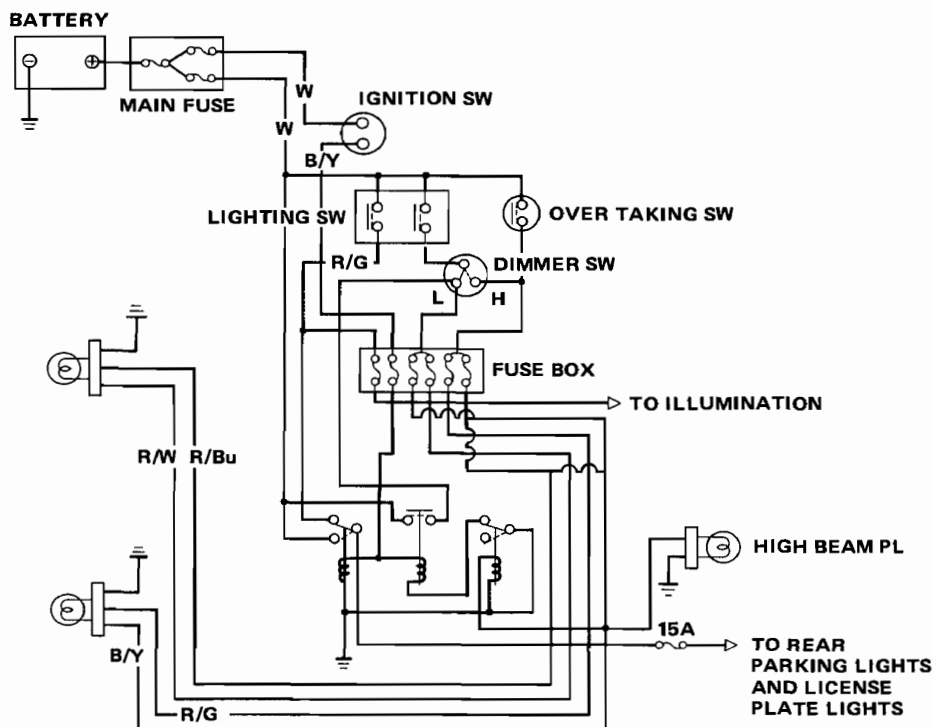


Day Time Running Light Headlight Washer & Wiper

Day Time Running Relay Testing

- (1) Check for continuity between the (2) and (7) terminals when the battery positive terminal is connected to the (4) terminal and the negative to the (5) terminal.
- (2) Check for continuity between the (2) and (1) terminals when the battery positive terminal is connected to the (4) terminal and the negative to the (5) terminal.
- (3) Check for no continuity between the terminals (2) and (1) when the battery positive terminal is connected to the (4) and (3) terminals and the negative to the (5) terminal.

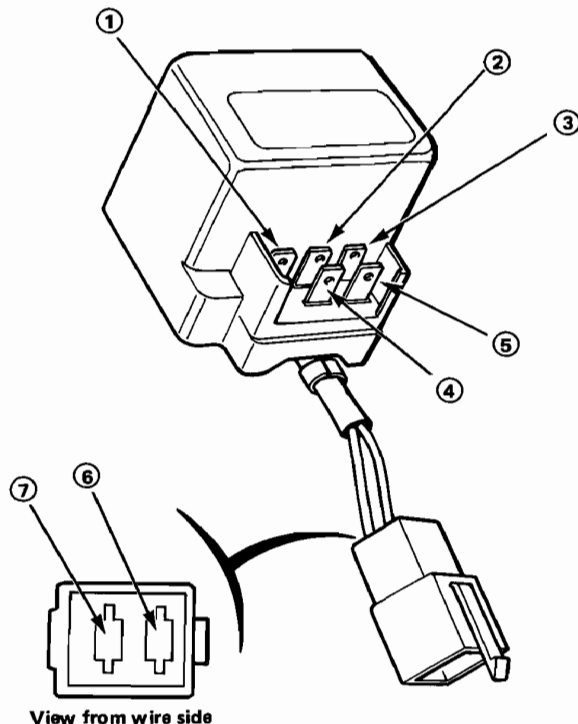

Headlight Washer & Wiper Wiring Diagram

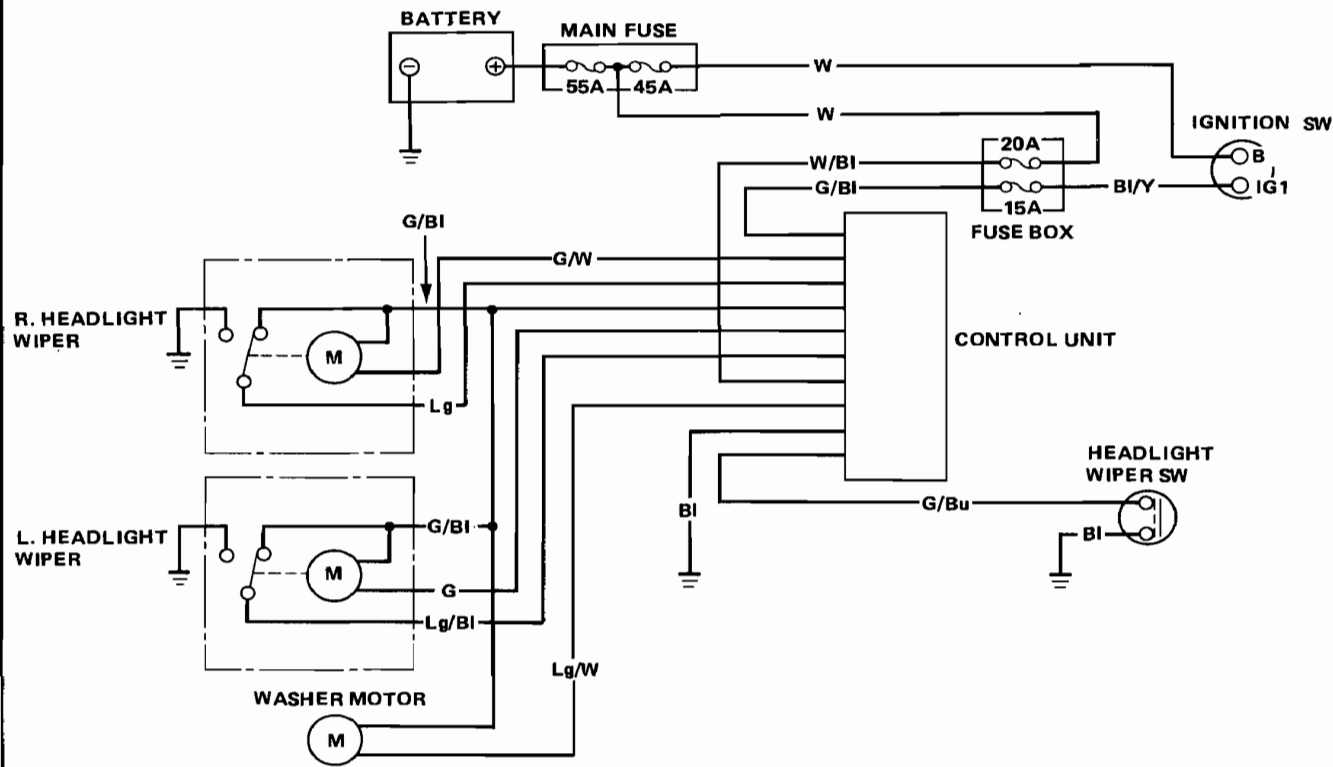


Headlight Washer & Wiper



Switch Testing


Test continuity according to the table.

	B	H
OFF		
ON	○	○

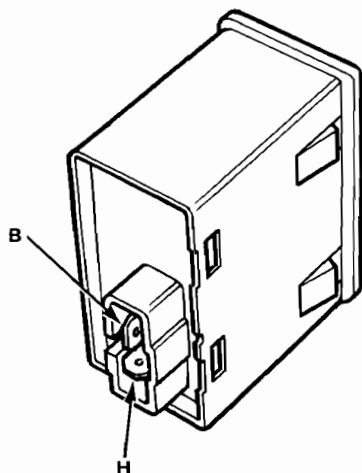


Washer Motor Testing

Test motor by applying battery voltage to A (positive) and B (negative) terminals.

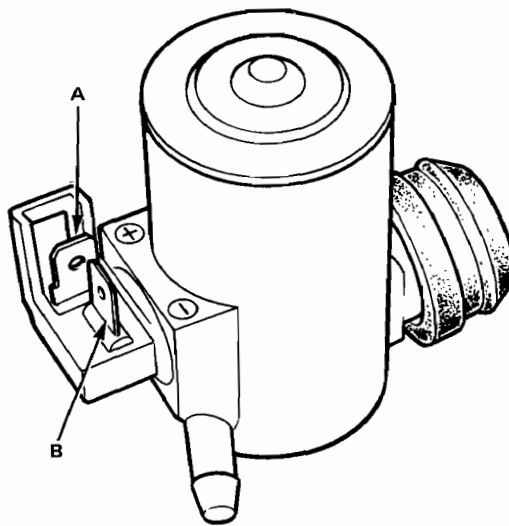


Wiper Motor Testing

1. Test the rear wiper motor by applying battery voltage to the G/BI (B: positive) and G (negative) leads.
2. If the motor fails to turn smoothly, replace it.

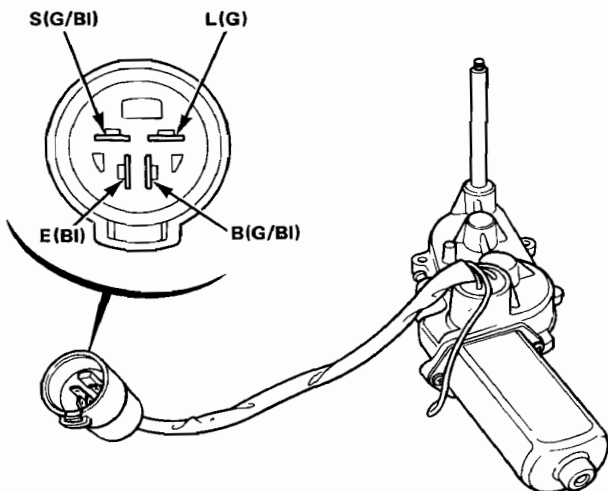



Seat Belt Warning System

Wiring Diagram

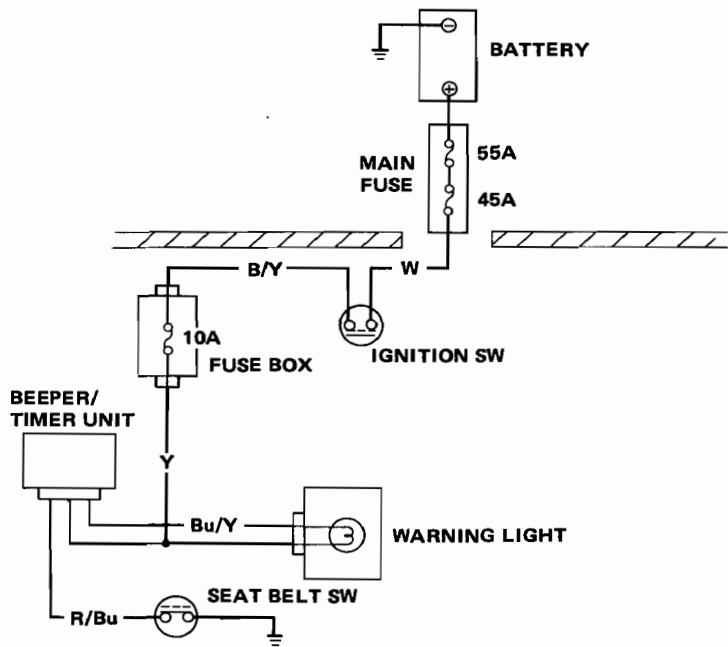

Troubleshooting

1. Light and beeper don't work.

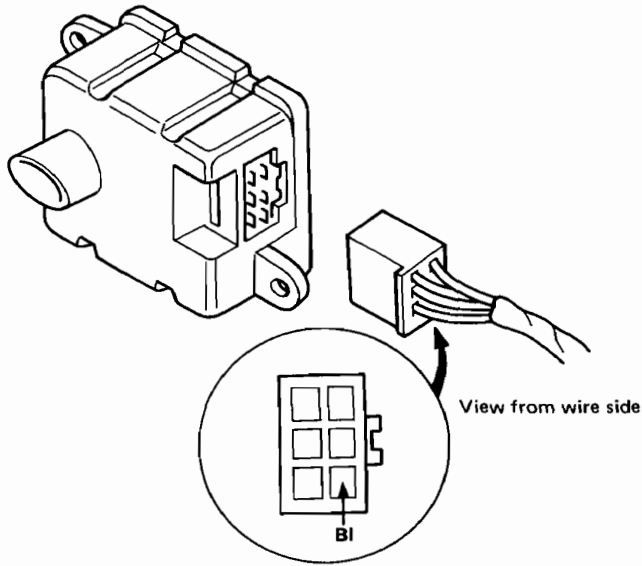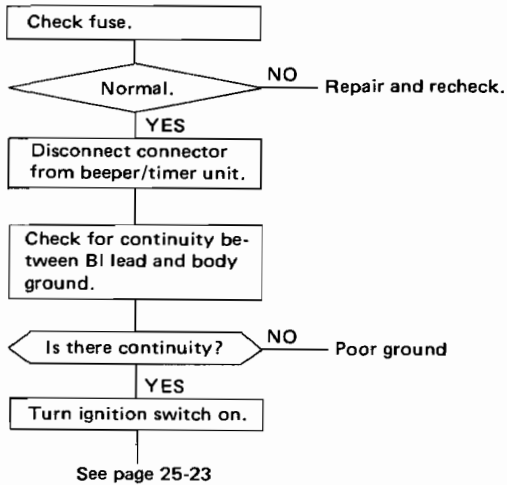



Seat Belt Warning System

Troubleshooting (cont'd)

From page 25-22

Measure voltage between
Y lead (positive) and BI
lead (negative)

Is 12 volts available?

NO

Open circuit between
fuse and beeper/timer unit

YES

Faulty beeper/timer unit

2. Light doesn't flash

Check beeper operation.

Does beeper
work properly?

NO

See No. 1 troubleshooting.

YES

Turn ignition switch off.

Disconnect connector
from beeper/timer unit.

Connect Bu/Y lead to
BI lead by using jumper
wire.

Turn ignition switch on.


Light ON?

NO

Bulb burned out
or
Open circuit in Bu/Y lead

YES

Faulty beeper/timer unit

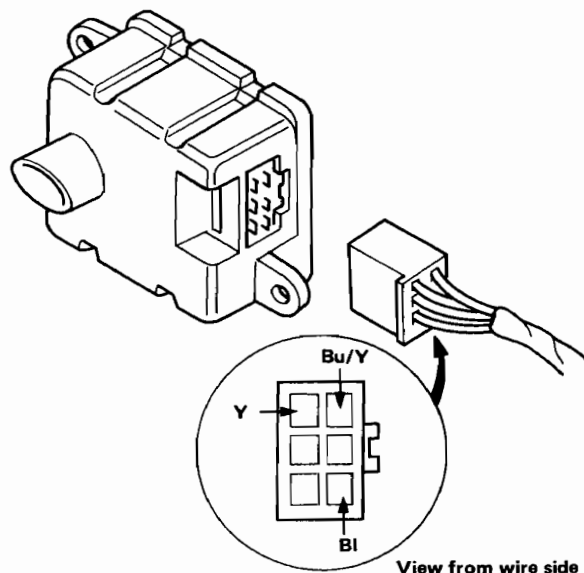

3. Beeper doesn't work.

Check warning light
operation.

Does light
flash properly?

NO

See No. 1 Troubleshooting.

YES

Turn ignition switch off.



Disconnect wire harness
from seat belt switch.

See page 25-24

(cont'd)

Seat Belt Warning System

Troubleshooting (cont'd)

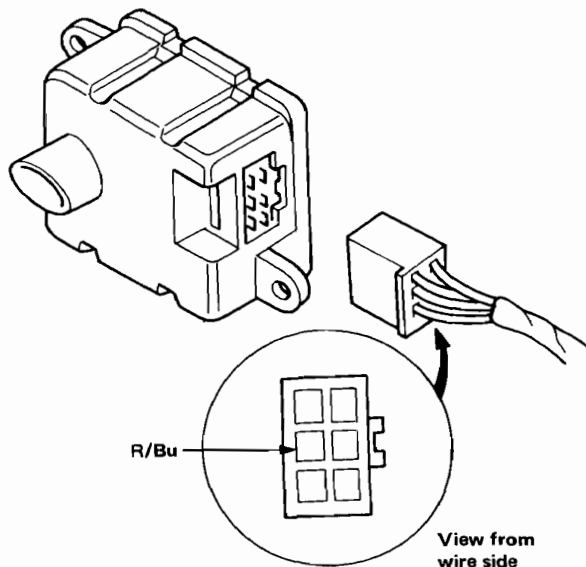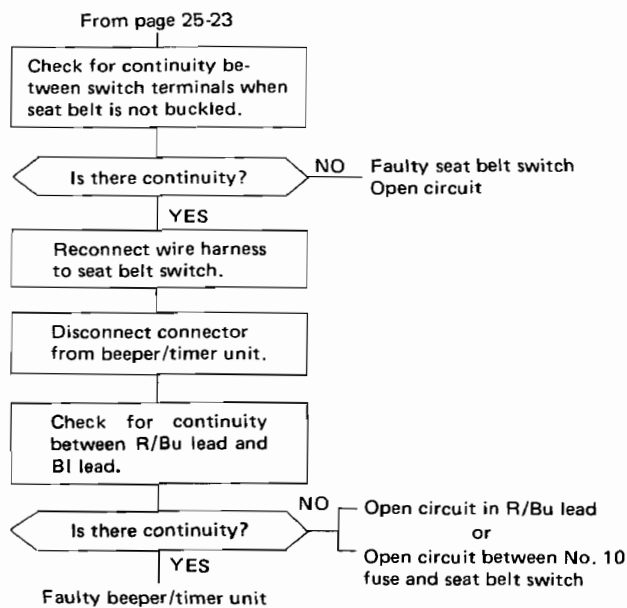


4. **Light stays on constantly.**
 - Short circuit in Bu/Y lead
5. **Light continues to flash and beeper won't shut off after 6 seconds.**
 - Faulty beeper/timer unit

Seat Belt Switch Testing

Check for continuity.


- There should be continuity when the seat belt is not buckled.
- There should be no continuity when the seat belt is buckled.

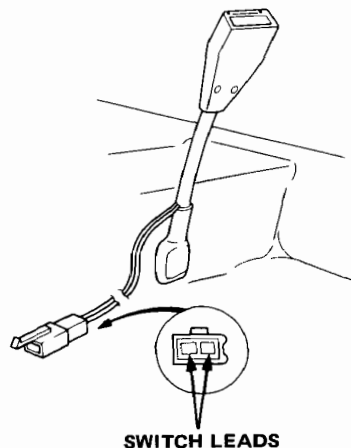

Key-On Warning System





Wiring Diagram

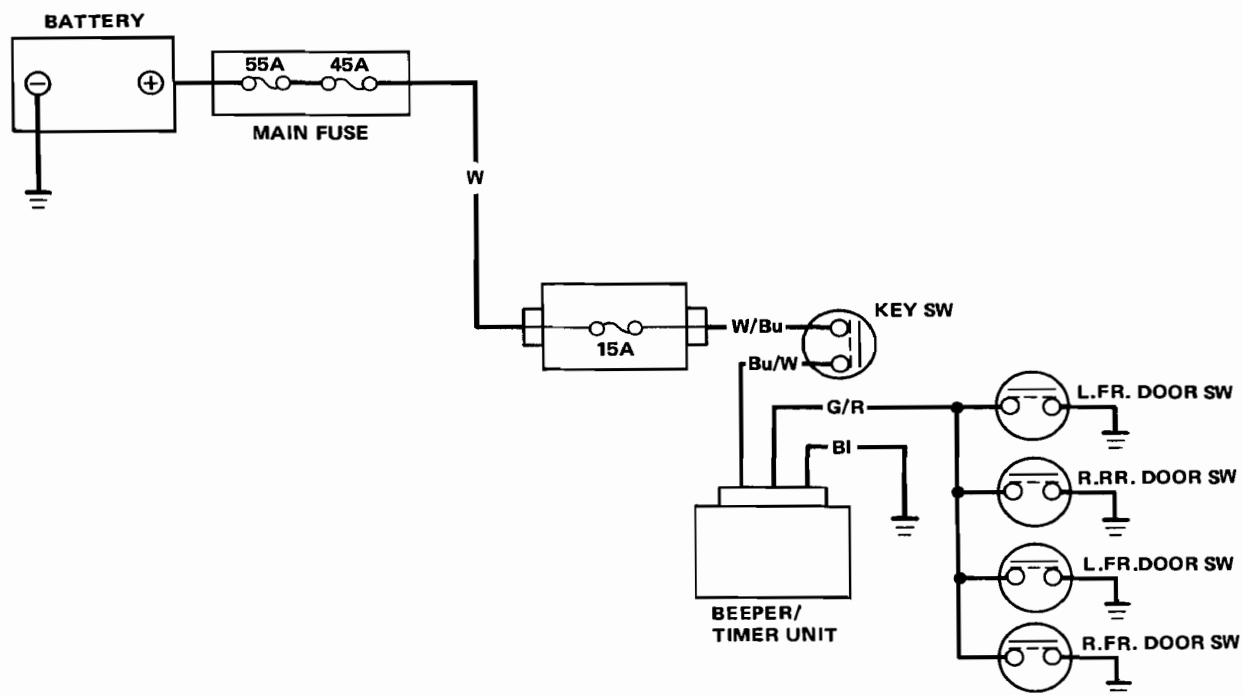

Troubleshooting

1. Beeper doesn't work.

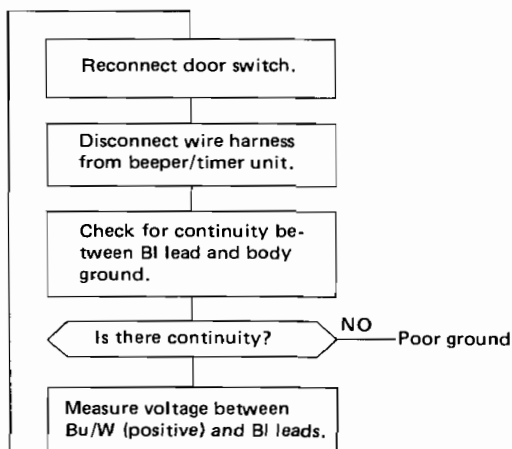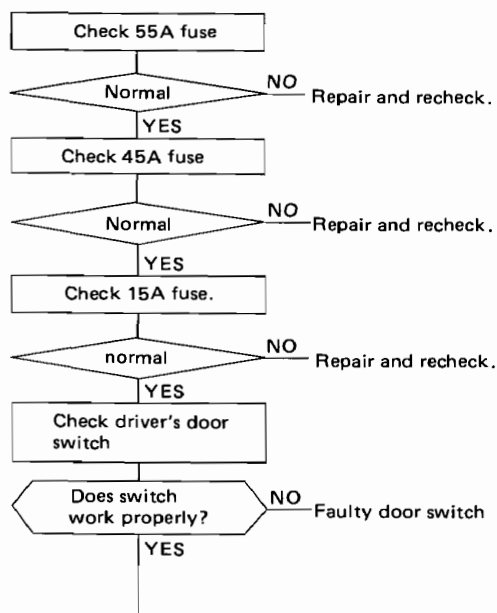



See page 25-26.

NOTE: Make sure the ignition key is inserted.

(cont'd)

Key-On Warning System

Troubleshooting (cont'd)

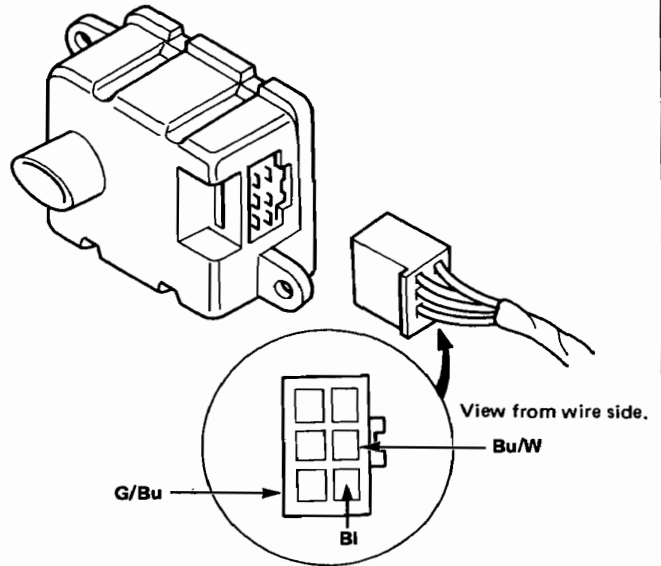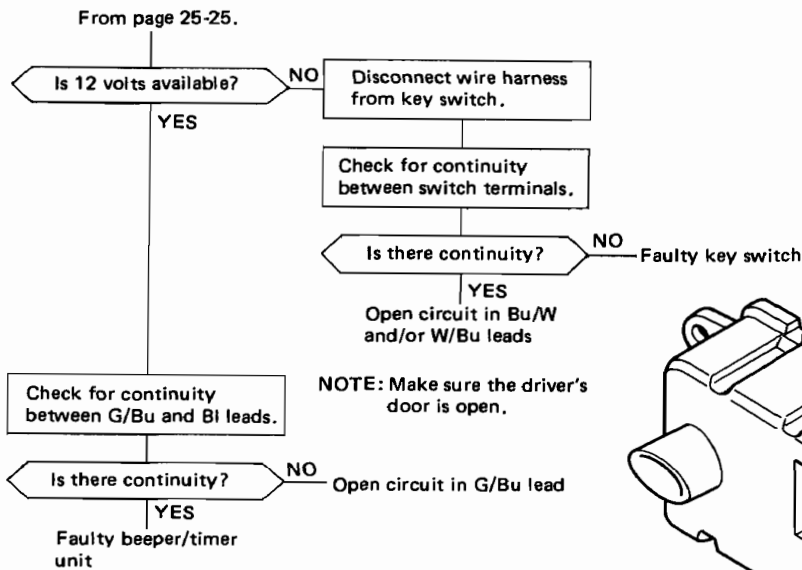

2. Beeper won't shut off when driver's door is closed.

- Faulty driver's door switch (switch remains on.)
- Short circuit in G/Bu lead
- Faulty beeper/timer unit


3. Beeper won't shut off when ignition key is removed.

- Faulty key switch (switch remains on.)

Key Switch Testing

Check for continuity.

- Turn the ignition switch on, then turn it to LOCK position. There should be continuity when the ignition key is inserted.
- There should be no continuity when the ignition key is removed.

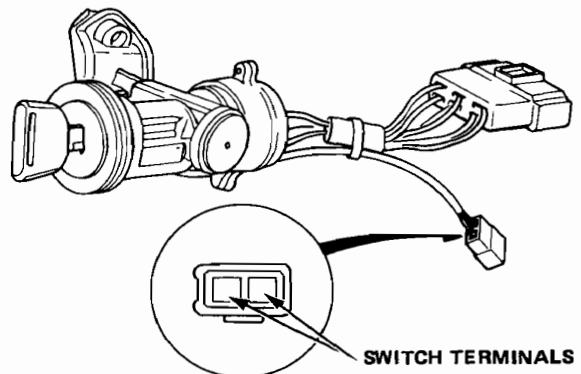

Ignition

Illustrated Index

NOTE: The carburetor model (2D H/B, 4D, and 4D H/B) is shown; the PGM-FI model (Coupe) is similar except for the location of the ignition coil.

**RADIO
CONDENSER**
Test, page 26-7

MAIN FUSE

IGNITION SWITCH
Removal/Test, page 25-7

IGNITION COIL
Test, page 26-6

BATTERY
Inspection, page 27-5

DISTRIBUTOR
Removal and Installation, page 26-29
Overhaul, page 26-13
Centrifugal Advance Inspection, page 26-15
Vacuum Advance Inspection, page 26-16
Timing, page 26-17

IGNITION WIRE
Inspection, page 26-6

SPARK PLUG
Inspection and
page 26-18



Troubleshooting Precautions

Before Troubleshooting


1. Check main fuse and fuse box for blown fuses.
2. Make sure battery posts and terminals are clean and tight.
3. Check battery for damage.
4. Check battery state of charge.
5. Check alternator belt for proper tension.
6. Check that connectors in the defective circuit are clean, properly connected, and that a pin or receptacle is not loose in a connector housing.

CAUTION:

- Do not quick-charge a battery unless the battery ground strap has been disconnected, or you'll damage the alternator diodes.
- Do not attempt to crank the engine with the ground strap disconnected or you'll severely damage the wiring.
- Do not pull on wires when disconnecting connectors.
- When connecting a connector, push it until it clicks into places.
- After connecting connector, cover it with the connector boot if it has one.

- Check to make sure that multi-pin connectors are packed with grease.

Pack with silicone grease.

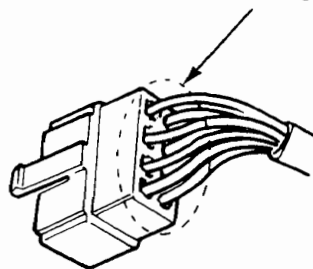


- When connecting battery terminals make sure they are clean and tightened securely.

TO AVOID DAMAGING TRANSISTORIZED IGNITION


- Never hook up (+) and (-) battery cables backwards.
- Do not let pulse generator wires touch ignition wires.
- Do not do anything that will produce abnormal pulses.
- Always connect pulse type tachometer to negative (-) terminal of ignition coil.
- Make sure all wires and cables are connected properly.

Wiring Diagram

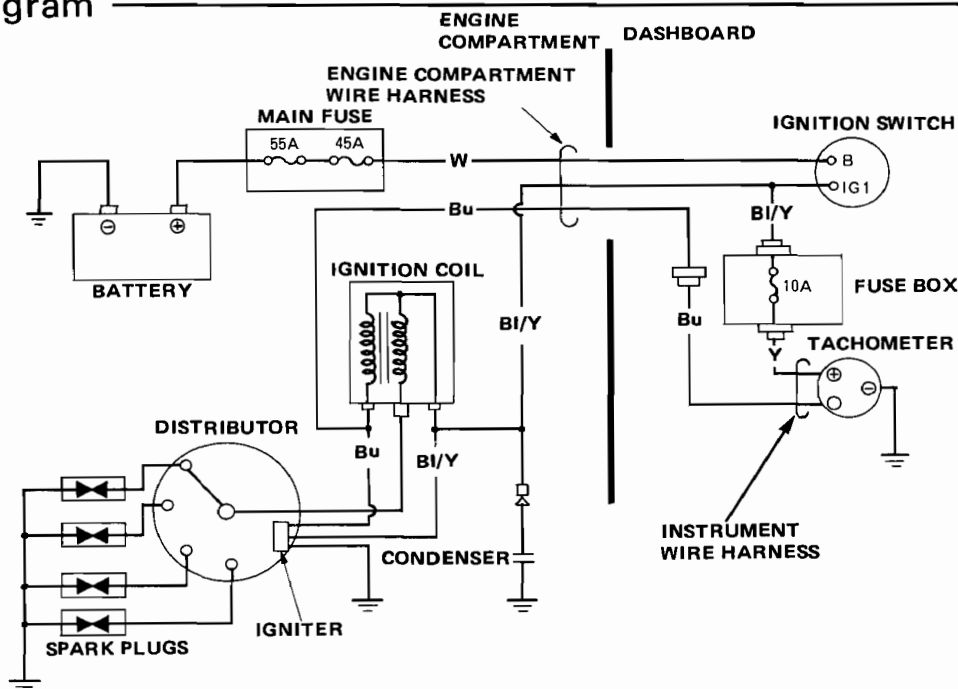

Ignition


Troubleshooting

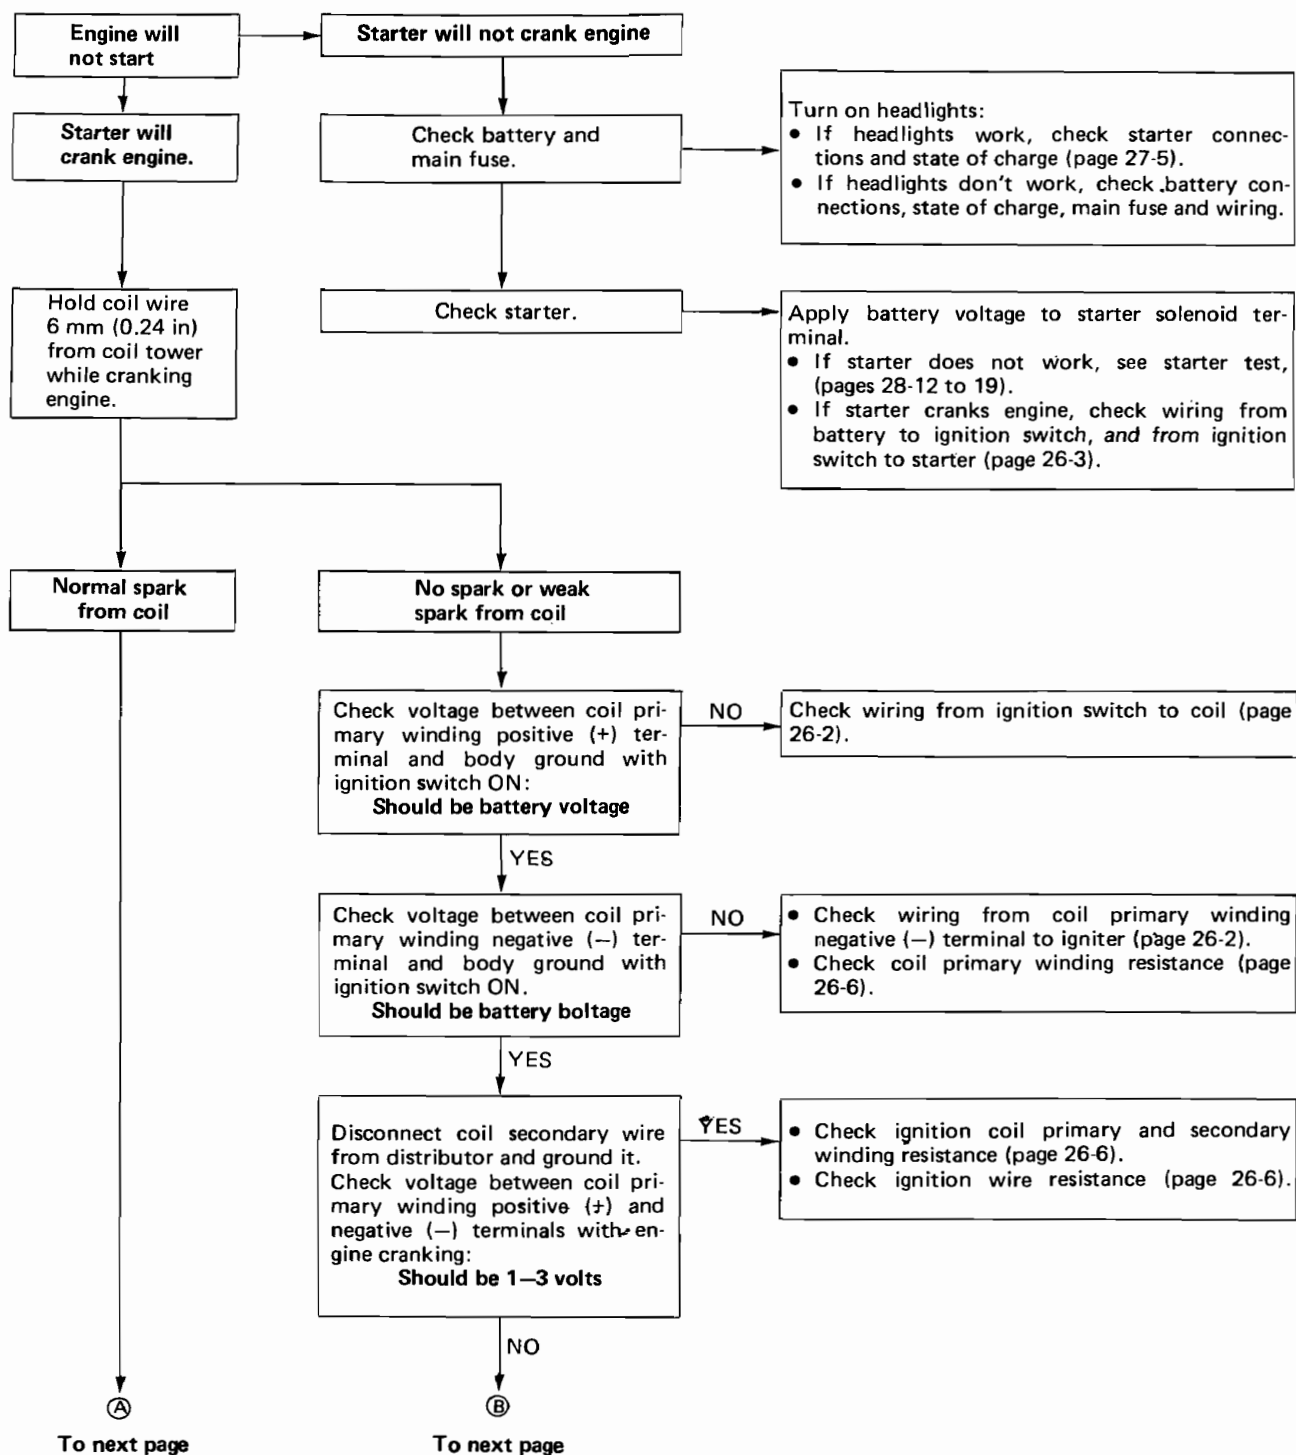



From previous page

From previous page

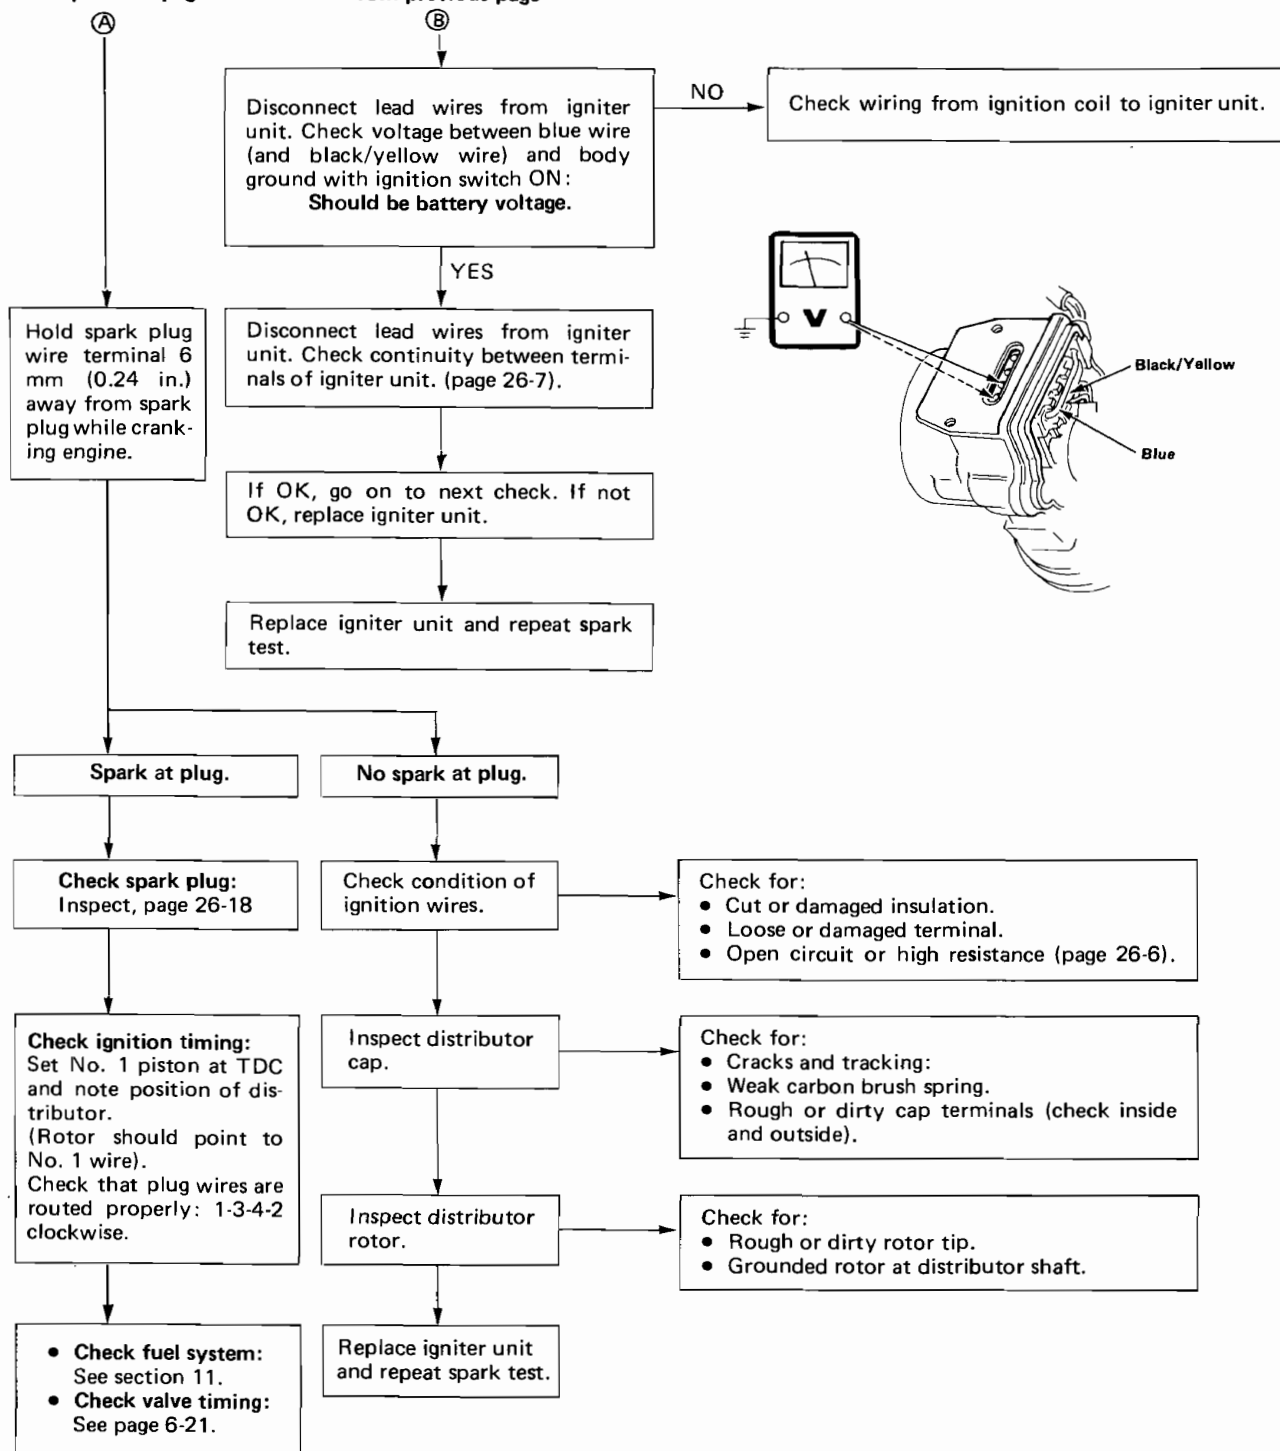




Radio Condenser Capacity Test

Use a commercially available condenser tester.

Condenser Capacity:
 0.47 ± 0.09 microfarads (μF)

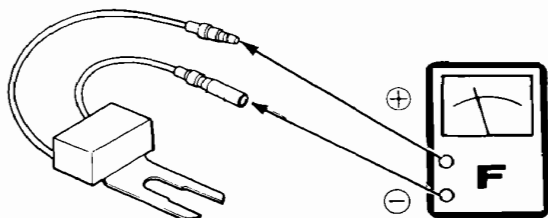


NOTE: The radio condenser is intended to reduce ignition noise; however, condenser failure may cause the engine to stop running.

Pick-up Coil Test


Connect ohmmeter probes to the blue and green wire terminals and measure resistance.

Pick-up Coil Resistance:
Approx. 750 ohms at 20°C (70°F)

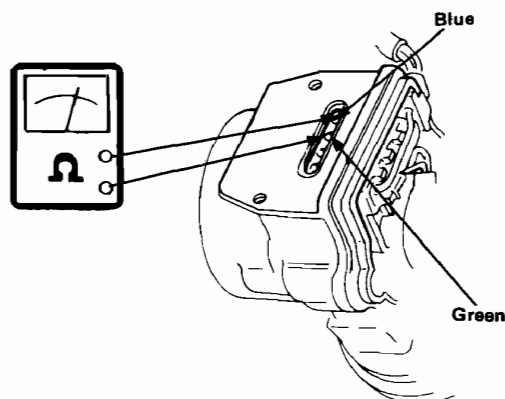

Igniter Unit Test


1. Disconnect lead wires from igniter unit. Check voltage between blue wire and body ground, then black/yellow wire and body ground, with ignition switch ON. There should be battery voltage.

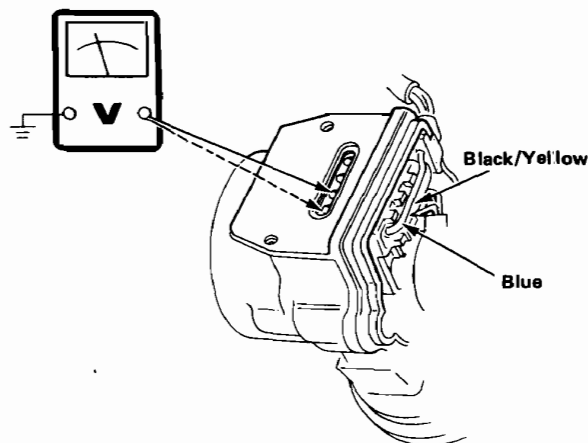

2. With lead wires disconnected, check continuity between igniter unit terminals using ohmmeter. (R x 100 scale)

There should be no continuity with positive probe to black/yellow wire terminal and negative probe to blue wire terminal.


There should be continuity with positive probe to blue wire terminal and negative probe to black/yellow wire terminal.

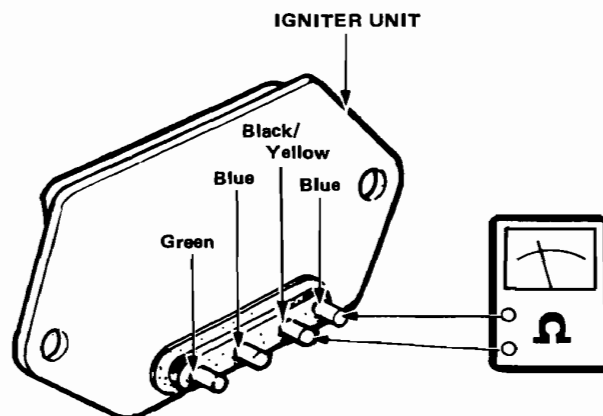


Ignition

Distributor Top End Inspection

1. Check to be sure that the air gaps are equal.
2. If necessary, back off the screws and move stator as required to adjust.

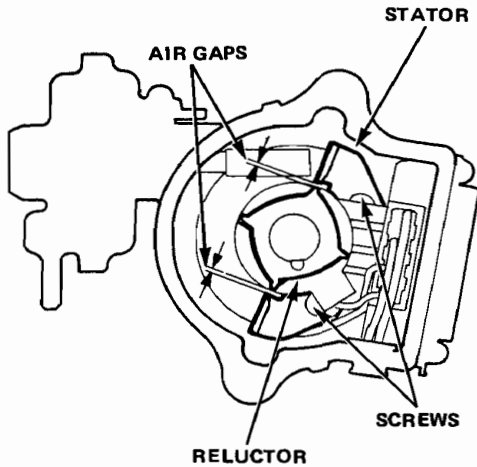


3. Check for rough or pitted rotor and cap terminals.
4. Scrape or file off carbon deposits. Smooth rotor terminal with an oil stone or No. 600 sandpaper if rough.
5. Apply a thin coat of silicone grease to the tip of the rotor.

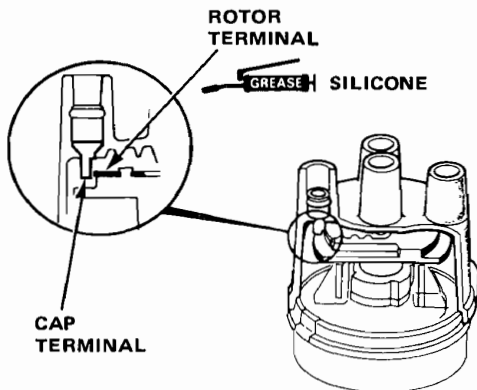

Reluctor Replacement


1. Carefully pry up reluctor by using two screwdrivers as shown. Do not damage reluctor and stator.

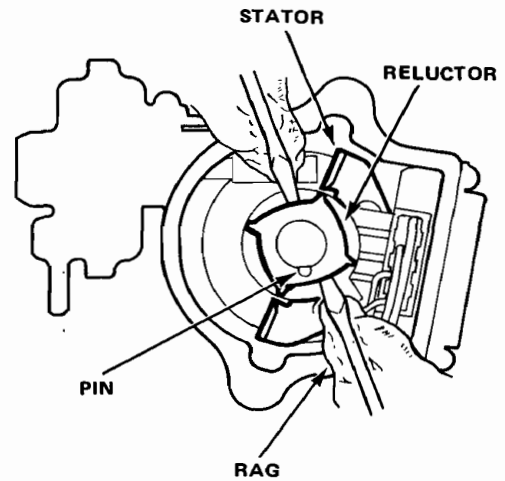

2. When installing reluctor, be sure to drive in pin with its gap away from shaft.

Advance Diaphragm Removal


1. Remove the advance diaphragm mount screws.
2. Disconnect the diaphragm arm then pull diaphragm out of distributor.

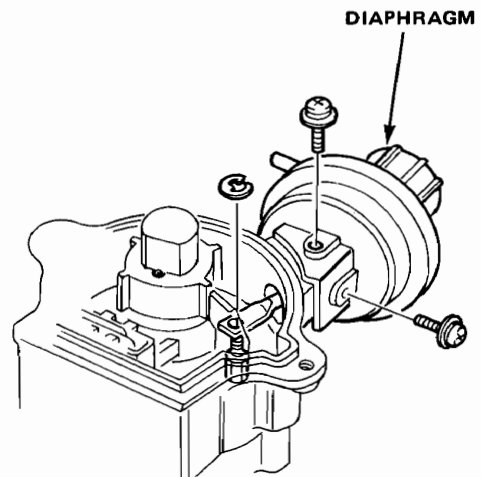




Igniter Unit Replacement

1. Remove the igniter cover and pull out the igniter squarely against the distributor.

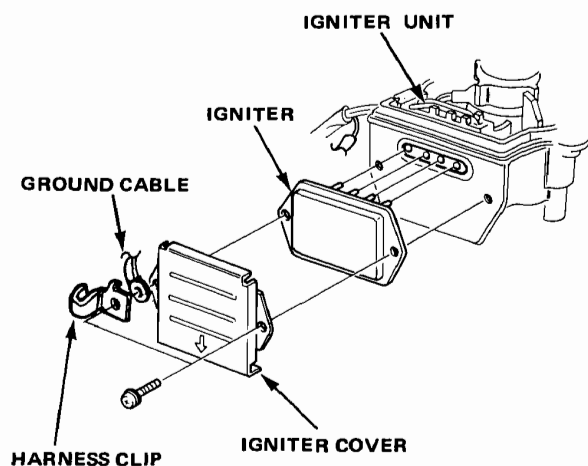


2. Remove the reluctor (see page 26-8) and pull the igniter unit out from the rotor shaft by removing the screws.

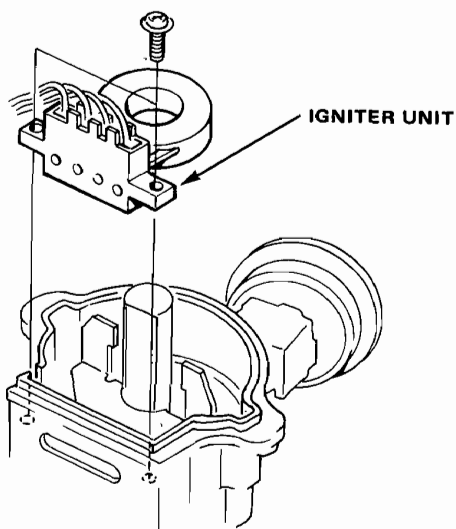


Distributor Removal


1. Disconnect the spark plug wires.
2. Disconnect the hoses from the advance diaphragm.
3. Disconnect the coil wire and the primary lead wires from the ignition coil.
4. Remove the distributor hold-down bolts, and remove the distributor from the cylinder head.

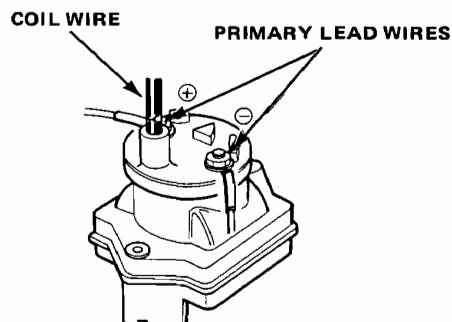

Carburetor model:

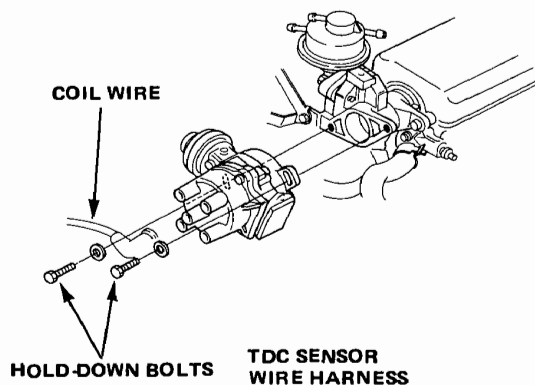

PGM-FI model:

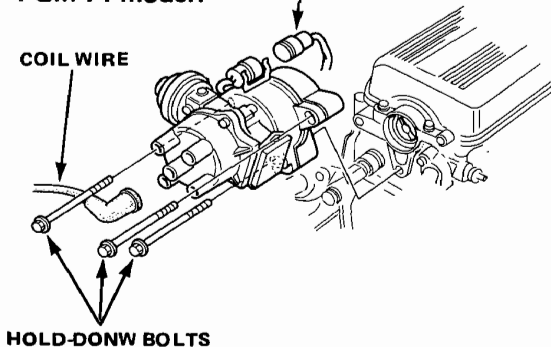


Ignition

Distributor Installation


1. Install a new O-ring on the distributor housing.
2. Slip the distributor into position.

NOTE: The lugs on the end of the distributor and its mating grooves in the camshaft end are both offset to eliminate the possibility of installing the distributor 180° out of time.


Carburetor model:

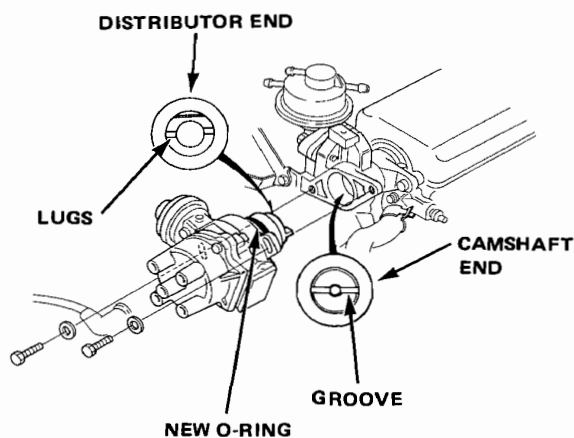

PGM-FI model:

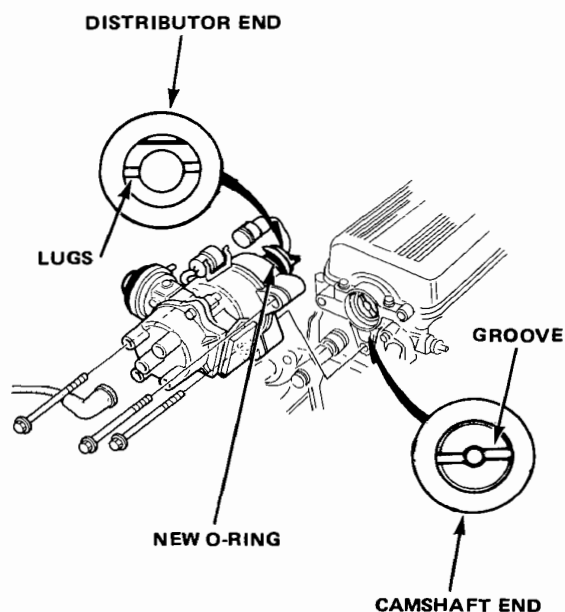

3. Install the adjusting bolts and tighten temporarily. Final tightening should be done after the timing has been adjusted.
4. Connect the plug wires as shown.

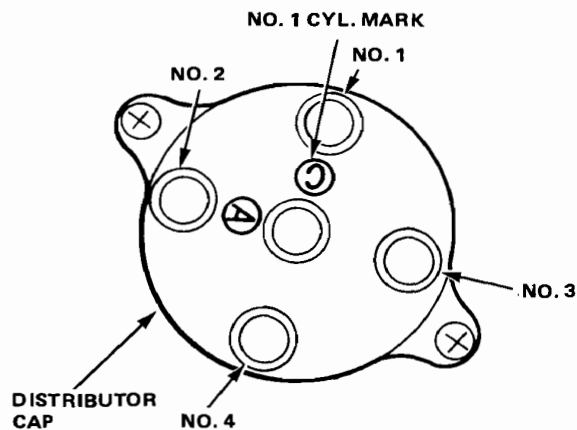


5. Set the timing with a timing light as shown on page 26-17.




Distributor Shaft Removal


1. Slide off the pin retainer being careful not to stretch it.
2. Pull the coupling out of the shaft by driving out roll pin as shown.

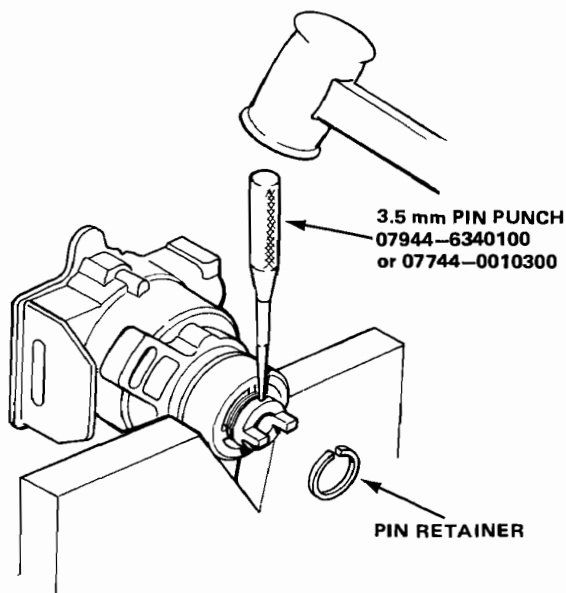

3. For PGM-FI model, separate the sensor housing and the distributor housing by removing the 3 screws.

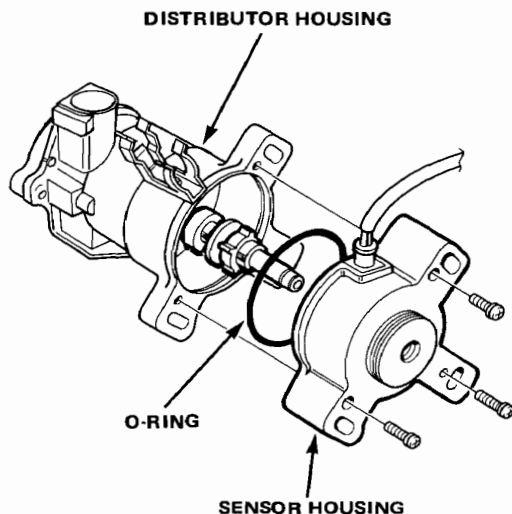


4. For PGM-FI model, drive out roll pin after scribing an alignment mark on the rotor and the shaft. Then carefully pry up the rotor by using two screwdrivers. Do not damage the rotor.

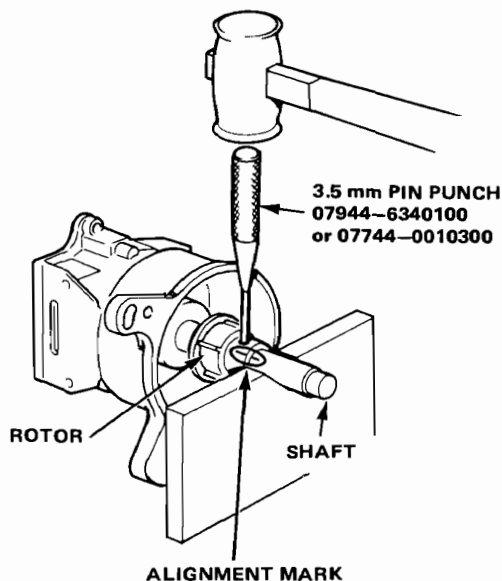


Ignition

Distributor Shaft Installation



1. Hold the ball bearing and the thrust plate in the distributor housing, and install the governor weights on the shaft.
2. Grease the shaft and install it in the distributor housing.

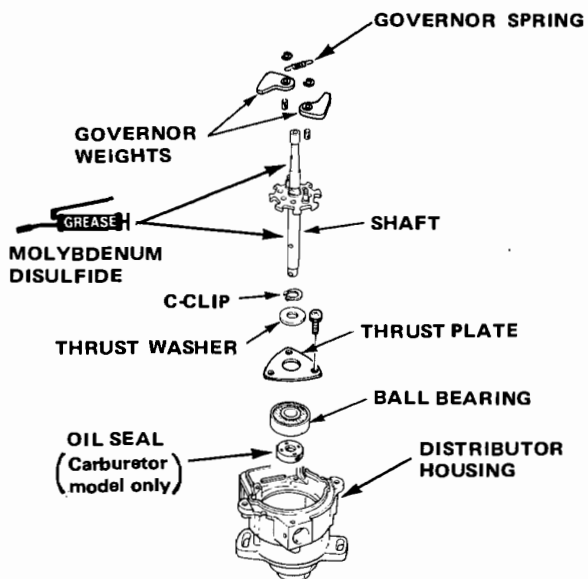

3. For PGM-FI model, install the sensor rotor on the shaft, and align it with the mark made in page 26-11. Now, drive in a new pin. Then unit the distributor housing and the sensor housing.
4. Install the rotor, then turn it so that it faces in the direction shown (forward No. 1 cylinder).

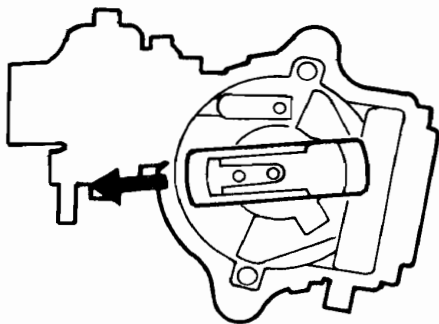


5. Turn the distributor upside down and install the thrust washer and coupling on the shaft and a new O-ring on the housing.

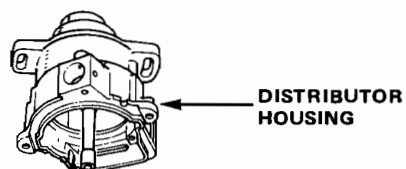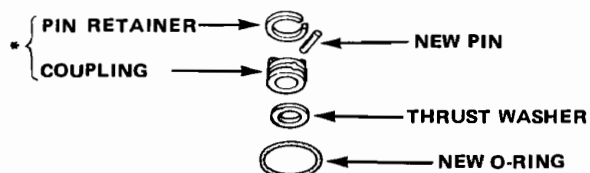


* : Install in step 6.

6. Check that the rotor is still pointing toward No. 1 cylinder, then align the index mark on the housing with the index mark on the coupling. Now, drive in a new pin and secure it with the pin retainer.

Carburetor model:

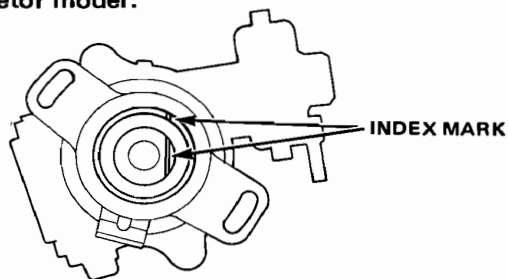


PGM-FI model:

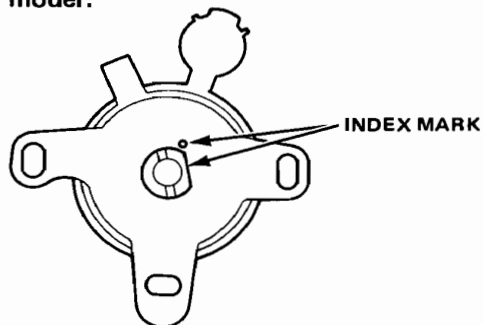




Distributor Overhaul (Carburetor model)

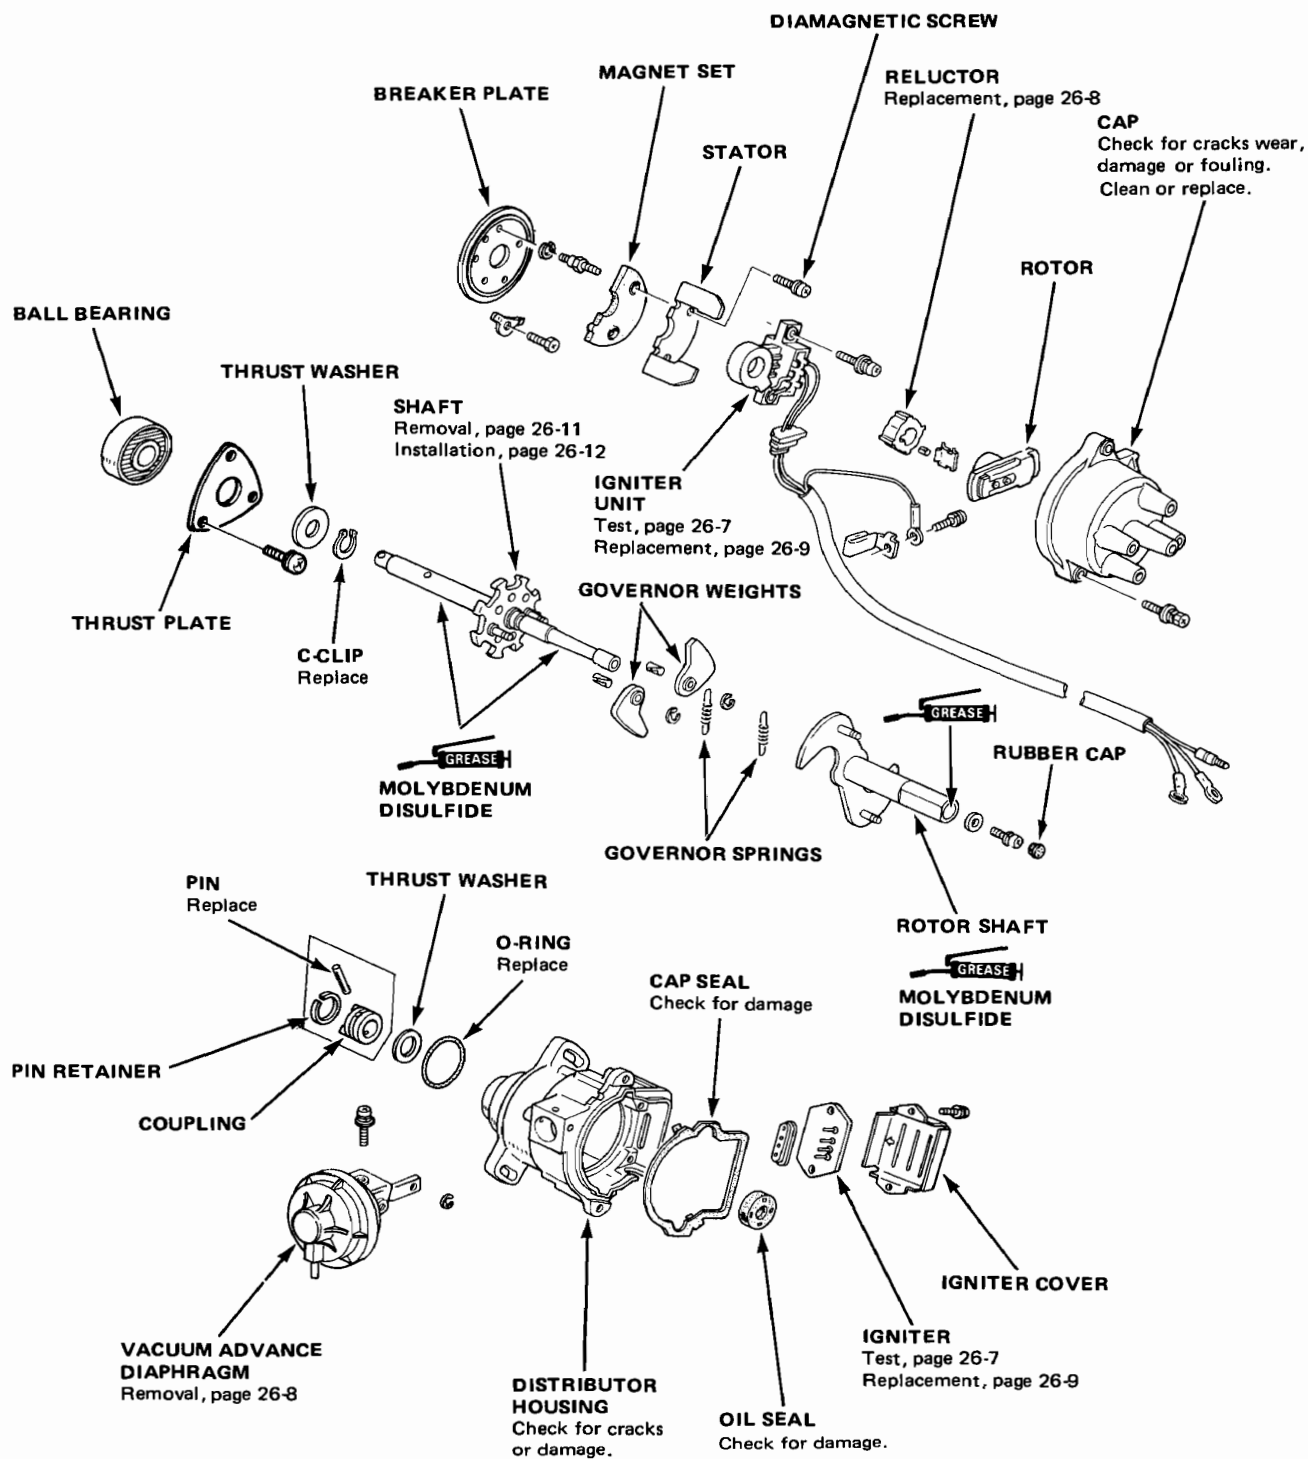

Ignition

Distributor Overhaul (PGM-FI model)

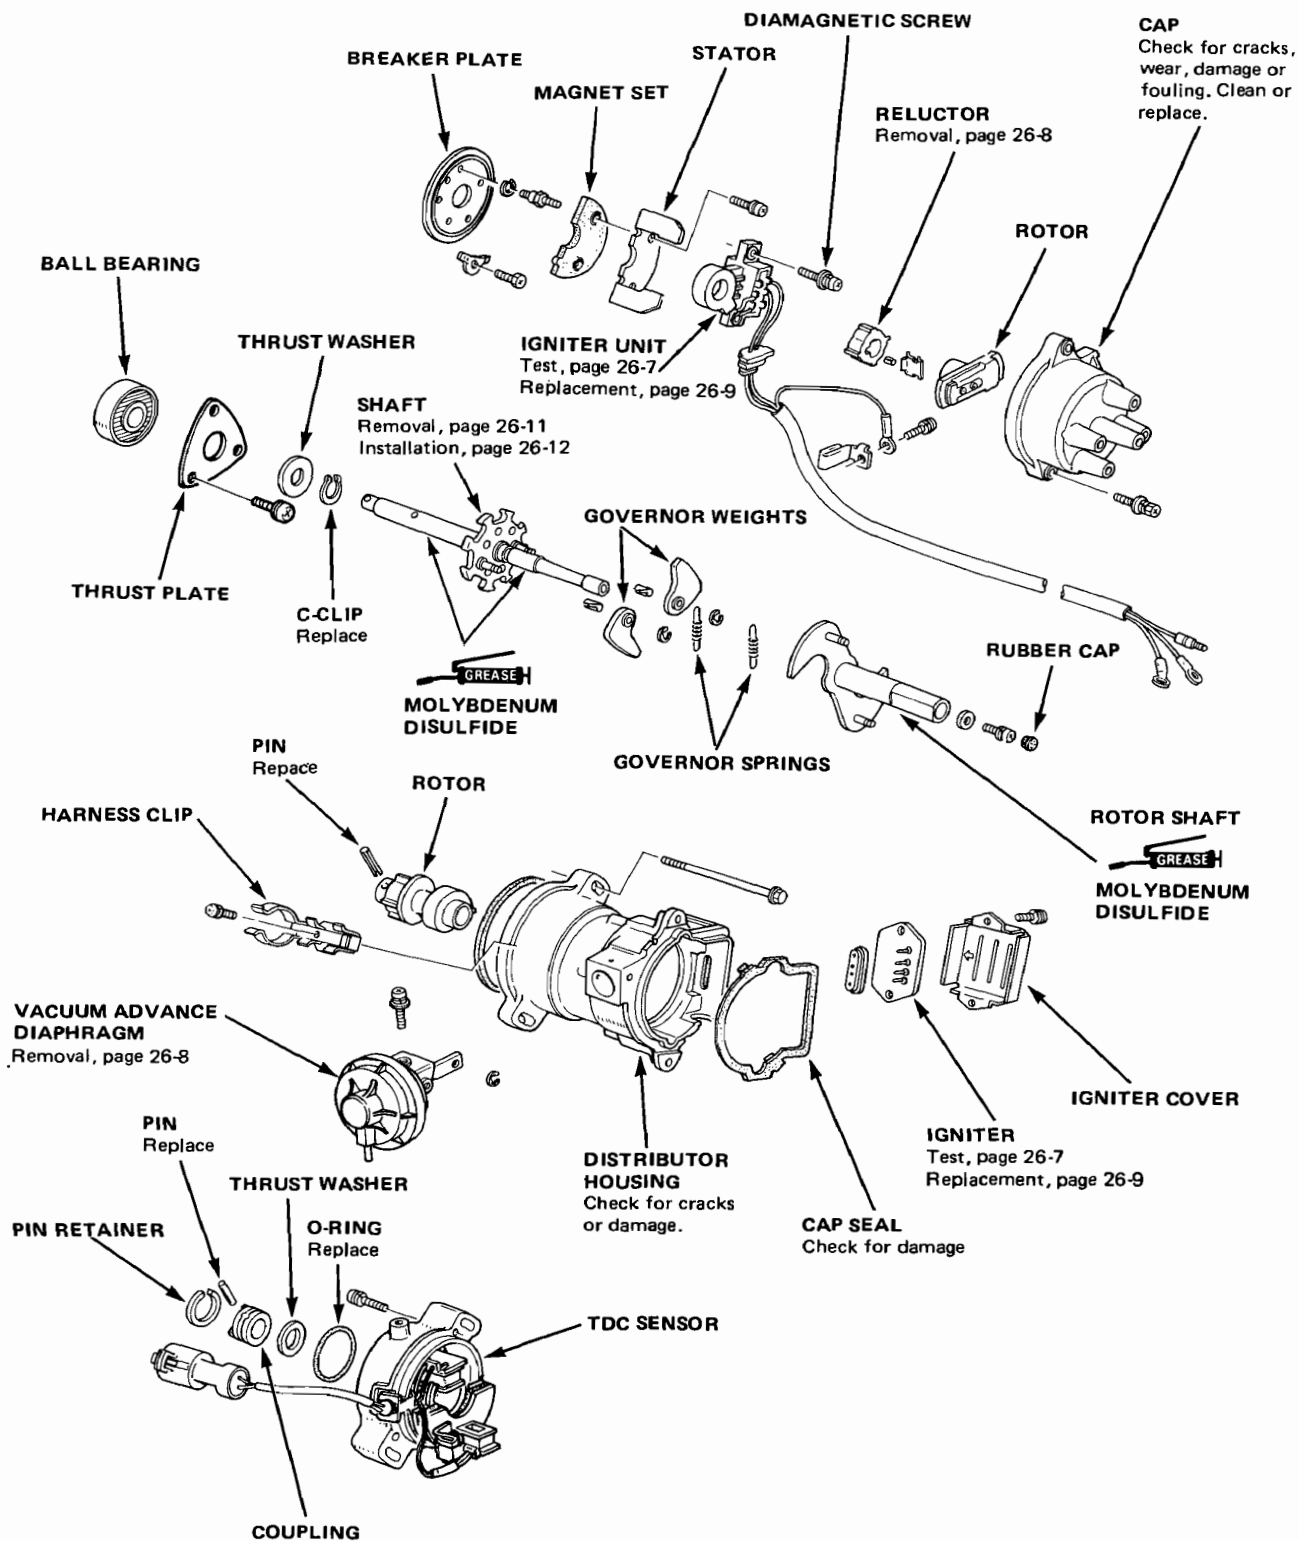




Centrifugal Advance Inspection

1. Disconnect vacuum advance hose from distributor, and pinch end of hose using fuel line clamp, 07614-0050100.
2. Connect timing light and start engine.
3. Increase rpm. Timing mark (T) should appear to move past the pointer toward the firewall, indicating an increase ignition advance. If not, check centrifugal advance mechanism for sticking or binding.

FUEL LINE CLAMP
07614-0050100


VACUUM ADVANCE HOSE

ADVANCE
TESTER

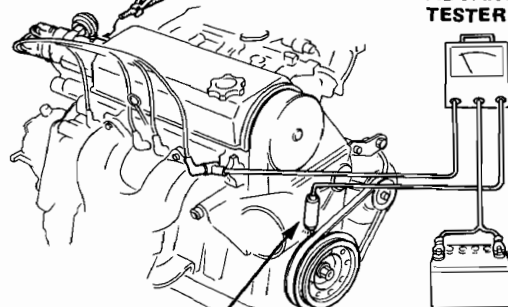


TIMING LIGHT

Carburetor model
(TYPE: TD-10I, TD-13I, and TD-14I)

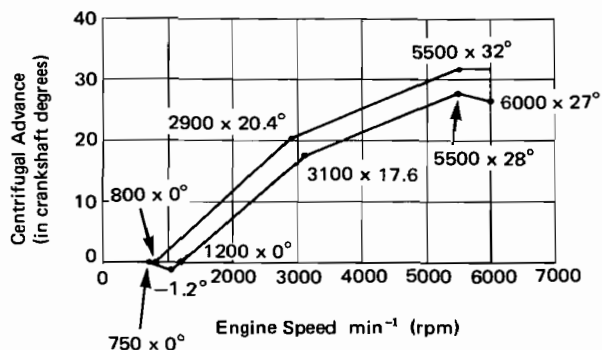

PGM-FI model
(TYPE: TD-03J)

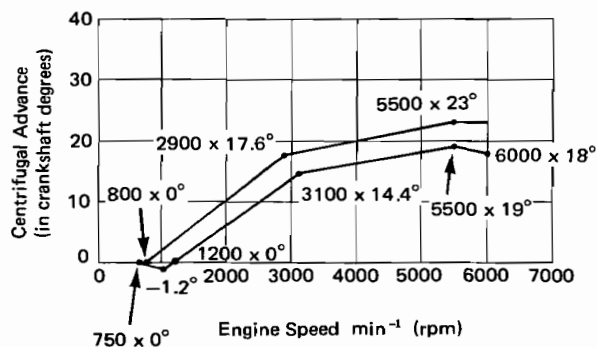


Ignition

Vacuum Advance Inspection


1. Remove distributor cap.
2. Disconnect vacuum hose from distributor advance diaphragm.
3. Connect vacuum pump to the diaphragm and gradually draw a vacuum while watching breaker plate movement. Check for smooth operation with no evidence of binding.

NOTE: If vacuum pump gauge indicates a loss of vacuum, diaphragm is defective.


4. Turn breaker plate right and left to check for freedom of movement.
5. If inspections 1 — 4 reveal no abnormality, check the vacuum from the vacuum hose.

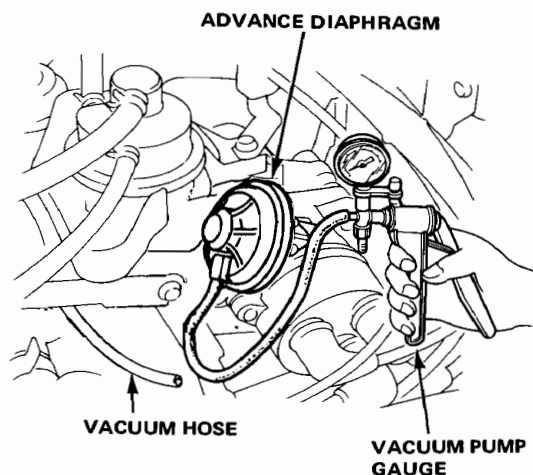


1.2 l Carburetor model (TYPE: TD-13I)

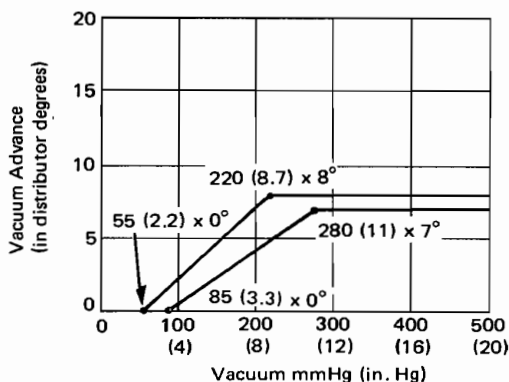


1.3l Carburetor model and 1.5l Carburetor model (except KC model-M/T) (TYPE: TD-10I)

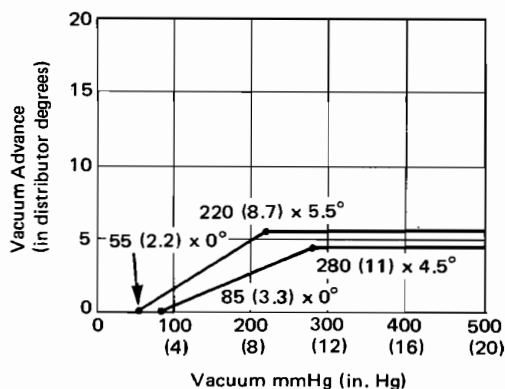

1.5l Carburetor model (KC model-M/T only) (TYPE: TD-14I)

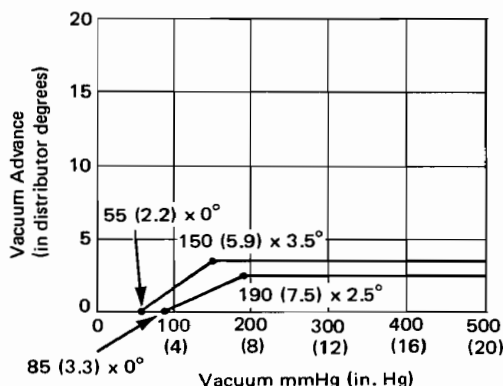


1.5l PGM-FI model (TYPE: TD-03J)

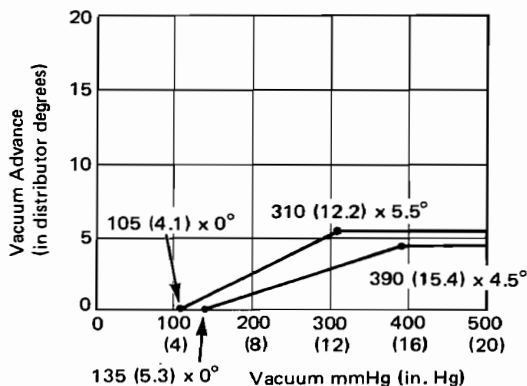




Ignition Timing

1. Connect the timing light to the engine.

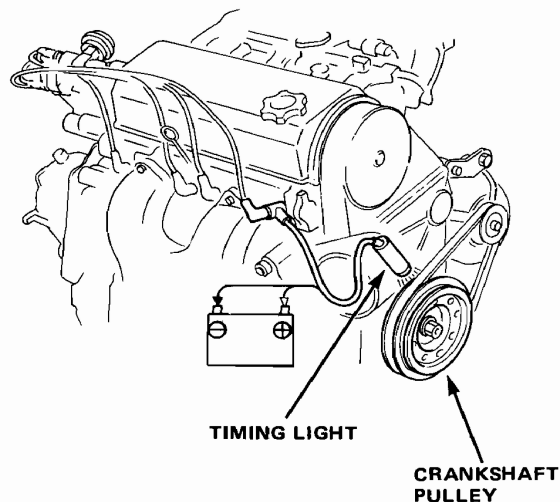

2. Start the engine and allow it to warm up (cleaning fan comes on), then point the timing light toward the pointer on the timing belt cover.

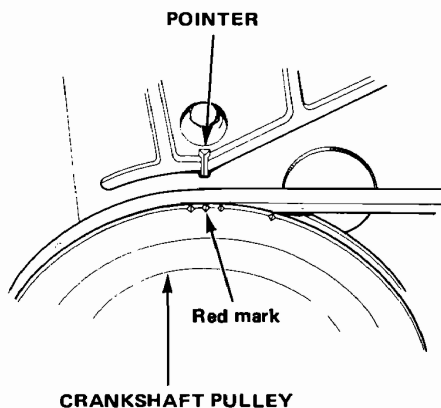


3. Adjust ignition timing, if necessary, to the following specifications:

All models: Red mark at idle
(manual in neutral; automatic in gear)


Idle Speed: Manual $750 \pm 50 \text{ min}^{-1} \text{ (rpm)}$
Automatic $700 \pm 50 \text{ min}^{-1} \text{ (rpm)}$

4. Loosen distributor adjusting bolt, and turn distributor housing counterclockwise to advance timing or clockwise to retard timing.

Carburetor model:

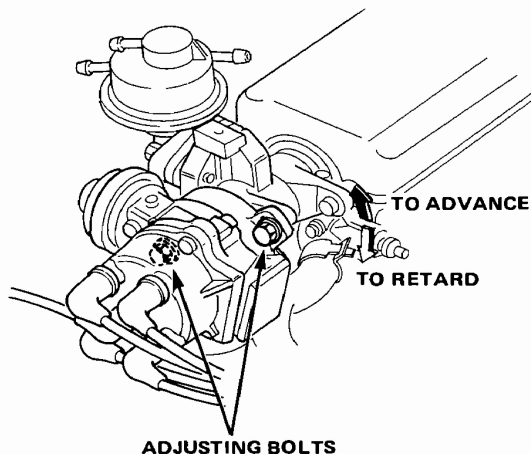

PGM-FI model:

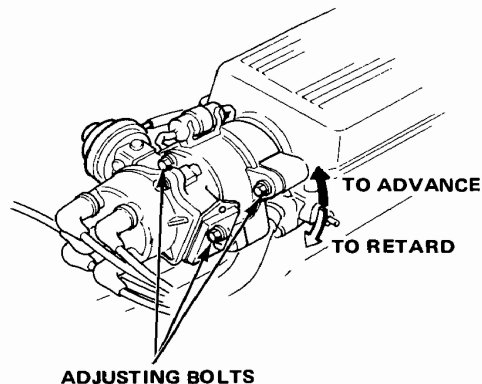


5. Tighten the adjusting bolt.
6. Recheck the timing.

Ignition

Spark Plug Inspection

1. Inspect electrodes and ceramic insulator for:

- Improper gap
- Oil-fouling
- Carbon deposits
- Cracked center electrode insulator

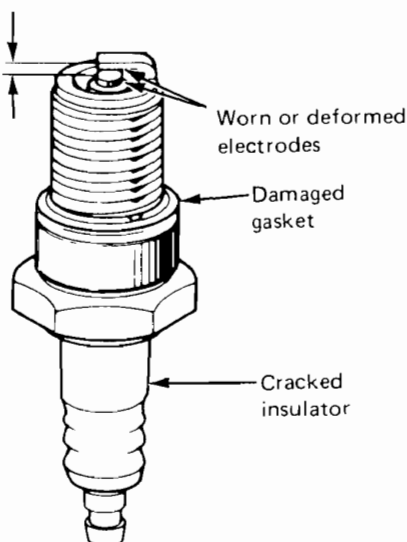


Burned or worn electrodes may be caused by:

- Lean fuel mixture
- Advanced ignition timing
- Loose spark plug
- Incorrect heat range plug

Fouled plug may be caused by:

- Rich fuel mixture
- Retarded ignition timing
- Oil in combustion chamber
- Incorrect spark plug gap

2. Clean electrodes in spark plug cleaning machine, or with a wire brush. Clean between outer shell and center insulator with stiff wire as shown. Clean plug threads with a wire brush.

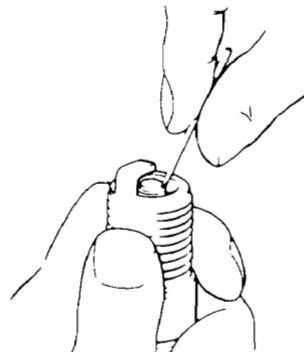

3. Replace plug if center electrode is rounded as shown below.


Standard Plug:

Canadian and European models:

NGK BPR6EY-11
ND W20EXR-U11

Other models:

NGK BP6EY-11
ND W20EX-U11

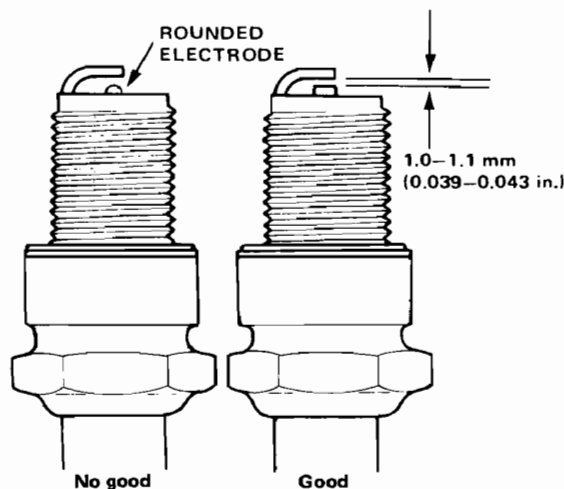

4. Adjust gap with suitable gapping tool.


Electrode Gap: 1.0-1.1 mm (0.039-0.043 in.)

5. Screw plugs into cylinder head finger tight, then torque them to 18 N·m (1.8 kg·m, 13 lb·ft).

NOTE: Apply a small quantity of anti-seize compound to plug threads before installing.

Charging

Illustrated Index

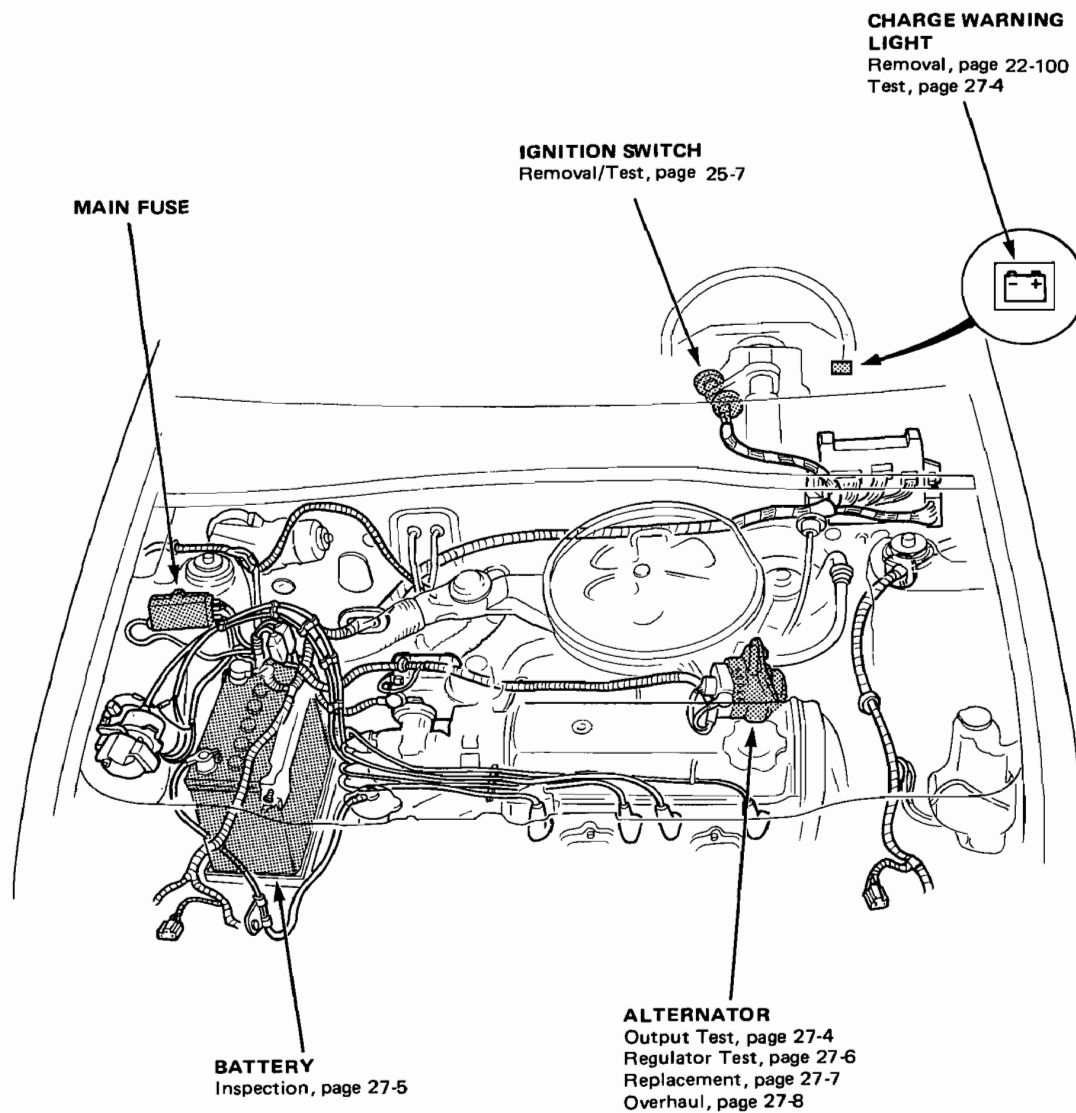



Troubleshooting Precautions


Before Troubleshooting:

1. Check main fuse and fuse box for blown fuses.
2. Make sure battery posts and terminals are clean and tight.
3. Check battery for damage.
4. Check battery state of charge.
5. Check alternator belt for proper tension.
6. Check that connectors in the defective circuit are clean, properly connected, and that a pin or receptacle is not loose in a connector housing.

CAUTION:


- Do not quick-charge a battery unless the battery ground strap has been disconnected, or you will damage the alternator diodes.
- Do not attempt to crank the engine with the ground strap disconnected or you will severely damage the wiring.

- Do not pull on wires when disconnecting connectors.
- When connecting a connector, push it until it clicks into place.
- Check to make sure that multi-pin connectors are packed with grease.

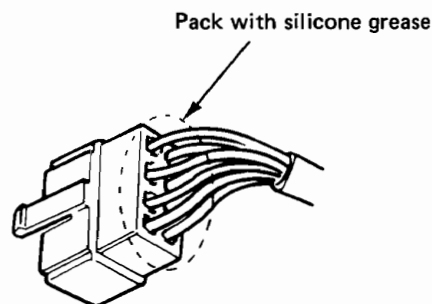

- When connecting battery terminals make sure they are clean and tightened securely.

Wiring Diagram

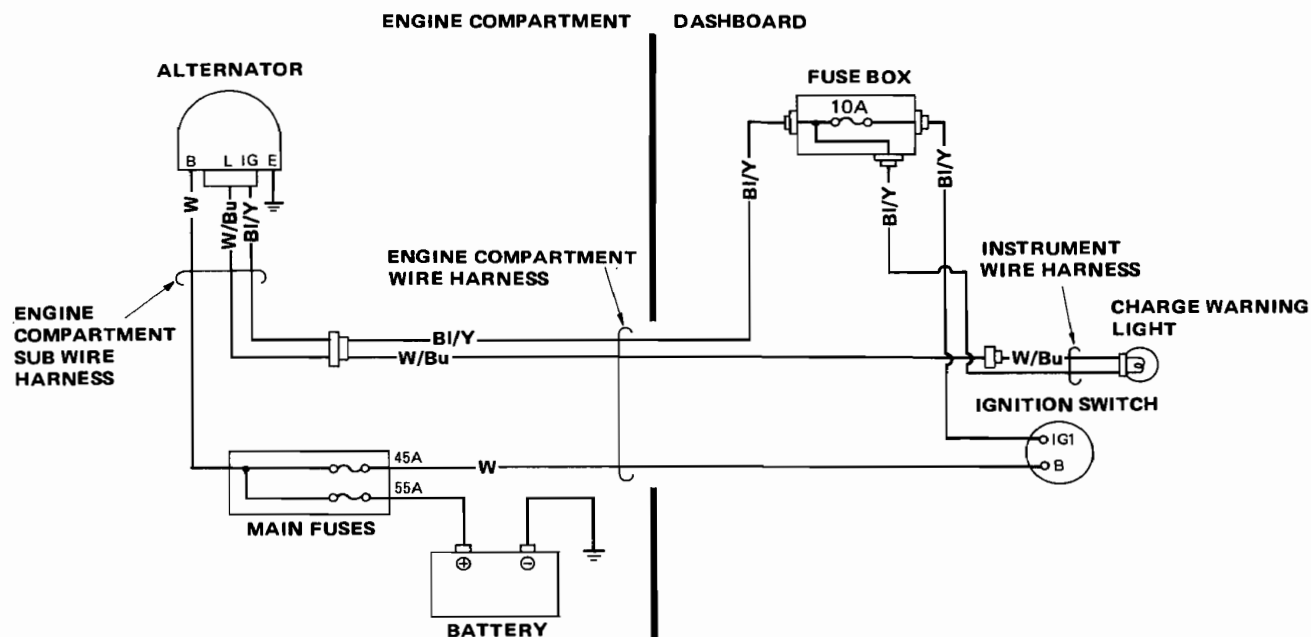

Charging

Specifications

Battery:

Type	Model	Voltage and Output
NX100S6 (S)	KC, KB, KG, KS, KW, KX	12V-47AH
NS60(S)	KF, KE	12V-45AH
N40	KP, KD, KT, KU, KY, KQ	12V-40AH

Alternator:

Nominal output: 55A

Direction of rotation: Counterclockwise as viewed from pulley-side

Regulator (Built-in type):

Type: IC

Regulated voltage: 13.9-15.1 V


Charge Warning Light Test

NOTE: Before testing, check the wire harness connections and alternator belt tension.


1. Turn the ignition switch on. The charge warning light should come on.
If it does not come on, unplug the voltage regulator connector and short the pin of the white/blue wire to ground.
 - If the warning light still does not come on, check the fuse, connectors (Interior-Instrument wire harness and warning light panel) and related wires for an open circuit. Check the bulb, and replace it if burned out.
2. Start the engine and let it idle. The charge warning light should go off. If it stays on all the time, or stays on at idle and goes off with an increase in engine speed, check the alternator neutral wire circuit, alternator output, and voltage regulator.

Alternator Output Test

1. With engine off, disconnect the alternator terminal (W).
2. Hook up an ammeter as shown.

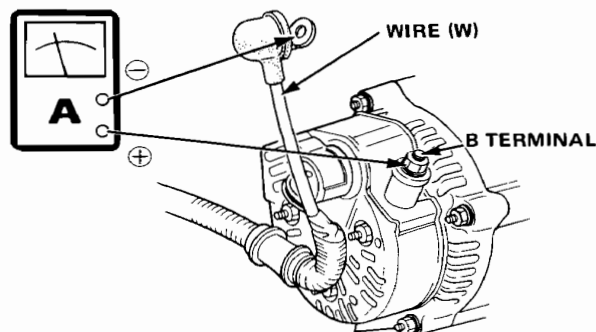

3. Start the engine.
4. Turn on:
 - Headlight switch (high beam).
 - Rear window defroster switch.
 - Heater fan switch (HI).
5. Check alternator output.
If within the output curve shown, the alternator is good.
If the alternator has no output or its output is not within specification, see the alternator checks starting on page 27-9.

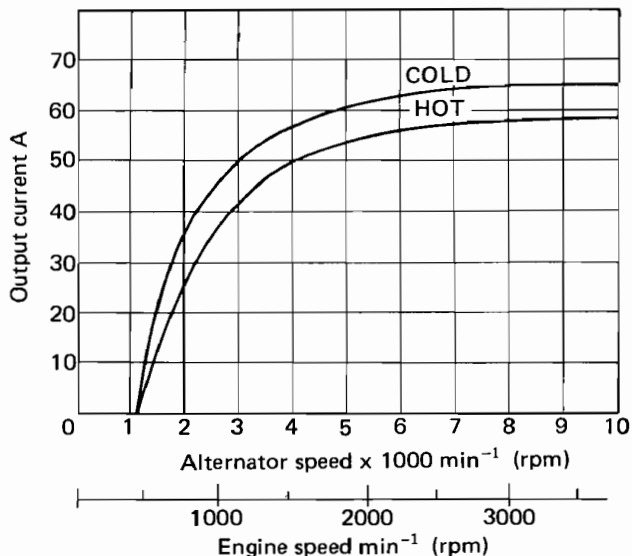




Battery Inspection and Charging

Inspection

1. Check battery case for loose parts, cracked case or top. Inspect cells for sulfation. Replace if damaged or sulfated.
2. Check electrolyte level in each cell. If low, add distilled water to bring level to UPPER mark.


CAUTION: Battery electrolyte is a sulphuric acid solution. Do not allow it to contact painted surfaces, clothing or skin. If it does, rinse with water immediately to minimize the damage. Do not overfill battery.

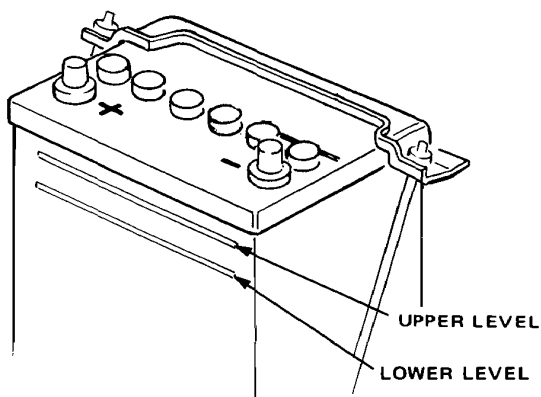

3. Check electrolyte specific gravity.

- Use a hydrometer and the correct specific gravity range for your temperature.
 - If the reading is at, or below, the "Needs charging" level, the battery must be charged.


Variation of Specific Gravity with Temperature

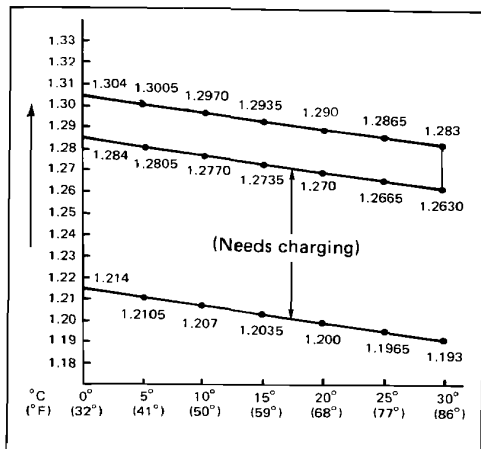

Charging

4. Charge at 10% of the ampere-hour rating until battery specific gravity is at least 1.250.

SLOW CHARGE PROCEDURE

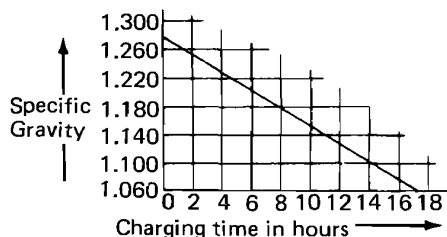


WARNING

Keep sparks, flames and cigarettes away while charging battery.

5. Keep battery and terminals clean. If necessary, brush with backing-soda solution and flush with clean, lukewarm water. Check for loose terminal clamps.
6. If clamps become corroded inside, clean out with a wire brush or coarse emery cloth.


NOTE: Coat terminals lightly with petroleum jelly to retard corrosion. Baking soda may be mixed with the jelly for additional protection against acid build-up.

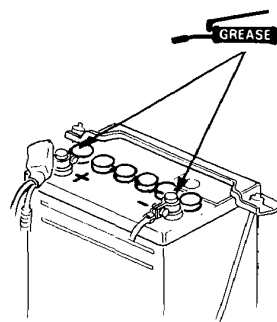


Charging

Voltage Regulator Test

1. Remove the rear end cover and the brush holder, then remove the regulator.

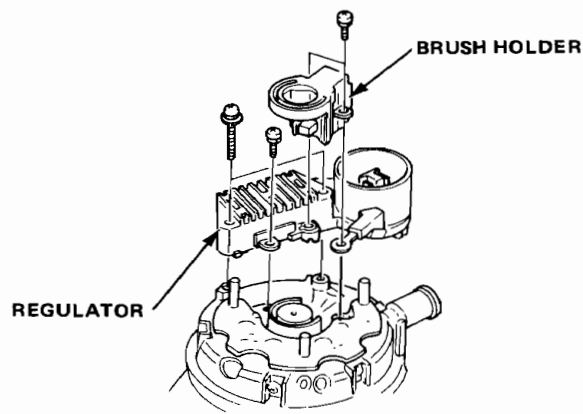

2. Hook up the regulator, batteries, voltmeter, lights, switches, and resistor as shown.

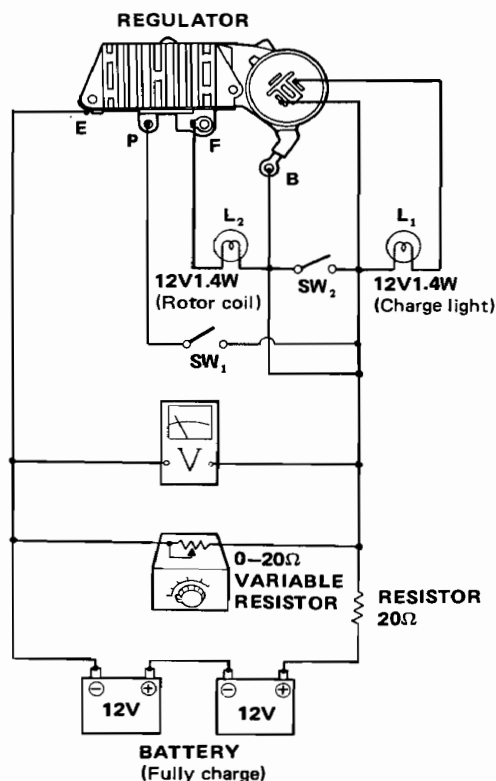


3. Turn the switches 1 and 2 OFF, and adjust the voltage to 12 V.
4. Turn the switch 1 ON, and switch 2 OFF.
5. Turn the switch 2 ON with the switch 1 ON.
6. With the switches 1 and 2 ON, gradually raise voltage to see that the lamp L_2 goes OFF at anywhere between 13.9 and 15.1 V.

The regulator is normal if it meets the following conditions in each test:

Test	Lamp L_1	Lamp L_2
4	ON	ON
5	OFF	ON
6	OFF	OFF

NOTE:


- Do not disturb the above sequence as the regulator will not function properly if the correct sequence is not observed.
 - Perform the above tests quickly.
7. Check the diode for continuity between the terminals B and F. There should be continuity only in one direction.

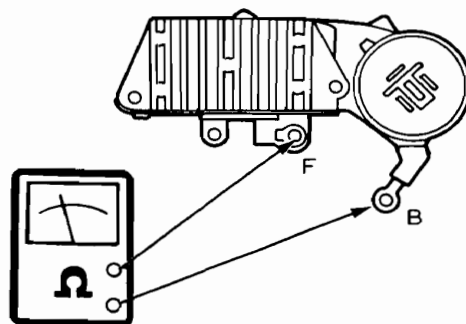




Alternator Replacement

1. Disconnect the ground cable from battery negative (–) post.
2. Disconnect the wires from the alternator as shown.

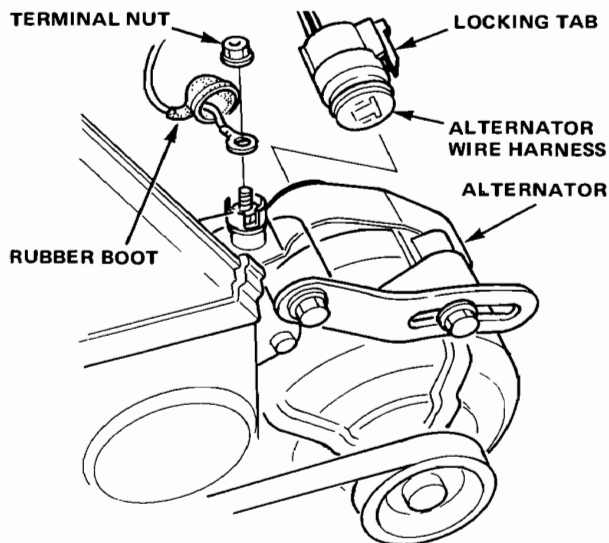

3. Remove the alternator belt adjusting bolt and remove the alternator nut.
4. Remove the alternator belt, and remove the alternator.

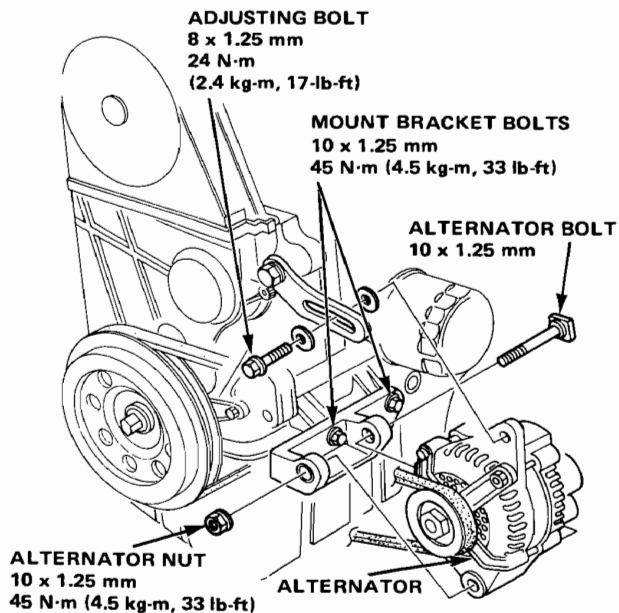


5. Install in reverse order of removal.
6. Adjust alternator belt tension after installing.

Alternator Belt Adjustment

1. Apply a force of 98N (10 kg, 22 lb) and measure the deflection between the alternator and the crankshaft pulley.

Deflection: 7–10 mm (0.28–0.39 in.)

NOTE: On a brand-new belt, the deflection should be 4–6.5 mm (0.16–0.20 in) when first measured.

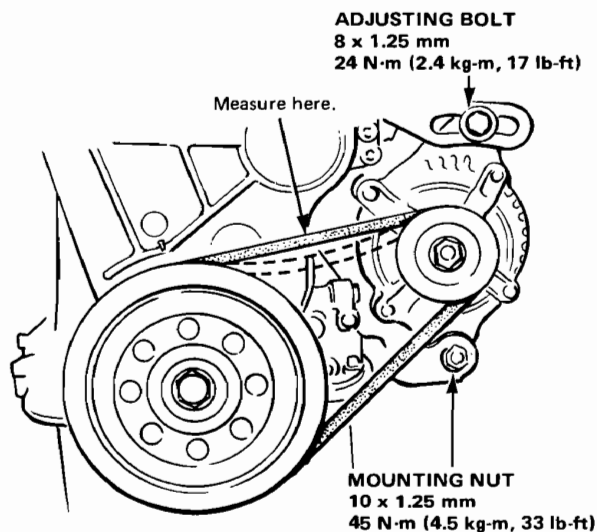


2. Loosen the alternator adjusting bolt and mounting bolt.
3. Move the alternator to obtain the proper belt tension and retighten the bolt.
4. Recheck the deflection of the belt.

Charging

Alternator Overhaul

NOTE: It is only necessary to separate the pulley, drive-end housing and rotor when the front bearing needs replacement.

To remove the pulley and rotor, use 10 mm and 22 mm box wrenches to loosen the pulley lock nut. Use an impact wrench to remove the nut if necessary.

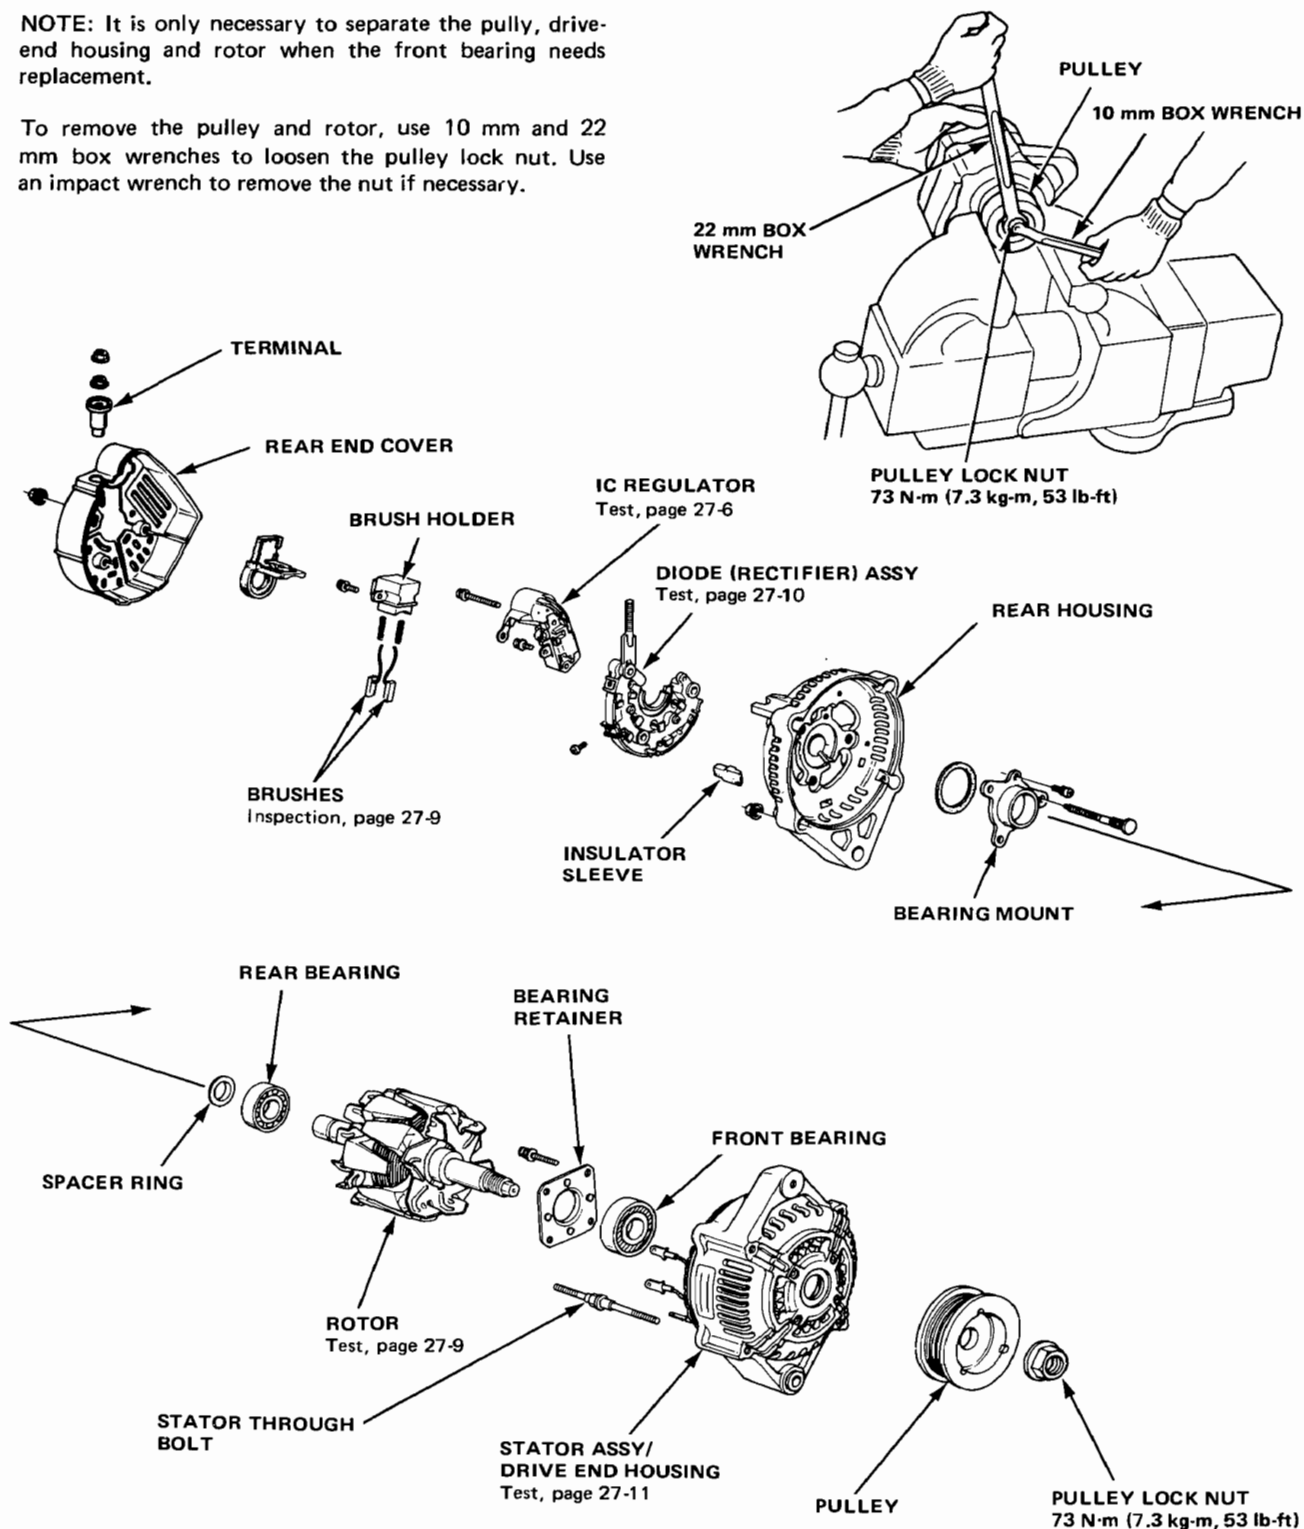




Alternator Brush Inspection

1. Remove the rear end cover, then take out the brush holder by removing its 2 screws.
2. Measure length of the brushes with a vernier caliper.


Alternator Brush Length:

Standard: 10.5 mm (0.41 in.)

Service Limit: 4.5 mm (0.18 in.)

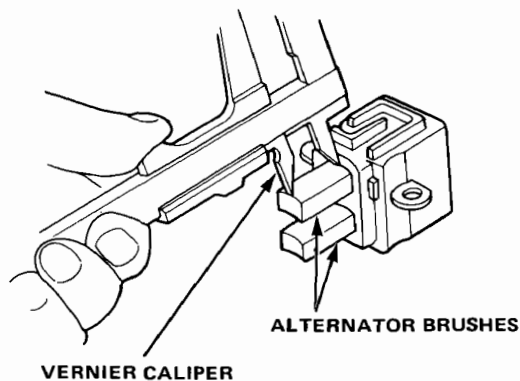


3. If brushes are not within service limit, replace them.

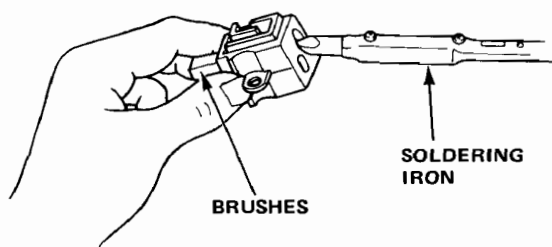


NOTE: When replacing the brushes, use only rosin core type solder or solder joints will corrode.

Rotor Slip Ring Test

1. Check that there is continuity between the slip rings.

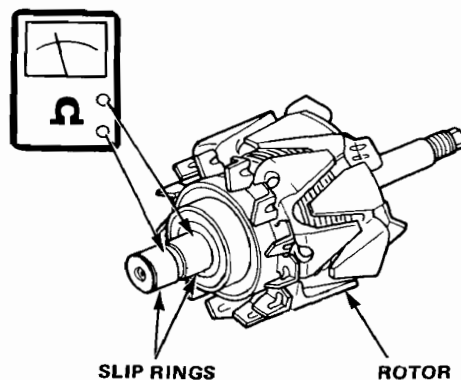

2. Check that there is no continuity between the rings and the rotor or rotor shaft.

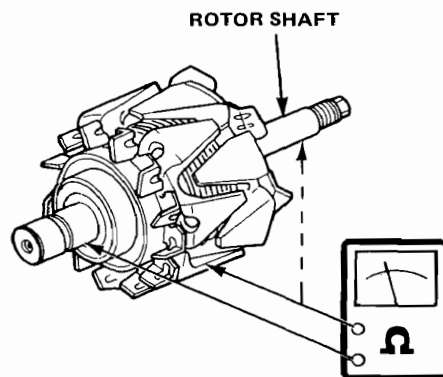

3. If the rotor fails either continuity check, replace it.


Charging

Rectifier Test


NOTE: Diodes are designed to pass current in one direction and block current in the opposite direction. Since the alternator rectifier is made up of eight diodes (4 pairs), each diode must be tested for continuity in both directions — a total of 16 checks.

1. Using an ohmmeter or continuity tester (test light), check one diode from each pair, in both directions:

- Connect **POSITIVE** test probe to B+ terminal and **NEGATIVE** test probe to P terminal of each diode pair. Note readings.

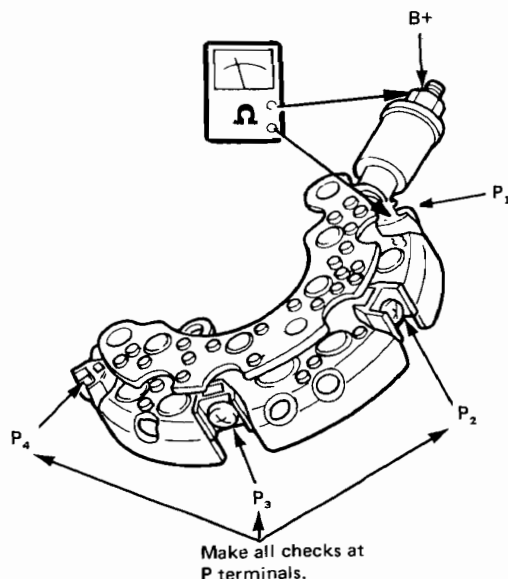


- Reverse probe position and check diodes at P terminals again.

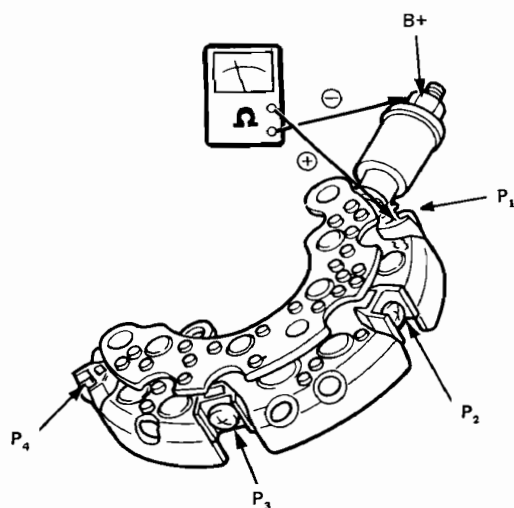


2. Check the other diode from each pair, in both directions:

- Connect **NEGATIVE** test probe to ground terminal and **POSITIVE** probe to P terminal of each diode pair.

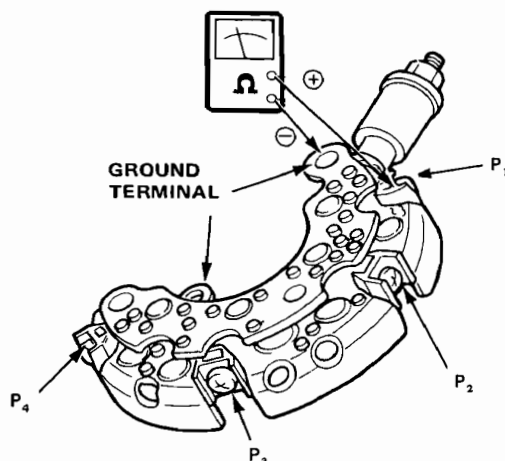

- Reverse probe positions and check diodes at P terminals again.

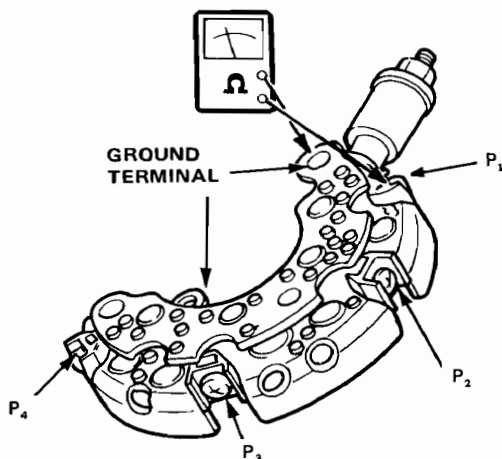


3. If any of the 16 checks shows continuity in both directions, or no continuity in both directions, the diode is defective and the rectifier assembly must be replaced. (Diodes are not available separately.)




Stator Test

1. Check that there is continuity between each pair of lead wires.

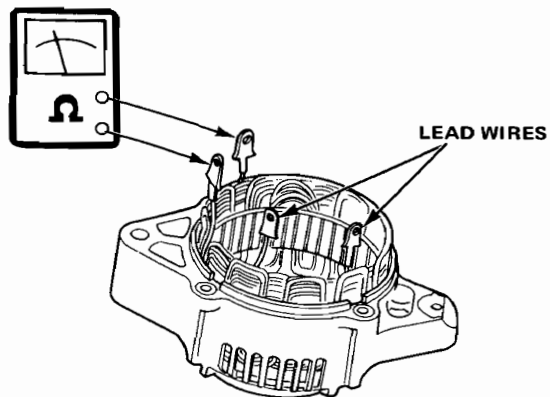

2. Check that there is no continuity between each lead wire and the coil core.

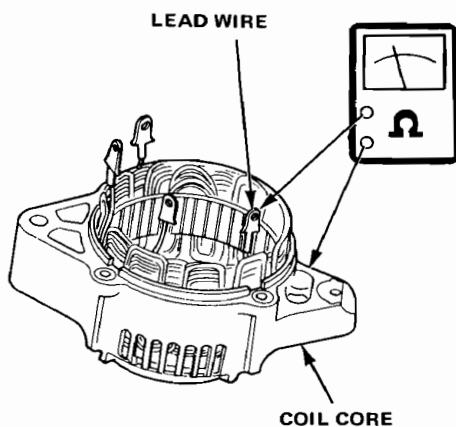


3. If the coil fails either continuity check, replace the stator.

Starting

Illustrated Index (Direct drive 0.8 kw ND)



CAUTION: Disconnect ground cable from battery post before removing starter.

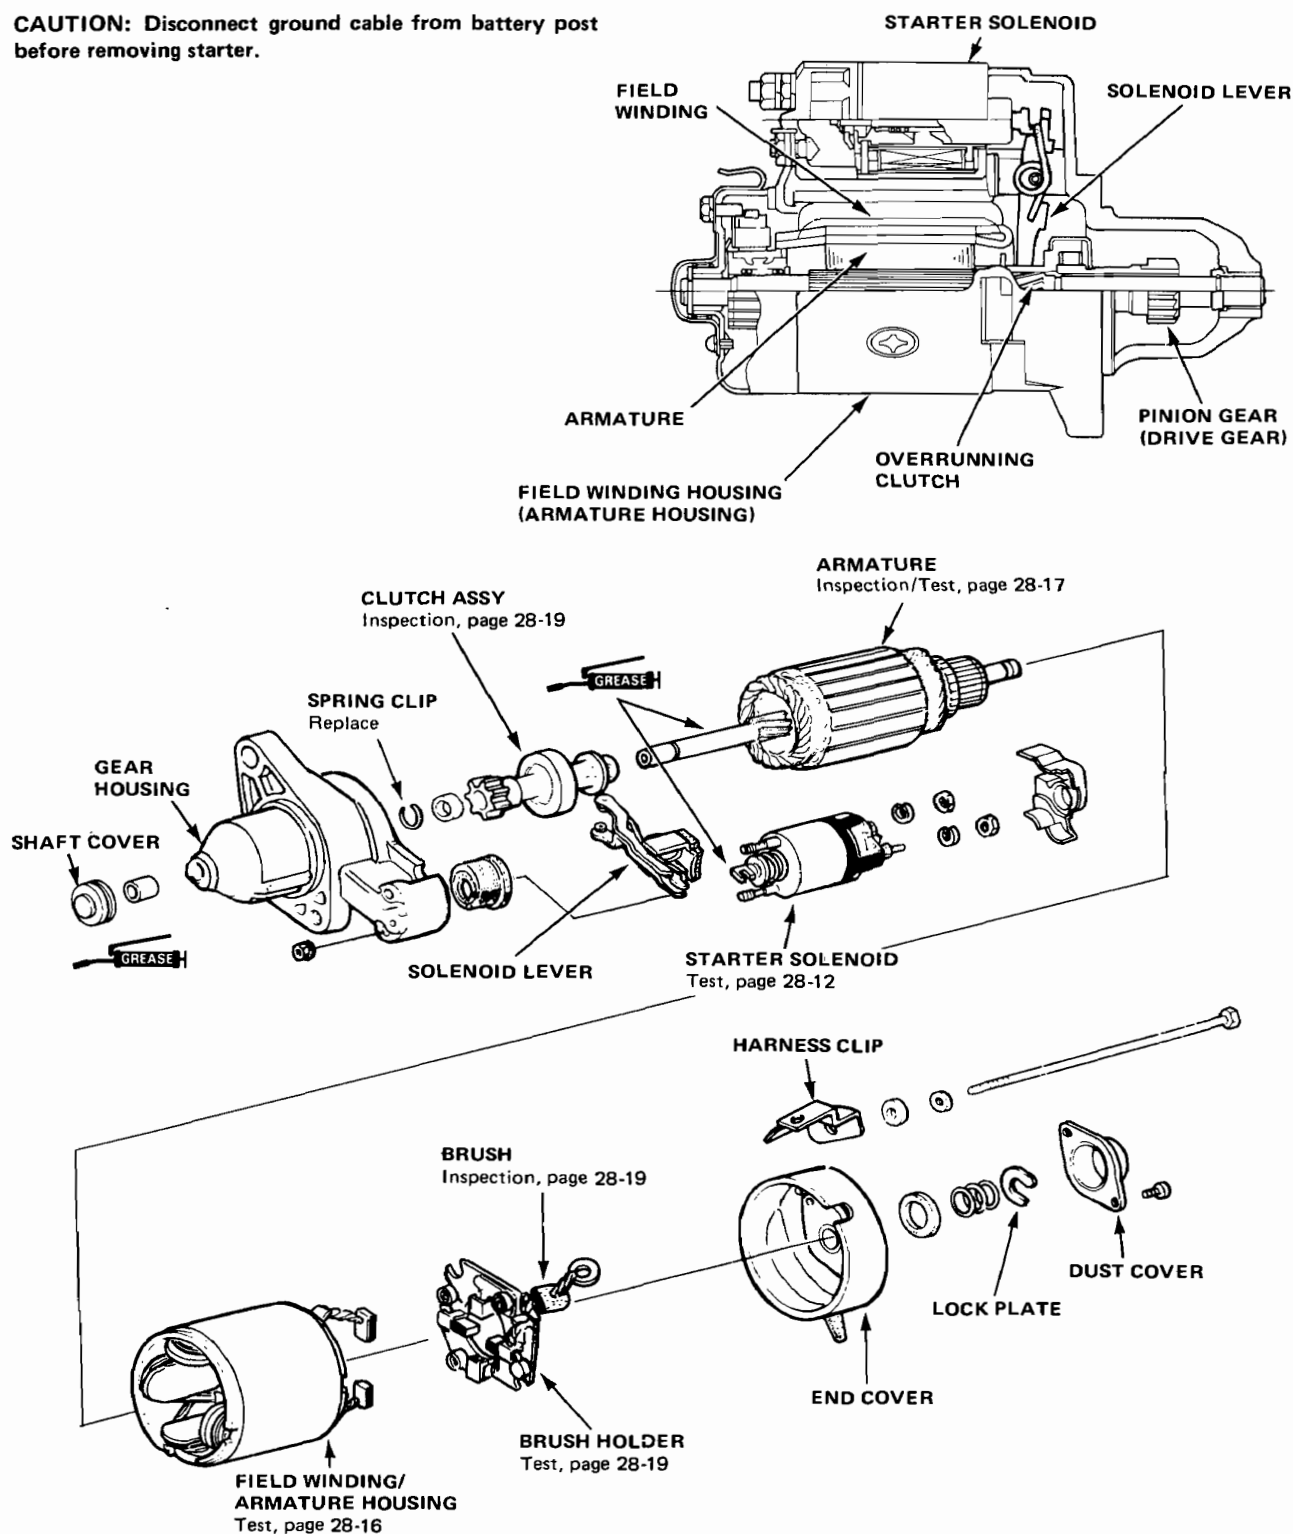



(Direct drive 0.8 kw HITACHI)


CAUTION: Disconnect ground cable from battery post before removing starter.

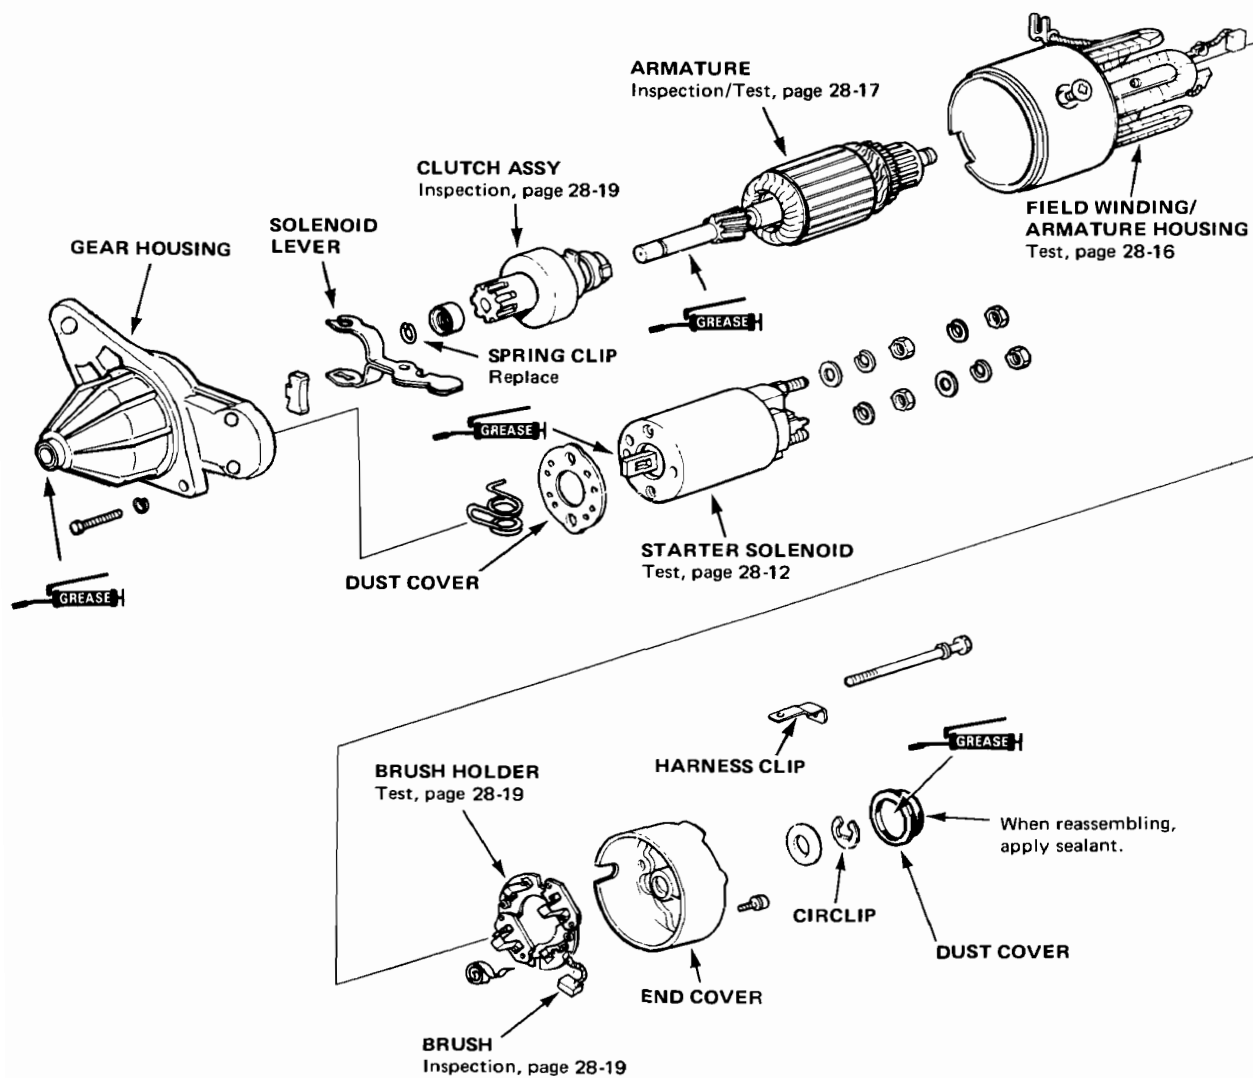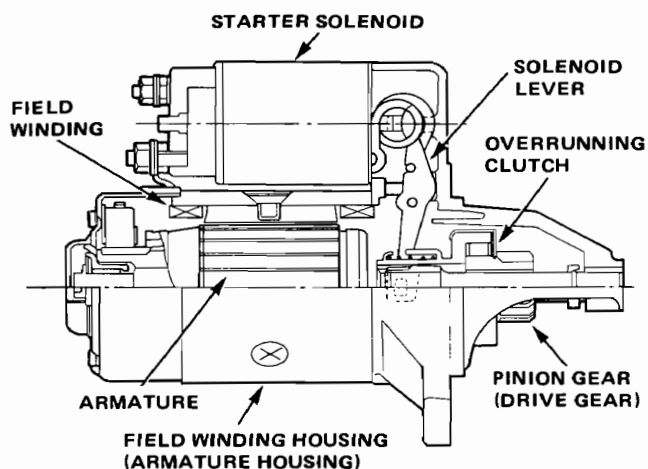

Starting

Illustrated Index (Gear reduction 1.0 kw ND)



CAUTION: Disconnect ground cable from battery post before removing starter.

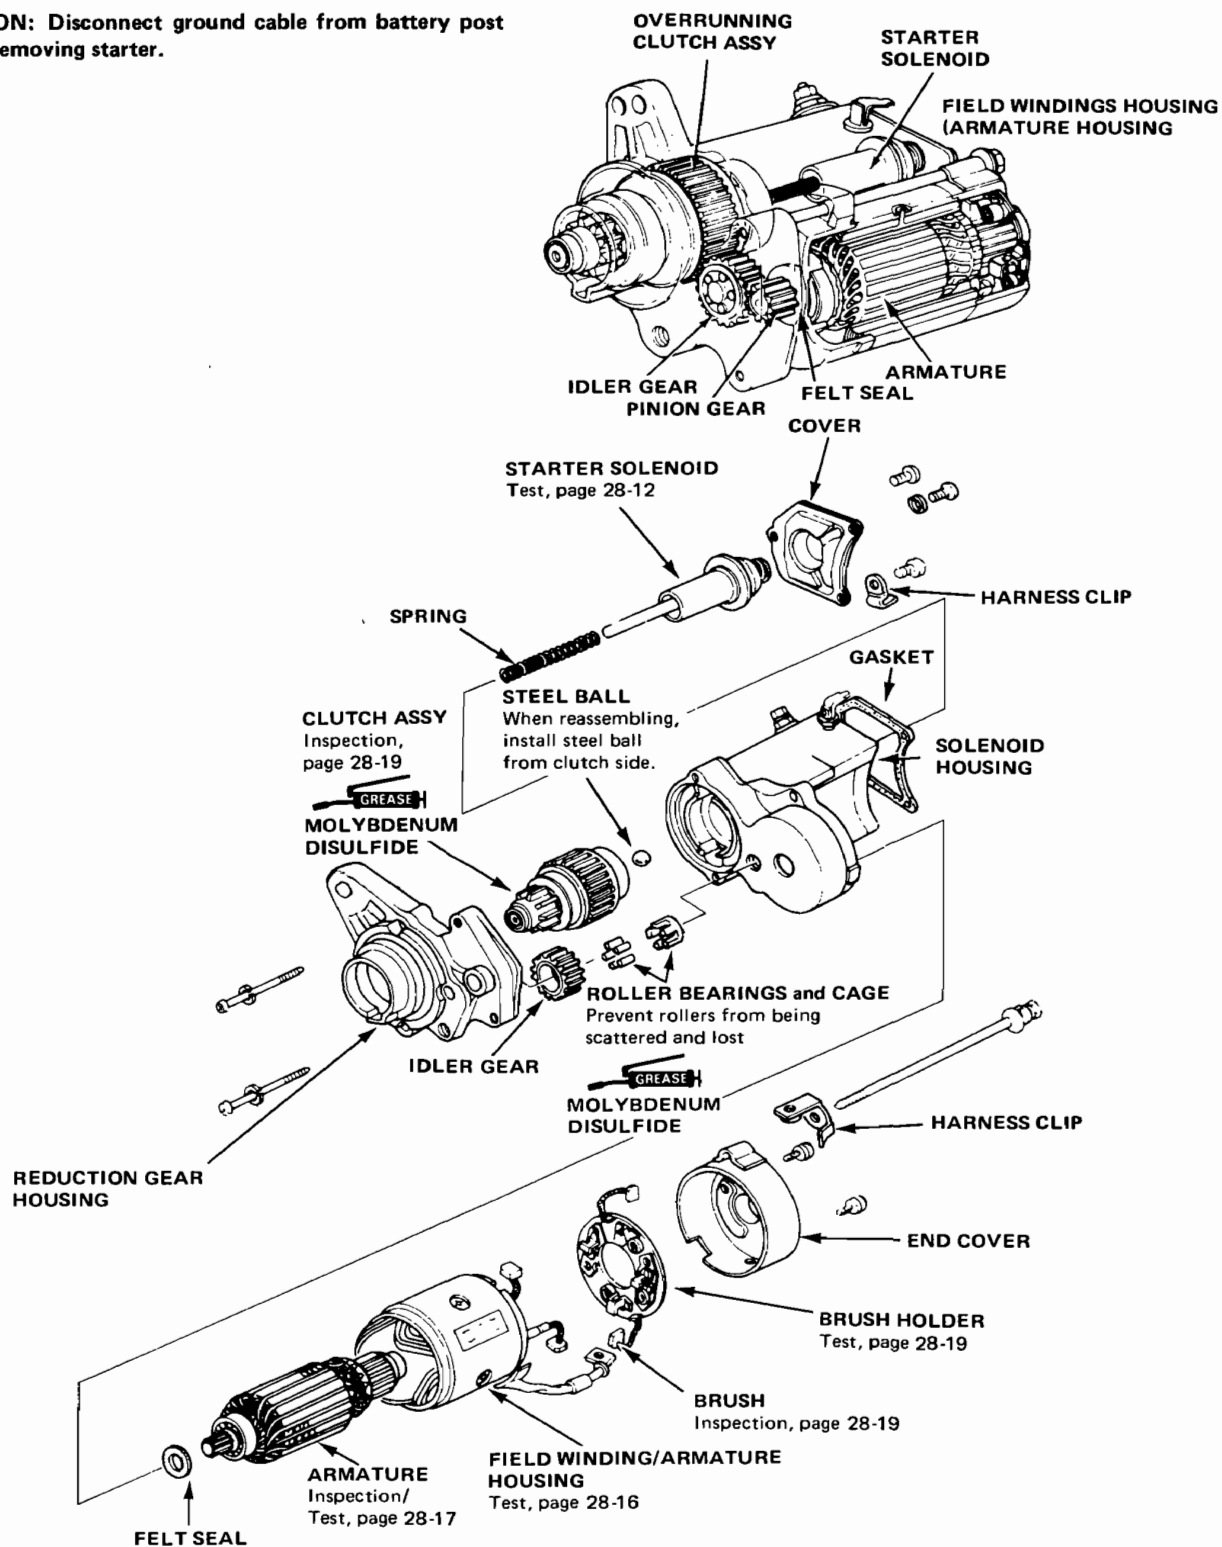



(Gear reduction 1.0 kw MITSUBA)


CAUTION: Disconnect ground cable from battery post before removing starter.

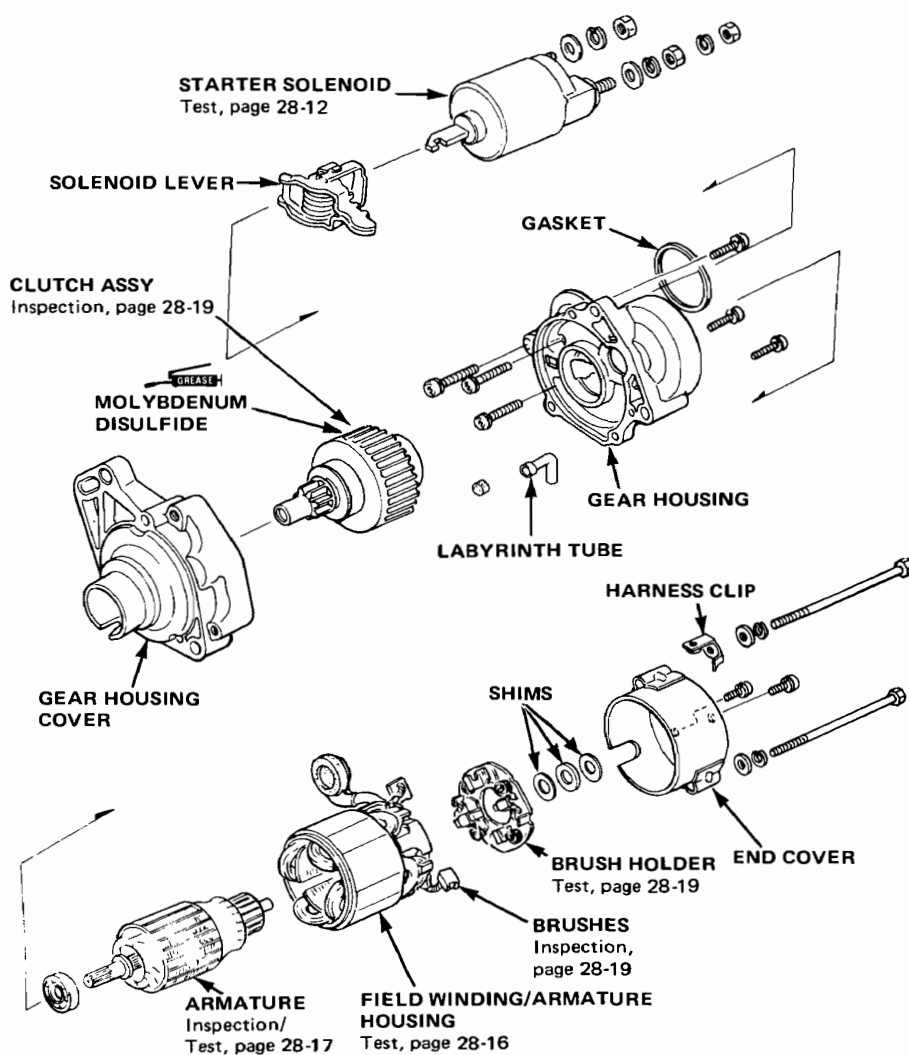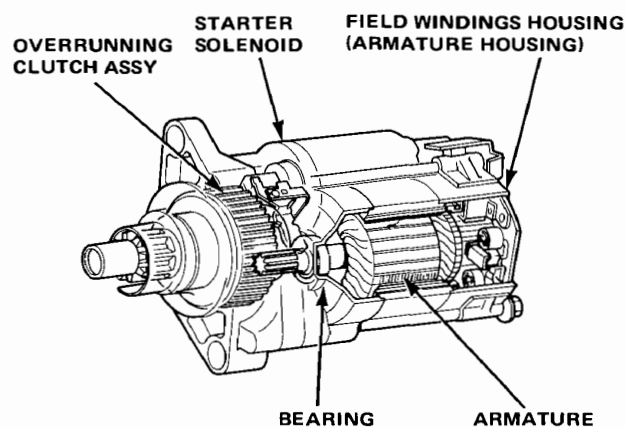

Starting

Illustrated Index (Gear reduction 1.4 kw ND)


CAUTION: Disconnect ground cable from battery post before removing starter.

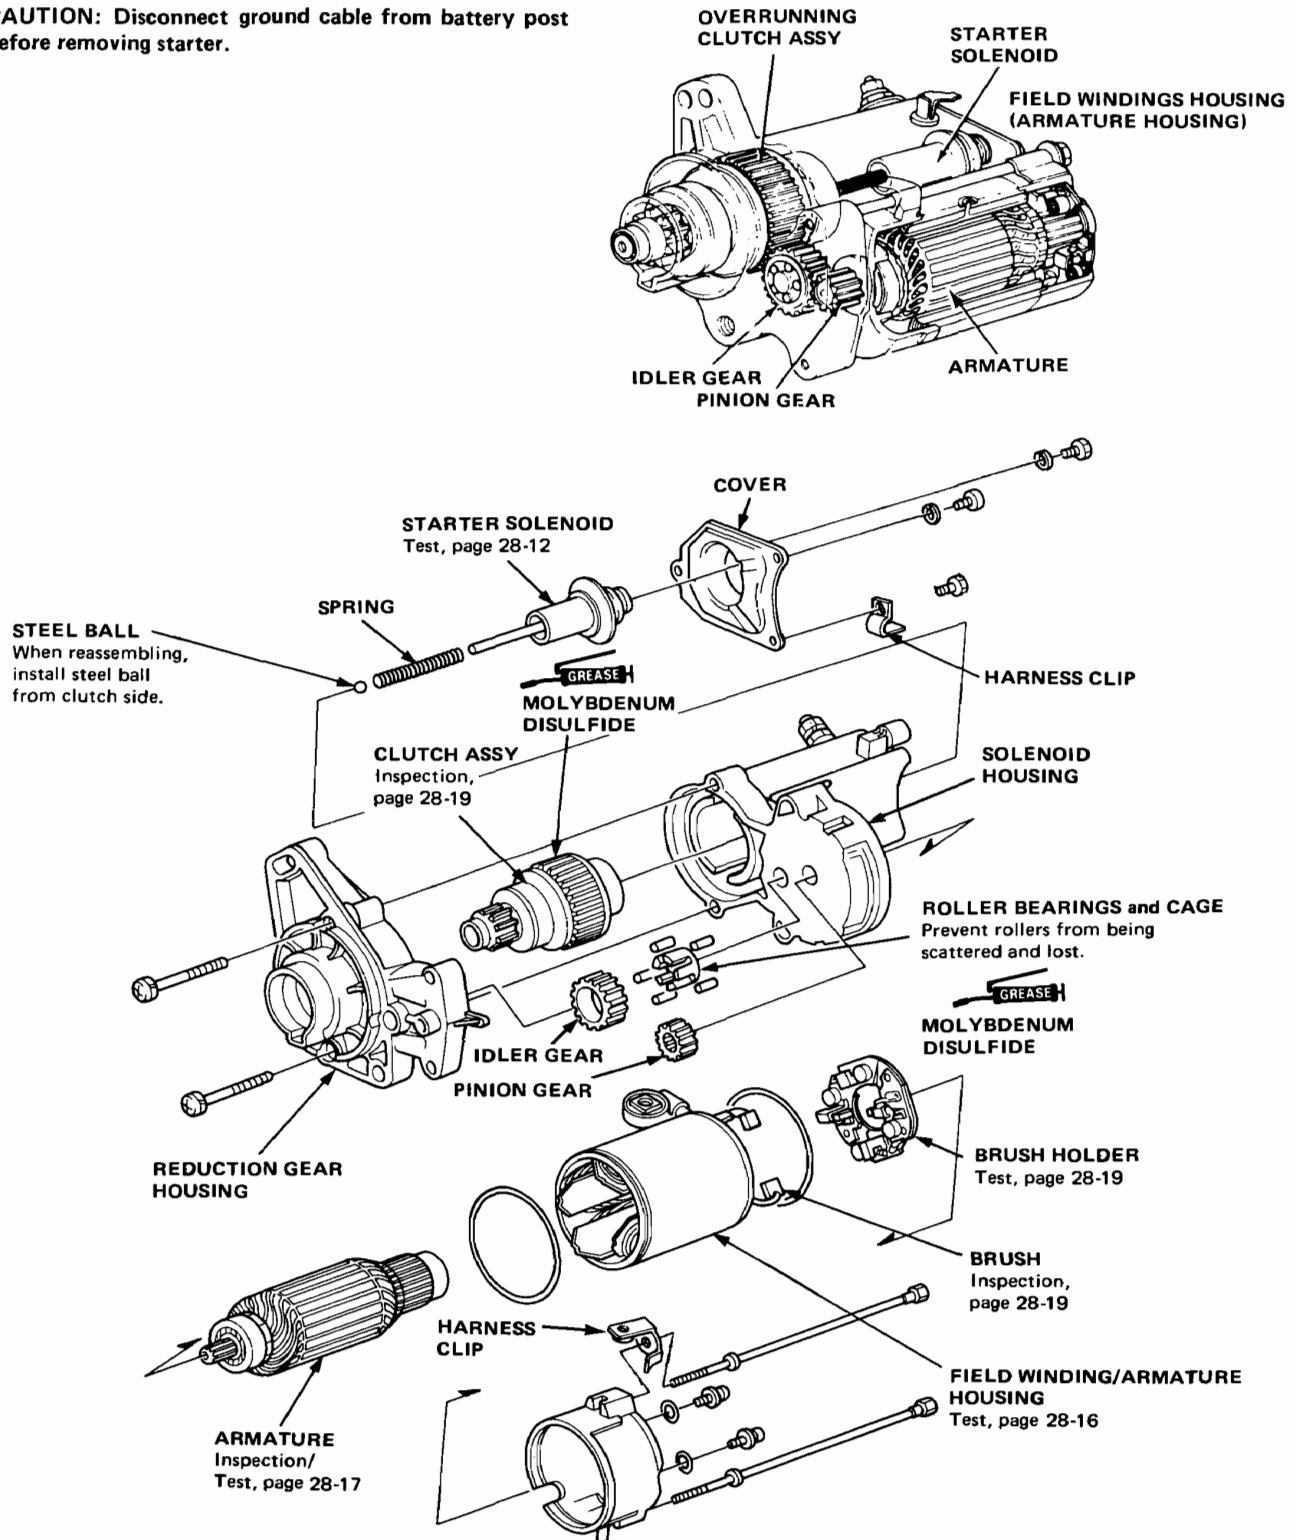



(Gear reduction 1.4 kw MITSUBA)

CAUTION: Disconnect ground cable from battery post before removing starter.

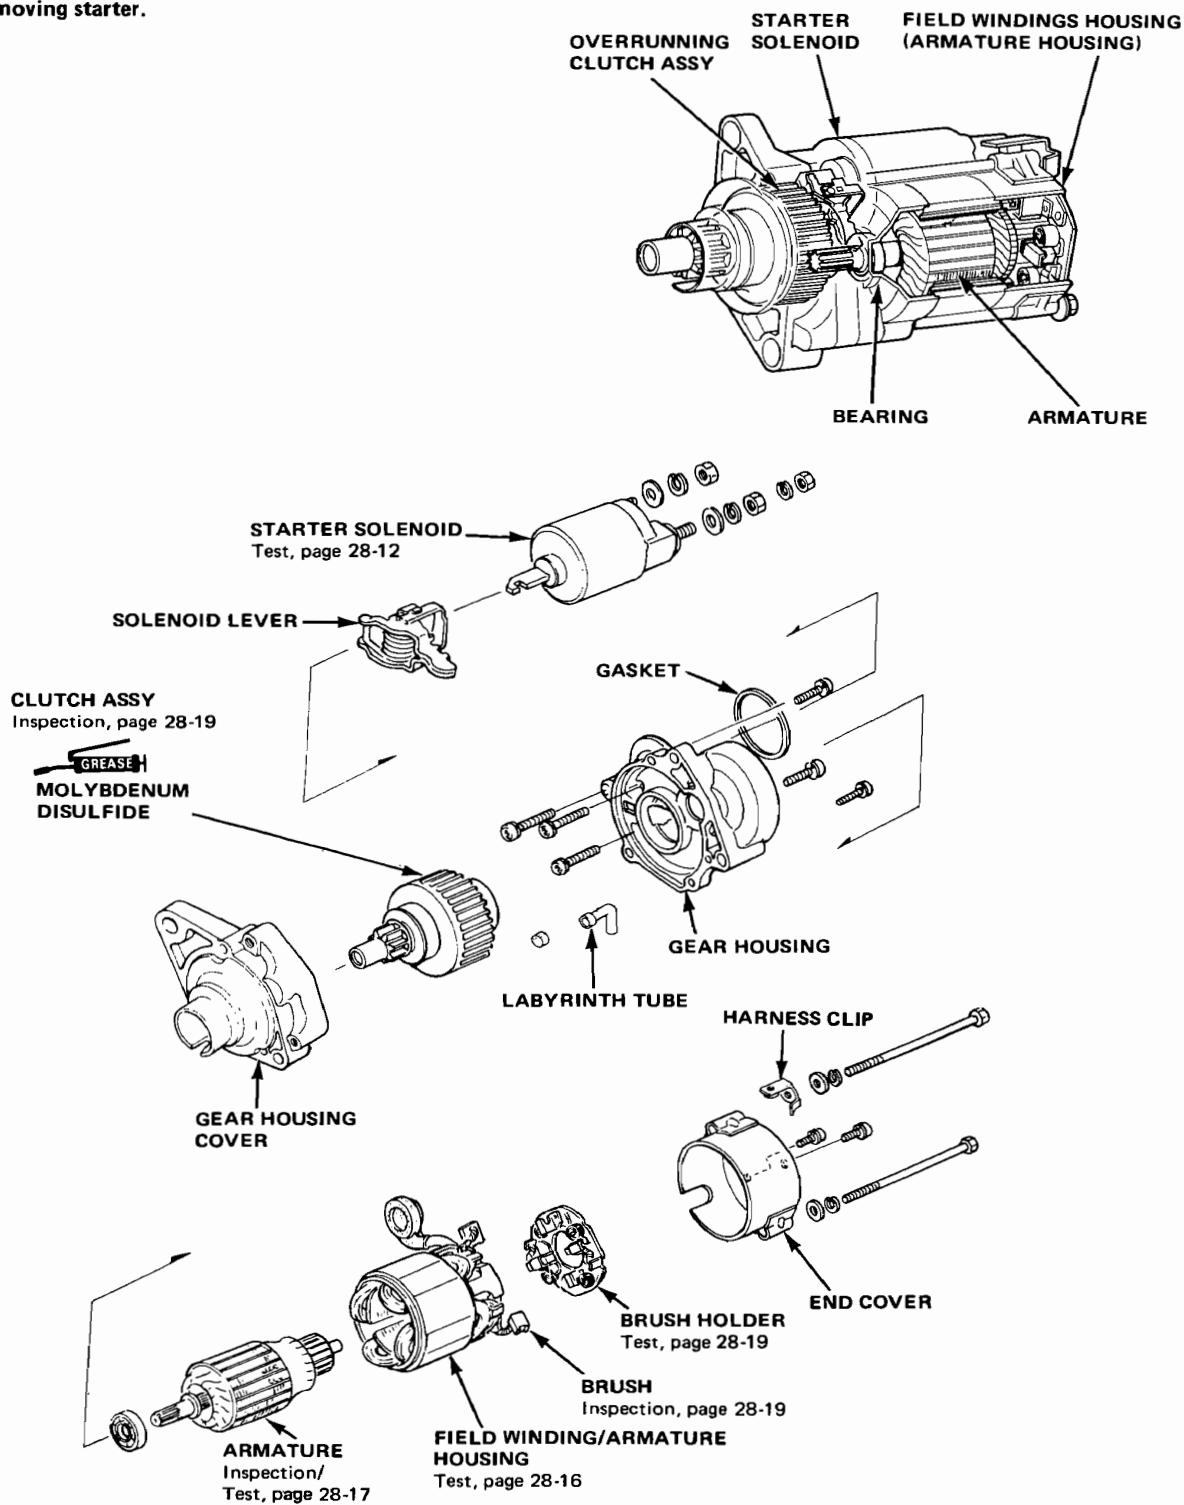

Starting

Troubleshooting Precautions


Before Troubleshooting:

1. Check main fuse and fuse box for blown fuses.
2. Make sure battery posts and terminals are clean and tight.
3. Check battery for damage.
4. Check battery state of charge.
5. Check alternator belt for proper tension.
6. Check that connectors in the defective circuit are clean, properly connected, and that a pin or receptacle is not loose in a connector housing.

CAUTION:


- Do not quick-charge a battery unless the battery ground strap has been disconnected, or you will damage the alternator diodes.
- Do not attempt to crank the engine with the ground strap disconnected or you will severely damage the wiring.

- Do not pull on wires when disconnecting connectors.
- When connecting a connector, push it until it clicks into place.
- Check to make sure that multi-pin connectors are packed with grease.

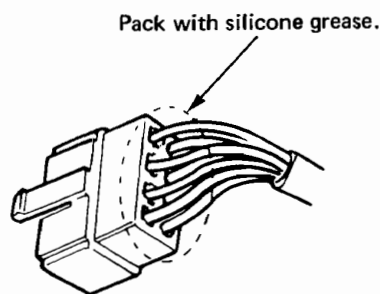

- When connecting battery terminals make sure they are clean and tightened securely.

Wiring Diagram

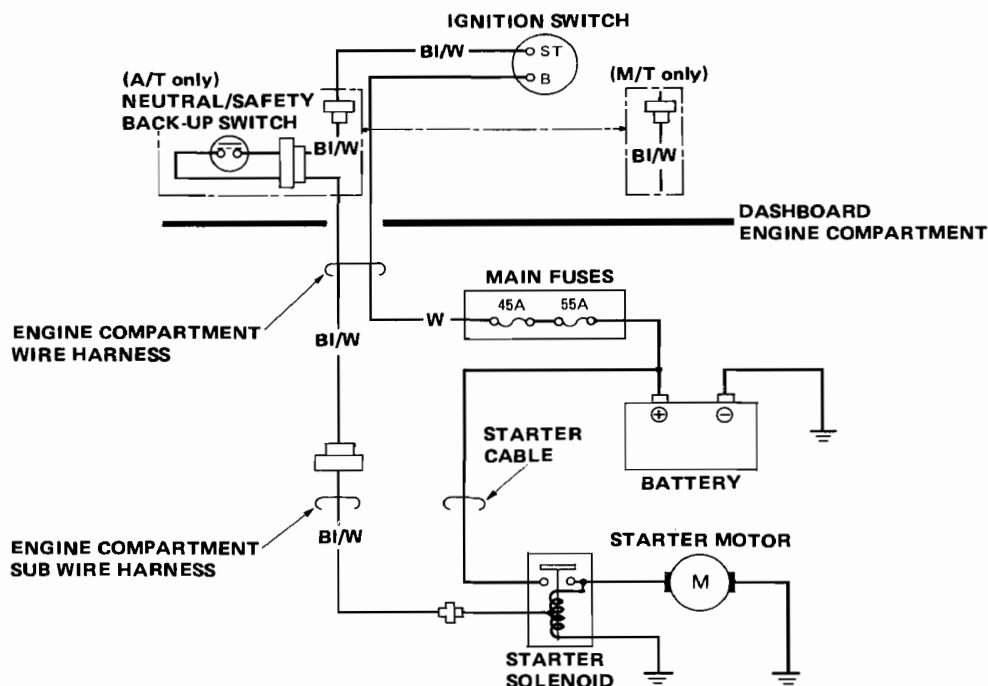



Specifications


	Direct drive 0.8 kw		Gear reduction 1.0 kw		Gear reduction 1.4 kw	
	ND	HITACHI	ND	MITSUBA	ND	MITSUBA
Type	DFKEE	S114-396	DRDFE	SM302-07	DRKIE	SM302-04
Normal output	0.8 kw		1.0 kw		1.4 kw	
Nominal voltage	12 V					
Hour rating	30 seconds					
Direction of rotation	Clockwise as viewed from pinion gear side					
Weight	4.4 kg (9.7 lb)		3.85 kg (8.5 lb)	3.4 kg (7.5 lb)	4.6 kg (10.1 lb)	3.7 kg (8.2 lb)

		Direct drive 0.8 kw	Gear reduction 1.0 kw	Gear reduction 1.4 kw
No load	Terminal voltage V	11	11.5	
	Current A	50 max.	90 max.	
	Draw speed min ⁻¹ (rpm)	5000 min.	3000 min.	3500 min.
Load	Terminal voltage V	8		8.5
	Current A	200	230 max.	350 max.
	Torque N·m (kg·m, lb·ft)	4.6 (0.46, 3.3) min.	6.5 (0.65, 4.7)	13.5 (1.35, 9.8)
	Draw speed min ⁻¹ (rpm)	1,200 min.	1,180 min.	1,000 min.
Braked	Terminal voltage V	5 at 20°C (68°F)	3.5 at 20°C (68°F)	2.4 at 20°C (68°F)
	Current draw A	380 max.	460 max.	450 max.
	Torque N·m (kg·m, lb·ft)	7.8 (0.78, 5.6) min.	11 (1.1, 8) min.	

Starter Performance Curves

— 0.8 kw
 - - 1.0 kw
 - - - 1.4 kw

① Voltage ② Torque ③ Output ④ Starter Speed min⁻¹ (rpm)

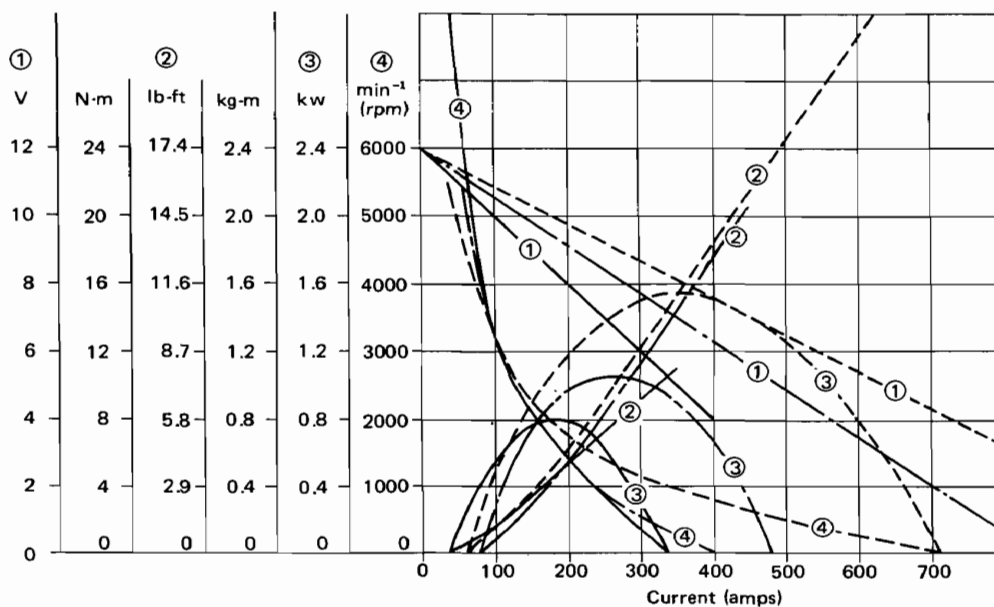

Starting

Troubleshooting

NOTE: The air temperature must be between 15 and 38°C (59 and 100°F) before testing.

Recommended Procedure:


Use a starter system tester.
Connect and operate the equipment in accordance with manufacturer's instructions.
Test and troubleshoot as described starting with step 2.

Alternate Procedure:


Use the following equipment:

- Ammeter, 0–400A
- Voltmeter, 0–20 volts (accurate within 0.1 volt)
- Tachometer 0–1200 min⁻¹ (rpm)

1. Hook up voltmeter and ammeter as shown.

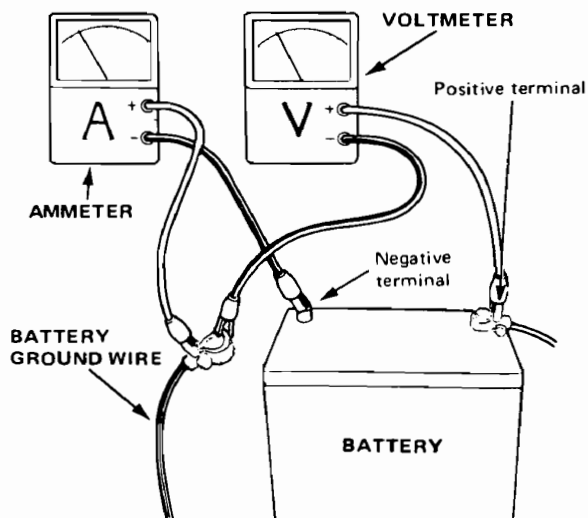

2. Disconnect ignition coil secondary wire from distributor, and ground it.

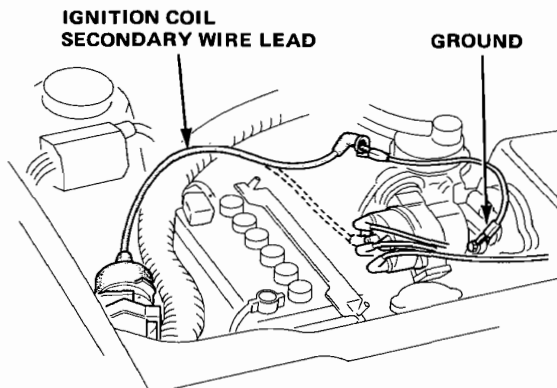

3. Check starter engagement.
Turn ignition switch to III. Starter should crank engine.

- If starter does not crank engine, bypass ignition switch circuit as follows: unplug connector (black/white wire) from starter. Connect jumper wire from battery positive (+) terminal to solenoid terminal. Starter should crank engine.
- If starter still does not crank engine, check battery, battery positive cable and ground, and cable connections for looseness or corrosion.
If starter still does not crank the engine, remove starter and diagnose internal problems (pages 28-12 through 28-21).
- If starter cranks engine, check for open wire in the black/white wire circuit between the starter and ignition switch, and connectors. Check ignition switch. On Automatic, check NEUTRAL/BACK-UP switch and connectors.



4. Check for wear or damage.
Starter should crank engine smoothly and steadily.

- If starter engages, but cranks engine erratically, remove starter motor. Inspect starter, drive gear and flywheel ring gear for damage. Check drive gear overrunning clutch for binding or slipping when armature is rotated with drive gear held. Replace gears if damaged. See pages 28-2 to 7.

5. Check cranking voltage and current draw.

Voltage should be no less than specified volts as below.

0.8 kw and 1.4 kw: 8 volts

1.0 kw: 8.5 volts.

Current should be no greater than specified amperes as below.

0.8 kw: 200 amperes

1.0 kw: 230 amperes

1.4 kw: 350 amperes

If voltage is too low, or current draw too high, check for:

- Battery fully charged (page 27-5).
- Open circuit in starter armature commutator segments (page 28-18).
- Starter armature dragging.
- Shorted armature winding (see page 28-16).
- Excessive drag in engine.

6. Check cranking rpm.

Engine speed during cranking should be approximately 400 min^{-1} (rpm).

If cranking rpm is too low, check for:

- Loose battery or starter terminals.
- Excessively worn starter brushes (see page 28-19).
- Open circuit in commutator segments (see page 28-18).
- Dirty or damaged helical spline on drive gear.
- Defective drive gear overrunning clutch (see page 28-19).

7. Check starter disengagement:

Turn ignition switch to III and release to II.

Starter drive gear should disengage from flywheel.

If drive gear hangs up on flywheel, check:


- Starter solenoid plunger and switch for malfunction.
- Drive gear assembly for dirty or damaged over-running clutch (see page 28-19).

Starting


Starter Solenoid Test

1. Check pull-in coil continuity between the solenoid terminal and any convenient ground. Coil is OK if there is continuity.


NIPPONDENSO 0.8 kw:

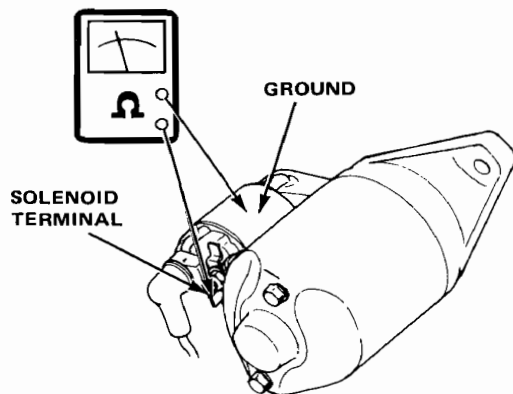


HITACHI 0.8 kw:

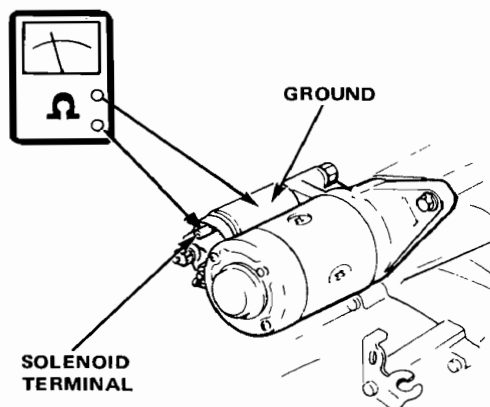

NIPPONDENSO 1.0 kw and 1.4 kw:

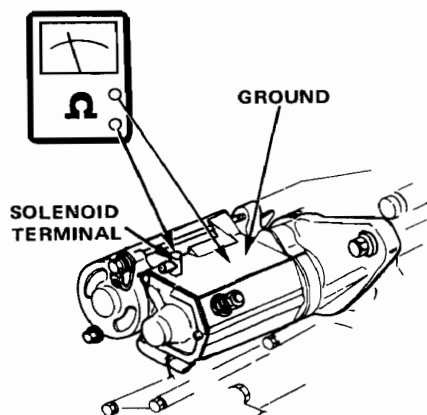


MITSUBA 1.0 kw and 1.4 kw:

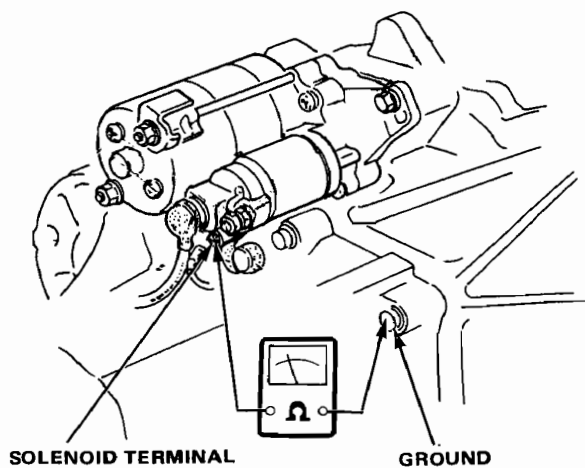




2. Check hold-in coil continuity between the solenoid terminal and the motor terminal on the solenoid. Coil is OK if there is continuity.


NIPPONDENSO 0.8 kw:

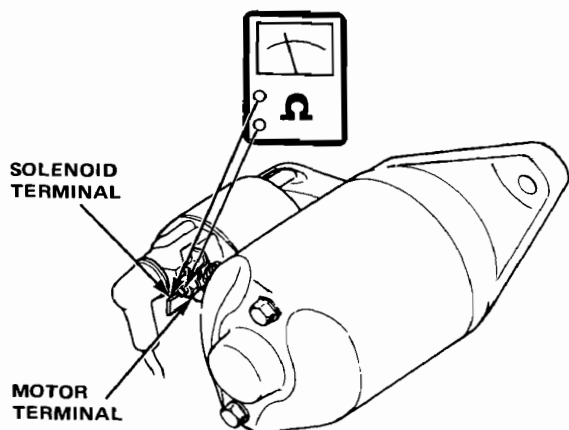


HITACHI 0.8 kw:

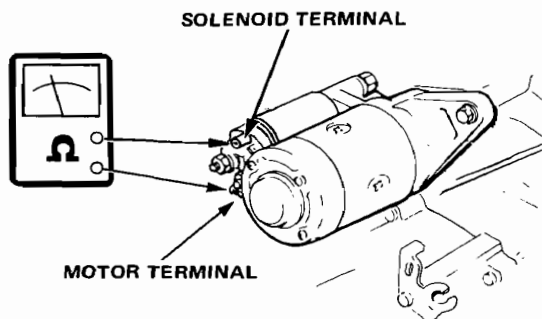

NIPPONDENSO 1.0 kw and 1.4 kw:

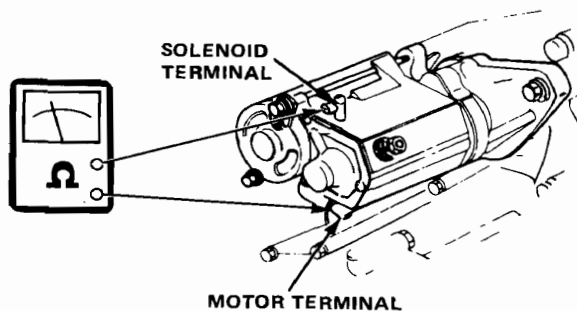

MITSUBA 1.0 kw and 1.4 kw:

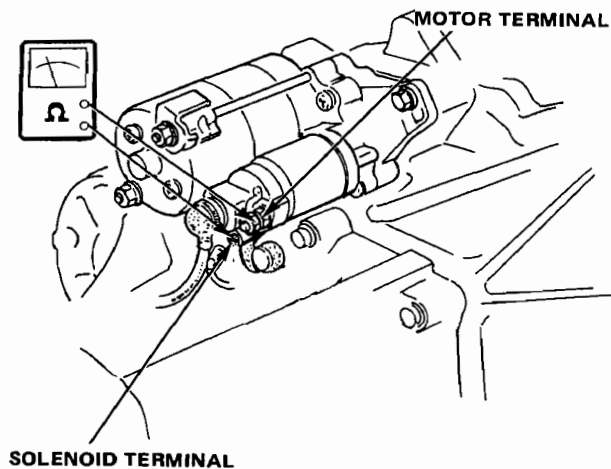


Starting


Solenoid Plunger Inspection

NIPPONDENSO 1.0 kw and 1.4 kw

1. Remove three screws from solenoid cover.

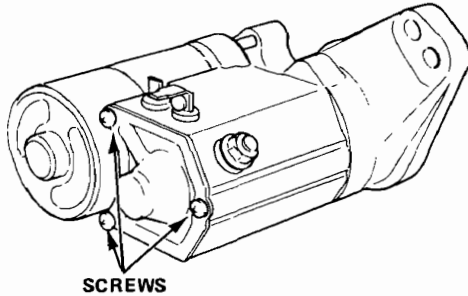


2. Check contact points, and face of starter solenoid plunger for burning, pitting or any other defects. If surfaces are rough, recondition with a strip of #500 or #600 sandpaper.

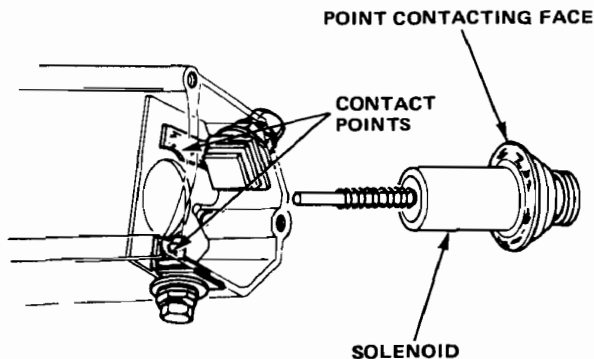


Starter Replacement

1. Disconnect both cables from the battery.
2. Disconnect the starter cable from the terminal on the starter motor.
3. Remove the engine compartment wire harness from the harness clip on the starter motor.
4. Remove two bolts holding starter motor, and remove starter motor.

Direct Type:

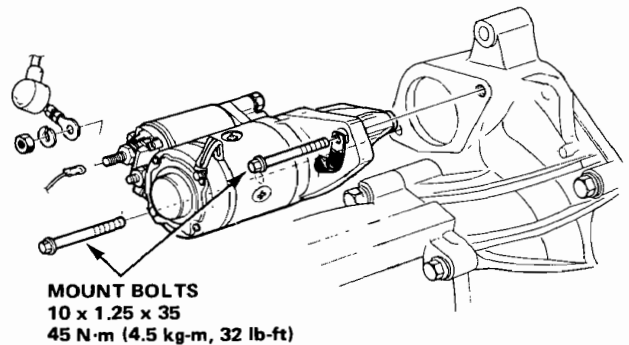

Reduction Type:

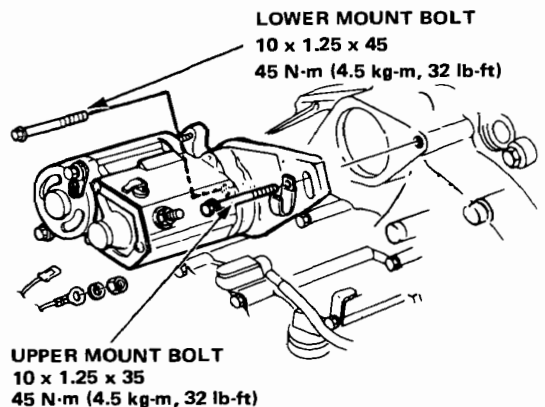





Starter Disassembly

Direct Type:


1. Disconnect the large wire that goes from the solenoid to the motor.

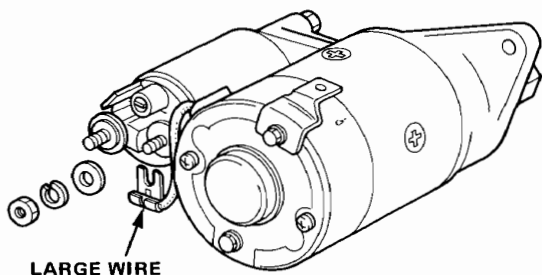


2. Remove the 2 nuts (for NIPPONDENSO), or the 2 screws (for HITACHI), and remove the starter solenoid from the gear housing.

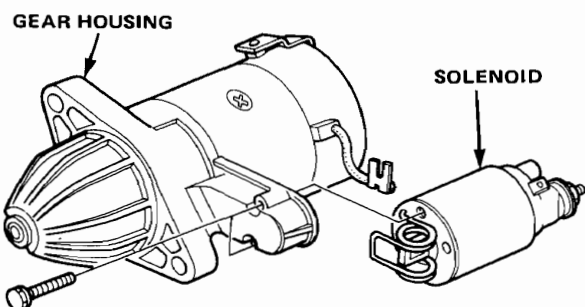

3. Remove the dust cover, and the lock plate (for NIPPONDENSO), or the circlip (for HITACHI), then remove the 2 bolts and 2 screws, and take out the armature and brushes.

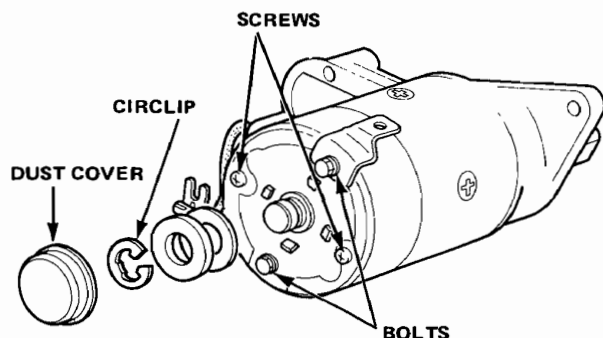


4. Remove the spring clip from the shaft on the armature, then slide the clutch assembly off the shaft.

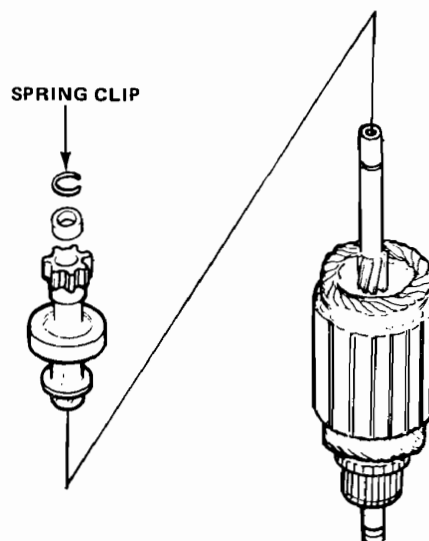

Reduction Type:

1. Disconnect the large wire that goes from solenoid to the motor.

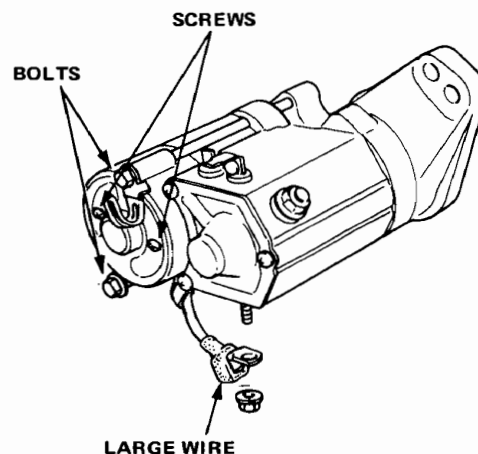

2. Remove the bolts and screws from the end cover. Remove the end cover. Then, take out the armature and brushes.


(cont'd)

Starting


Starter Disassembly (cont'd)

3. Remove the screws from the gear housing, then separate the solenoid and overrunning clutch.

NIPPONDENSO:

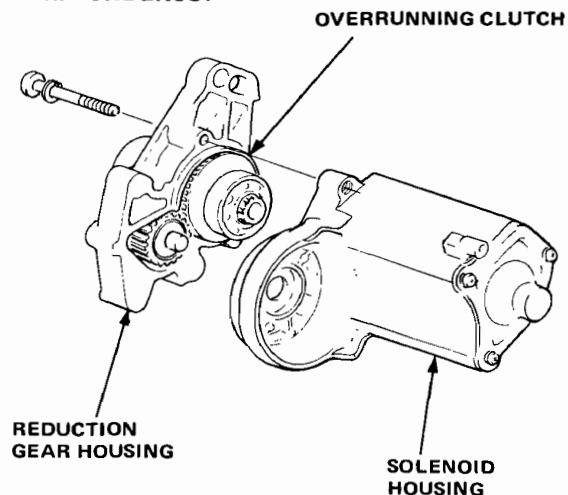


MITSUBA:

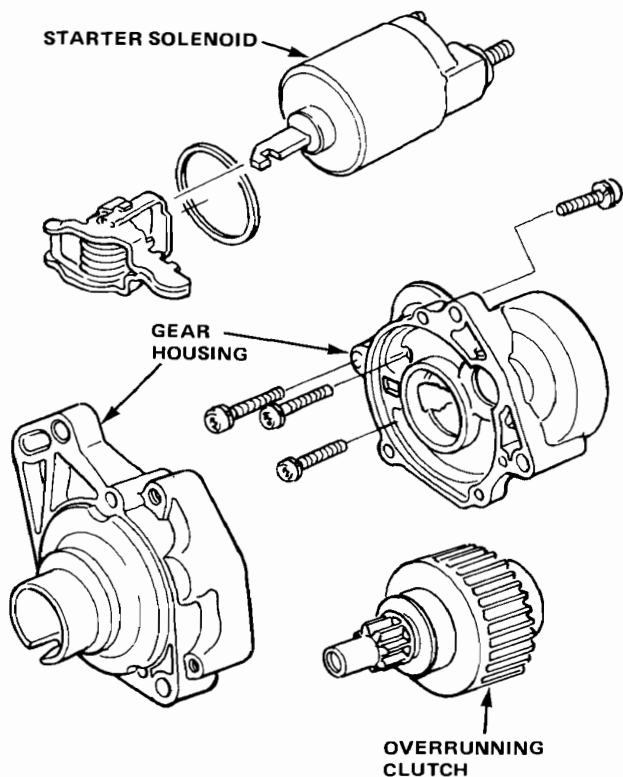

Starter Field Winding Test


1. Using an ohmmeter, check that continuity exists between brushes.

If no continuity, replace armature housing.

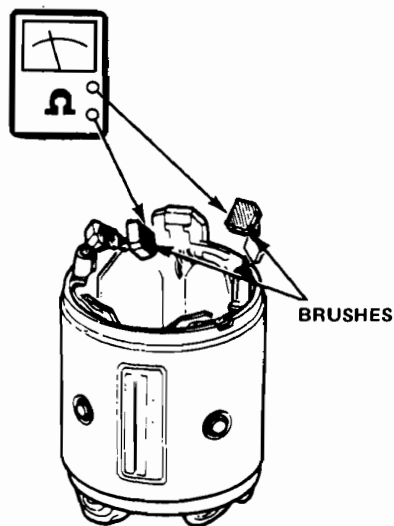

2. With ohmmeter, check that no continuity exists between field coil and armature housing.


If continuity exists, replace armature housing.

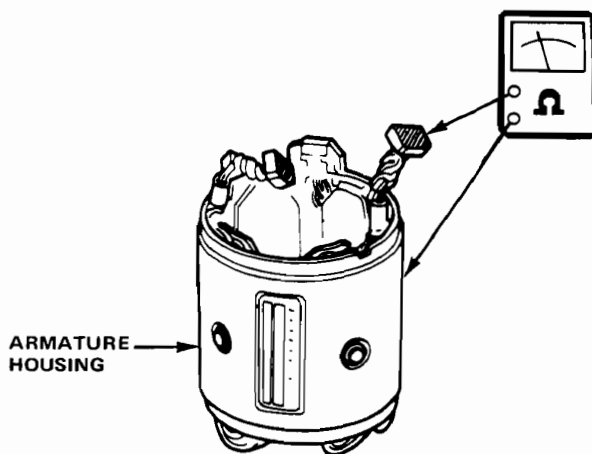



Armature Inspection and Test

1. Inspect armature for wear or damage due to contact with field coil magnets.

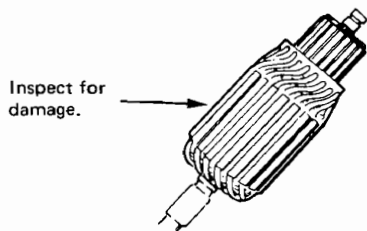

2. A dirty or burnt surface may be resurfaced with emery cloth or lathe within the following specifications.


Commutator Service Limits

Runout:


ND (0.8 kW): Less than 0.3 mm (0.012 in.)
HITACHI (0.8 kW): Less than 0.4 mm (0.016 in.)
ND (1.0 kW, 1.4 kW) and MITSUBA (1.0 kW, 1.4 kW): Less than 0.05 mm (0.002 in.)

Diameter:

ND (0.8 kW): Not less than 27.0 mm (1.06 in.)
HITACHI (0.8 kW): Not less than 39 mm (1.54 in.)
ND (1.0 kW, 1.4 kW): Not less than 29 mm (1.14 in.)
MITSUBA (1.0 kW, 1.4 kW): Not less than 27.5 mm (1.08 in.)

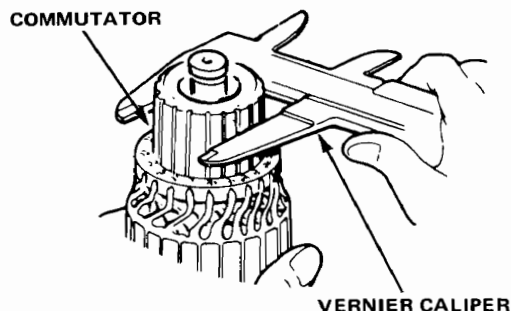

3. If commutator runout and diameter are within limits, check commutator for damage or for carbon dust or brass chips between segments.
4. If surface is dirty, recondition it with #500 or #600 sandpaper. Then, check mica depth. If necessary, undercut mica with a hacksaw blade to achieve proper depth as shown.

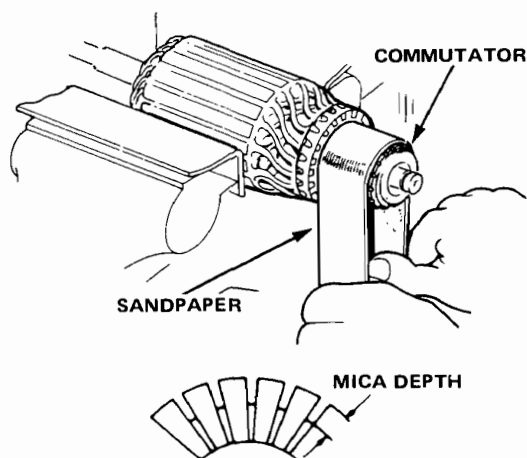

Commutator Mica Depth

Standard (New):

ND: 0.5–0.8 mm (0.020–0.031 in.)
HITACHI: 0.5–0.8 mm (0.020–0.031 in.)
MITSUBA: 0.4–0.5 mm (0.016–0.020 in.)

Service Limit:


ND and HITACHI: 0.2 mm (0.008 in.)
MITSUBA: 0.15 mm (0.006 in.)

(cont'd)

Starting


Armature Inspection and Test (cont'd)

5. Place the armature on an armature tester. Hold a hacksaw blade on the armature core.

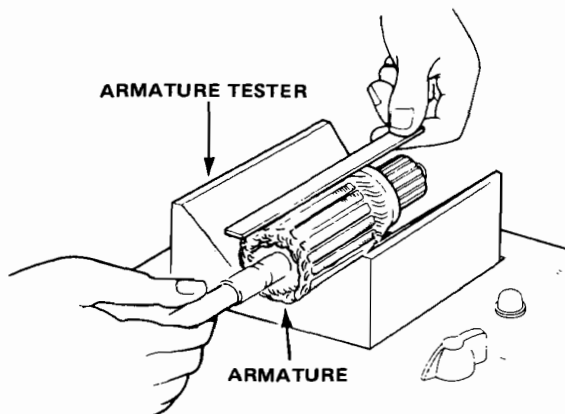


If the blade is attracted to the core or vibrates while core is turned, the armature is shorted. Replace the armature.


6. With ohmmeter, check that no continuity exists between commutator and armature coil core. If continuity exists, replace armature.

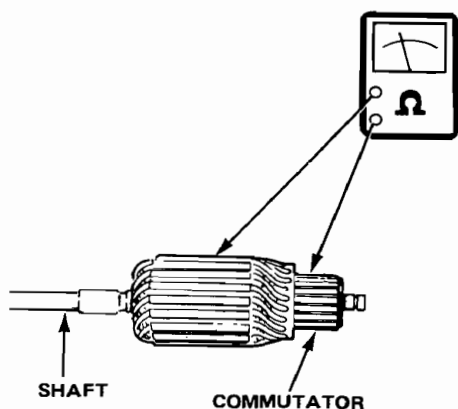

7. Check for continuity between each segment of the commutator. If an open circuit exists between any segment, replace armature.

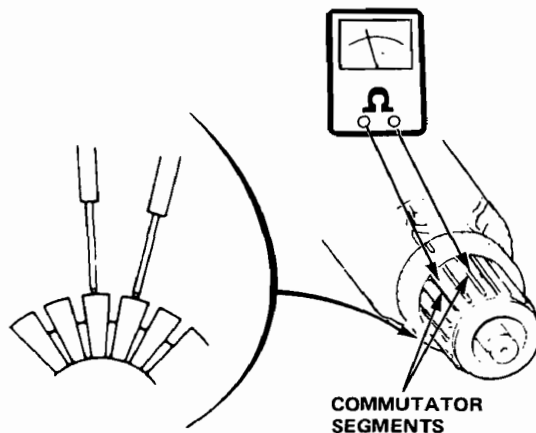

8. Check to see if there is any continuity between the commutator and armature shaft. If there is continuity, replace the armature.

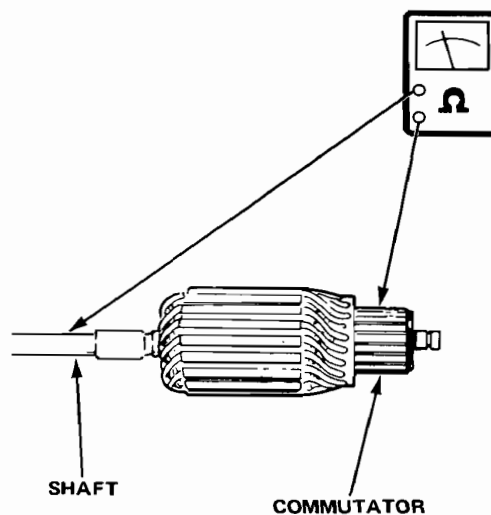




Overrunning Clutch Check

Move overrunning clutch along shaft.

If it doesn't move freely, or if clutch slips when armature is rotated while holding drive gear, replace clutch assembly.

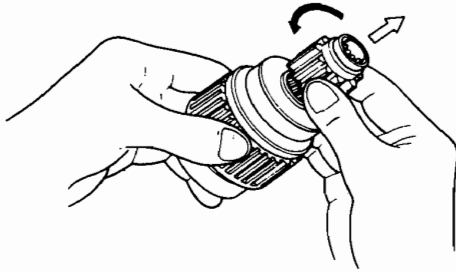


If gear is worn or damaged, replace complete overrunning clutch assembly; the gear is not available separately.

NOTE: Check condition of flywheel or drive plate ring gear if starter drive gear teeth are damaged.

Brush Holder Test

With ohmmeter, check that no continuity exists between positive (+) and negative (-) brush holder.

If continuity exists, replace brush holder assy.

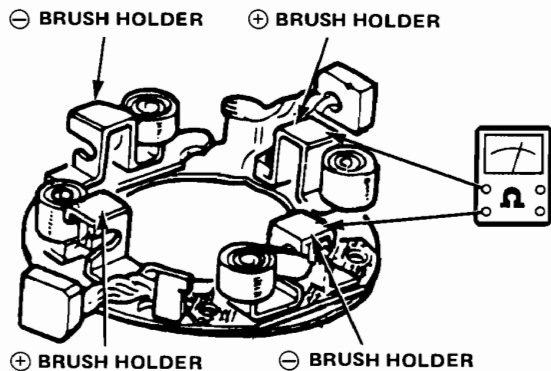

Brush Inspection

Measure brush length. If not within service limit, replace armature-housing and brush holder assembly.

Standard (New):

ND (0.8 kw): 15.5–16.5 mm (0.61–0.65 in.)

HITACHI (0.8 kw) and ND (1.4 kw)

: 14.5–15.5 mm (0.57–0.61 in.)

ND (1.0 kw) : 12.5–13.5 mm (0.49–0.53 in.)

MITSUBA (all): 14.3–14.7 mm (0.56–0.58 in.)

Service Limit:


ND (0.8 kw): 10 mm (0.39 in.)

HITACHI (0.8 kw): 11 mm (0.43 in.)

ND (1.0 kw and 1.4 kw): 8.5 mm (0.33 in.)

MITSUBA (all): 9.3 mm (0.37 in.)

NOTE: To seat new brushes after installing them in their holders, slip a strip #500 or #600 sandpaper, with grit side up, over commutator, and smoothly rotate armature. Under-surface of brushes will be sanded to same contour as commutator.

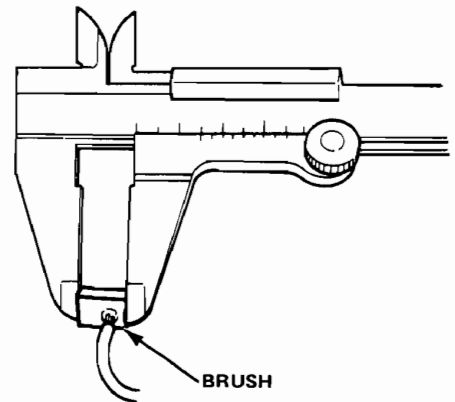


Starting

Starter Reassembly

Reassemble the starter in the reverse order of disassembly.


1. Pry back each brush spring with a screwdriver, then position the brush about halfway out of its holder, and release the spring to hold it there.

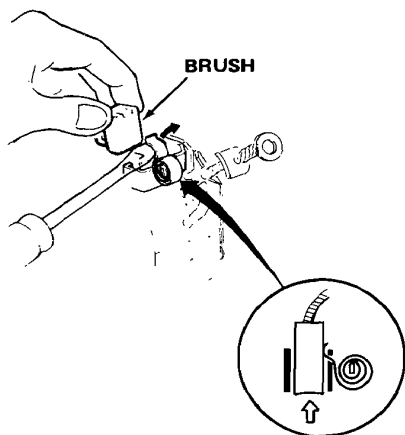


2. Install the armature in the motor housing. Next pry back each brush spring again and push the brush down until it seats against the commutator, then release the spring against the end of the brush.



3. For HITACHI (0.8 kw), install the spring as shown.

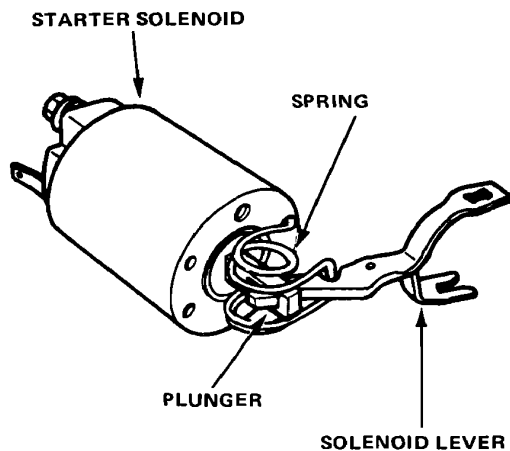


4. For NIPPONDENSO (1.0 kw and 1.4 kw), install the overrunning clutch and idler gear, then the rollers and cage.

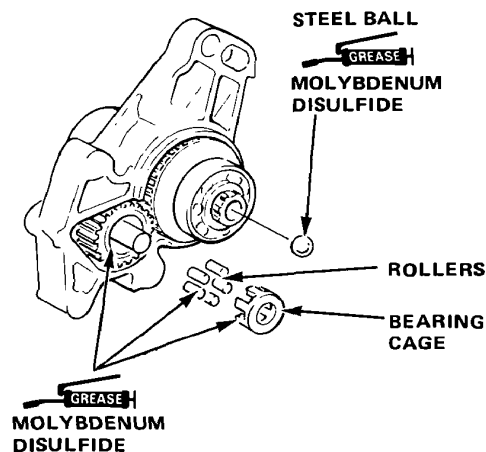


5. When you assemble the motor and solenoid, don't forget to install the felt seal (ND) or shims (MITSUBA).

NIPPONDENSO (1.0 kw):

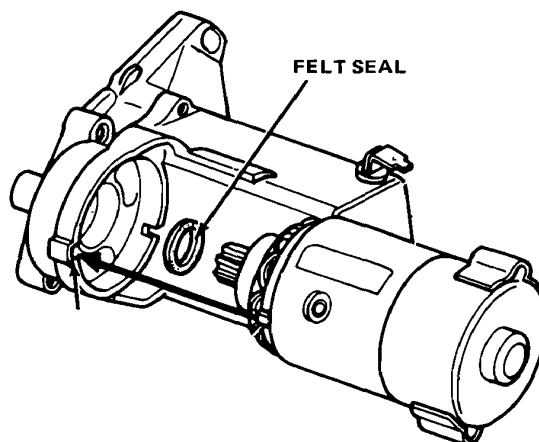




MITSUBA (1.0 kw):

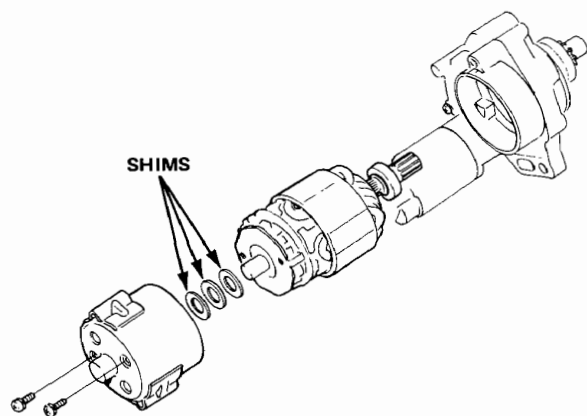


6. After assembling, measure clearance between pinion stopper and pinion with clutch pushed out by starter solenoid.

NIPPONDENSO (0.8 kw):

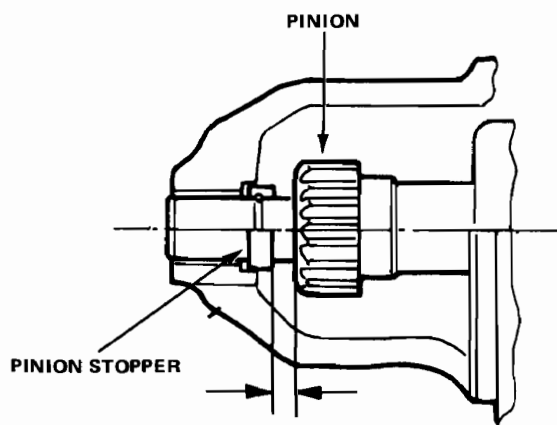

Specified Clearance: 0.1—4.0 mm (0.004—0.157 in.)

HITACHI (0.8 kw):

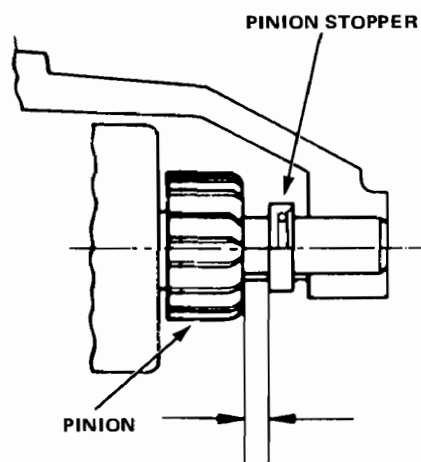

Specified Clearance: 0.3—2.5 mm (0.012—0.098 in.)

If out of specification, adjust by changing washer thickness.

